



INSTALLATION INSTRUCTIONS

PART NUMBER:

57734AN00A

DESCRIPTION:

Front Bumper Under Guard

KIT CONTENTS:



REQUIRED ITEMS:

a



1x Clip
90914007

b



2x Clip
909140063

OPTIONAL ITEMS: Reuse existing parts

c



2x Screw
904500031S

d



6x Clip
909140063

 
e




13x Clip
909140007

TOOLS REQUIRED:

Socket Wrench (10 mm)

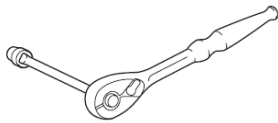


Torque Wrench

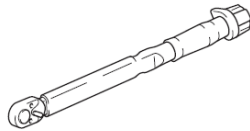 


Soap



 
Clip Remover

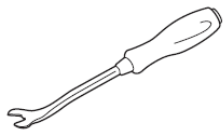


Flathead Screwdriver

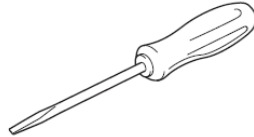 

MEANING OF CHARACTERS:

 


:Remove

 

:Install



 :Disconnect




:Connect



:Location of Clip
or Screw

T

 :Tightening Torque



:Loosen



:Discard



:Reuse

DESCRIPTION:

Front Bumper Under Guard


ISSUE: 00

DATE: July 2019

SUBARU OF AMERICA



PAGE 1

 1


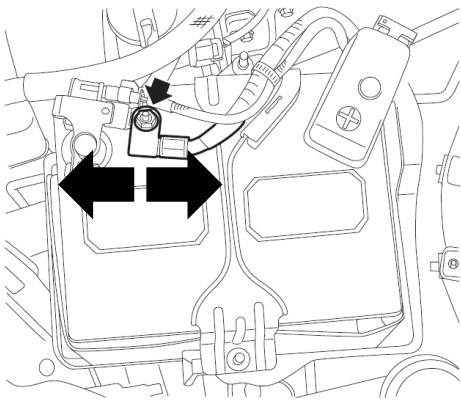


Disconnect the ground cable from battery.

  2

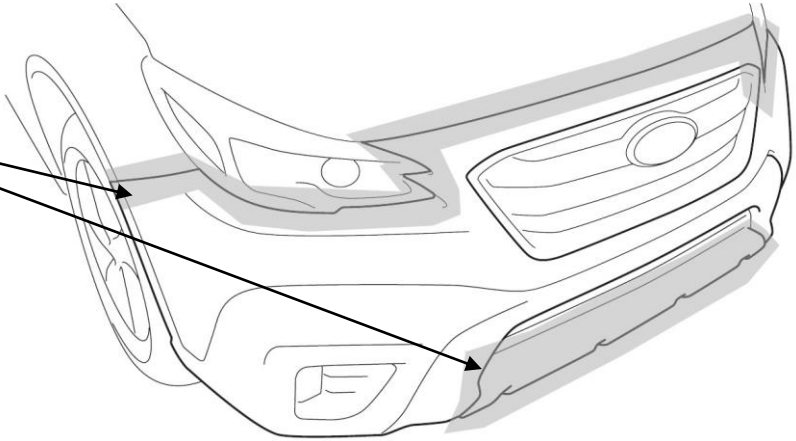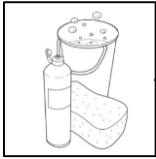


3

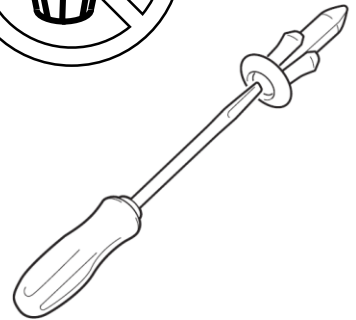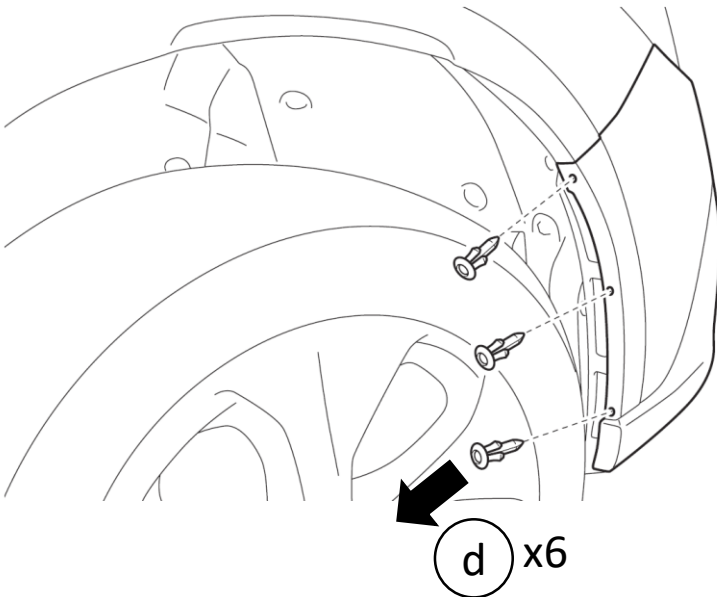  


LHS & RHS

 4


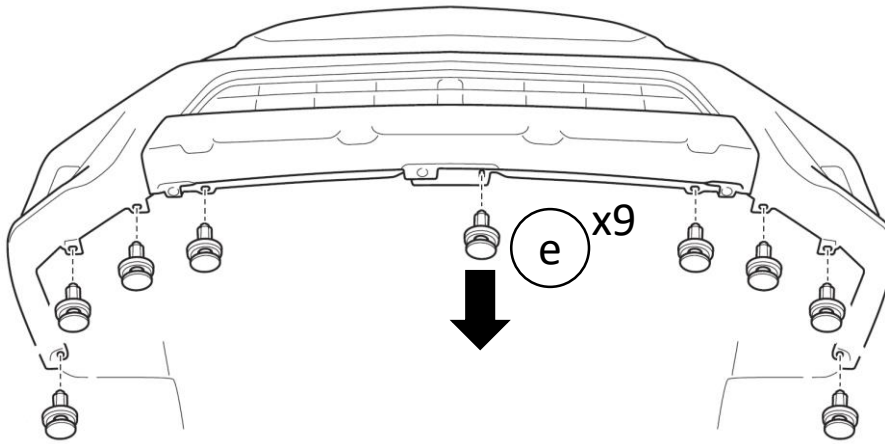


5

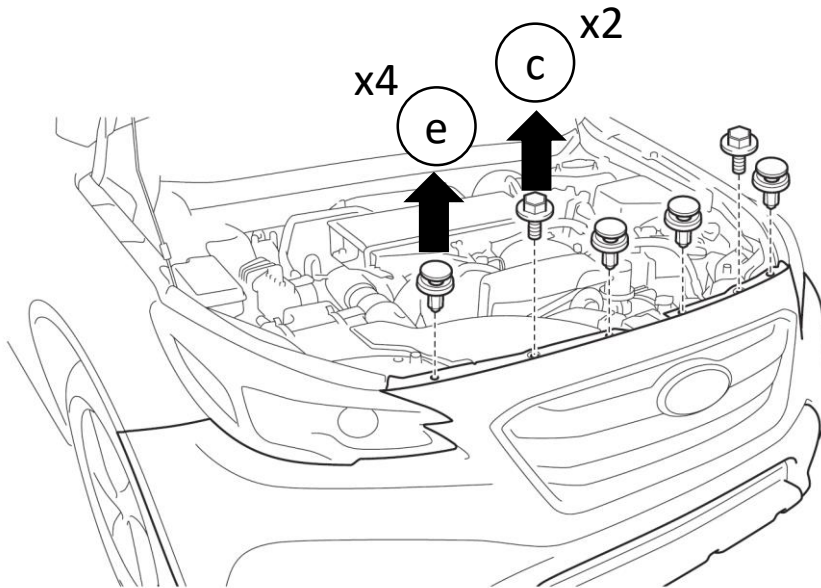 

6

  The figure shows the RH side

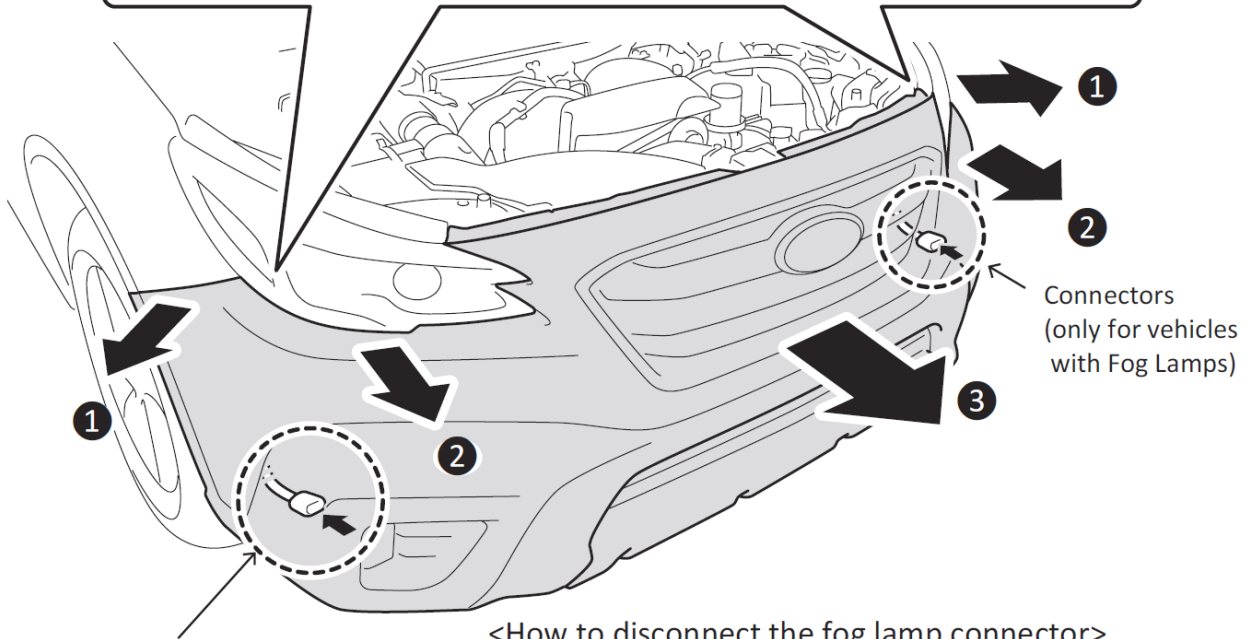
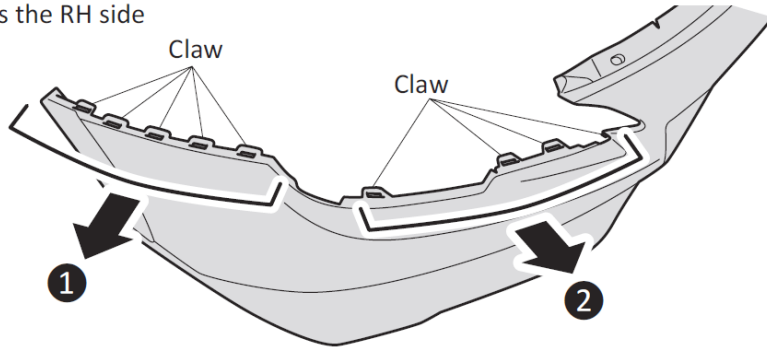


Connectors
(only for vehicles
with Fog Lamps)



<How to disconnect the fog lamp connector>

- (1) Pull back the mudguard and check the position of the fog lamp harness.
- (2) While pressing the lock, disconnect the fog lamp connector.

  
7

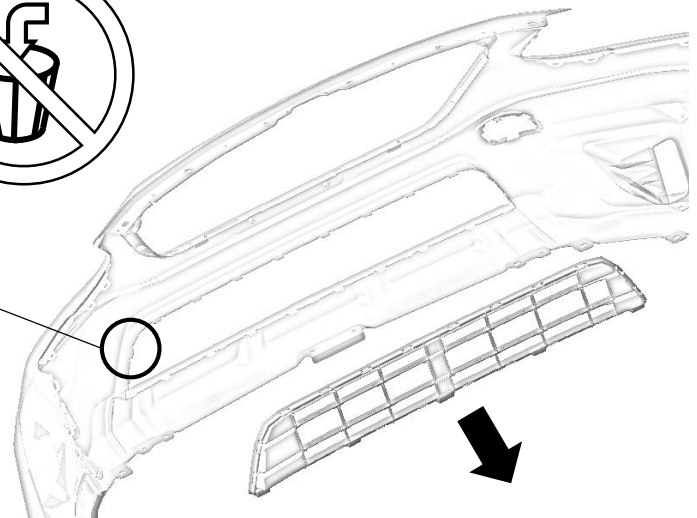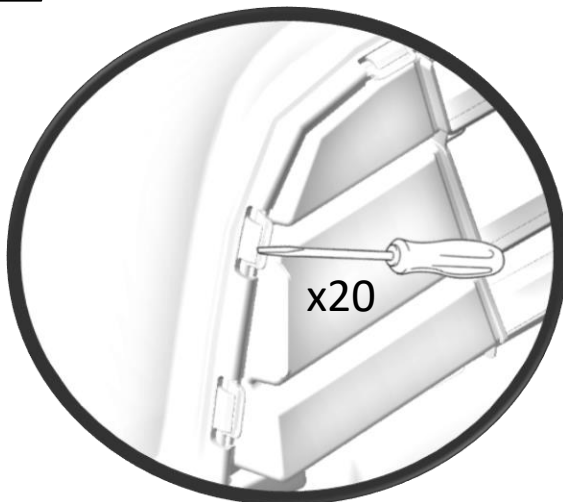


8

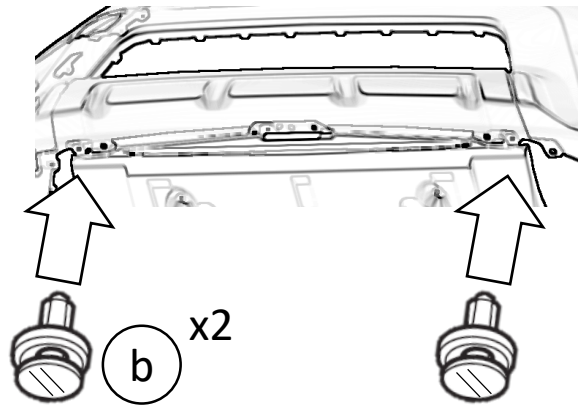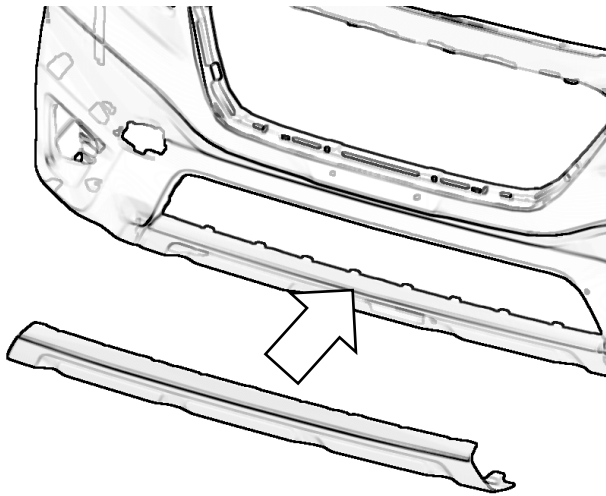  

9

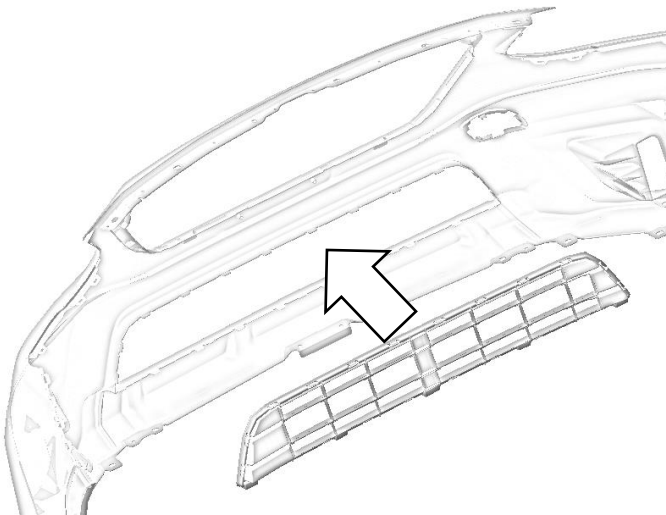 




The figure shows the RH side

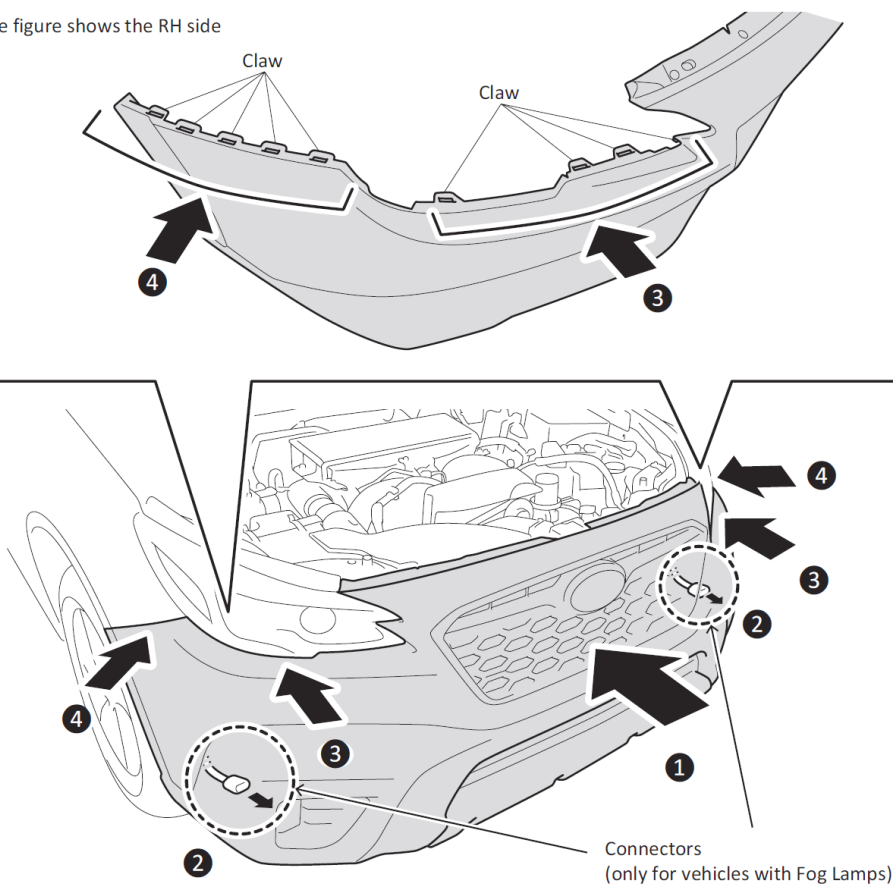 


Tightening torque

   66 in-lbs \pm 18 in-lbs
(7.5 N·m \pm 2 N·m)

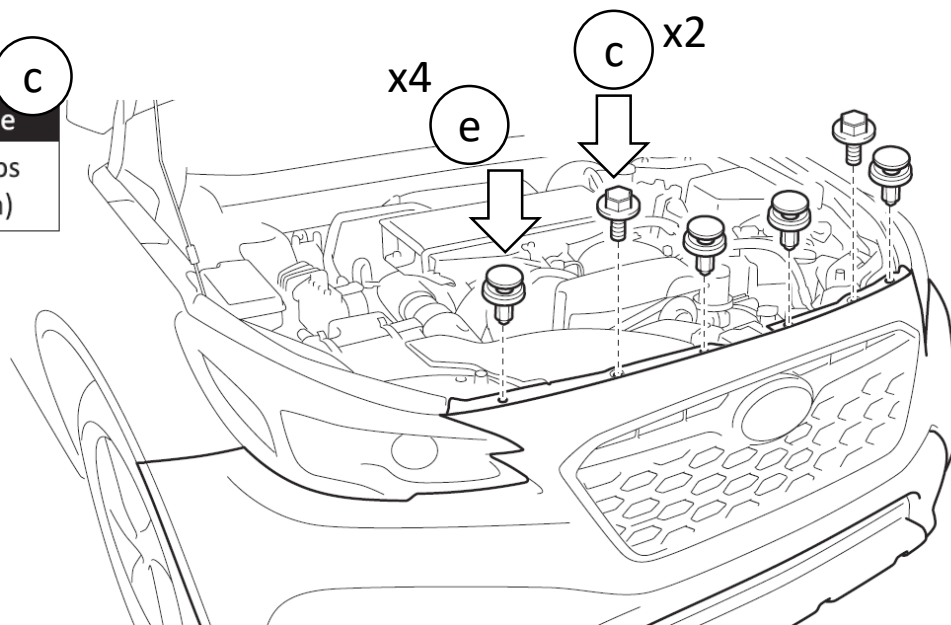


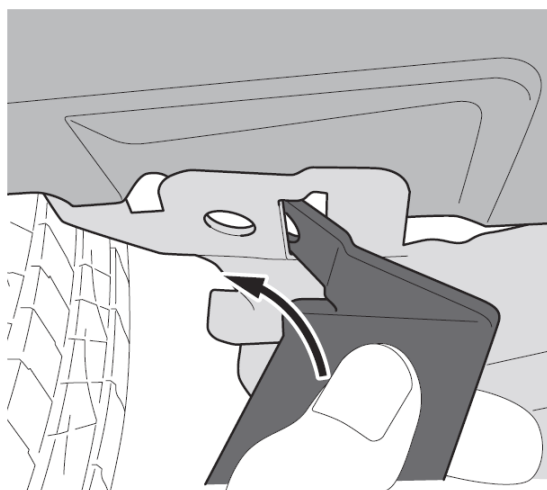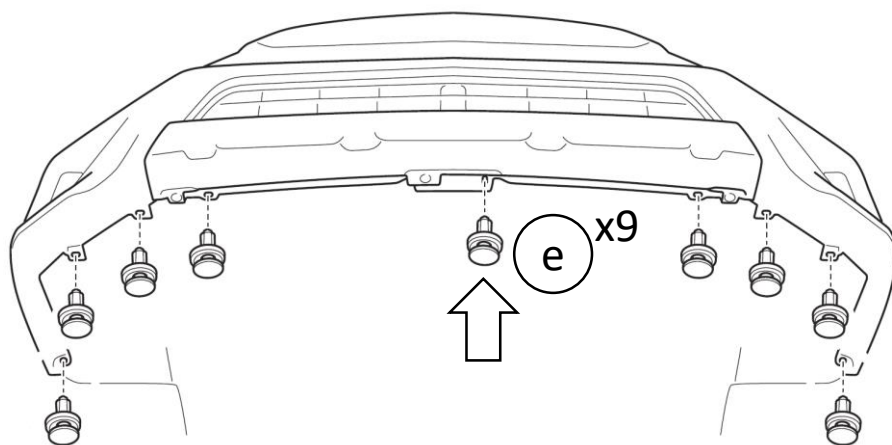



The figure shows the RH side

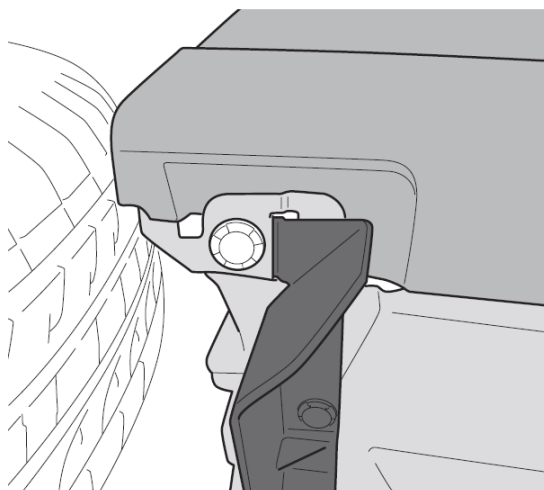 

The figure shows the RH side

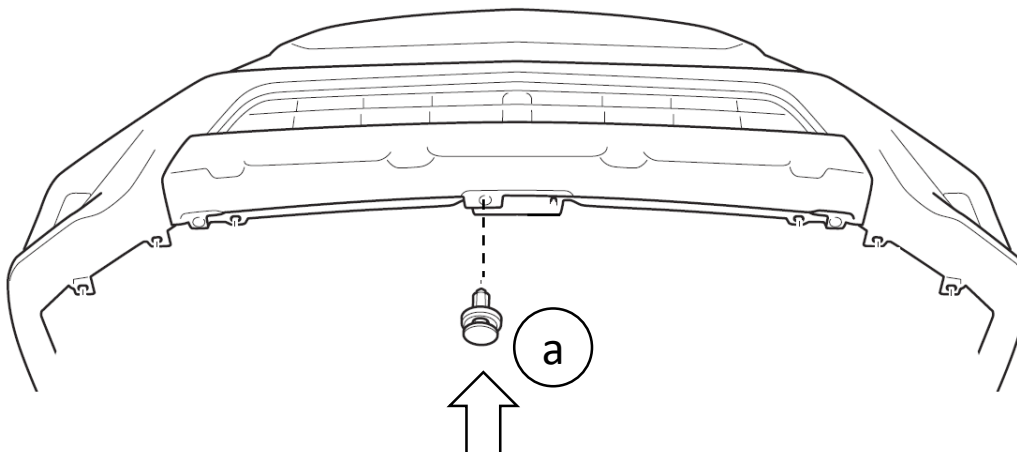 


14

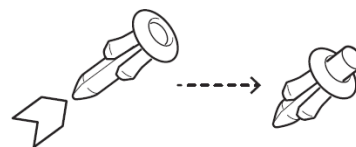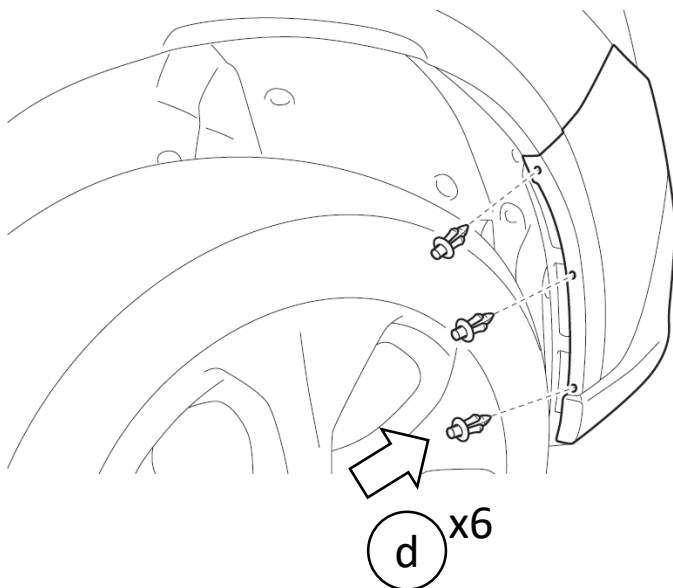  

LHS & RHS

 15

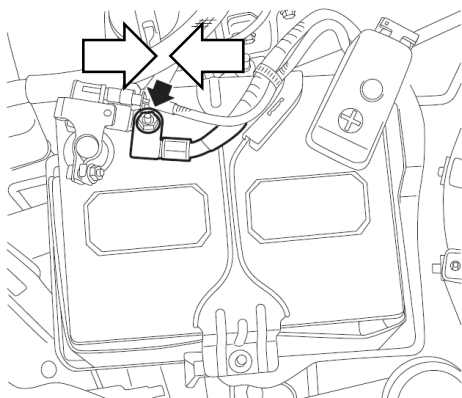

Connect the ground
cable from battery.