 


DESCRIPTION: BRZ INTERIOR LED LIGHT BULB KIT

KIT CONTENTS:

Part	Name	Qty
а	Interior Light Bulb	1



а

TOOLS REQUIRED:

Scotty Peeler Trim Removal

• 10mm wrench





MEANING OF CHARACTERS:



:REMOVE



:TIGHTENING TORQUE



:INSTALL



:LOOSEN



:DISCONNECT



:DISCARD



 
:CONNECT



:REUSE



:CLIP LOCATION





DESCRIPTION: BRZ INTERIOR LED LIGHT BULB KIT

PRECAUTIONS:



ATTENTION

 
Please refer to the precautions below before you begin work, in order to install the product safely and accurately.




Please disconnect the negative battery cable while conducting wiring operations. Failure to do so may result in electric shock or injury.



Please confirm that the electrical components of the vehicle operate normally. Also, please make a note of the data in the memory of the electrical components such as the radio. This will help avoid problems that may arise when performing the repair check after installation.



When tightening bolts or screws, use the proper tools and the proper size, and comply for the specified torques specified for the part. Failure to securely tighten the bolt or screw may cause them to loosen and fall off, causing damage.

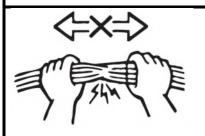

Be careful not to forcefully pull the wiring harness of the vehicle. This helps prevent the connector from being disconnected, and the wires from being cut or damaged.



After installing the wiring, perform an operations check on the newly installed parts before reassembling. This helps prevent mis-wiring.

DESCRIPTION
LED Upgrade – Dome Light

DATE



DESCRIPTION: BRZ INTERIOR LED LIGHT BULB KIT

CAUTION:

INSTALLATION:




Use a dry clean cloth to handle light bulbs; adhesion of grease or water can damage the bulb.

1. Battery Cable:

- 1) Unlock all doors, open rear hatch and open hood.
- 2) Using a 10mm wrench, disconnect the negative battery cable.

2. Spot Map Light:


- 1) Use trim tool to release the retaining tabs and remove the lens cover.
- 2) Remove the light bulb from the housing and discard.

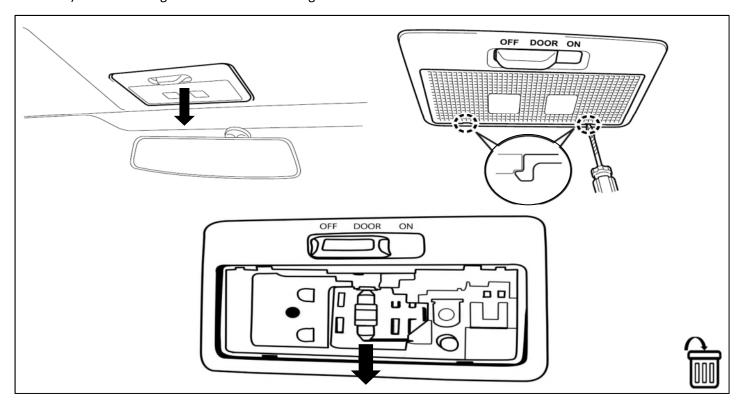




DESCRIPTION: BRZ INTERIOR LED LIGHT BULB KIT

- 3) Install new LED bulb (a) into the housing.
- 4) Install lens covers.

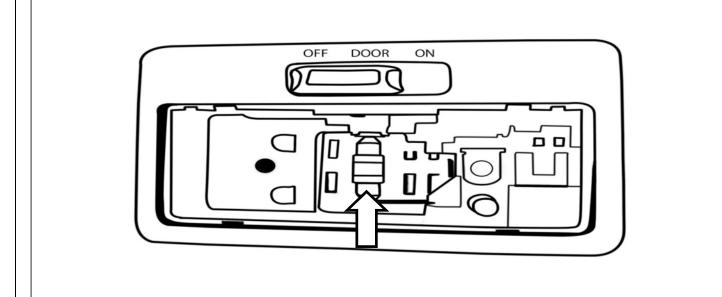

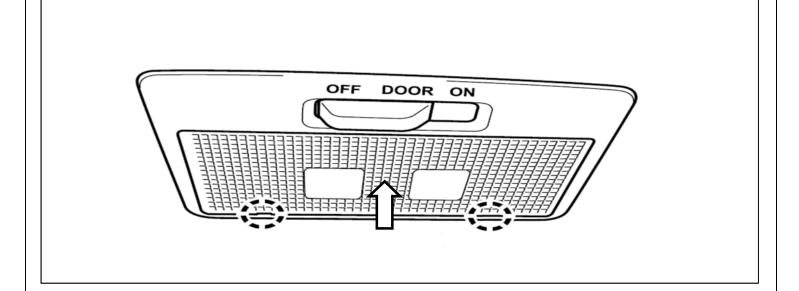



DESCRIPTION: BRZ INTERIOR LED LIGHT BULB KIT

3. Battery Cable

1) Install the negative battery cable and check to ensure that all lights function properly.