

General Service Bulletin (GSB):	Proper Seating of Connector C2280G to the Body Control Module
GSB Overview:	GSB Showing how to verify a proper connection of connector C2280G to the Body Control Module (BCM)
NOTE: This information is not intended to replace or supersede any warranty, parts and service policy, Work Shop Manual (WSM) procedures or technical training or wiring diagram information.	

Body Control Module (BCM)

Connector C2280G Proper Connection GSB


2011- 2014 F150



“BCM Connector C2280G” GSB

BCM C2280G Connector View 2011 – 2014 F150 (as shown in Wiring Diagram)


← Back	Forward →	← C2280G ▾ →	🖨		
Connector: C2280G	Description BODY CONTROL MODULE (BCM)	Color BK	Harness 12A581	Base Part # part# N/A	Service Pigtail Not Available

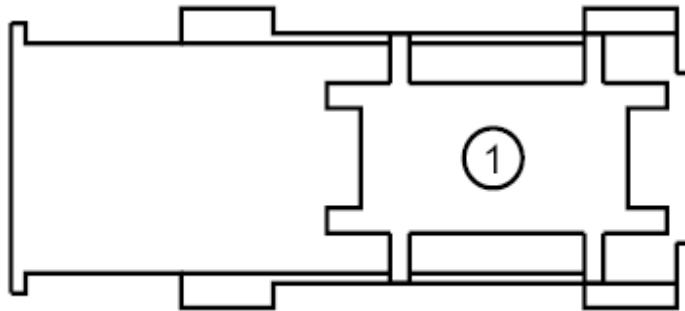

Pin	Circuit	Gauge	Circuit Function	Qualifier
1	SDC04 (RD)	4	BATTERY- # PLUS	


“BCM Connector C2280G” GSB

Location of BCM Connector C2280G (as shown in Wiring Diagram)

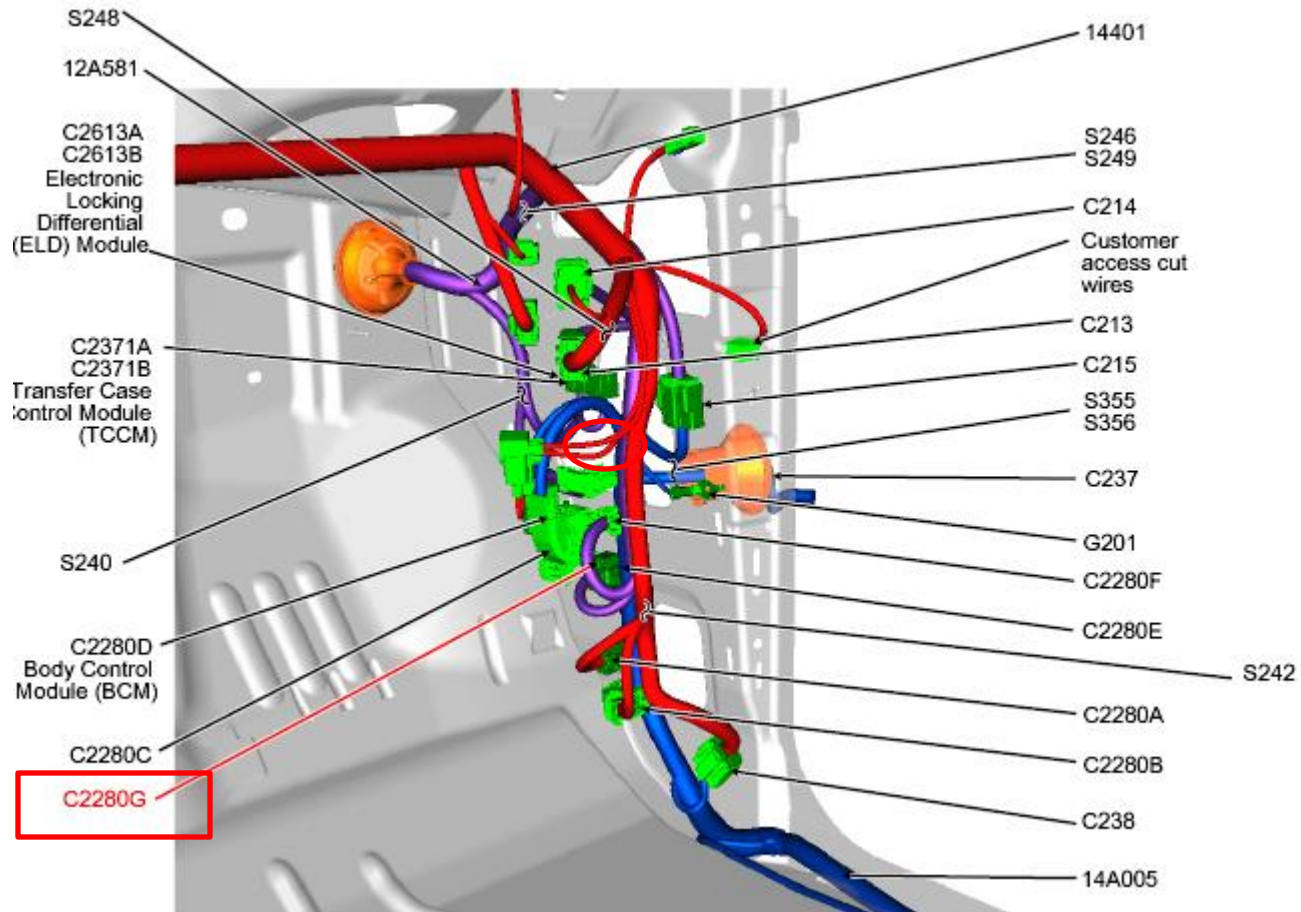

“BCM Connector C2280G” GSB

Location of BCM Connector C2280G (in vehicle)

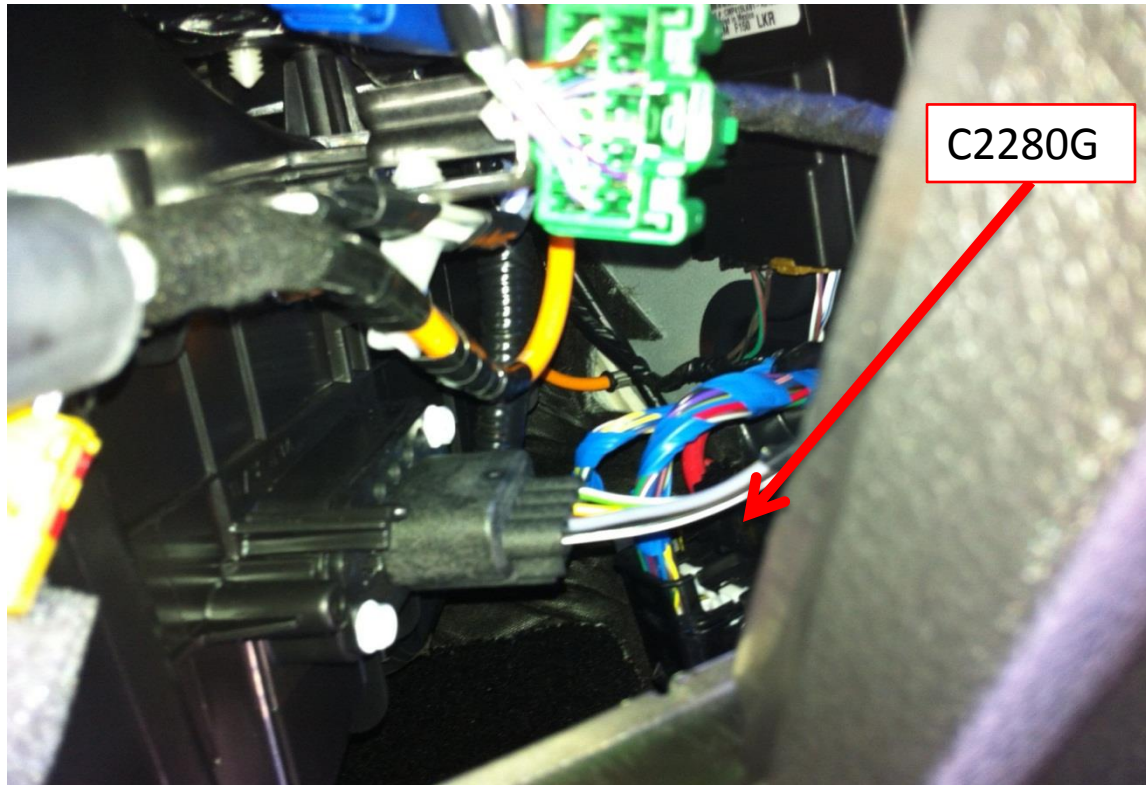


C2280G Is located on the right hand side of the vehicle, behind the glovebox

“BCM Connector C2280G” GSB

2 examples of “Improper” connections


NOT CONNECTED, NOT FULLY SEATED

- Notice space between connector and module.

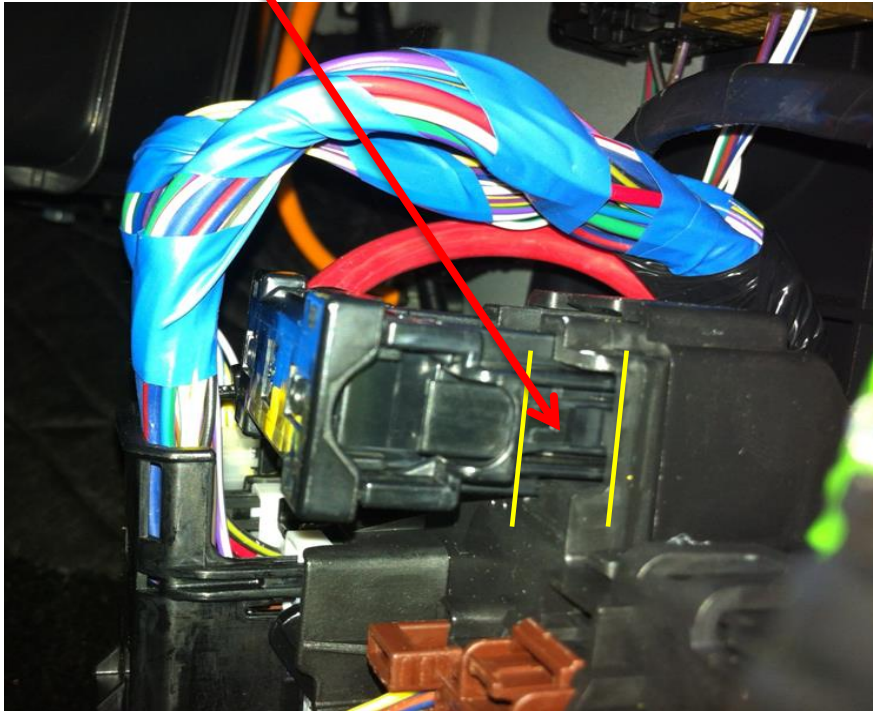

CONNECTED BUT NOT FULLY SEATED

- Notice space between connector and module.

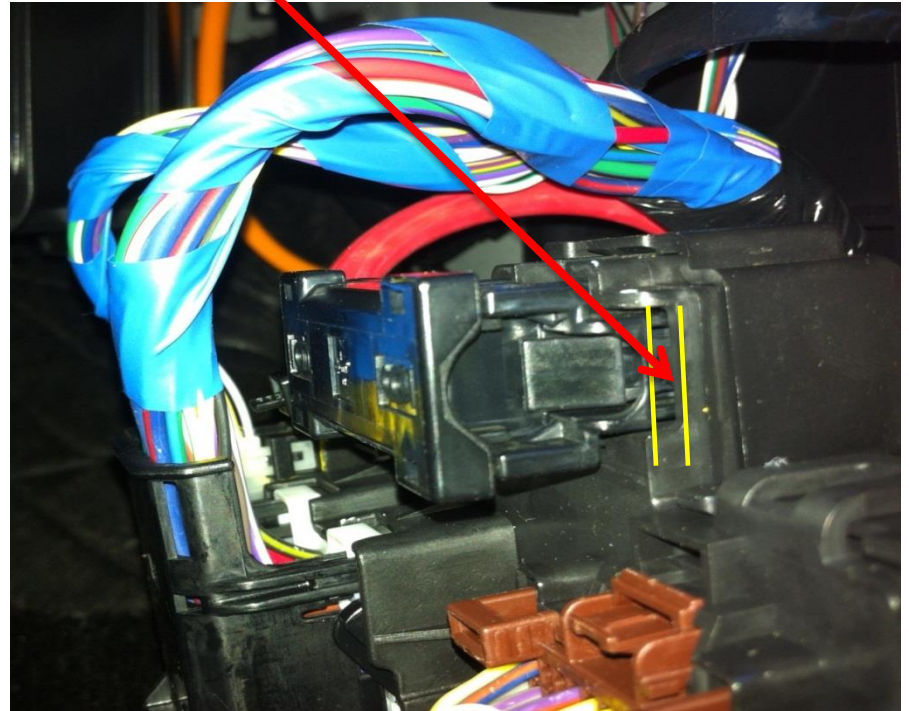

“BCM Connector C2280G” GSB

Example of a “Good” Connection

CONNECTED AND FULLY SEATED

- No space between the module and connector.

