

2026 Lexor

Customer states the latch button on the drawers under the microwave have failed.

The latch button detached from the drawer and his preventing the drawer from being opened.

The failure appears to be due to a defect or a failure of the latch assembly. As a result the upper drawer is no longer functional and requires replacement of latch assembly. Labor Requested: .40 hours. 0.20 approved. We will send you a new latch under warranty.

Please do NOT order.