

WINDOWS

Purpose

This document outlines the correct process for measuring for a replacement Lippert RV window by determining the rough opening on the RV. Refer to [QR-098 Window Series Variant Reference Guide](#) for help identifying window series and styles.

Procedure

Calculating the window rough opening (the cutout in the RV sidewall) is crucial to determining the window size for a replacement window. This measurement is taken from inside the RV, while the original window is still installed.

To determine the rough opening on an installed Lippert window:

1. From inside the RV, measure the width and height of the clamp ring on the window from screw center to screw center (Fig. 1). Record the measurements.
2. Add 5/8" to the width and height measurements to determine the rough opening size. The rough opening size corresponds to the window size needed.

