




Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. | 302 Portage Avenue | Saskatoon, SK | S7J 4C6

How to remove and replace the battery thermistor:


1. Please turn Off all power to the coach. Not plugged-in to shore power, engine & generator not running and turn Off both inverter and charge line master switches at the back.
2. Remove the back rest sofa cushion. There will be 2 bolts on each side of the sofa frame. Once removed, you can fully extend the sofa so the top of the battery box will be open for easy access.
3. Pry off the top front cover of the battery box until it's loose and slide it out after.

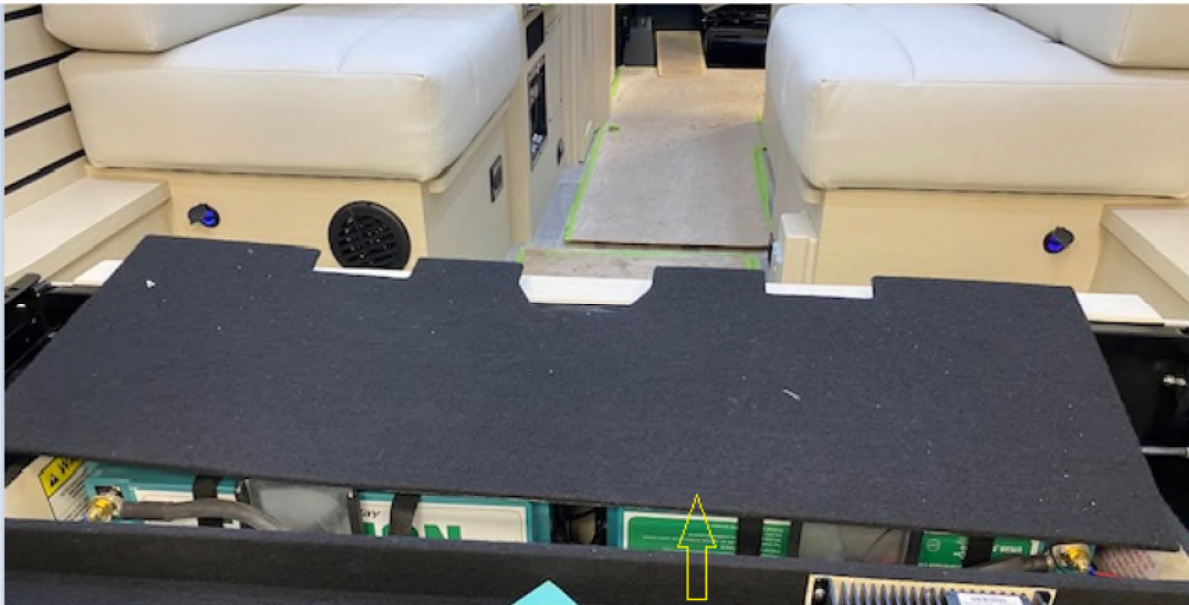


4. Remove the 4 screws of the DCD panel and tilt it as shown below.



5. The battery thermistor is part of the Trustate which is on the back of the DCD panel below where the inverter master switch is located above.

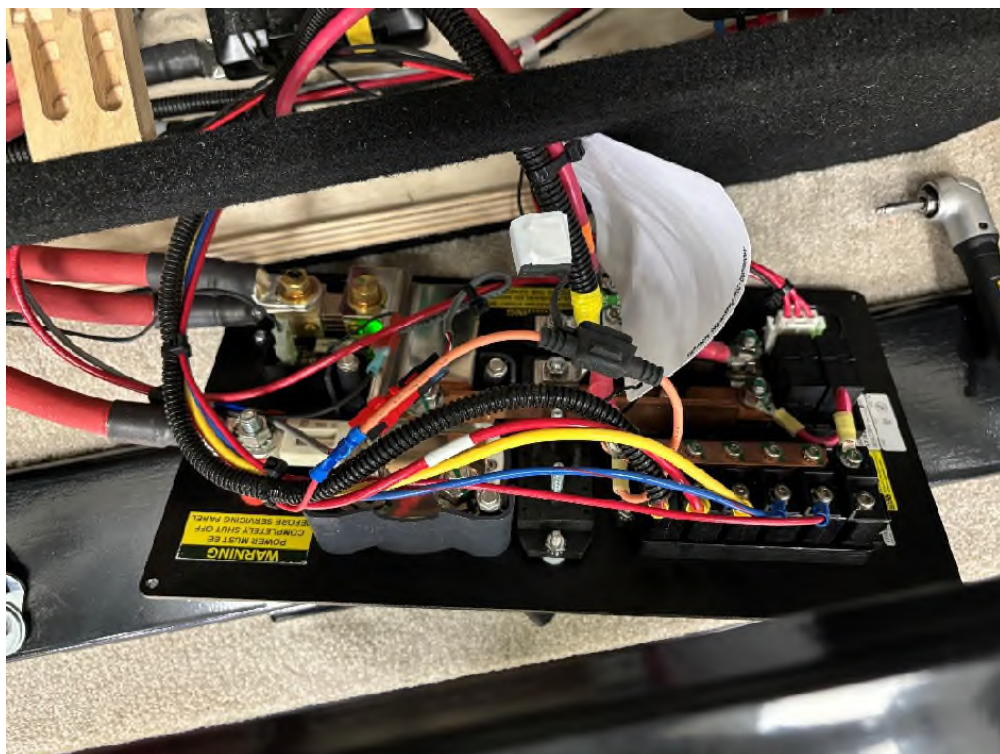

6. The Trustate is the one with the 2 brass bolts on the lower side of the DCD panel with the green LED light. Disconnect the thermistor (white plug with 2 black wires)

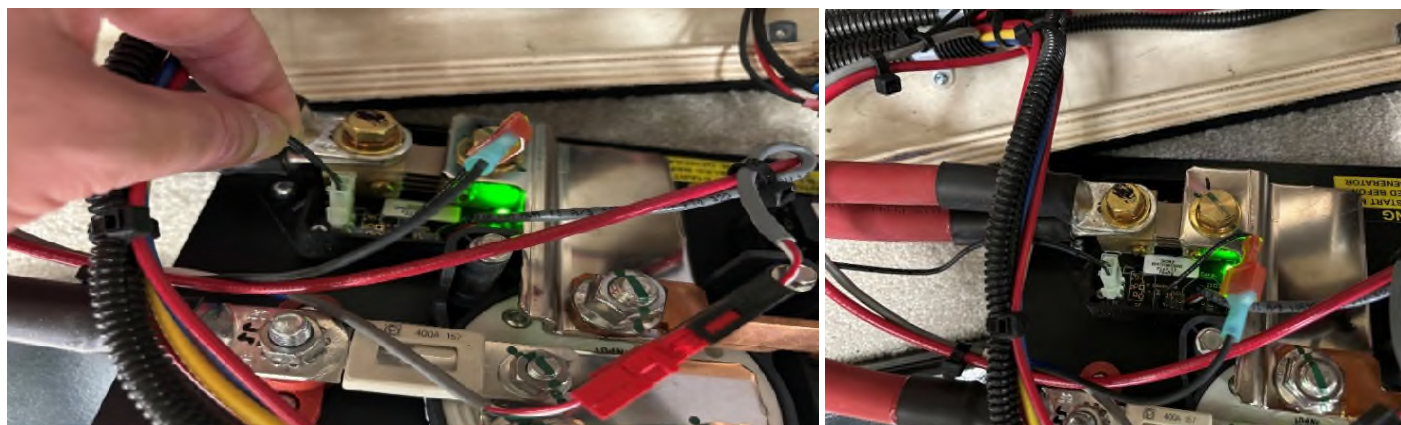

7. Disconnect the nut on the negative side of the battery and remove battery thermistor wire (It has a brass end and it's bigger than the other wires). **Make sure the wrench does not touch any positive connections when loosening off the ground or it will short.**



8. Replace the battery thermistor. Make sure the battery connection is torqued to 100" lbs when installing back. Turn ON touch panel and see if the temperature is back on the screen.