



Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189


Pleasure-Way Industries Ltd. | 302 Portage Avenue | Saskatoon, SK | S7J 4C6

If the MCD shade doesn't roll back up, do this procedure.

Adjustment Screw: Black – for tension (or if it won't extend), Grey – where the shade will stop when rolling

Below is the re-tension procedure: If this doesn't solve the issue, you need to replace the shade. Please contact MCD Innovations at 972-548-1850.

1. You will need to look upward and find two stainless bracket tips as shown on picture below.

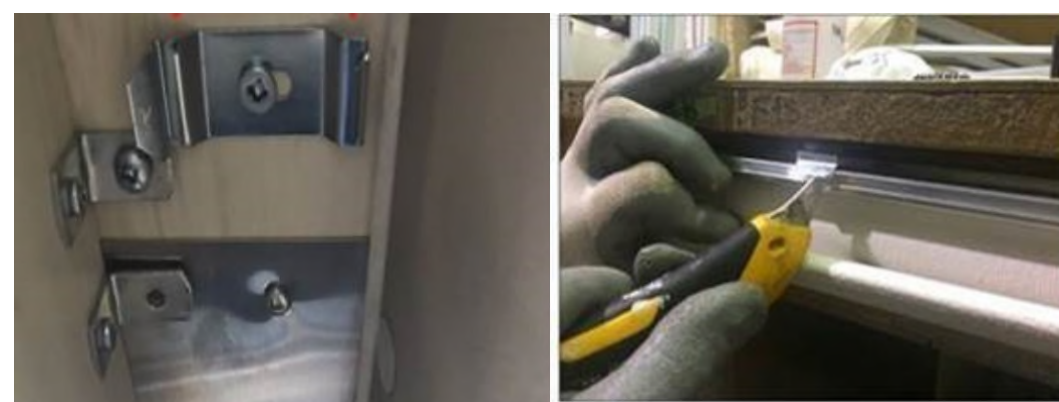

2. Using a flat screwdriver or butter knife, pry off the shade from the bracket on both left and right side of the shade (picture above).
3. Once the shade falls off, lift the back part of the shade assembly to remove it completely.
4. Roll up the shade manually and look for a circular GREY plastic adjustment screw which is located in the middle (picture above where thumb is pointing at). Using your flat screwdriver, push it as deep as possible and then turn the black screw clockwise 8-9 times.



5. While the shade assembly is removed, try to pull the blind and check if there is tension back on the blind.

6. To install back the shade assembly, hook the back part of the shade assembly to the bracket and then push it upward to lock it in place. You will hear a click which means the shade is in lock position.



The shade is pressed in with pressure clips. To release, you just need to use a long flat edge screwdriver or putty knife to gently pry the bracket open and the blind will fall out of the location. To re-secure the new blind, just press it up into the blind bracket and it will snap into place. Note there is one end of the bracket which is more rounded. This side should be inserted first when installing the new blind and then press the other end up into place.

