

Quick Guide **BRZ** 2020



Love. It's what makes a Subaru, a Subaru.

 **SUBARU**
Confidence in Motion

© 2019 Subaru of America, Inc. All rights reserved.

Contents may not be reproduced in whole or in part without prior written permission of publisher. Specifications in this Guide are based on the latest product information available at the time of publication. Some images shown are for illustration purposes only. Some equipment shown in photography within this Guide is optional at extra cost. Specific options may be available only in combination with other options. Specific combinations of equipment or features may vary from time to time, and by geographic area. Subaru of America, Inc. reserves the right to change or discontinue at any time, without notice: Prices, colors, materials, equipment, accessories, specifications, models and packages, without incurring any obligation to make the same or similar changes on vehicles previously sold. Colors shown may vary due to reproduction and printing processes. Subaru of America, Inc. is not responsible for typographical errors.

Aha™ is a trademark of Harman International Industries, Inc. Alcantara® is a registered trademark of Alcantara S.p.A., and Alcantara is produced by the Toray Group. App Store® is a registered trademark of Apple, Inc. Apple® is a registered trademark of Apple, Inc. BBS® is a registered trademark of BBS Kraftfahrzeugtechnik, AG. Bluetooth® is a registered trademark of Bluetooth SIG, Inc. Brembo® is a registered trademark of Freni Brembo, S.p.A. GreenEdge® is a registered trademark of Harman International Industries, Inc. Harman Kardon® is a registered trademark of Harman International Industries, Inc. HD Radio® is a registered trademark of iBiquity Digital Corporation. HomeLink® is a registered trademark of Prince Corporation, a wholly owned subsidiary of Johnson Controls. iHeart® Radio is a registered trademark of iHeartMedia, Inc. iPod® is a registered trademark of Apple, Inc. iTunes® is a registered trademark of Apple, Inc. Metal-Matrix Diaphragm (MMD®) is a registered trademark of Harman International Industries, Inc. MirrorLink™ is a trademark of Car Connectivity Consortium, LLC. Pandora® is a registered trademark of Pandora Media, Inc. Siri® is a registered trademark of Apple, Inc. Smart Way® is a registered trademark of the U.S. Environmental Protection Agency. Stitcher™ is a trademark of Stitcher™, Inc. TORSEN LSD® is a registered trademark of JTEKT TORSEN North America, Inc. SiriusXM® All Access Radio is a registered trademark of SiriusXM Radio, Inc. SiriusXM Traffic® and SiriusXM Travel Link® are registered trademarks of SiriusXM Radio, Inc. Added Security, Crosstrek, Forester and Outback are registered trademarks of Subaru of America, Inc. Ascent, DriverFocus and StarTex are trademarks of Subaru of America, Inc. BRZ, EyeSight, Impreza, Lineartronic, Legacy, Subaru, SUBARU BOXER, Starlink, Subaru Starlink, WRX, STI and X-MODE are registered trademarks of Subaru Corporation. Confidence in Motion is a trademark of Subaru Corporation.

TABLE OF CONTENTS



2	PURPOSE OF THIS GUIDE
4	ENTRY AND EXIT
6	INSTRUMENT PANEL
8	GETTING COMFORTABLE
15	CONTROLS
20	GAUGES AND WARNING LIGHTS
21	OPERATING THE VEHICLE
24	REFUELING
25	PASSENGER/CARGO AREAS
28	ENGINE COMPARTMENT
30	ADDITIONAL SPECIFICATIONS
31	INDEX

PURPOSE OF THIS GUIDE

FORWARD

Congratulations on choosing a Subaru vehicle! This Quick Guide is designed to provide information on the basic operation and key features of your Subaru vehicle. The Quick Guide is not intended as a substitute for the Owner's Manual. We strongly encourage you to review the entire Owner's Manual to ensure complete understanding.

IMPORTANT SAFETY INFORMATION

The Quick Guide is not intended as a substitute for the Owner's Manual. We strongly encourage you to review the entire Owner's Manual to ensure complete understanding.

ADDITIONAL RESOURCES

If you're having difficulty using any of the functions outlined in this guide, you can get more information from the following sources:

Your Subaru Owner's Manual:

Located in the glovebox

Online Subaru Owner's Resources:

www.subaru.com/owners

Subaru Customer Support:

www.subaru.com/customer-support

1-800-SUBARU3 (1-800-782-2783)



Scan to learn more about **Owner's Resources**.



Scan to learn more about **Customer Support**.



Scan to get the **MySubaru App**.



Scan to get the **SUBARU STARLINK™ App**.

PURPOSE OF THIS GUIDE

IN CASE OF EMERGENCY

Subaru Roadside Assistance

Subaru Roadside Assistance is free and standard on your Subaru. Coverage is automatic; there are no forms to complete. Subaru Roadside Assistance is available anytime during the 3-year/36,000-mile Subaru Limited Warranty, whichever comes first.* A Subaru Roadside Assistance decal has been affixed to the driver's door window. Please refer to the Roadside Assistance guide in the owner's information kit for the details on this coverage.

Subaru Roadside Assistance:

1-800-261-2155

Roadside assistance helps with:

- Towing to the nearest authorized Subaru retailer if you cannot safely drive your Subaru
- Jump-start if your battery is dead
- Gasoline delivery if you run out of gas
- Flat tire change to install your spare
- Emergency lockout service
- National Subaru Retailer locator service, with phone numbers and location of the nearest retailer anywhere in the U.S. or Canada

*See your Retailer for details.

ENTRY AND EXIT

KEYLESS ENTRY

1 Lock/Arm

- Pressing this button will lock both doors and activate the security alarm.
- If either door is not fully closed, a continuous tone will sound.
- Pressing this button three times (within five seconds) will activate the vehicle finder function. If you are within 30 feet of your Subaru, the horn will sound once, and the hazard warning flashers will flash three times.

2 Unlock/Disarm

- Pressing this button once will unlock the driver's door.
- Pressing this button twice (within five seconds) will unlock both doors.
- When you press this button, the interior lights will illuminate, if set to the "DOOR" positions.

3 Trunk

- Pressing and holding this button will unlock the trunk.

4 Panic Alarm

- Pressing and holding this button will sound the horn and flash the hazard warning lights.
- Press any button on the access key fob or transmitter to deactivate.



Transmitter

KEYLESS ACCESS WITH PUSH BUTTON START

Unlock Using Door Handles

Grip the driver's door handle to unlock the driver's door. Grip the passenger's handle to unlock both doors. Two chirps will sound and the hazard warning flashers will flash twice.



Locking Using Door Handles

Close all doors and the trunk and touch the door lock sensor (two lines) on either front door handle. All doors and the trunk will lock. One chirp will sound and the hazard warning flashers will flash once.

 


Opening the Trunk

Press the trunk opener button to open the trunk.




INSTRUMENT PANEL

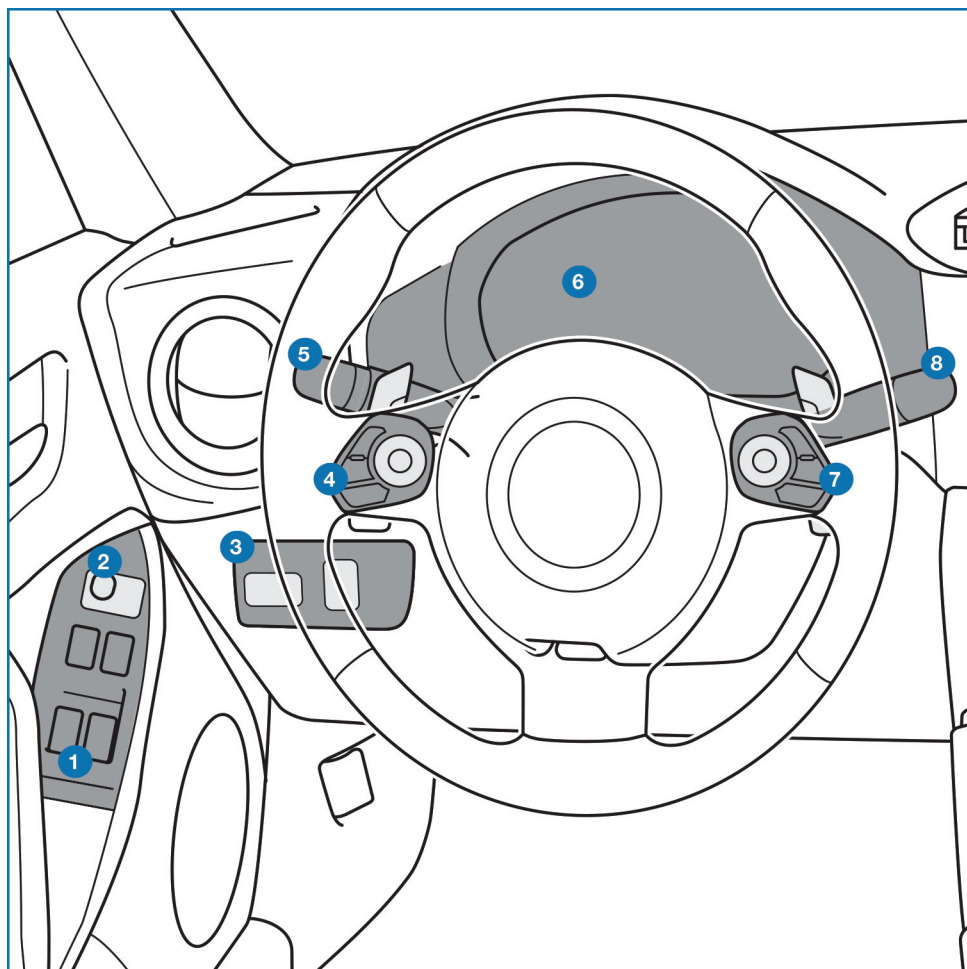

- ① Power windows (p. 11)
- ② Power exterior mirrors (p. 9)
- ③ Instrument panel switches (p. 18)
- ④ Audio Controls (p. 15)
- ⑤ Light controls (p. 16)
- ⑥ Gauges and warning lights (p. 20)
- ⑦ Multi-Information Display Control Switches (p. 15)
- ⑧ Windshield wipers (p. 18)

 INSTRUMENT PANEL

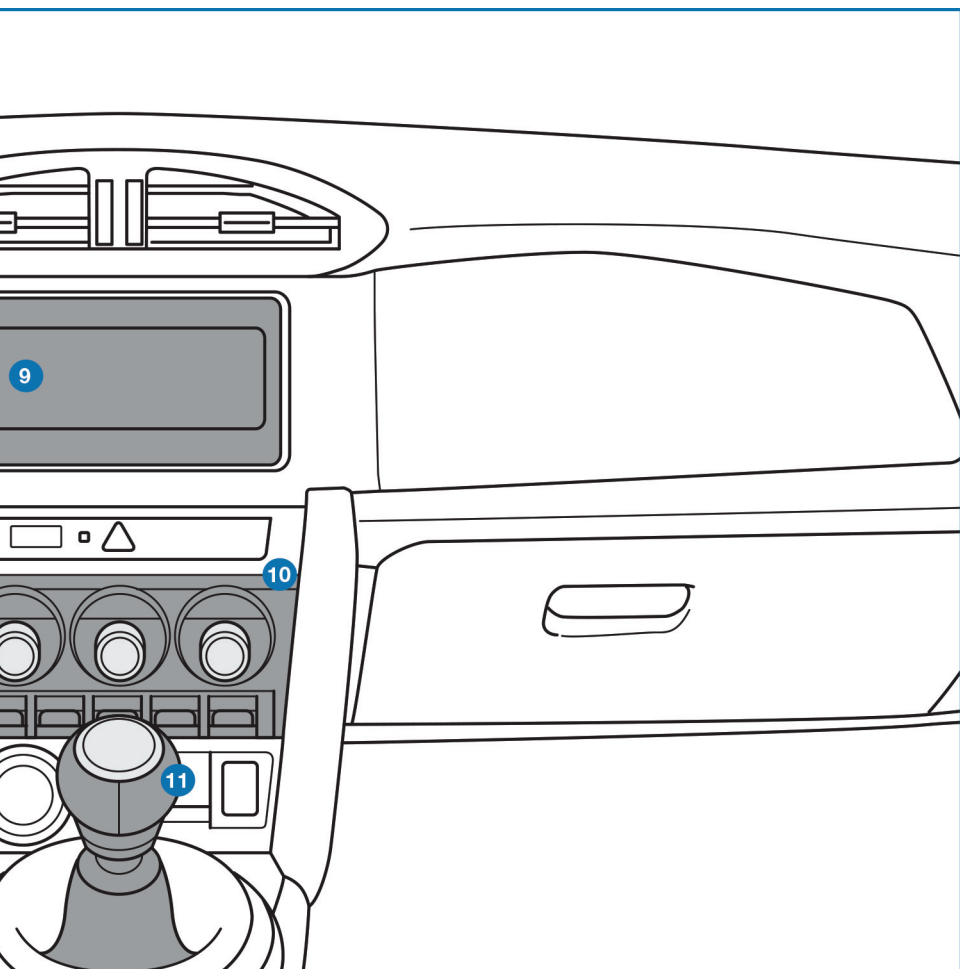

- ⑨ SUBARU STARLINK™ Multimedia Touchscreen
- ⑩ Climate control system (p. 11)
- ⑪ Shifter (MT) or Select Lever (AT) (p. 21)

GETTING COMFORTABLE

SEATING

Manual Seats

- 1 Forward/Backward:** Pull the lever below the seat up and slide the seat forward or backward. Release the lever and make sure the seat is locked into place.
- 2 Seat Height (Driver's Seat):** Pulling up or pushing down on the lever will raise or lower the seat cushion.
- 3 Recline Seatback:** Pull the lever up to adjust the seatback to the desired position. Release the lever and make sure the seat is locked into place.
- 4 Seatback Fold Strap:** To get in and out of the back seats, pull the seat strap to fold the desired seat. When finished, push the seatback until it locks in place.



Head Restraint Adjustment

Pull the head restraint up to raise it. To lower it, push it down while pressing the release button on the top of the seatback. Each head restraint should be adjusted so that the center of the head restraint is closest to the top of the occupant's ears. This adjustment should be made for any seating position, front or rear, that has a new occupant.



GETTING COMFORTABLE

TILT AND TELESCOPIC STEERING COLUMN

Pull the lever down firmly to unlock, then adjust the height and lengthwise position of the column. Push the lever firmly back up to lock the column in place.



POWER EXTERIOR MIRRORS

Turn the knob to “L” (left side) or “R” (right side) to select a mirror. Move the knob in the direction you want to move the mirror. Return the knob to the neutral center position.



GETTING COMFORTABLE

REAR VIEW MIRROR

Auto-dimming Mirror (if equipped)

When driving at night, the auto-dimming function senses brightness from vehicle headlights behind you and automatically dims to reduce glare. Pressing the switch will turn this function on or off. A green LED indicator on the switch will illuminate when the function is on.



HomeLink® 5 Accessory Mirror (if equipped)

The HomeLink® 5 accessory mirror provides three buttons to replace up to three hand-held radio frequency remotes used to activate devices, such as garage door openers, gate openers, entry door locks, security systems and home lighting. Please see the Owner's Manual for programming instructions or visit www.subaru.com/homelink to view a how-to video.



NOTE: HomeLink® 5 may not be compatible with some older door openers or additional equipment may be required.



Scan to learn more about HomeLink®.

GETTING COMFORTABLE

POWER WINDOWS

To open or close a window, partially press or pull up the corresponding switch and hold. Fully press down or pull up and release to automatically open or close the window.



CLIMATE CONTROL SYSTEM

Dual-zone Automatic Climate Control



You can set separate temperatures for the driver and passenger seats. Set your desired temperature and let the system automatically make the adjustments for you. At any time, you can manually take control of the climate settings.

GETTING COMFORTABLE

Operation in Automatic Mode

- 1 Automatic Control Button:** This system automatically controls all of the climate systems except defogging. Press “AUTO” to activate. Press “OFF” to turn off the system.
- 2 Temperature Control Dial:** Turn the dial clockwise to increase the temperature or counterclockwise to decrease the temperature. The temperature will appear on the screen. You can adjust separate temperature settings for the driver’s side and passenger’s side.
- 3 Dual Button:** Press the button to activate or deactivate the dual mode. Dual mode makes it possible to have separate temperature settings for the driver’s side and passenger’s side.

When using automatic mode, the fan speed, airflow distribution, air-inlet control and air conditioning compressor are controlled automatically. To activate:






1. Press the “AUTO” button. The “FULL AUTO” indicator light illuminates on the climate control display.
2. Set the preferred temperature using the temperature control dial.

If you operate any of the buttons other than “OFF”, rear window defogger, DUAL or the temperature control dial, the “FULL” indicator light will turn off. The “AUTO” light will remain illuminated. You can then manually control the system as desired. Press the “AUTO” button to change back to “FULL AUTO” mode.

Operation in Manual Mode

- 4 Recirculated/Outside Air Button:** Press this to prevent outside air from entering your Subaru. Press the button again to allow outside air into your Subaru. NOTE: To prevent windshield fogging, do not remain in the recirculated mode for an extended period of time.
- 5 Fan Speed Control Dial:** Turn the fan speed control dial to increase or decrease fan speed.
- 6 Airflow Mode Selection Button:** Press the button to select the desired airflow mode. The selected mode – ventilation, bi-level, feet or feet-defrost – is shown on the display.


GETTING COMFORTABLE

ICON	MODE	FUNCTION
	Ventilation	Instrument panel outlets
	Bi-Level	Instrument panel outlets and foot outlets
	Feet	Foot outlets, both side outlets of the instrument panel and some through windshield defroster outlets
	Feet-Defrost	Windshield defroster outlets, foot outlets and both side outlets of the instrument panel
	Defrost	Windshield defroster outlets and both side outlets of the instrument panel

- 7 Air Conditioner Button:** Press this button to activate or deactivate the air conditioning.
- 8 Defroster Button:** Press this button to defrost or dehumidify the windshield and front door windows. NOTE: The air conditioning may turn on to defrost the windshield more quickly. However, the indicator on the air conditioner button will not illuminate.
- 9 Rear Window Defogger Button:** Press this button to turn on the defogger. It will automatically turn off after about 15 minutes. If the window clears before, then press the button again to turn it off. The outside mirror defogger will also activate.

Heated Seats (if equipped)

 Switches are located on the center console between the driver and passenger seats. Choose low (bottom of switch) for normal heating or high (top of switch) for rapid heating. Choose the center position to turn off the seat heaters.

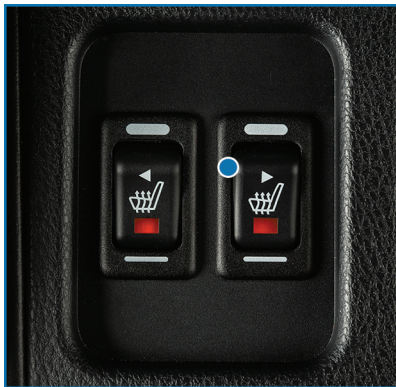

GETTING COMFORTABLE

 
ACCESSORY CONNECTIONS

Power Outlets (12V)

Power outlets (12V) are located in the center console tray and in the glove box. Electrical power is available for use with in-vehicle electrical appliances with a maximum power rating of 120W.

1 USB Ports

The USB ports are located in the front of the center console. You can connect a variety of USB-equipped devices to the front port, such as portable music players or smartphones, to enjoy your favorite music through the multimedia system in your Subaru. This port also provides charging (5V, 2.1A) to devices. For more information, please refer to the SUBARU STARLINK™ Owner's Manual or Quick Guide.

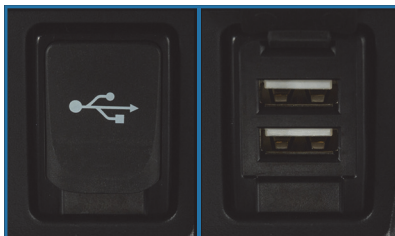

AUDIO CONTROLS

- 1 Source
- 2 Volume Up
- 3 Volume Down
- 4 Preset Skip
- 5 Phone Send
- 6 Phone End



MULTI-INFORMATION DISPLAY CONTROL

 
- 1 Return
- 2 Scroll Up/Down
- 3 Scroll Left/Right
- 4 Enter
- 5 Voice Recognition



CONTROLS

CRUISE CONTROL

- 1 RES:** To resume your speed after canceling, push the lever up to the “RES” side.
- 2 CANCEL:** To cancel the cruise control, pull the lever toward you, push the brake pedal or press the “ON-OFF” button. If you have a manual transmission, you can push in the clutch pedal.
- 3 SET:** Press the accelerator pedal until your vehicle reaches the desired speed. Push the lever down to the “SET” side and release. Ease off the accelerator pedal. Your vehicle will maintain the desired speed.
- 4 ON/OFF:** To activate the cruise control, press the “ON-OFF” button. The cruise control indicator light on the instrument panel will turn on. To deactivate cruise control, press the “ON-OFF” button again.

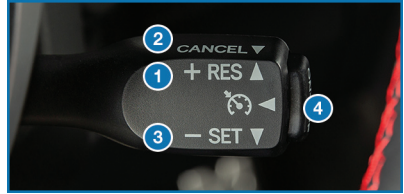

Increase speed

Push the lever up to the “RES” side; hold until your vehicle reaches the desired speed and release. To increase speed using the accelerator pedal, press the pedal until you reach the desired speed. Push the lever down to the “SET” side to set the speed.

Decrease speed

Push the lever down to the “SET” side; hold until your vehicle slows to the desired speed and release. To decrease the speed using the brake pedal, press the pedal to release cruise control temporarily. When the speed decreases to the desired speed, push the lever down to the “SET” side to set the speed.

LIGHT CONTROLS

- 1 AUTO:** If equipped, rotate the end of the lever to automatically turn your headlights on or off, depending on the level of outside light.
- 2 Daytime Running Lights:** Rotate the end of the lever to turn on the instrument panel lights, parking lights, side marker lights, tail lights, and license plate lights.
- 3 Headlights:** Rotate the end of the lever to turn on the headlights, instrument panel lights, parking lights, side marker lights, tail lights, and license plate lights.



- 4 High Beams:** Push the lever forward to change from low beam to high beam. Pull the lever back to center to return to low beam. If equipped, this also activates the High Beam Assist (HBA) system.
- 5 Fog Lights:** If equipped, rotate the dial to turn on the fog lights.

Illumination Brightness

While the light switch is on, rotating the dial on the instrument panel upward will make the illumination brighter. When the dial is fully rotated upward (dots aligned), the instrument panel illumination stays at full brightness. Rotating the dial downward dims the instrument panel illumination.

For map equipped vehicles this setting also affects the day/night view and illumination level.



Daytime Running Lights

The daytime running lights automatically turn on when the engine has started, the parking brake is fully released, the light switch is in the Off, "AUTO" (if equipped) or "☀️" position, and the select lever is not in the "P" position. Always turn on the headlights when it's dark outside by rotating the dial to the "☁️" or "AUTO" position.

TURN SIGNALS

Push slightly up for right lane change or fully up for right turn signal. Push slightly down for left lane change or fully down for left turn signal.



 
CONTROLS

WINDSHIELD WIPERS

To turn on the wipers, press the wiper control lever down one position for intermittent, two positions for low speed, or three positions for high speed. To turn the wipers off, return the lever to the “OFF” position. For a single wipe, move the lever up one position.

When the lever is in the intermittent position, rotate the dial to adjust the operating interval of the wipers.

Pull the lever toward you to spray washer fluid. The washer will spray until you release the lever, then wipe twice.

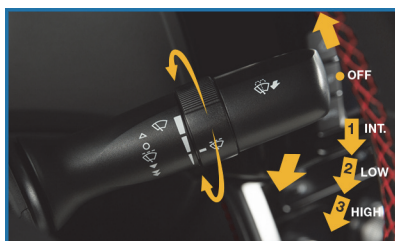

INSTRUMENT PANEL SWITCHES (LOWER LEFT)

- 1 Illumination brightness control (p. 17)
- 2 Trunk Release (p. 26)



km/h - MPH, ODO - TRIP and DISP Buttons

There are three buttons to the left of the instrument cluster to change the display.

- 1 **km/h – MPH:** Press this button to change the digital display from km/h to MPH. Press again to switch back.
- 2 **ODO – TRIP:** Press this button to cycle through the odometer, trip meter A, trip meter B, the setting screen for the tachometer needle or the setting screen for the shift position indicator.
- 3 **DISP:** For BRZ Premium, press this button to cycle through the outside temperature, current fuel consumption or average fuel consumption.



 
OVERHEAD PANEL

- 1 Interior Light Switch
- 2 Light



GAUGES AND WARNING LIGHTS

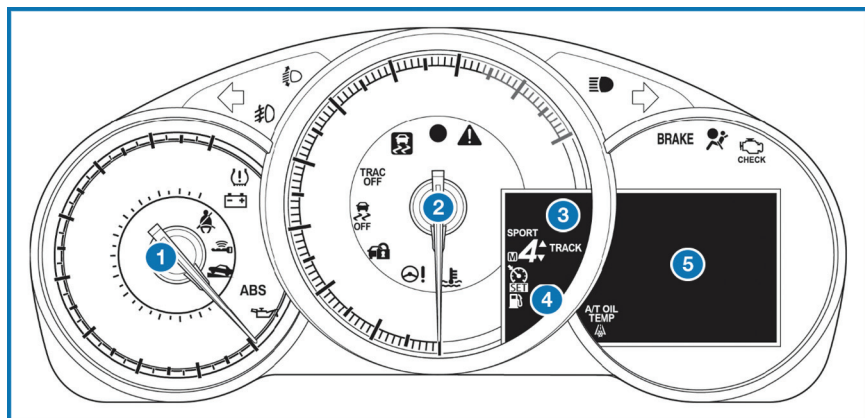

GAUGES






- 1 Tachometer
- 2 Speedometer
- 3 Digital Speedometer
- 4 Fuel gauge
- 5 Multi-Information Display

WARNING AND INDICATOR LIGHTS




Red lights indicate immediate attention is required. Some examples are:

	Seatbelt warning		Door open	BRAKE / !	Brake system
---	------------------	---	-----------	------------------	--------------

Yellow lights indicate caution. Some examples are:

	Low fuel		Engine oil level warning light		Tire pressure warning light
---	----------	---	--------------------------------	---	-----------------------------

Green and blue lights are for information. Some examples are:

	Headlight indicator light		Cruise Control		High beam indicator light
--	---------------------------	---	----------------	---	---------------------------

OPERATING THE VEHICLE

PUSH-BUTTON IGNITION SWITCH

Each time you press the ignition switch without depressing the brake pedal, the ignition position will change as follows: ACC, ON, OFF.

ACC (Accessory): Provides power to the radio and accessory power outlets. Orange indicator illuminates.

ON: All electrical systems will be available. Orange indicator illuminates.

OFF: Power off and indicator off.



STARTING THE ENGINE

With Push-button Ignition

To start the engine:

1. Sit in the driver's seat with the access key fob.
2. Make sure the select lever is in the "P" position or "N" for manual transmission vehicles.
3. Depress the brake pedal (and clutch pedal for manual transmission models).
4. While depressing the brake pedal (and clutch pedal for manual transmission models), briefly press and release the ignition switch.

DRIVING THE VEHICLE

6-Speed Manual Transmission

This manual transmission is a fully synchronised 6-forward and 1-reverse speed transmission. Before you can shift into reverse gear, you must raise the slider ring and hold it in that position. Only pull the slider ring up when shifting into reverse gear.



OPERATING THE VEHICLE

Automatic Transmission Shift Mode (if equipped)

The transmission is electronically controlled and provides two different driving modes: normal and manual.

Normal Mode

When the select lever is in the “D” (Drive) position, the transmission is in normal shift mode. The select lever position indicator in the Combination Meter Display (CMD) shows “D” and the transmission automatically shifts into a suitable forward gear.

 
Manual Mode

In manual mode, you select the desired gear position to obtain necessary acceleration and engine braking. Move the selector lever left from the “D” position into the “M” position to select manual mode. The gear position indicator in the Combination Meter Display (CMD) shows the currently selected gear. Arrow-shaped indicators show when upshifting or downshifting is available. To shift, use the paddle shift control switches behind the steering wheel.



Paddle Shift Control Switches

- You can shift gears using the paddle shift control switches. To upshift to the next higher gear, pull the “+” paddle on the right toward you. To downshift to the next lower gear, pull the “-” paddle on the left toward you.
- You can temporarily shift gears even when the selector lever is in the “D” position by pulling either the “+” or “-” paddle toward you. Once vehicle speed stabilizes, the transmission will switch back to normal mode.

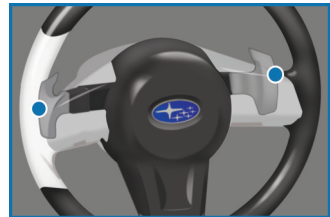

OPERATING THE VEHICLE

DRIVING SYSTEMS/MODES

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations.

1 If the vehicle gets stuck in mud, dirt or snow, the traction control system may reduce power from the engine to the wheels. Turning the system off may make it easier for you to rock the vehicle in order to free it. Press the button again to turn the traction control back on.



2 Your vehicle may be equipped with two types of control modes to accommodate various driving preferences. The control modes can be selected with the “TRACK” button. Normal mode allows secure and smooth normal driving. When the button is pressed and held for one second, TRACK mode is activated. The driving threshold parameters are raised, allowing the driver more control over the vehicle.

3 If equipped, push the switch toward the “SPORT” mode for sporty driving or when driving in mountainous regions with lots of curves. To cancel sport mode, push the switch toward “SPORT” mode again.

If equipped, push the switch toward the “SNOW” mode for accelerating and driving on slippery road surfaces, such as snow. To cancel snow mode, push the switch toward “SNOW” mode again.

For more detailed information, please refer to your Owner’s Manual.

TURNING OFF THE VEHICLE

With Push-button Ignition Switch

To stop the engine:

1. Stop the vehicle completely.
2. Move the select lever to the “P” position or set the parking brake for manual transmission models.
3. Press the ignition switch.

NOTE: The windows will remain active for about 45 seconds and the SUBARU STARLINK™ Multimedia system will remain on for about three minutes or until a door is opened, whichever occurs first.

REFUELING

FUEL FILLER LID RELEASE

The fuel filler lid release is located on the floor to the left of the driver's seat. To open the fuel filler lid, pull the fuel filler lever up and release.



While refueling, place the fuel filler cap on the cap holder inside the lid.

To close the lid, press it until you hear it latch.



FUEL

Use regular unleaded gasoline with an octane rating of 93 AKI or higher. Do not use fuels with more than 10% ethanol. See the Owner's Manual for more information.

FUEL CAPACITY

13.2 US gallons

 
The low fuel warning light illuminates when the tank is nearly empty, at approximately 1.8 US gallons.



PASSENGER/CARGO AREAS

FOLDING THE REAR SEATBACK

Open the trunk and pull both seatback release straps and push the seatback forward. Front seats may need to be moved forward to clear the folding rear seat back. To return the seatback to its original position, raise the seatback until it locks into place and make sure that it is securely locked.

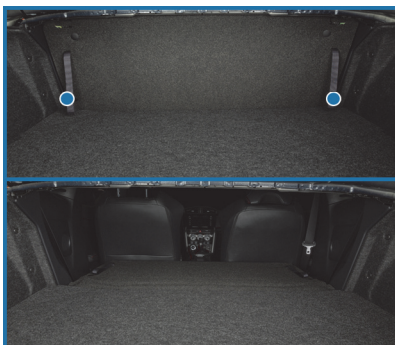

INTERNAL SAFETY TRUNK RELEASE WITH SELF-ILLUMINATING HANDLE

 
In the event that children or adults become locked inside the trunk, this luminescent handle allows them to open the lid from inside the trunk. To open, simply pull the yellow handle downward as indicated by the arrow on the handle, and then push up on the lid.



PASSENGER/CARGO AREAS

LATCH/ANCHOR

Your Subaru is equipped with Lower Anchors and Tethers for Children (LATCH). For maximum safety, first carefully read the LATCH system instructions from the device manufacturer, as well as the installation instructions in your Owner's Manual, to properly install the LATCH compatible restraint system. Use the appropriate seatbelts or anchorages provided in your Subaru. Children age 12 and under must properly occupy the rear seat at all times.

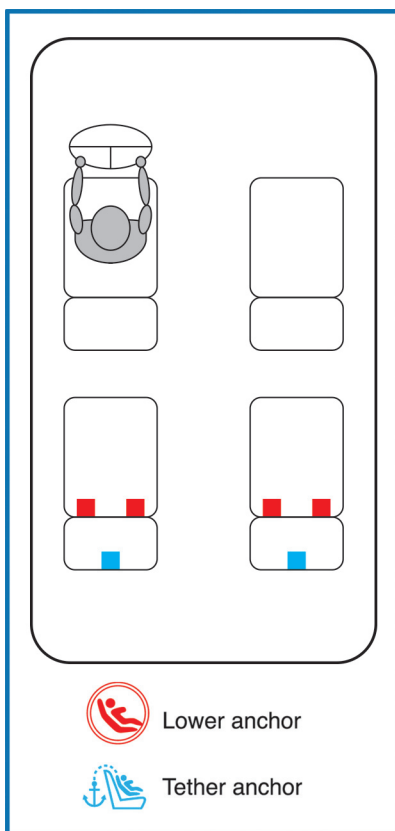

TRUNK LID OPENER

 
To open the trunk, press the trunk lid opener switch.



TRUNK LID CANCEL BUTTON

Prevent unauthorized entry into the trunk by locking the trunk release button. Press the trunk lid cancel button to lock the trunk release button. The trunk can only be opened using the master key. Press the button again to unlock the trunk release button.

This button is located inside the trunk on the left hand side.

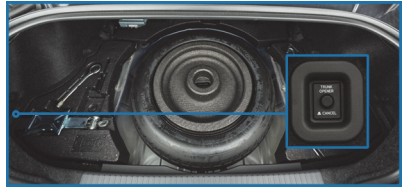

SPARE TIRE AND JACK

 
A spare tire, jack, jack handle, towing eyelet, screwdriver and wheel nut wrench are stored under the floor of the trunk.



ENGINE COMPARTMENT


HOOD PROP

The hood prop is located in the left front of the engine compartment. Fold it up and insert the end into the slot marked with an arrow.

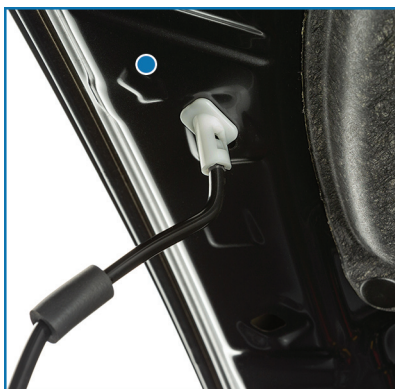

ENGINE COMPARTMENT

 2.0L ENGINE

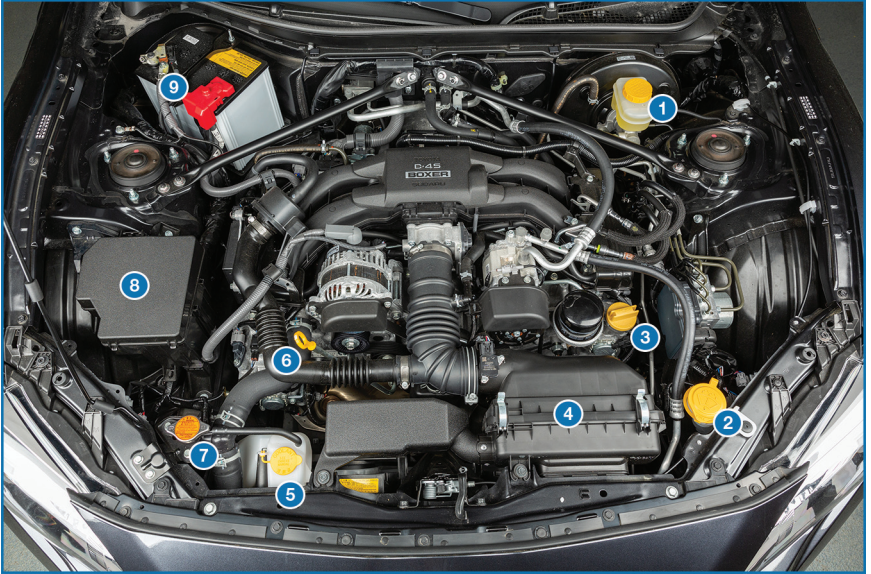

- | | | | |
|---|--------------------------|---|---------------------------|
| 1 | Brake Fluid Reservoir | 6 | Engine Oil Level Dipstick |
| 2 | Windshield Washer Tank | 7 | Radiator Cap |
| 3 | Engine Oil Filler Cap | 8 | Main Fuse Box |
| 4 | Air Cleaner Element | 9 | Battery |
| 5 | Engine Coolant Reservoir | | |

ADDITIONAL SPECIFICATIONS

NEW VEHICLE BREAK-IN

The performance and long life of your Subaru are dependent on how you handle and care for your Subaru while it is new.

Follow these instructions during the first 1,000 miles:

- Do not race the engine.
- Do not drive at one consistent engine or vehicle speed, either fast or slow.
- Avoid starting suddenly and rapid acceleration, except in an emergency.
- Avoid hard braking, except in an emergency.

ENGINE OIL

Use 0W-20 synthetic, with one of the follow specifications:

- API classification SN with the words “RESOURCE CONSERVING”.
- ILSAC GF-5, which can be identified with the ILSAC certification mark (Starburst mark).

 
ENGINE OIL CAPACITY

2.0L Engine

5.7 US quarts (during oil and filter change)

There is approximately 1 quart between the low and full level.

- 1 Full Level
- 2 Low Level

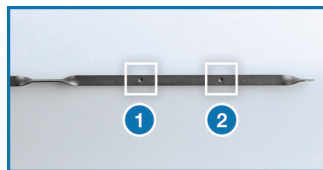

TIRE PRESSURE MONITORING SYSTEM (TPMS)

Your Subaru has a Tire Pressure Monitoring System (TPMS).

Tire pressure specification is on the tire information placard located on the driver's side door pillar.



2.0L ENGINE 29

A

ACCESSORY CONNECTIONS

Power Outlets (12V) 14

ADDITIONAL RESOURCES 2

AUDIO CONTROLS 15

C

CLIMATE CONTROL SYSTEM

Dual-zone Automatic Climate Control 11

Heated Seats 13

CRUISE CONTROL 16

D

DRIVING SYSTEMS/MODES 23

DRIVING THE VEHICLE

6-Speed Manual Transmission 21

Automatic Transmission Shift Mode 22

E

ENGINE OIL 30

ENGINE OIL CAPACITY 30

F

FOLDING THE REAR SEATBACK 25

FORWARD 2

FUEL 24

FUEL CAPACITY 24

FUEL FILLER LID RELEASE 24

G

GAUGES 20

H

HOOD PROP 28

I

IMPORTANT SAFETY INFORMATION 2

IN CASE OF EMERGENCY

Subaru Roadside Assistance 3

INSTRUMENT PANEL SWITCHES 18

INTERNAL SAFETY TRUNK RELEASE

WITH SELF-ILLUMINATING HANDLE 25

K

KEYLESS ACCESS WITH PUSH BUTTON START

Locking Using Door Handles 4

Opening the Trunk 5

Unlock Using Door Handles 4

KEYLESS ENTRY 4

km/h - MPH, ODO - TRIP and DISP

Buttons 18

L

LATCH/ANCHOR 26

LIGHT CONTROLS

Daytime Running Lights 16

Illumination Brightness 17

M

MULTI-INFORMATION DISPLAY

CONTROL 15

N

NEW VEHICLE BREAK-IN 30

INDEX

O

OVERHEAD PANEL 19

P

POWER EXTERIOR MIRRORS 9

POWER WINDOWS 11

PUSH-BUTTON IGNITION SWITCH . . . 21

R

REAR VIEW MIRROR

Auto-dimming Mirror 10

HomeLink® 5 Accessory Mirror . . . 10

S

SEATING

Head Restraint Adjustment 8

Manual Seats 8

SPARE TIRE AND JACK 27

STARTING THE ENGINE

With Push-button Ignition 21

T

TILT AND TELESCOPIC STEERING

COLUMN 9

TIRE PRESSURE MONITORING SYSTEM

(TPMS) 30

TRUNK LID CANCEL BUTTON 27

TRUNK LID OPENER 26

TURNING OFF THE VEHICLE

With Push-button Ignition Switch . . . 23

TURN SIGNALS 17

W

WARNING AND INDICATOR LIGHTS . . 20

WINDSHIELD WIPERS 18

SUBARU of America, Inc.
One Subaru Drive
Camden, NJ 08103-9800



MSA5B2006A
Issued July 2019
Printed in USA 07/19

