

Quick Guide Impreza 2020



Love. It's what makes a Subaru, a Subaru.



© 2019 Subaru of America, Inc. All rights reserved.

Contents may not be reproduced in whole or in part without prior written permission of publisher. Specifications in this Guide are based on the latest product information available at the time of publication. Some images shown are for illustration purposes only. Some equipment shown in photography within this Guide is optional at extra cost. Specific options may be available only in combination with other options. Specific combinations of equipment or features may vary from time to time, and by geographic area. Subaru of America, Inc. reserves the right to change or discontinue at any time, without notice: Prices, colors, materials, equipment, accessories, specifications, models and packages, without incurring any obligation to make the same or similar changes on vehicles previously sold. Colors shown may vary due to reproduction and printing processes. Subaru of America, Inc. is not responsible for typographical errors.

Aha™ is a trademark of Harman International Industries, Inc. Alcantara® is a registered trademark of Alcantara S.p.A., and Alcantara is produced by the Toray Group. App Store® is a registered trademark of Apple, Inc. Apple® is a registered trademark of Apple, Inc. BBS® is a registered trademark of BBS Kraftfahrzeugtechnik, AG. Bluetooth® is a registered trademark of Bluetooth SIG, Inc. Brembo® is a registered trademark of Freni Brembo, S.p.A. GreenEdge® is a registered trademark of Harman International Industries, Inc. Harman Kardon® is a registered trademark of Harman International Industries, Inc. HD Radio® is a registered trademark of iBiquity Digital Corporation. HomeLink® is a registered trademark of Prince Corporation, a wholly owned subsidiary of Johnson Controls. iHeart® Radio is a registered trademark of iHeartMedia, Inc. iPod® is a registered trademark of Apple, Inc. iTunes® is a registered trademark of Apple, Inc. Metal-Matrix Diaphragm (MMD®) is a registered trademark of Harman International Industries, Inc. MirrorLink™ is a trademark of Car Connectivity Consortium, LLC. Pandora® is a registered trademark of Pandora Media, Inc. Siri® is a registered trademark of Apple, Inc. Smart Way® is a registered trademark of the U.S. Environmental Protection Agency. Stitcher™ is a trademark of Stitcher™, Inc. TORSEN LSD® is a registered trademark of JTEKT TORSEN North America, Inc. SiriusXM® All Access Radio is a registered trademark of SiriusXM Radio, Inc. SiriusXM Traffic® and SiriusXM Travel Link® are registered trademarks of SiriusXM Radio, Inc. Added Security, Crosstrek, Forester and Outback are registered trademarks of Subaru of America, Inc. Ascent, DriverFocus and StarTex are trademarks of Subaru of America, Inc. BRZ, EyeSight, Impreza, Lineartronic, Legacy, Subaru, SUBARU BOXER, Starlink, Subaru Starlink, WRX, STI and X-MODE are registered trademarks of Subaru Corporation. Confidence in Motion is a trademark of Subaru Corporation.

TABLE OF CONTENTS



3	PURPOSE OF THIS GUIDE	22	LIGHT CONTROLS
3	FORWARD	23	TURN SIGNALS
3	IMPORTANT SAFETY INFORMATION	24	WINDSHIELD WIPERS
		24	REAR WINDOW WIPER (5-door models)
3	ADDITIONAL RESOURCES	24	INSTRUMENT PANEL SWITCHES (lower left)
4	IN CASE OF EMERGENCY	25	OVERHEAD PANEL
5	TOWING YOUR ALL-WHEEL DRIVE SUBARU	26	GAUGES AND WARNING LIGHTS
6	ENTRY AND EXIT	26	GAUGES
6	KEYLESS ENTRY	27	WARNING AND INDICATOR LIGHTS
8	KEYLESS ACCESS WITH PUSH BUTTON START	28	OPERATING THE VEHICLE
10	INSTRUMENT PANEL	28	IGNITION SWITCH
12	GETTING COMFORTABLE	28	PUSH-BUTTON IGNITION SWITCH
12	SEATING	28	STARTING THE VEHICLE
13	TILT AND TELESCOPIC STEERING COLUMN	29	DRIVING THE VEHICLE
13	POWER EXTERIOR MIRRORS	31	TURNING OFF THE VEHICLE
14	REAR VIEW MIRROR	32	REFUELING
15	POWER WINDOWS	32	FUEL FILLER LID
15	POWER MOONROOF	32	FUEL
16	CLIMATE CONTROL SYSTEM	32	FUEL CAPACITY
20	ACCESSORY CONNECTIONS	33	PASSENGER/CARGO AREAS
21	CONTROLS	33	FOLDING THE REAR SEATS
21	AUDIO CONTROLS	33	CHILD SAFETY LOCKS
21	CRUISE CONTROL		
22	ADAPTIVE CRUISE CONTROL		
22	I/SET SWITCH		

TABLE OF CONTENTS

34	LATCH/ANCHOR
35	REAR SEAT REMINDER
35	INTERNAL SAFETY TRUNK RELEASE WITH SELF- ILLUMINATING HANDLE (Sedans)
36	TRUNK LID OPENER (Sedans)
36	CARGO COVER (5-door models)
37	SPARE TIRE AND JACK
38	ENGINE COMPARTMENT
38	HOOD PROP
38	2.0L ENGINE
39	ADDITIONAL SPECIFICATIONS
39	NEW VEHICLE BREAK-IN
39	ENGINE OIL
39	ENGINE OIL CAPACITY
39	ROOF RAIL CAPACITY
39	TRAILER TOWING CAPACITY
40	TIRE PRESSURE MONITORING SYSTEM (TPMS)
41	Index

PURPOSE OF THIS GUIDE

FORWARD

Congratulations on choosing a Subaru vehicle! This Quick Guide is designed to provide information on the basic operation and key features of your Subaru vehicle.

IMPORTANT SAFETY INFORMATION

The Quick Guide is not intended as a substitute for the Owner's Manual. We strongly encourage you to review the entire Owner's Manual to ensure complete understanding.

ADDITIONAL RESOURCES

If you're having difficulty using any of the functions outlined in this guide, you can get more information from the following sources:

Your Subaru Owner's Manual:

Located in the glovebox

Online Subaru Owner's Resources:

www.subaru.com/owners

Subaru Customer Support:

www.subaru.com/customer-support

1-800-782-2783 (1-800-SUBARU3)



Scan to learn more about **Owner's Resources**.



Scan to learn more about **Customer Support**.



Scan to get the **MySubaru** App.



Scan to get the **SUBARU STARLINK®** App.

PURPOSE OF THIS GUIDE

IN CASE OF EMERGENCY

SUBARU STARLINK® Safety and Security (subscription required)

SOS Emergency: Press the red “SOS” button on the overhead console in the event of an emergency to speak with a SUBARU STARLINK® Customer Care Advisor.



Enhanced Roadside Assistance: Press the blue “i” button on the overhead console or select the “Roadside Assistance” option in the “MySubaru” menu on the multimedia system.



For more information, please refer to the SUBARU STARLINK® Safety and Security Owner’s Manual or the SUBARU STARLINK® Quick Guide

Subaru Roadside Assistance

Subaru Roadside Assistance is free and standard on your Subaru. Coverage is automatic; there are no forms to complete. Subaru Roadside Assistance is available anytime during the 3-year/36,000-mile Subaru Limited Warranty, whichever comes first.* A Subaru Roadside Assistance decal has been affixed to the driver’s door window. Please refer to the Roadside Assistance guide in the owner’s information kit for the details on this coverage.

Subaru Roadside Assistance:

1-800-261-2155

Roadside assistance helps with:

- Towing to the nearest authorized Subaru Retailer if you cannot safely drive your Subaru
- Jump-start if your battery is dead
- Gasoline delivery if you run out of gas
- Flat tire change to install your spare
- Emergency lockout service
- National Subaru Retailer locator service, with phone numbers and location of the nearest Retailer anywhere in the U.S. or Canada

NOTE: Specifically excluded from Subaru Roadside Assistance coverage are service requests or claims resulting from: accidents, vandalism, acts of God, violation of any laws, or vehicle modifications not recommended by the manufacturer.

*See your Retailer for details.

PURPOSE OF THIS GUIDE

TOWING YOUR ALL-WHEEL DRIVE SUBARU

Since Subaru Symmetrical All-Wheel Drive distributes power to all four wheels, improper towing may damage your AWD system. The best way to tow your Subaru is with a flatbed truck by your Subaru Retailer or a commercial towing service.

ENTRY AND EXIT

KEYLESS ENTRY

1 Lock/Arm

- Pressing this button will lock all doors, trunk/rear gate and activate the security alarm.
- If any of the doors or the trunk/rear gate are not fully closed, five rapid chirps will sound and the hazard warning flashers will flash.
- Pressing this button three times (within five seconds) will activate the vehicle finder function. If you are within 30 feet of your Subaru, the horn will sound once, and the hazard warning flashers will flash three times.

2 Unlock/Disarm

- Pressing this button once will unlock the driver's door.
- Pressing this button twice (within five seconds) will unlock all doors and trunk/rear gate.
- When you press this button, the interior lights will illuminate if set to the "DOOR" position on the overhead console switch.

3 Trunk/Rear Gate

- Pressing and holding this button will unlock the trunk/rear gate.

4 Panic Alarm

- Pressing this button will sound the horn and flash the hazard warning lights.
- Press any button on the access key fob or transmitter to deactivate.



Access Key Fob



Transmitter

Automatic Door Locking/Unlocking

With this function, all doors will automatically lock or unlock when certain conditions are met based on your preference. You can change the setting in the Combination Meter Display (CMD) or through the STARLINK® touchscreen by selecting “Settings” and “Vehicle”. Possible settings are:

Automatic locking	Vehicle Speed (12 mph)	Shift Into or Out of Park	Off	
Automatic unlocking	Shift Into or Out of Park	Ignition Off	Driver Door Open	Off

ENTRY AND EXIT

KEYLESS ACCESS WITH PUSH BUTTON START

(if equipped)

The Keyless Access with Push-Button Start system features touch-activated door unlock and push-button start functions. You can customize the Keyless Access settings to unlock either the driver's door or all doors through Combination Meter Display by selecting "Vehicle Settings" and "Keyless Entry System." The settings can also be customized through the STARLINK® touchscreen by selecting "Settings" and "Vehicle".

Unlocking Using Door Handles

Grip the driver's door handle to unlock the driver's door (or all doors depending on the setting). Grip the front passenger's handle to unlock all doors and the trunk/rear gate. Two chirps will sound and the hazard warning flashers will flash twice.



Locking Using Door Handles

Close all doors and the trunk/rear gate and touch the door lock sensor (two lines) on either front door handle. All doors and the trunk/rear gate will lock. One chirp will sound and the hazard warning flashers will flash once.



Opening the Trunk (Sedans)

Press the trunk opener button to unlock and open the trunk. Two chirps will sound and the hazard warning flashers will flash twice.



Opening the Rear Gate (5-door models)

Press the rear gate opener button to unlock and open the rear gate (or also unlock all doors depending on the setting). Two chirps will sound and the hazard warning flashers will flash twice.

 


Locking Using the Rear Gate (5-door models)

Close all doors and the rear gate and press the rear lock button. All doors and the rear gate will lock. One chirp will sound and the hazard warning flashers will flash once.




INSTRUMENT PANEL

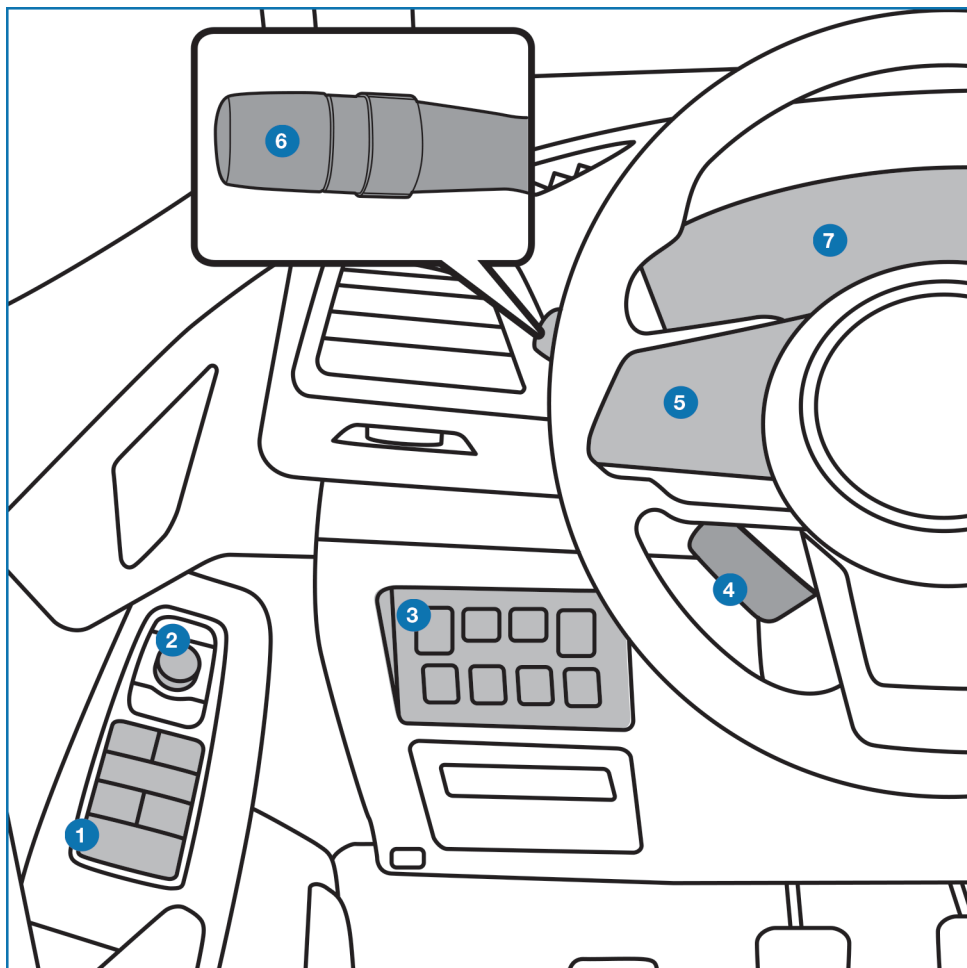

- 1 Power Window Switches (p. 15)
- 2 Power Exterior Mirror Switch (p. 13)
- 3 Instrument Panel Switches (p. 24)
- 4 I/Set Switch (p. 22)
- 5 Audio Controls (p. 21)
- 6 Light Controls (p. 22)
- 7 Combination Meter (p. 26)

 INSTRUMENT PANEL

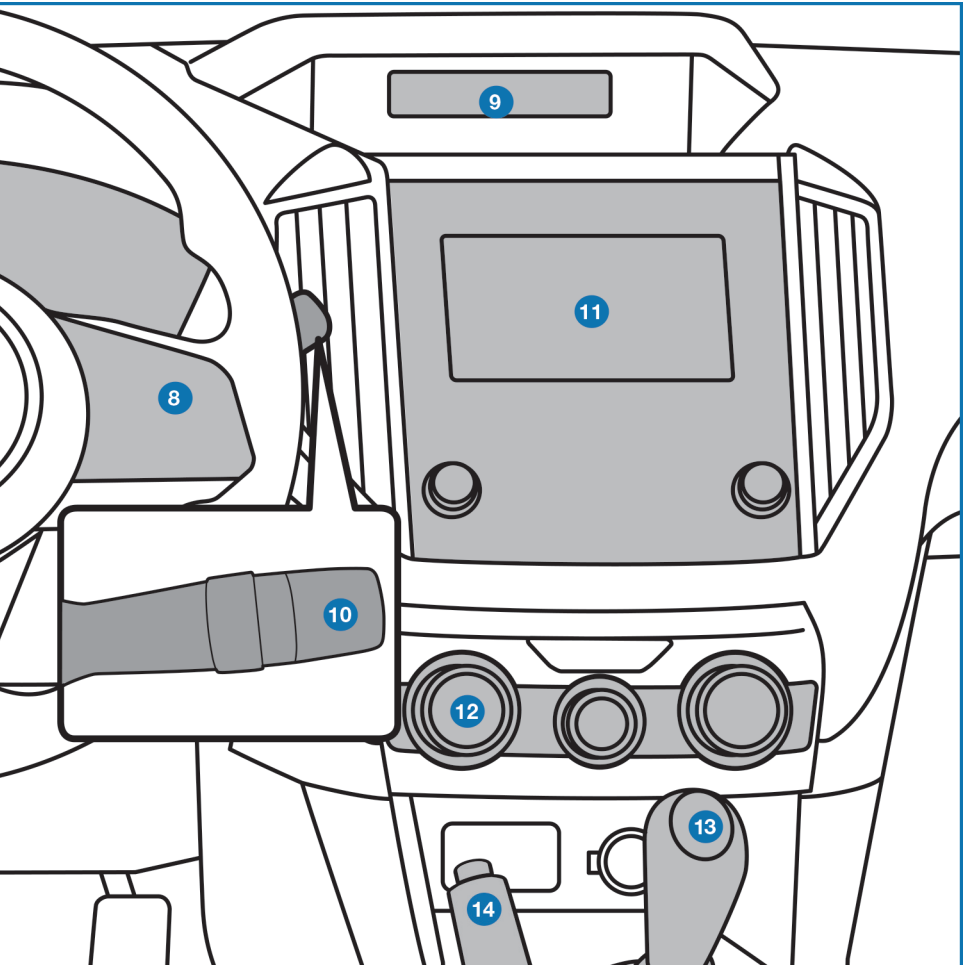

- 8 Cruise Control or Adaptive Cruise Control (p. 22)
- 9 Multi-Function Display (MFD)
- 10 Windshield Wipers (p. 24)
- 11 SUBARU STARLINK® Multimedia Touchscreen
- 12 Climate Controls (p. 16)
- 13 Shifter (MT) or CVT Select Lever (p. 29)
- 14 Parking Brake

GETTING COMFORTABLE

SEATING

Manual Seats

- 1 Forward/Backward:** Pull the lever below the seat up and slide the seat forward or backward. Release the lever and make sure the seat is locked into place.
- 2 Seat Height (Driver's Seat):** Pulling up or pushing down on the lever will raise or lower the seat cushion.
- 3 Recline Seatback:** Pull the lever up to adjust the seatback to the desired position. Release the lever and make sure the seat is locked into place.



Power Driver's Seat (if equipped)

- 1 Forward/Backward and Height:** Moving the switch forward or backward will adjust the seat in that direction. Pulling up or pushing down the entire switch will adjust the height of the seat cushion.
- 2 Recline Seatback:** Moving the switch forward or backward will adjust the angle of the seatback.



Head Restraint Adjustment

Pull the head restraint up to raise it. To lower it, push it down while pressing the release button on the top of the seatback. Each head restraint should be adjusted so that the center of the head restraint is closest to the top of the occupant's ears. This adjustment should be made for any seating position, front or rear, that has a new occupant.

You can adjust the angle of the front head restraints by tilting them forward. You will hear a click when the restraint is locked. Pulling the head restraint as far forward as it will go will allow it to return to the fully upright position.



GETTING COMFORTABLE

Seatbelt Adjuster

Always position the seatbelt adjuster so the shoulder belt passes over the middle of your shoulder without touching your neck. Pull the adjuster out and slide it up or down. Release the adjuster and make sure it is locked in place.



TILT AND TELESCOPIC STEERING COLUMN

Pull the lever down firmly to unlock, then adjust the height and lengthwise position of the column. Push the lever firmly back up to lock the column in place.



POWER EXTERIOR MIRRORS

Turn the knob to “L” (left side) or “R” (right side) to select a mirror. Move the knob in the direction you want to move the mirror. Return the knob to the neutral center position.



GETTING COMFORTABLE

REAR VIEW MIRROR

Auto-dimming Mirror (if equipped)

When driving at night, the auto-dimming function senses brightness from vehicle headlights behind you and automatically dims to reduce glare. Pressing the switch will turn this function on or off. A green LED indicator on the switch will illuminate when the function is on.



HomeLink® 5 Accessory Mirror (if equipped)

The HomeLink® 5 accessory mirror provides three buttons to replace up to three hand-held radio frequency remotes used to activate devices, such as garage door openers, gate openers, entry door locks, security systems, and home lighting. For programming instructions, please refer to the Owner's Manual or visit www.subaru.com/homelink to view a how-to video.



NOTE: HomeLink® 5 may not be compatible with some older door openers or additional equipment may be required.



Scan to learn more about HomeLink®.

GETTING COMFORTABLE

POWER WINDOWS

To open or close a window, partially press or pull up the corresponding switch and hold. The front windows have a one-touch auto up/down function. Fully press down or pull up and release to automatically open or close the window.



POWER MOONROOF (if equipped)

With the ignition in the "ON" position, you can tilt and slide the moonroof.

Tilting the Moonroof

- 1 Opening:** Press and release the switch to automatically tilt the moonroof.
- 2 Closing:** Press and hold the switch to lower the moonroof.

Opening/Closing the Moonroof

- 3 Opening:** Press and release the switch to open the moonroof.
- 4 Closing:** Press and release the switch to close the moonroof.



To pause the moonroof halfway, press either side of the switch.

GETTING COMFORTABLE

CLIMATE CONTROL SYSTEM

Manual Climate Control



1 Air Flow Control Dial

The air flow control dial allows you to choose the direction of air flow. Rotate the dial for the desired air flow position.

Defrost/Defog

To clear the windshield and front door windows of fog or frost, rotate the air flow control dial to the defrost position, set the temperature control to the red position, and set the fan speed control to the fastest speed.

2 Rear Window Defogger Button

Press the rear window defogger button to turn on the defogger. The defogger will automatically shut off after about 15 minutes. If the window clears before that time, you can press the button again to turn it off. This button also turns the heated mirrors on and off, if equipped.

3 Fan Speed Control Dial

Rotate the fan speed control dial to select the desired fan speed.

4 Recirculated/Outside Air Button

Press the air inlet selection button to prevent outside air from being drawn into the passenger compartment. If the button is pushed in, press it again to draw outside air into the compartment.

NOTE: To prevent windshield fogging, do not remain in the recirculated mode for an extended period of time.

5 Temperature Control Dial

Rotate the temperature control dial from blue for cool, to red for warm.

6 Air Conditioning Button

Press the "A/C" button to activate the air conditioning. Press it again to turn off the air conditioning.

GETTING COMFORTABLE

Automatic Climate Control



Set your desired temperature and let the system automatically make the adjustments for you. At any time, you can manually take control of the climate settings.

Operation in Automatic Mode

- 1 Automatic Control Button:** This system automatically controls all of the climate system except defogging. Press “AUTO” to activate. Press “OFF” to turn off the system.
- 2 Temperature Control Dial:** Turn the dial clockwise to increase the temperature or counterclockwise to decrease the temperature. The temperature will appear on the Multi-Function Display (MFD).

When using automatic mode, the fan speed, airflow distribution, air-inlet control and air conditioning compressor are controlled automatically. To activate:

1. Press the “AUTO” button. The “FULL AUTO” indicator light illuminates on the Multi-Function Display (MDF).
2. Set the preferred temperature using the temperature control dial.







If you operate any of the buttons other than “ON/OFF”, rear window defogger, or the temperature control dial, the “FULL” indicator light will turn off. The “AUTO” light will remain illuminated. You can then manually control the system as desired. Press the “AUTO” button to change back to “FULL AUTO” mode.

Operation in Manual Mode

- 3 Air Conditioner Button:** Press this button to activate or deactivate the air conditioning.
- 4 MAX A/C Button:** Press this button for quickest cooling.

GETTING COMFORTABLE

- 5 Airflow Mode Selection Dial:** Turn the dial to select the desired airflow mode. The selected mode – ventilation, bi-level, ventilation 2, feet, feet-defrost or defrost – is shown on the display.

ICON	MODE	FUNCTION
	Ventilation	Instrument panel outlets
	Bi-Level	Instrument panel outlets and foot outlets
	Ventilation 2	Instrument panel outlets and less foot outlets than bi-level
	Feet	Foot outlets, both side outlets of the instrument panel and some through windshield defroster outlets
	Feet-Defrost	Windshield defroster outlets, foot outlets and both side outlets of the instrument panel
	Defrost	Windshield defroster outlets and both side outlets of the instrument panel

- 6 Fan Speed Control Dial:** Turn the fan speed control dial to increase or decrease fan speed.

- 7 Recirculated/Outside Air Button:** Press this button to prevent outside air from entering your Subaru. Press the button again to allow outside air into your Subaru.
NOTE: To prevent windshield fogging, do not remain in the recirculated mode for an extended period of time.

- 8 Defroster Button:** Press this button to defrost or dehumidify the windshield and front door windows.

NOTE: The air conditioning may turn on to defrost the windshield more quickly. However, the indicator on the air conditioner button will not illuminate.

GETTING COMFORTABLE

- 9 Rear Window Defogger Button:** Press this button to turn on the defogger. It will automatically turn off after about 15 minutes. If the window clears before then, press the button again to turn it off. If equipped, the outside mirror defogger and windshield wiper deicer will also activate. You can customize this function for continuous operation through the Combination Meter Display (CMD) or the STARLINK® touchscreen by selecting “Settings” and “Vehicle”.

Heated Seats (if equipped)

The heated seat switches are located between the driver and passenger seats. There is a separate switch for the driver and passenger. Press the “HI” button for the high temperature setting or press the “LO” button for the low temperature setting. Return the switch to the center position to turn off the heated seat.



Remote Engine Start with Climate Control



This feature can also be set through **MySubaru.com** or the **MySubaru App**



MySubaru App



MySubaru.com

You can remotely start your Subaru and adjust the temperature using the STARLINK® Safety and Security features through the **MySubaru App** (subscription required). Please refer to your SUBARU STARLINK® Owner's Manual for a list of required vehicle conditions for this feature.

GETTING COMFORTABLE

ACCESSORY CONNECTIONS

1 Power Outlets:

Power outlets (12V) are located below the climate control dials and in the center console. Electrical power is available for use with in-vehicle electrical appliances with a maximum power rating of 120W.

These outlets cannot be used to connect to the SUBARU STARLINK® Multimedia System.

2 Auxiliary Input Jack:

The 3.5mm auxiliary input jack is located below the climate control dials. You can connect a portable music player to the auxiliary jack and hear the music stored on it through your Subaru's speakers. Press the "Source" button located on the steering wheel or the "Media" button on the STARLINK® touchscreen to select the auxiliary mode. For more information, please refer to the SUBARU STARLINK® Owner's Manual or Quick Guide.

3 Dual USB Ports:

The USB ports are located below the climate control dials and in the center console. You can connect a variety of USB-equipped devices to the front port, such as portable music players or smartphones, to enjoy your favorite music through your Subaru's speakers. These ports also provide charging (5V, 2.1A) to devices. The ports inside the center console are for charging only. For more information, please refer to the SUBARU STARLINK® Owner's Manual or Quick Guide.



AUDIO CONTROLS

For more information, please refer to the SUBARU STARLINK® Owner's Manual or Quick Guide.

- 1 Presets/Skip
- 2 Volume
- 3 Source
- 4 INFO
- 5 Hands-free calling



CRUISE CONTROL

For more information, please refer to your Owner's Manual.

- 1 Cruise Control On/Off
- 2 RES/+ and SET/-
- 3 CANCEL Button



CONTROLS

ADAPTIVE CRUISE CONTROL (if equipped)

 
For more information, please refer to the EyeSight® Owner's Manual or Quick Guide.

- 1 Adaptive Cruise Control On/Off
- 2 Lane Keep Assist
- 3 Decrease Distance
- 4 Increase Distance
- 5 RES/+ and SET/-
- 6 SI Drive



I/SET SWITCH

The "i/Set" switch allows you to display and change selected items in the Combination Meter Display. By operating the up or down arrows, you can change the screen displayed. When the Menu Entering Screen is selected, pull and hold the "i/Set" switch to enter the Menu Screen and use the arrows to move up or down the menu.

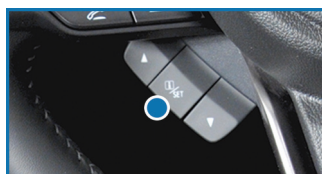

LIGHT CONTROLS

- 1 **AUTO:** If equipped, rotate the end of the lever to automatically turn your headlights on or off, depending on the level of outside light.
- 2 **Daytime Running Lights:** Rotate the end of the lever to turn on the instrument panel lights, parking lights, side marker lights, tail lights, and license plate lights.
- 3 **Headlights:** Rotate the end of the lever to turn on the headlights, instrument panel lights, parking lights, side marker lights, tail lights, and license plate lights.



- 4 High Beams:** Push the lever forward to change from low beam to high beam. If equipped, this also activates the High Beam Assist (HBA) system. Pull the lever back to center to return to low beam.
- 5 Fog Lights:** If equipped, rotate the dial to turn on the fog lights.

Illumination Brightness

While the light switch is on, rotating the dial on the instrument panel upward will make the instrument panel illumination brighter. When the dial is fully rotated upward (dots aligned), the instrument panel illumination stays at full brightness. Rotating the dial downward dims the instrument panel illumination.

For map equipped vehicles, this setting also affects the day/night view and illumination level.



Daytime Running Lights

The daytime running lights automatically turn on when the engine has started, the parking brake is fully released, the light switch is in the Off, "AUTO" (if equipped) or "☀️" position, and the select lever is not in the "P" position. Always turn on the headlights when it's dark outside by rotating the dial to the "🌙" or "AUTO" position.

TURN SIGNALS

 
Push slightly up for right lane change or fully up for right turn signal. Push slightly down for left lane change or fully down for left turn signal.



CONTROLS

WINDSHIELD WIPERS

To turn on the wipers, press the wiper control lever down one position for intermittent, two positions for low speed, or three positions for high speed. When the lever is in the intermittent position, rotate the dial to adjust the operating interval of the wipers. To turn the wipers off, return the lever to the “OFF” position. For a single wipe, move the lever up one position.

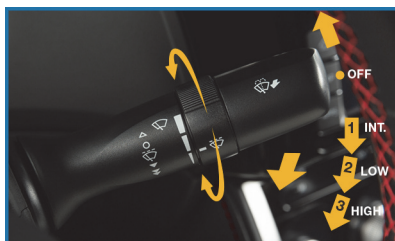

Pull the lever toward you to spray washer fluid. The washer will spray until you release the lever, then wipe twice.

REAR WINDOW WIPER (5-door models)

Rotate the end of the lever up one position for intermittent, or two positions for continuous wipe.

When the lever is in the intermittent position, the wiper operates at intervals corresponding with vehicle speed. When you move the select lever to the “R” position, the wiper will switch to continuous operation. It will return to intermittent when you move the select lever out of “R”.



Rotate the dial up from the continuous wipe position or down from the “OFF” position to spray washer fluid. The washer will spray until you release the dial, then return to the previous position and resume operation.

INSTRUMENT PANEL SWITCHES (lower left)

For more information, please refer to your Owner’s Manual and/or EyeSight Quick Guide.

- 1 Steering Responsive Headlights OFF (if equipped)
- 2 Illumination Brightness
- 3 Blind Spot Detection / Rear Cross Traffic Alert OFF (if equipped)
- 4 Vehicle Dynamics Control OFF



 
OVERHEAD PANEL

- 1 SOS Emergency Assistance:** Press the red “SOS” button to connect with a SUBARU STARLINK[®] Customer Care Advisor (subscription required). Press and hold the button for about two seconds to cancel the call. For more information, please refer to the SUBARU STARLINK[®] Safety and Security Owner’s Manual or the SUBARU STARLINK[®] Quick Guide.
- 2 Enhanced Roadside Assistance:** Press the blue “i” button to connect with a SUBARU STARLINK[®] Roadside Assistance Provider (subscription required). Press and hold the button for about two seconds to cancel the call. For more information, please refer to the STARLINK[®] Quick Guide.
- 3 Automatic Illumination:** When the switch is in the “DOOR” position, the map lights illuminate when any door is opened, the doors are unlocked using the remote keyless entry system or keyless access function, or the ignition is turned from “ON” or “ACC” to “LOCK”/“OFF”.
- 4 Pre-Collision Braking System OFF Switch:** Press and hold this switch for two seconds to turn off the Pre-Collision Braking System and Pre-Collision Throttle Management. Press and hold the switch again for two seconds to turn the systems back on. For more information, please refer to the EyeSight[®] Owner’s Manual or Quick Guide.
- 5 Lane Departure Warning OFF Switch:** Press and hold this switch for two seconds to turn off the Lane Departure Warning and the Lane Sway Warning function. Press and hold the switch again for two seconds to turn the systems back on. For more information, please refer to the EyeSight[®] Owner’s Manual or Quick Guide.
- 6 Map Lights:** Press a map light to turn it on or off.




GAUGES AND WARNING LIGHTS

GAUGES

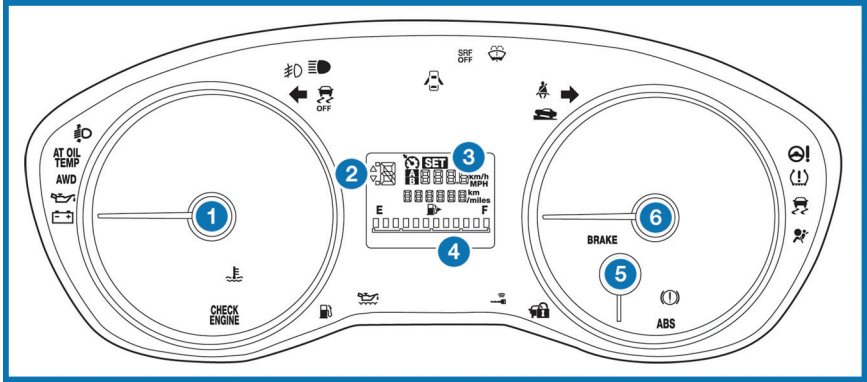

Impreza, Impreza Premium

- | | |
|------------------------------|---------------|
| 1 Tachometer | 4 Fuel Gauge |
| 2 Select Lever/Gear Position | 5 ECO Gauge |
| 3 Trip Meter and Odometer | 6 Speedometer |

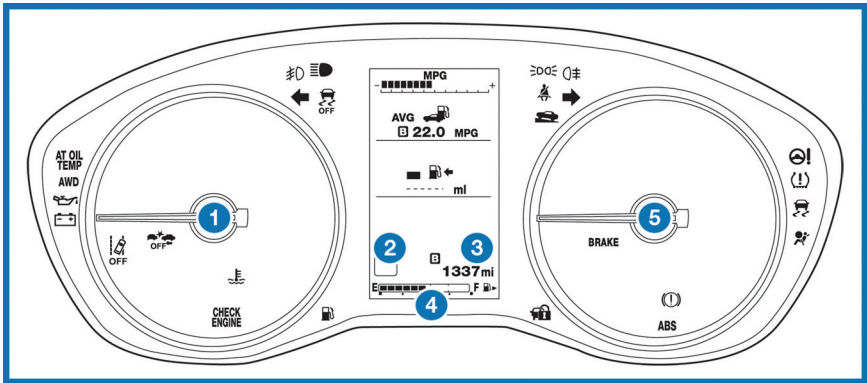 



Impreza Premium with Driver Assist Technology, Impreza Sport, Impreza Limited

- | | |
|--|---------------|
| 1 Tachometer | 4 Fuel Gauge |
| 2 Select Lever/Gear Position Indicator | 5 Speedometer |
| 3 Trip Meter and Odometer | |




GAUGES AND WARNING LIGHTS

WARNING AND INDICATOR LIGHTS




Red lights indicate immediate attention is required. Some examples are:

	Seatbelt warning		Door open	BRAKE / 	Brake system
---	------------------	---	-----------	--	--------------

Yellow lights indicate caution. Some examples are:

	Low fuel		Engine oil level warning light		Tire pressure warning light
---	----------	---	--------------------------------	---	-----------------------------

Green and blue lights are for information. Some examples are:

	Headlight indicator light		Cold coolant temperature		High beam indicator light
---	---------------------------	---	--------------------------	---	---------------------------

OPERATING THE VEHICLE

IGNITION SWITCH

The ignition switch has four positions:

LOCK: You can only insert or remove the key in this position.

ACC (Accessory): Provides power to the radio and accessory power outlets.

ON: All electrical systems are available. The key returns to this position after starting the engine.

START: Turn the key to this position to start the engine.

 
PUSH-BUTTON IGNITION SWITCH (if equipped)

Each time you press the ignition switch without depressing the brake pedal, the ignition position will change as follows: ACC, ON, OFF.

ACC (Accessory): Provides power to the radio and accessory power outlets. Orange indicator illuminates.

ON: All electrical systems are available. Orange indicator illuminates.

OFF: Power off and indicator off.

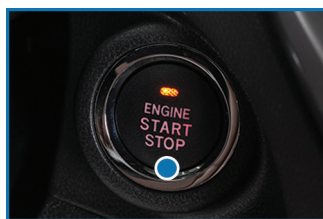

STARTING THE VEHICLE

Without Push-button Ignition

To start the engine:

1. Make sure the select lever is in the “P” position or “N” and depress the clutch for manual transmission vehicles.
2. Using the key, turn the ignition switch to “START”.

NOTE: Do not depress the accelerator pedal. Release the key as soon as the engine starts.

With Push-button Ignition

To start the engine:

1. Sit in the driver's seat with the access key fob.
2. Make sure the select lever is in the “P” position or “N” for manual transmission vehicles.
3. Depress the brake pedal (and clutch pedal for manual transmission models). Green LED on the ignition switch illuminates.
4. While depressing the brake pedal (and clutch pedal for manual transmission models), briefly press and release the ignition switch.

DRIVING THE VEHICLE

5-Speed Manual Transmission

This manual transmission is a fully synchronised 5-forward and 1-reverse speed transmission. To shift into reverse gear from 5th gear, you must move the shift lever into neutral then shift into reverse gear.

Automatic Transmission Shift Mode

The Continuously Variable Transmission (CVT) is electronically controlled and provides two different driving modes: normal and manual or normal and low.

Normal Mode

When the selector lever is in the “D” (Drive) position, the transmission is in normal shift mode. The select lever position indicator in the Combination Meter Display (CMD) shows “D” and the transmission automatically shifts into a suitable forward gear.

Manual Mode (if equipped)

In manual mode, you select the desired gear position to obtain necessary acceleration and engine braking. Move the selector lever left from the “D” position into the “M” position to select manual mode. The gear position indicator in the Combination Meter Display (CMD) shows the currently selected gear. Arrow-shaped indicators show when upshifting or downshifting is available. To shift, use the paddle shift control switches behind the steering wheel.

Low Mode (if equipped)

Low Mode is for using engine braking when going down hill, etc. Moving the selector lever left into the “L” position from the “D” (Drive) position causes the transmission to change into Low Mode. The shift position indicator shows “L” as the selected gear.



OPERATING THE VEHICLE

Paddle Shift Control Switches (if equipped)

- You can shift gears using the paddle shift control switches. To upshift to the next higher gear, pull the “+” paddle on the right toward you. To downshift to the next lower gear, pull the “-” paddle on the left toward you.
- You can temporarily shift gears even when the select lever is in the “D” position by pulling either the “+” or “-” paddle toward you. Once vehicle speed stabilizes, the transmission will switch back to normal mode.



SI-DRIVE (if equipped)

Subaru Intelligent Drive (SI-Drive)

SI-Drive has 2 modes: Intelligent (I) and Sport (S). Each mode is designed for different types of driving:



Intelligent:

- The Intelligent (I) mode provides well balanced performance with greater fuel efficiency and smooth driveability without stress. Power delivery is moderate during acceleration for maximum fuel efficiency.

Sport:

- The Sport (S) mode provides the engine power desired by those who want to make the driving experience their own personal adventure.

TURNING OFF THE VEHICLE

Without Push-button Ignition

To stop the engine:

1. Stop your Subaru completely.
2. Move the select lever to the “P” position or set the parking brake for manual transmission models.
3. Turn the ignition switch to “OFF”.

NOTE: The front windows will remain active for about 40 seconds and the SUBARU STARLINK® Multimedia System will remain on for about three minutes or until a door is opened, whichever occurs first.

With Push-button Ignition

To stop the engine:

1. Stop your Subaru completely.
2. Move the select lever to the “P” position or set the parking brake for manual transmission models.
3. Press the ignition switch.

NOTE: The front windows will remain active for about 40 seconds and the SUBARU STARLINK® Multimedia System will remain on for about three minutes or until a door is opened, whichever occurs first.

REFUELING

FUEL FILLER LID

 
The fuel filler lid release is located on the floor to the left of the driver's seat. To open the fuel filler lid, pull the fuel filler lever up and release.



The fuel filler lid is located toward the rear of the passenger side.

While refueling, place the fuel filler cap on the cap holder inside the lid.

To close the lid, press it until you hear it latch.

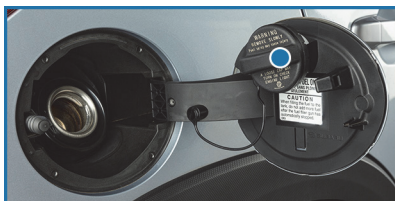

FUEL

Use regular unleaded gasoline with an octane rating of 87 AKI or higher. Do not use fuels with more than 15% ethanol. For more information, please refer to the Owner's Manual.

FUEL CAPACITY

13.2 US gallons

The low fuel warning light illuminates when the tank is nearly empty, with approximately 2 US gallons remaining.



PASSENGER/CARGO AREAS

FOLDING THE REAR SEATS

Lower the headrests, then pull up on the release knob on the seat side that you want to fold down.

To return the seatback to its original position, raise the seatback until it locks into place, making sure that it is securely locked. You should not be able to see the red on the release knob.



CHILD SAFETY LOCKS

 
The child safety locks are located on the inside edges of the rear doors. In the locked position, the rear doors can only be opened from the outside.



PASSENGER/CARGO AREAS

LATCH/ANCHOR

Your Subaru is equipped with Lower Anchors and Tethers for Children (LATCH). For maximum safety, first carefully read the LATCH system instructions from the device manufacturer, as well as the installation instructions in your Owner's Manual, to properly install the LATCH compatible restraint system. Use the appropriate seatbelts or anchorages provided in your Subaru. Children age 12 and under must properly occupy the rear seat at all times.

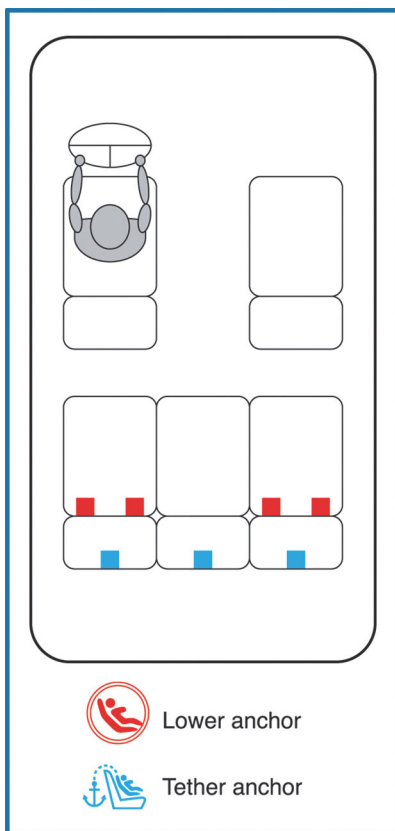

REAR SEAT REMINDER (if equipped)

The Rear Seat Reminder system assists you in preventing a child or pet from being left in your Subaru. The system monitors the opening and closing of the rear side door. It does not physically sense the presence of a child or pet.

The system turns on if your Subaru is started within 30 minutes of a rear side door opening or closing. It also turns on if a rear side door is opened and closed when your Subaru is running and stationary. The system remains on if your Subaru is turned off and back on again within 30 minutes and the rear side doors remained closed.

When you turn your Subaru off, the system warns you audibly and with a “Reminder, Look in Rear Seat” message in the Combination Meter Display (CMD).

The system operates only one time with each ignition cycle and opening and closing of a rear side door. You can turn the Rear Seat Reminder off in the Combination Meter Display (CMD).



INTERNAL SAFETY TRUNK RELEASE WITH SELF-ILLUMINATING HANDLE (Sedans)

In the event that children or adults become locked inside the trunk, this luminescent handle allows them to open the lid from inside the trunk. To open, simply pull the yellow handle downward as indicated by the arrow on the handle, and then push up on the lid.



PASSENGER/CARGO AREAS

TRUNK LID OPENER (Sedans)

The trunk release lever is located on the floor to the left of the driver's seat. To open the trunk, pull the lever up and release.



CARGO COVER (5-door models)

Use the detachable cargo cover to protect contents in the cargo area from direct sunlight. Pull the cover toward the rear of your Subaru and insert both ends of the cover into the guides.



Store the cover under the floor of the cargo area when not in use. Make sure to hook the loops on the floor cover to the hooks in the trim panel to help carry the load of any contents that are stored in the cargo area when the cargo cover is stored.

Instructions for operation are included on the cargo cover housing.



SPARE TIRE AND JACK

Your vehicle is equipped with the following maintenance tools.

- Jack
- Jack handle
- Screwdriver
- Towing hook (eye bolt)
- Wheel nut wrench



ENGINE COMPARTMENT

HOOD PROP

The hood prop is located in the front of the engine compartment. Fold it up and insert the end into the slot marked with an arrow.



2.0L ENGINE



- | | | | |
|---|------------------------|----|--------------------------|
| 1 | Brake Fluid Reservoir | 6 | Engine Oil Filler Cap |
| 2 | Main Fuse Box | 7 | Engine Coolant Reservoir |
| 3 | Battery | 8 | Engine Oil Filter |
| 4 | Windshield Washer Tank | 9 | Engine Oil Dipstick |
| 5 | Radiator Cap | 10 | Air Cleaner Element |

ADDITIONAL SPECIFICATIONS

NEW VEHICLE BREAK-IN

The performance and long life of your Subaru are dependent on how you handle and care for your Subaru while it is new.

Follow these instructions during the first 1,000 miles:

- Do not race the engine.
- Do not drive at one consistent engine or vehicle speed, either fast or slow.
- Avoid starting suddenly and rapid acceleration, except in an emergency.
- Avoid hard braking, except in an emergency.

ENGINE OIL

Use 0W-20 synthetic, with one of the follow specifications:

- API classification SN or SN PLUS with the words “RESOURCE CONSERVING”.
- ILSAC GF-5, which can be identified with the ILSAC certification mark (Starburst mark).

 
ENGINE OIL CAPACITY

2.0L Engine

4.7 US quarts (during oil and filter change)

When the level is at the “low” mark, add approximately 1 quart of engine oil in through the filler cap to bring the oil level to the “full” mark. For filler cap location see “Engine Compartment” (p. 38).

- 1 Full Level
- 2 Low Level

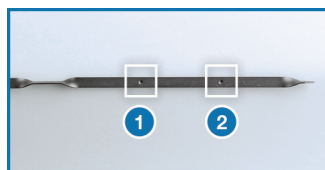

ROOF RAIL CAPACITY

	CROSS BAR DYNAMIC	ROOF RAIL DYNAMIC	ROOF RAIL STATIONARY
5-Door	150 Pounds	176 Pounds	700 Pounds

 
TRAILER TOWING CAPACITY

Your Subaru is neither designed nor intended to be used for trailer towing. Therefore, never tow a trailer with your vehicle.

ADDITIONAL SPECIFICATIONS

TIRE PRESSURE MONITORING SYSTEM (TPMS)

Your Subaru has a Tire Pressure Monitoring System (TPMS). The pressure of each individual tire can be found within the Combination Meter Display (CMD).

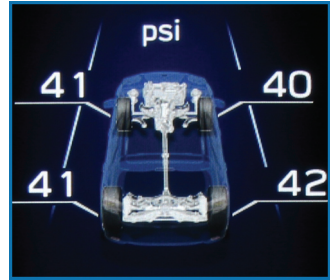

Tire pressure specification is on the tire information placard located on the inside of the driver's side door pillar.



2.0L ENGINE 38

A

ACCESSORY CONNECTIONS 20
 ADAPTIVE CRUISE CONTROL 22
 ADDITIONAL RESOURCES 3
 AUDIO CONTROLS 21

C

CARGO COVER 36
 CHILD SAFETY LOCKS 33
 CLIMATE CONTROL SYSTEM
 Automatic Climate Control 16
 Heated Seats 19
 Manual Climate Control 16
 Remote Engine Start with Climate
 Control 19
 CRUISE CONTROL 21

D

DRIVING THE VEHICLE
 5-Speed Manual Transmission 29
 Automatic Transmission Shift Mode 29
 Paddle Shift Control Switches 30
 SI-DRIVE 30

E

ENGINE OIL 39
 ENGINE OIL CAPACITY 39

F

FOLDING THE REAR SEATS 33
 FORWARD 3
 FUEL 32
 FUEL CAPACITY 32
 FUEL FILLER LID 32

G

GAUGES 26

H

HOOD PROP 38

I

IGNITION SWITCH 28
 IMPORTANT SAFETY INFORMATION 3
 IN CASE OF EMERGENCY
 Subaru Roadside Assistance 4
 SUBARU STARLINK® Safety and
 Security (subscription required) 4
 INSTRUMENT PANEL SWITCHES
 (lower left) 24
 INTERNAL SAFETY TRUNK RELEASE
 WITH SELF-ILLUMINATING
 HANDLE 35
 I/SET SWITCH 22

K

KEYLESS ACCESS WITH PUSH BUTTON
 START
 Locking Using Door Handles 8
 Locking Using the Rear Gate (5-door
 models) 9
 Opening the Rear Gate (5-door
 models) 9
 Opening the Trunk (Sedans) 8
 Unlocking Using Door Handles 8
 KEYLESS ENTRY
 Automatic Door Locking/Unlocking 6

INDEX

L

LATCH/ANCHOR	34
LIGHT CONTROLS	
Daytime Running Lights	22
Illumination Brightness	23

N

NEW VEHICLE BREAK-IN	39
--------------------------------	----

O

OVERHEAD PANEL	25
--------------------------	----

P

POWER EXTERIOR MIRRORS	13
POWER MOONROOF	
Opening/Closing the Moonroof	15
Tilting the Moonroof	15
POWER WINDOWS	15
PUSH-BUTTON IGNITION SWITCH	28

R

REAR SEAT REMINDER	35
REAR VIEW MIRROR	
Auto-dimming Mirror	14
HomeLink® 5 Accessory Mirror	14
REAR WINDOW WIPER	24
ROOF RAIL CAPACITY	39

S

SEATING	
Head Restraint Adjustment	12
Manual Seats	12
Power Driver's Seat	12
Seatbelt Adjuster	13
SPARE TIRE AND JACK	37
STARTING THE VEHICLE	
Without Push-button Ignition	28
With Push-button Ignition	28

T

TILT AND TELESCOPIC STEERING	
COLUMN	13
TIRE PRESSURE MONITORING SYSTEM (TPMS)	40
TOWING YOUR ALL-WHEEL DRIVE SUBARU	5
TRAILER TOWING CAPACITY	39
TRUNK LID OPENER (Sedans)	36
TURNING OFF THE VEHICLE	
Without Push-button Ignition	31
With Push-button Ignition	31
TURN SIGNALS	23

W

WARNING AND INDICATOR LIGHTS	27
WINDSHIELD WIPERS	24

NOTES

SUBARU of America, Inc.
One Subaru Drive
Camden, NJ 08103-9800



MSA5B2001A
Issued August 2019
Printed in USA 11/19

