

## CERTAIN 2017 MODEL YEAR F-150 AND MUSTANG VEHICLES — PASSENGER AIRBAG REPLACEMENT

### OVERVIEW

In some of the affected vehicles, the passenger frontal airbag inflator may rupture in the event of a crash necessitating airbag deployment. A ruptured inflator may result in metal fragments striking vehicle occupants and causing serious injury and death. Dealers are to replace the passenger airbag following the Service Procedure below.

### SERVICE PROCEDURE

Mustang Vehicles ..... Page 2

F-150 Vehicles ..... Page 3



## Mustang Vehicles

### Recommended Tool List:

Pocket Flat Head Screwdriver
6" (152 mm) Flat Blade Screwdriver
Small Needle Nose Pliers
Plastic and Metal Trim Removal Tool
1/4" and 3/8" Drive Ratchets
1/4" Drive Extensions - 6" (152 mm), and 12" (304 mm)
1/4" Drive Universal Swivel Joint
1/4" Drive 7mm and 8mm Shallow Sockets
1/4" Drive 10mm Deep Socket
1/4" Drive T27 Torx® Socket
3/8" Drive 15mm Shallow Socket
3/8" Drive 13mm Swivel Socket
3/8" Drive 13mm Crowfoot Wrench
3/8" Drive T40 Torx® Socket
Wrenches - 13mm and 10mm
Flex Head Ratcheting Wrench - 13mm
1/4" Drive Torque Wrench
1/4" Drive Power Impact Driver

 **WARNING:** Failure to follow the instructions and warnings in the WSM may result in injury.

**NOTE:** If the Airbag Readiness light indicates no Supplemental Restraint System (SRS) faults are present, it is not necessary to follow the WSM SRS Depowering and Repowering steps. Turn the ignition to OFF and wait 1 minute, then it is safe to proceed with passenger airbag replacement.

1. Replace the passenger airbag. Please follow WSM procedures in section 501-20B.
  - During removal of the instrument panel upper section, it is not necessary to remove the right hand instrument panel finish panel.
2. Package the replaced passenger airbag in the *new* part box and provide to the appropriate dealership personnel for part returns.



## F-150 Vehicles

### Recommended Tool List:

Pocket Flat Head Screwdriver
6" (152 mm) Flat Blade Screwdriver
10" (254 mm) Large Flathead Screwdriver
Plastic and Metal Trim Removal Tool
1/4" and 3/8" Drive Ratchets
1/4" Drive 7mm and 5.5mm Shallow Sockets
3/8" Drive 7mm, 8mm, 10mm, and 13mm Shallow Sockets
3/8" Drive 13mm Deep Socket
3/8" Drive T45 Torx® Socket
3/8" Drive extensions - 3" (76 mm), 6" (152 mm), 12" (304 mm)
3/8" Drive Universal Swivel Joint
3/8" Drive Power Impact Driver
3/8" Drive Torque Wrench

 **WARNING:** Failure to follow the instructions and warnings in the WSM may result in injury.

**NOTE:** If the Airbag Readiness light indicates no Supplemental Restraint System (SRS) faults are present, it is not necessary to follow the WSM SRS Depowering and Repowering steps. Turn the ignition to OFF and wait 1 minute, then it is safe to proceed with passenger airbag replacement.

1. Replace the passenger airbag. Please follow WSM procedures in section 501-20B.
2. Package the replaced passenger airbag in the *new* part box and provide to the appropriate dealership personnel for part returns.

