

**September 4, 2019**

Version 2

**Safety Recall: Takata Front Passenger's Airbag Inflator (Phase 5)****Supersedes 19-079, dated June 28, 2019, to revise the information highlighted in **yellow**.**

*Following NHTSA direction, there are five phases based on three different zones. This is the final phase and includes all three zones.*

**AFFECTED VEHICLES**

| <b>Year</b> | <b>Model</b>     | <b>Trim</b> | <b>VIN Range</b>                         |
|-------------|------------------|-------------|--|
| 2008-12     | Accord           | ALL         | Check the iN VIN status for eligibility. |
| 2010-11     | Accord Crosstour | ALL         | Check the iN VIN status for eligibility. |
| 2006-11     | Civic            | ALL         | Check the iN VIN status for eligibility. |
| 2008-10     | Civic NGV        | ALL         | Check the iN VIN status for eligibility. |
| 2006-11     | Civic Hybrid     | ALL         | Check the iN VIN status for eligibility. |
| 2012-15     | Crosstour        | ALL         | Check the iN VIN status for eligibility. |
| 2007-11     | CR-V             | ALL         | Check the iN VIN status for eligibility. |
| 2009-13     | Fit              | ALL         | Check the iN VIN status for eligibility. |
| 2014        | Fit EV           | ALL         | Check the iN VIN status for eligibility. |
| 2010-14     | Insight          | ALL         | Check the iN VIN status for eligibility. |
| 2009-15     | Pilot            | ALL         | Check the iN VIN status for eligibility. |

**BACKGROUND**

NHTSA and its independent expert reviewed the findings of three independent investigations into the Takata airbag inflator ruptures. According to NHTSA, the combination of time, high temperature fluctuations, and humidity contribute to the degradation of the propellant in the inflators. NHTSA has concluded that this degradation can cause the propellant to burn too quickly, creating more pressure than the inflator can withstand, and, in extreme cases, causing the inflator to rupture and send shrapnel through the air bag toward vehicle occupants. NHTSA is prioritizing the recall of air bag inflators based on the risk of injury or death to vehicle occupants.

This is the final phase to this campaign and involves vehicles that previously had the passenger's airbag non-desiccated inflator replaced with a similar non-desiccated inflator (like for like), or airbag module replaced with one that contained a non-desiccated inflator. This replacement may have been done as part of a recall or other repair. Always do an iN VIN status inquiry to see if a vehicle is affected.

**CUSTOMER INFORMATION:**The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by "do-it-yourselfers," and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Honda automobile dealer.

In early September 2019, the V-SMART tool was shipped to your dealership. This tool is used to help validate the installation of the front passenger's airbag replacement inflator. **Beginning September 30, 2019**, V-SMART will be a required tool for the installation of the front passenger's airbag replacement inflator. V-SMART validation for each of these repairs will be required for any and all warranty claims to be paid for such repairs. Refer to the job aid *Using V-SMART* and the *Tech2Tech*® video "Using V-SMART" for more information.

For more information about these inflator recalls, go to [www.safercar.gov](http://www.safercar.gov) and use keyword **TAKATA**.

There are several bulletins with similar years and models. Make sure to do an iN VIN status inquiry and follow the indicated service bulletin.

Do an iN VIN status inquiry and, if indicated, repair the vehicle even though the vehicle may have been repaired under a previous campaign.

**NOTE**

**If the VIN status inquiry indicates that the vehicle is subject to any open safety recalls, including the driver's airbag inflator, make sure to also complete those recall repairs before returning the vehicle to the customer. If you are unable to complete any open recall, advise the customer of the recall status and when the recall could be completed.**

You may receive a different part number than ordered, and the inflator may appear different. As a result, there may be different installation instructions. Make sure you review this service bulletin for installation instructions and details about model applicability.

**REVISION SUMMARY**

**Under BACKGROUND and REPAIR PROCEDURE, the V-SMART tool was added.**

**REPAIR PROCEDURE TABLE OF CONTENTS**

| Vehicle                             | Page |
|-------------------------------------|------|
| Accord, Accord Crosstour, Crosstour | 7    |
| Civic, Civic Hybrid, Civic NGV      | 18   |
| CR-V                                | 29   |
| Fit, Fit EV                         | 40   |
| Insight                             | 51   |
| Pilot                               | 62   |

**CUSTOMER NOTIFICATION**

Owners of affected vehicles will be sent a notification of this campaign.

Do an iN VIN status inquiry to make sure the vehicle is shown as eligible.

Some vehicles affected by this campaign may be in your used vehicle inventory.

Failure to repair a vehicle subject to a recall or campaign may subject your dealership to claims or lawsuits from the customer or anyone else harmed as a result of such failure. To see if a vehicle in inventory is affected by this safety recall, do a VIN status inquiry before selling it.

**CORRECTIVE ACTION**

Replace the passenger's airbag inflator, then return the original, undeployed inflator as directed.

## PARTS INFORMATION

| Part Name  | Order Part Number | You may receive any of the following | Quantity |
|--|-------------------|--------------------------------------|----------|
| 2008-12 Accord Front Passenger's Airbag Inflator Kit                         | 04790-TA0-407     | 04790-TA0-407<br>04790-TA0-A00       | 1        |
| 2010-11 Accord Crosstour Front Passenger's Airbag Inflator Kit               | 04790-TA0-407     | 04790-TA0-407<br>04790-TA0-A00       | 1        |
| 2006-11 Civic (includes GX and Hybrid) Front Passenger's Airbag Inflator Kit | 04790-SNA-407     | 04790-SNA-407<br>04790-SNA-A00       | 1        |
| 2012-15 Crosstour Front Passenger's Airbag Inflator Kit                      | 04790-TA0-407     | 04790-TA0-407<br>04790-TA0-A00       | 1        |
| 2007-11 CR-V Front Passenger's Airbag Inflator Kit                           | 04790-SWA-407     | 04790-SWA-407<br>04790-SWA-A00       | 1        |
| 2009-13 Fit Front Passenger's Airbag Inflator Kit                            | 04790-TK6-407     | 04790-TK6-407<br>04790-TK6-A00       | 1        |
| 2014 Fit EV Front Passenger's Airbag Inflator Kit                            | 04790-TK6-407     | 04790-TK6-407<br>04790-TK6-A00       | 1        |
| 2010-14 Insight Front Passenger's Airbag Inflator Kit                        | 04790-TM8-407     | 04790-TM8-407<br>04790-TM8-A00       | 1        |
| 2009-15 Pilot Front Passenger's Airbag Inflator Kit                          | 04790-SZA-407     | 04790-SZA-407<br>04790-SZA-A00       | 1        |

### NOTES

- The inflator kit box must be used to return the recalled inflator to its supplier. Be careful not to damage the inflator kit box.
- If the recalled, undeployed inflator is not returned, the warranty claim for that vehicle will be charged back to your dealership.
- To return the undeployed inflators, follow the shipping instructions outlined in PIB A15-0002, *Inflator Kit Return Process*.
- Parts staff can scan the part number and serial number from the outside of the box into the warranty claim by using the Controlled Part Serial No. screen and scanning the applicable information. Refer to the job aid *Ordering and Managing Replacement Airbag Inflators* for more information.

## REQUIRED TOOLS

| Tool Name        | Part Number                       | Quantity |
|------------------|-----------------------------------|----------|
| PSPI6 Gauge Tool | 070AJ-TA00A00 or<br>07AAJ-TA0AA00 | 1        |

### NOTES

- Each dealer was previously sent over 10 tools. If you need more, the gauge is available for dealer ordering.
- This tool is for use on the inflators with blue collars only.

## WARRANTY CLAIM INFORMATION

### NOTES

- Process claims as quickly as possible so that resources can be properly allocated.
- Enter the part number of the inflator that you received into the warranty claim, **not the part number that you ordered**. For more information, refer to step 6 of REPAIR PROCEDURE.
- To avoid non-payment of warranty claims, the serial number on the box of the new airbag inflator must be entered in the warranty claim. For more information, refer to step 6 of REPAIR PROCEDURE.
- To avoid a warranty claim being charged back to your dealership, you must return the recalled, undeployed inflator to its supplier. Follow the shipping instructions outlined in PIB A15-0002, *Inflator Kit Return Process*.
- The serial number is encoded into the bar code printed on the label inside of the box and on a label attached to the outside of the box. If your dealership uses a scanner, you can scan the serial number from either place into the claim.
- The part number is encoded into a barcode attached to the outside of the box. If your dealership uses a scanner, you can scan the part number into the claim.
- **If you confuse the serial number and part number when entering the claim information**, your claim will automatically be rejected.
- For more information about scanning and filing airbag inflator recall claims, refer to **Ordering and Managing Replacement Airbag Inflators**. From the iN, select **Service, Warranty, Warranty Claim**, then **Reference Guide**. Under **HOT TIPS/TOPICS**, select **Inflator Claims at a Glance**.
- Each VIN is assigned to a specific campaign. Make sure you file a claim using the correct warranty claim information to avoid your claim being rejected.

| Year/Model                     | Operation Number | Replacement Part Number | Flat Rate Time | Defect Code | Symptom Code | Template ID | Failed Part Number |
|--------------------------------|------------------|-------------------------|----------------|-------------|--------------|-------------|--------------------|
| 2008-12<br>Accord              | 7541G3           | 04790-TA0-407           | 0.7 hr         | 6EE00       | Q5E00        | A19079A     | 77820-TA0-A80ZC    |
|                                | 7541G3           | 04790-TA0-A00           | 0.7 hr         | 6EE00       | Q5E00        | A19079B     | 77820-TA0-A80ZC    |
| 2010-11<br>Accord<br>Crosstour | 7541G3           | 04790-TA0-407           | 0.7 hr         | 6EE00       | Q5E00        | A19079C     | 77820-TA0-A80ZC    |
|                                | 7541G3           | 04790-TA0-A00           | 0.7 hr         | 6EE00       | Q5E00        | A19079D     | 77820-TA0-A80ZC    |
| 2012-15<br>Crosstour           |                  |                         |                |             |              |             |                    |

| Year/Model                               | Operation Number | Replacement Part Number | Flat Rate Time | Defect Code | Symptom Code | Template ID | Failed Part Number |
|--|------------------|-------------------------|----------------|-------------|--------------|-------------|--------------------|
| 2006-11 Civic<br>(Includes CNG & Hybrid) | 7541G3           | 04790-SNA-407           | 0.8 hr         | 6EE00       | Q5E00        | A19079E     | 77820-SNA-A82ZA    |
|  | 7541G3           | 04790-SNA-A00           | 0.8 hr         | 6EE00       | Q5E00        | A19079F     | 77820-SNA-A82ZA    |
| 2007-11 CR-V                             | 7541G3           | 04790-SWA-407           | 0.7 hr         | 6EE00       | Q5E00        | A19079G     | 77820-SWA-A80ZA    |
|  | 7541G3           | 04790-SWA-A00           | 0.7 hr         | 6EE00       | Q5E00        | A19079H     | 77820-SWA-A80ZA    |
| 2009-13 Fit<br>2014 FIT EV               | 7541G3           | 04790-TK6-407           | 0.9 hr         | 6EE00       | Q5E00        | A19079I     | 77820-TK6-A80ZA    |
|  | 7541G3           | 04790-TK6-A00           | 0.9 hr         | 6EE00       | Q5E00        | A19079J     | 77820-TK6-A80ZA    |
| 2010-14<br>Insight                       | 7541G3           | 04790-TM8-407           | 0.6 hr         | 6EE00       | Q5E00        | A19079K     | 77820-TM8-A80ZB    |
|  | 7541G3           | 04790-TM8-A00           | 0.6 hr         | 6EE00       | Q5E00        | A19079L     | 77820-TM8-A80ZB    |
| 2009-15 Pilot                            | 7541G3           | 04790-SZA-407           | 0.6 hr         | 6EE00       | Q5E00        | A19079M     | 77851-SZA-A12      |
|  | 7541G3           | 04790-SZA-A00           | 0.6 hr         | 6EE00       | Q5E00        | A19079N     | 77851-SZA-A12      |


Skill Level: Repair Technician

## IDENTIFYING COUNTERFEIT AIRBAGS


This section goes over the steps to identify counterfeit airbags and applies to all vehicles in this service bulletin. It is referred to in each vehicle's repair procedure. Click [HERE](#) to watch a video to help identify counterfeit airbags.

- If there is nothing unusual about the airbag or the inflator, continue with the inflator replacement procedure.
- If there are any unusual markings, like an incorrect label or a model year written in marker, the airbag and inflator may not be the correct airbag and/or inflator for the vehicle or it may be a counterfeit part. For more information about counterfeit airbags, you can refer to [safercar.gov](http://safercar.gov), enter keywords **MANAGING COUNTERFEIT**, and select **Recommended Dealer Guidance for Managing Counterfeit Air Bags** from the list. **If you suspect that the airbag or inflator is counterfeit, do not continue this procedure.** Contact your DPSM for assistance.

NON-STANDARD SAFETY LABEL

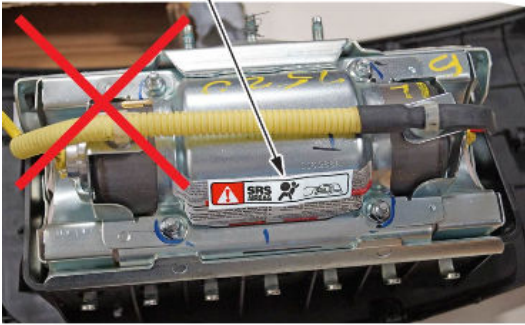


GREASE PENCIL OR PAINT MARKINGS

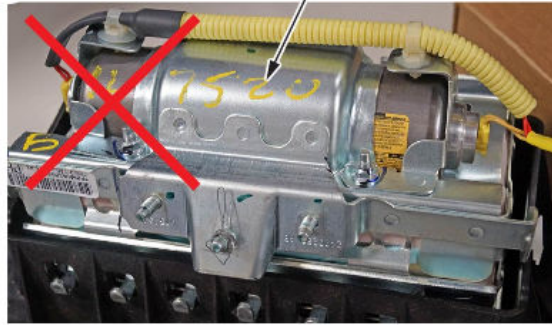

HAND ENGRAVING



NO LABELS ON INFLATOR

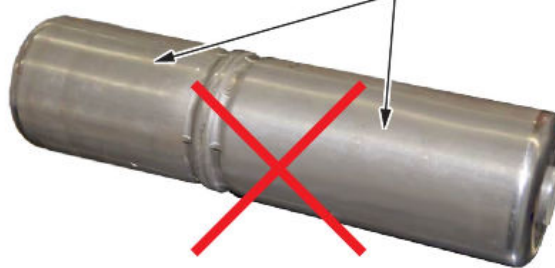


### NOTES

- **If the VIN status inquiry indicates that the vehicle is subject to any open safety recalls, including the driver's airbag inflator, make sure to also complete those recall repairs before returning the vehicle to the customer. If you are unable to complete any open recall, advise the customer of the recall status and when the recall could be completed.**
  - Make sure you have the anti-theft code for the audio and navigation system (if applicable), then write down the frequencies for the audio unit's preset buttons.
  - Be careful not to damage any parts when replacing the inflator, and **follow the procedure exactly**.
  - If, before removing the airbag, you suspect that it may be the incorrect airbag for the vehicle or a counterfeit, **do not remove the airbag**. Contact your DPSM for assistance.
  - Make sure you have reviewed the SRS Precautions and Procedures in the service information before doing the REPAIR PROCEDURE.
1. Turn the ignition to ON, and check if the SRS indicator comes on for about 6 seconds, then turns off.
    - If the indicator comes on, then turns off after about 6 seconds, turn the ignition OFF, then go to step 2.
    - If the indicator does not come on, or if it stays on, contact your DPSM for assistance.
  2. Disconnect the battery negative cable and wait at least 3 minutes before continuing.
  3. Remove the front passenger's airbag. Refer to the applicable vehicle's service information.
  4. Place the airbag, face-down, on a clean shop towel.

### NOTES

- The orientation of the airbag is critical because if the inflator is installed incorrectly, the harness will be too short when you reinstall the airbag.
- The brackets between the various models are similar but may differ from the example shown.

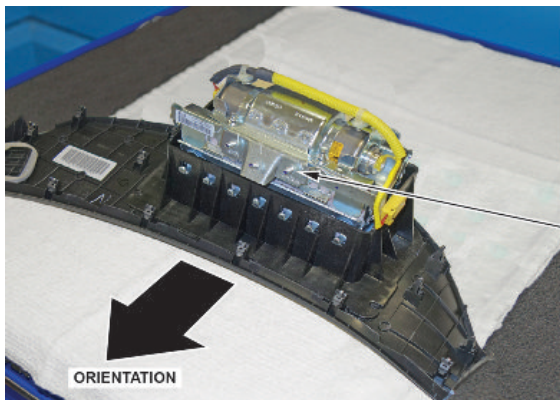


5. Visually inspect the airbag and the inflator for any unusual writing or markings. Refer to IDENTIFYING COUNTERFEIT AIRBAGS.


6. Peel the label located inside the inflator box from its backing, and attach it to the RO. For the warranty claim to be paid, the **replacement inflator part number that you received** must be included in the warranty claim.

**NOTES**

- The replacement part number is printed on the top part of the label, and the serial number is printed on the bottom. **Make sure you attach the label to the RO and give it to the warranty clerk .**
- There may also be a colored sticker located in the kit; ignore it because it is not used.
- Not all inflator kits have a label included. In those cases, write the serial number and part number from the side of the inflator box on the RO. The part number always starts with 047.

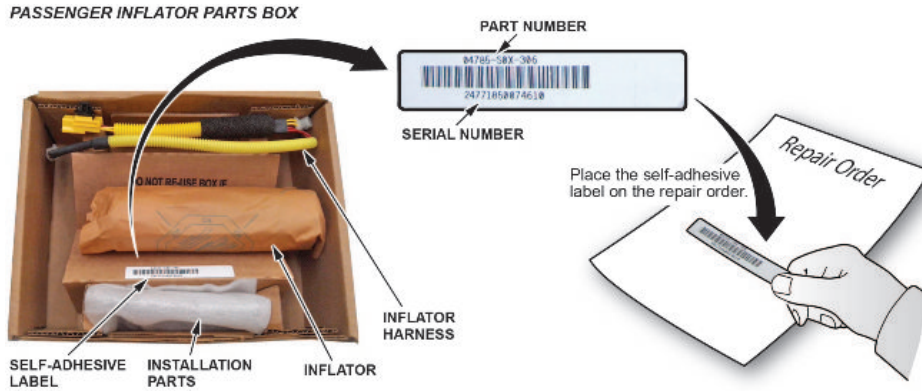

7. Remove the harness from both ends of the inflator bracket.

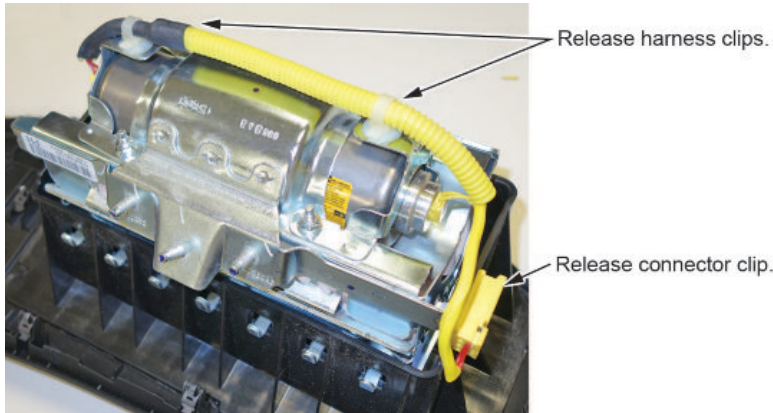




8. Short the yellow wires.


**NOTES**

- **You must cut the yellow wires** for inflator removal and short the yellow wires on the inflator side as indicated to prevent accidental deployment.
- **Do not cut the red wires** because the airbag connector shorts these inflator wires.


8.1. Cut 1–2 inches of the protective tube to access the yellow wires.

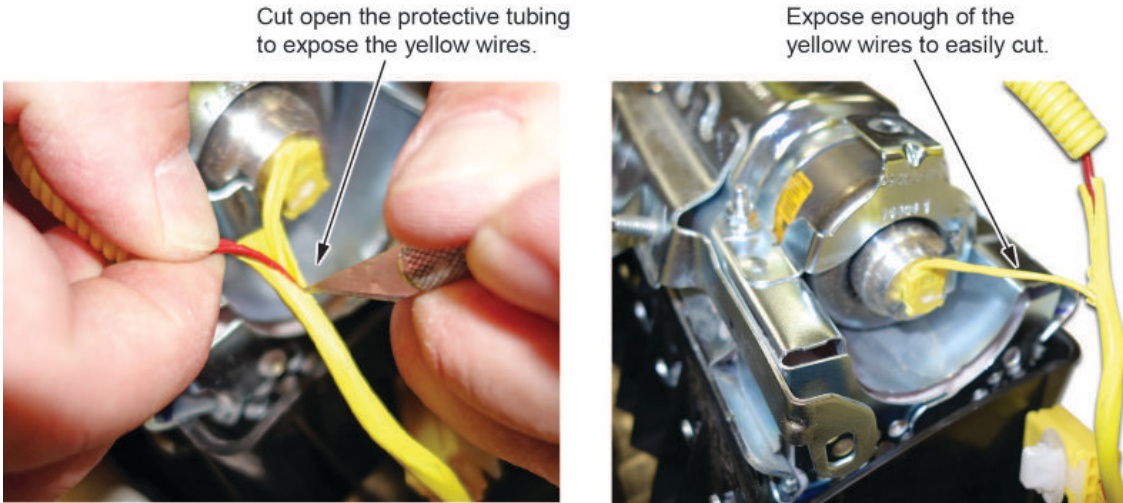

8.2. Cut the yellow wires as shown.

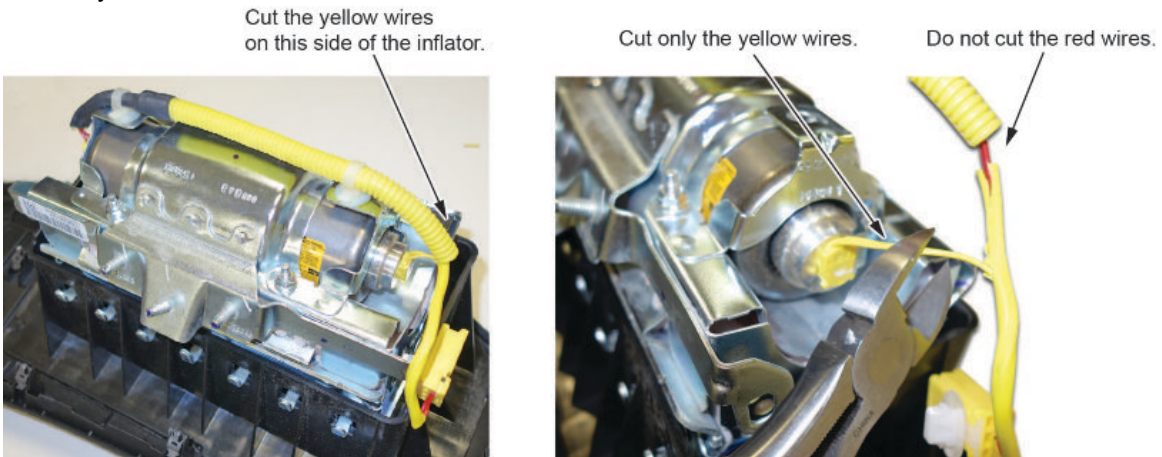


8.3. Strip away about 1 inch of the yellow wire insulation, then twist the wires together.

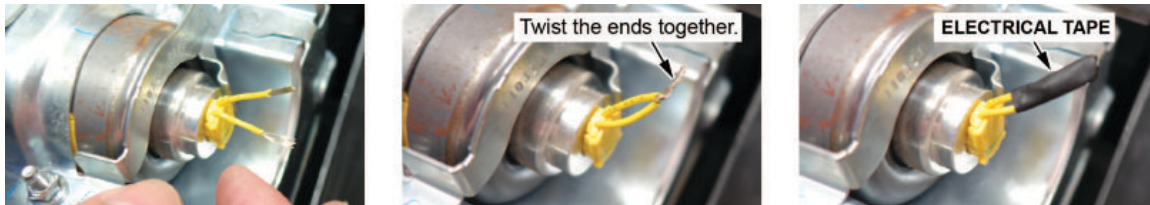

8.4. Tape the twisted ends with electrical tape.

9. Remove the four inflator nuts.

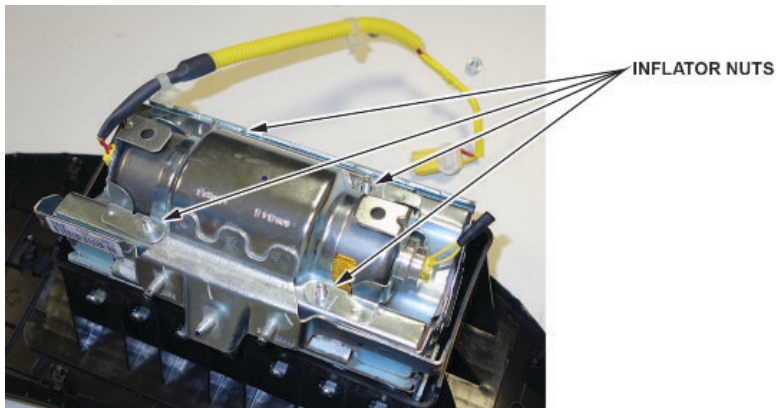

10. Remove the inflator bracket.

#### NOTES

- You can only remove one of the brackets, as the other is welded to the airbag housing.
- Do not reuse the bracket; use the new one that came in the inflator kit.



11. Remove the inflator by pushing it out.



12. Install the new inflator.

**NOTE**

There may be some minor surface rust or corrosion on the new inflator; this is OK.

Click [HERE](#) for a short video about the different variations of the driver's and front passenger's replacement inflators involved with the recalls related to inflators. While both the driver's and front passenger's inflators are shown in the video, this is informational only. Replace inflators only as directed by the iN VIN status inquiry.

**Check your part number against the ones listed for each installation procedure. Use the correct installation procedure for the part you received.**

**NOTE**


These inflators have blue collars.

|               |               |
|---------------|---------------|
| 04790-TA0-407 | 04790-TA0-A00 |
|---------------|---------------|


12.1. One side of the inflator has a longer collar, a single tab, and a small flat spot on the connector. The other side of the inflator has a shorter collar, two tabs, and a notch with a red dot. Make sure you insert the end with the shorter collar into the airbag first.

#### NOTES

- The V-SMART tool can only validate inflators with slotted end caps. You may receive an inflator with solid end caps. This is the correct part to repair the vehicle, but the V-SMART will fail the validation. **The V-SMART validation must fail a total of three times** before you can have your supervisor override the validation using the **Supervisor Inspection Override**.
- Your supervisor can be a service manager, shop foreman, team leader, etc. **The supervisor must inspect your work** to make sure the replacement inflator was installed correctly. When a supervisor enters his or her information, **the supervisor is signing off that the technician's work was inspected and approved**.

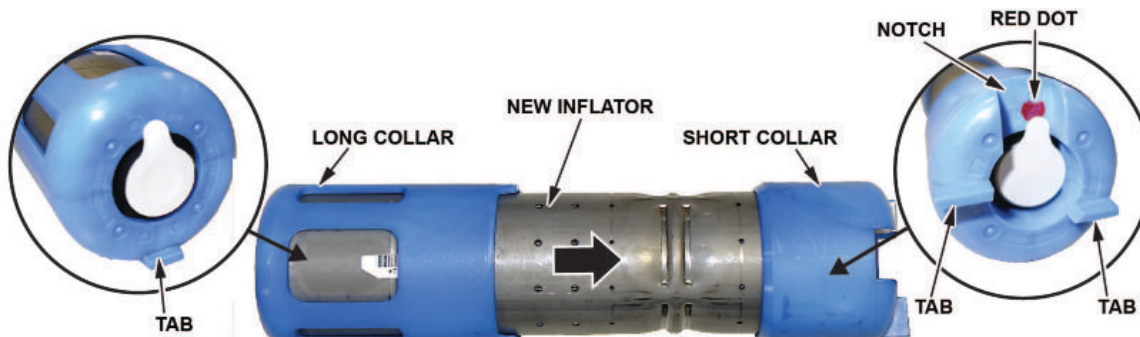


LONG COLLAR The inflator installation is directional.

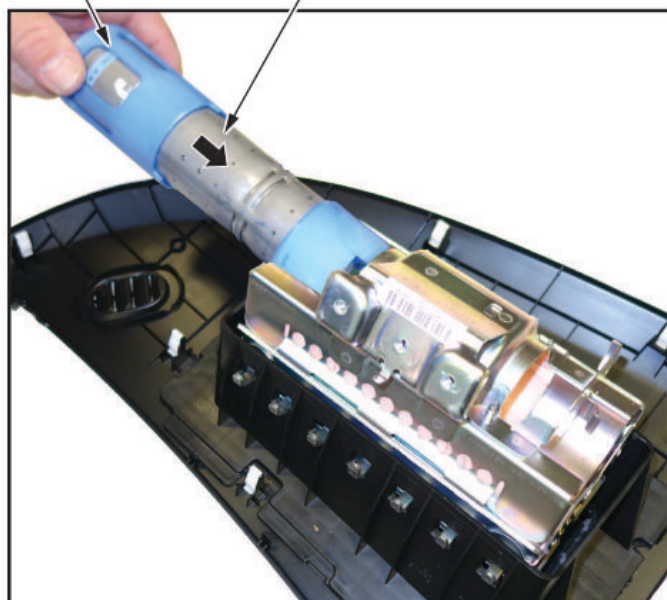

12.2. Slide the inflator in until the plastic collar contacts the bracket. The two tabs should align with the metal tab as shown. There should be no space or gap between the inflator and bracket.

**FIXED BRACKET END**

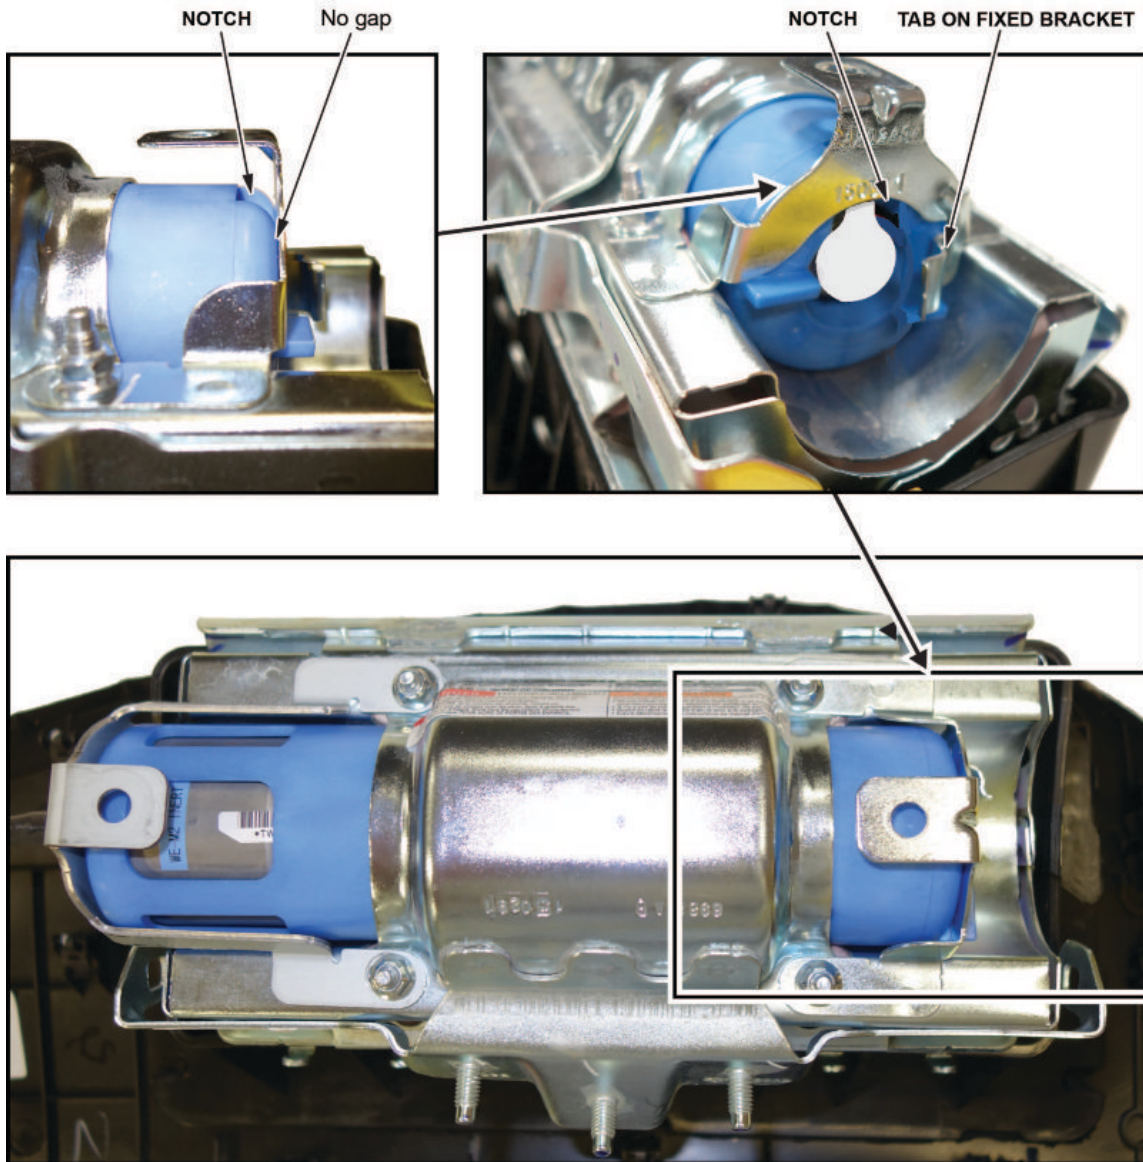


12.3. Install the bracket included in the kit onto the airbag module. Check there is no space or gap between the inflator and bracket by pushing the bracket against the inflator.


**NOTE**

The bracket may have a little bit of play before you install the new nuts.


**ADJUSTABLE BRACKET END**

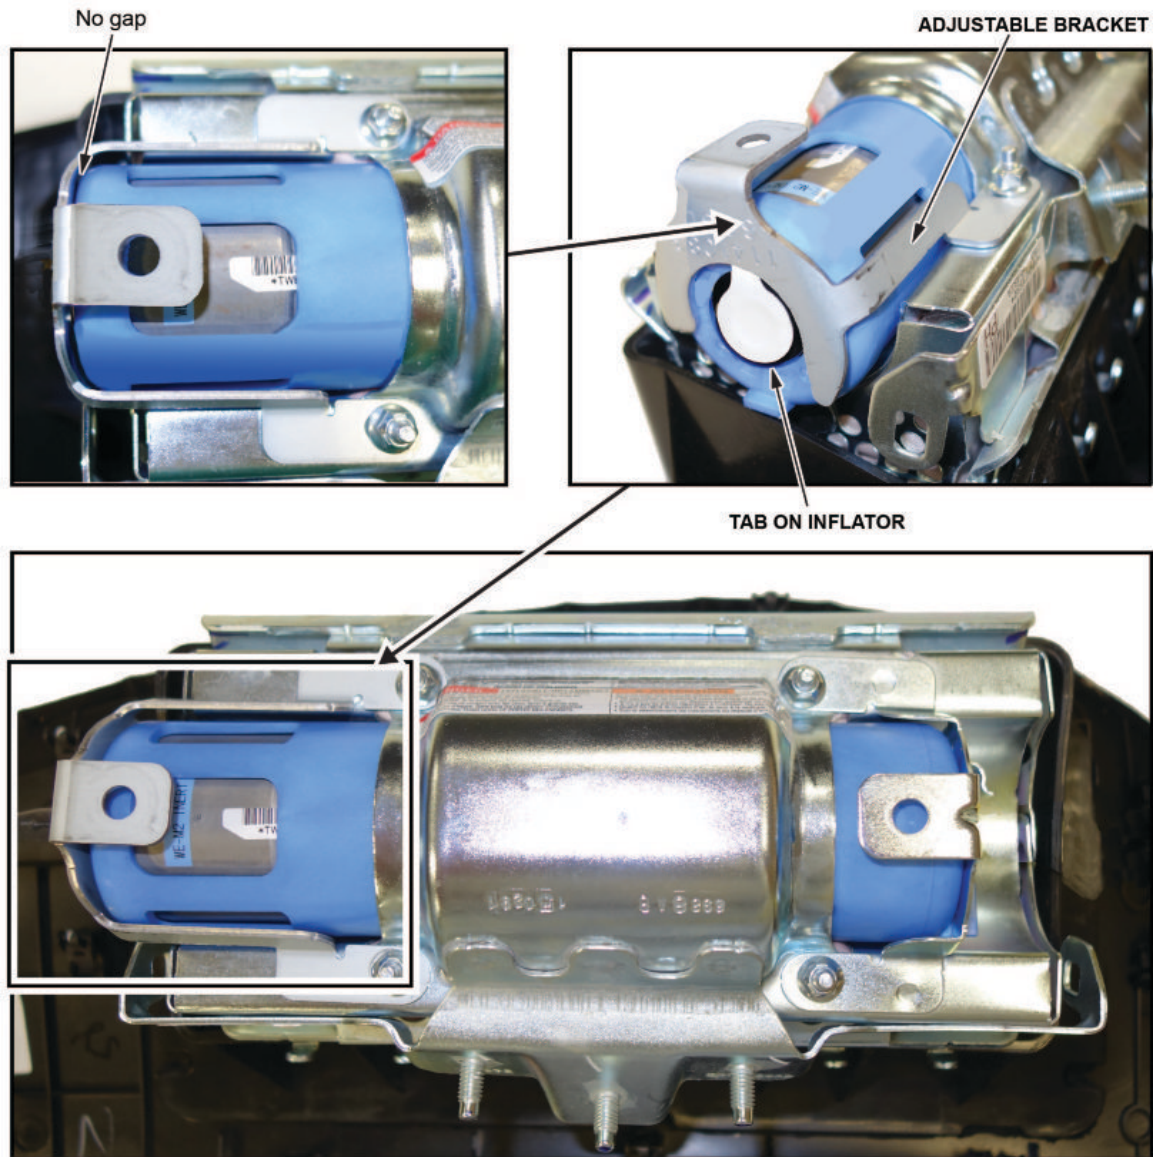

13. Hold the bracket against the inflator, then install the new 5 mm locknuts, and torque them in sequence to **4.0 N•m (34 lb-in)**.

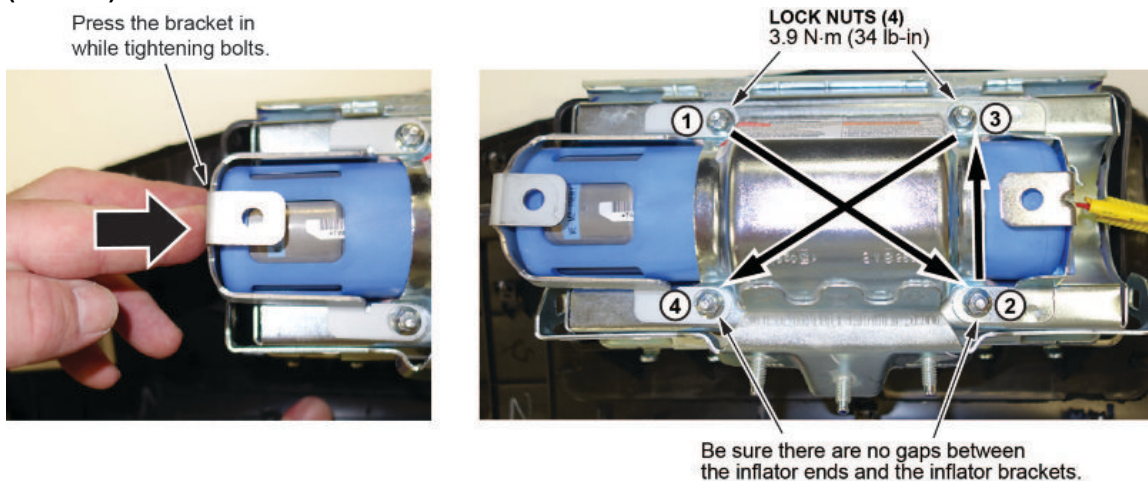

14. Remove the stickers covering the terminals on both sides of the new inflator.

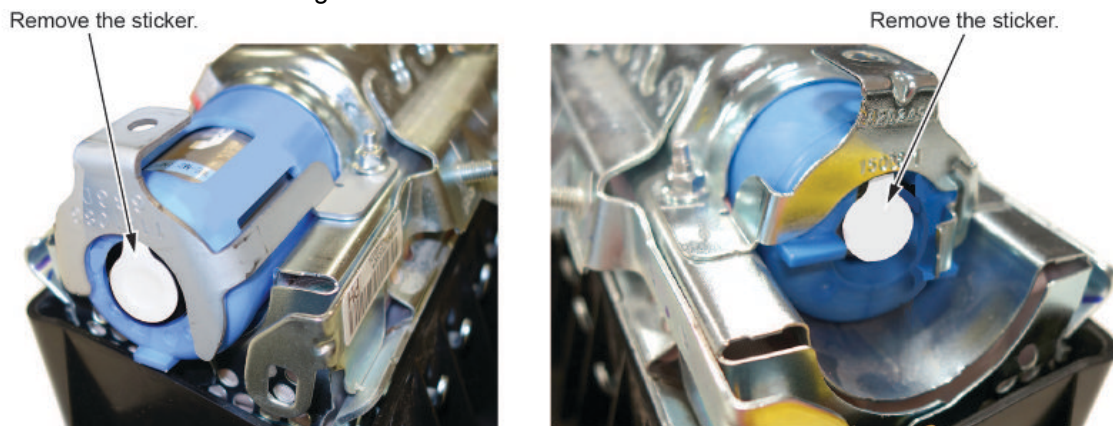

15. Using the V-SMART tool, validate that the airbag replacement inflator is installed correctly.

#### NOTES

- You must validate the front passenger's airbag replacement inflator installation using the V-SMART tool **before** connecting the inflator harness.
- Your warranty claim will not be paid if the V-SMART validation is not completed or the photo is not sent. Make sure you see the **Uploaded Completed** message to confirm the photo was sent to the warranty department.


16. Install the new inflator harness.

16.1. Make sure the airbag and harness are aligned as shown.


**NOTES**

- **The replacement inflator harnesses may have the wire colors in the opposite positions of the original harness.** If you connect the harness incorrectly, the harness cannot be removed and you will not be able to reinstall the airbag because the harness will be too short.
- Connect the red wire connector to the side of the inflator with the red dot.
- On vehicles with the blue inflator, the red dot is not visible because it is covered by the bracket.

ORIGINAL INFLATOR HARNESS ROUTING

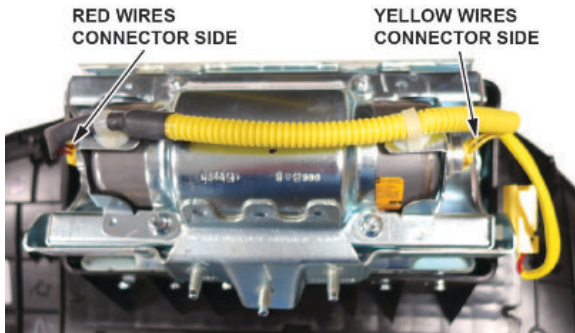


NEW INFLATOR HARNESS ROUTING

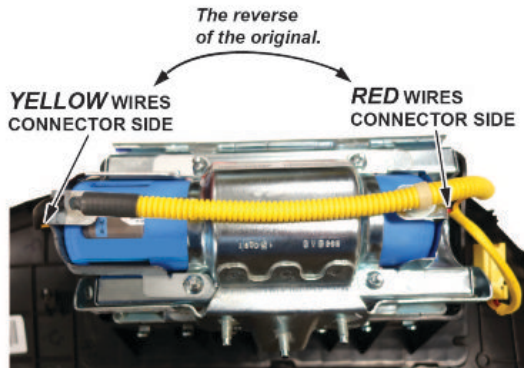

16.2. Connect the red wire connector to the connector on the side with the short plastic collar. Align the "T" shape in the inflator harness connector with the T-shaped inflator connector, then press the connector into place.

① Match up the "T" shape as shown. The connectors are directional.

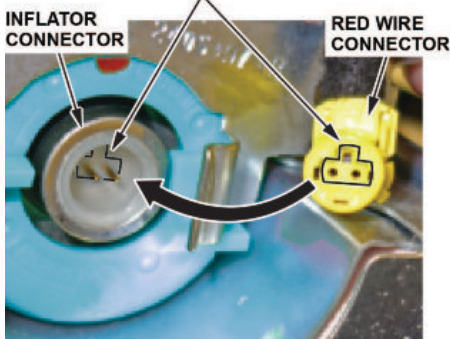

② Press the connector into place until it clicks.



③ Wiggle the connector to make sure it's secure.



16.3. Connect the yellow wire connector to the connector on the side with the long plastic collar.

16.4. After you hear each connector click, wiggle it to make sure it is secure.



**NOTE**

If the connector is not properly aligned, it will come out.




16.5. Make sure the connector is secure and in place by using the gauge tool. (PSPI6 Gauge Tool P/N: 070AJ-TA00A00 or 07AAJ-TA0AA00).

Be sure the connector is fully seated by checking it with the gauge tool.

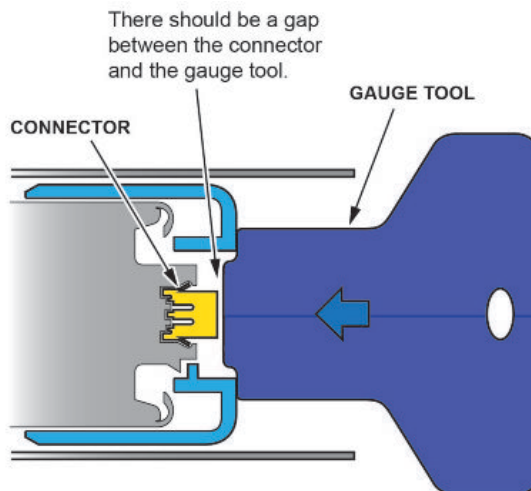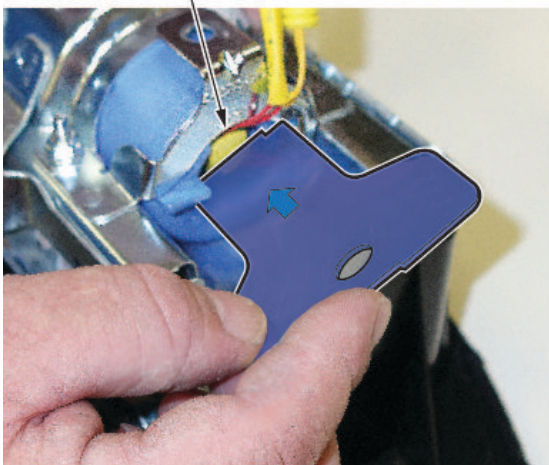

17. Connect the harness to the inflator brackets.

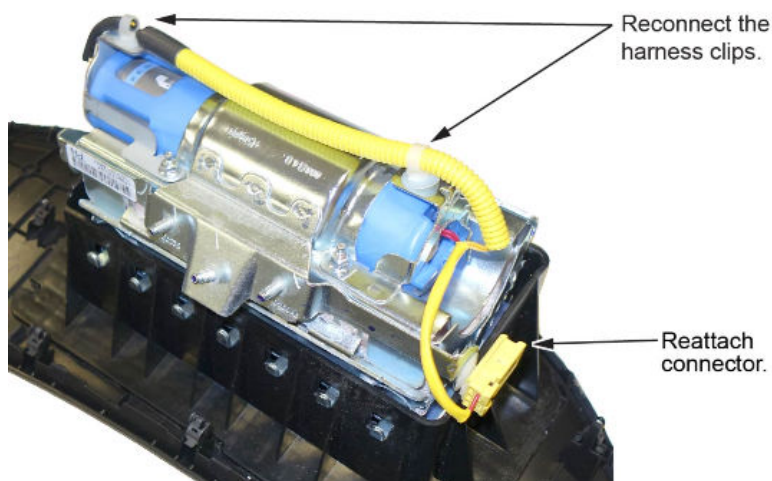

18. Install the passenger's airbag into the vehicle and torque the new locknuts to **9.8 N•m (7.2 lb-ft)** .
19. Connect the battery negative cable, and enter the anti-theft code for the audio and navigation system (if applicable), then enter the audio unit presets.
20. Set the clock (for vehicles without navigation).
21. Turn the ignition to ON, and make sure the SRS indicator comes on for about 6 seconds, then goes off.
22. Put the original inflator into the box the new one came in. Make sure there is no other hardware in the box because if the package rattles, it will not be accepted by the courier.
23. Follow the shipping instructions outlined in PIB A15-0002 to return the undeployed inflator.
24. Give your warranty clerk the RO that includes the replacement inflator serial number and replacement part number. For the warranty claim to be paid, the **replacement inflator part number** must be included in the warranty claim.


## REPAIR PROCEDURE CIVIC, CIVIC CNG, AND CIVIC HYBRID

### NOTES

- If the VIN status inquiry indicates that the vehicle is subject to any open safety recalls, including the driver's airbag inflator, make sure to also complete those recall repairs before returning the vehicle to the customer. If you are unable to complete any open recall, advise the customer of the recall status and when the recall could be completed.
  - Make sure you have the anti-theft code for the audio and navigation system (if applicable), then write down the frequencies for the audio unit's preset buttons.
  - Be careful not to damage any parts when replacing the inflator, and **follow the procedure exactly**.
  - If, before removing the airbag, you suspect that it may be the incorrect airbag for the vehicle or a counterfeit, **do not remove the airbag**. Contact your DPSM for assistance.
  - Make sure you have reviewed the SRS Precautions and Procedures in the service information before doing the REPAIR PROCEDURE.
1. Turn the ignition to ON, and check if the SRS indicator comes on for about 6 seconds, then turns off.
    - If the indicator comes on, then turns off after about 6 seconds, turn the ignition OFF, then go to step 2.
    - If the indicator does not come on, or if it stays on, contact your DPSM for assistance.
  2. Disconnect the battery negative cable and wait at least 3 minutes before continuing.
  3. Remove the front passenger's airbag. Refer to the applicable vehicle's service information.
  4. Place the airbag, face-down, on a clean shop towel.

### NOTES

- The orientation of the airbag is critical because if the inflator is installed incorrectly, the harness will be too short when you reinstall the airbag.
- The brackets between the various models are similar but may differ from the example shown.

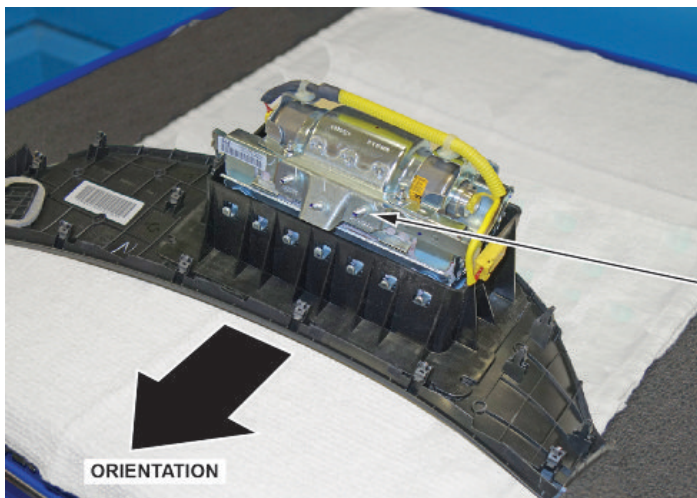


5. Visually inspect the airbag and the inflator for any unusual writing or markings. Refer to IDENTIFYING COUNTERFEIT AIRBAGS.

6. Peel the label located inside the inflator box from its backing, and attach it to the RO. For the warranty claim to be paid, the **replacement inflator part number that you received** must be included in the warranty claim.


**NOTES**

- The replacement part number is printed on the top part of the label, and the serial number is printed on the bottom. **Make sure you attach the label to the RO and give it to the warranty clerk .**
- There may also be a colored sticker located in the kit, ignore it because it is not used.
- Not all inflator kits have a label included. In those cases, write the serial number and part number from the side of the inflator box on the RO. The part number always starts with 047.

**PASSENGER INFLATOR PARTS BOX**

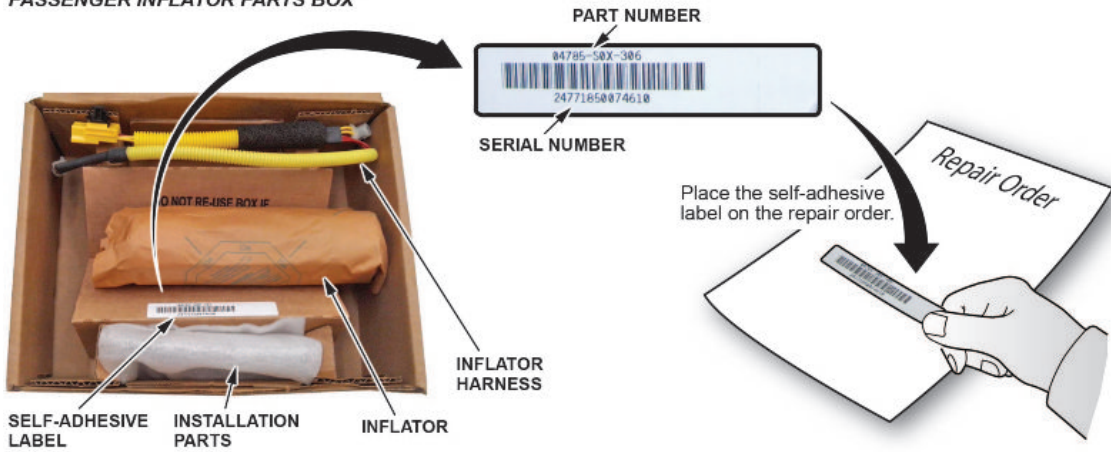

7. Remove the harness from both ends of the inflator bracket.  
Release harness clips.

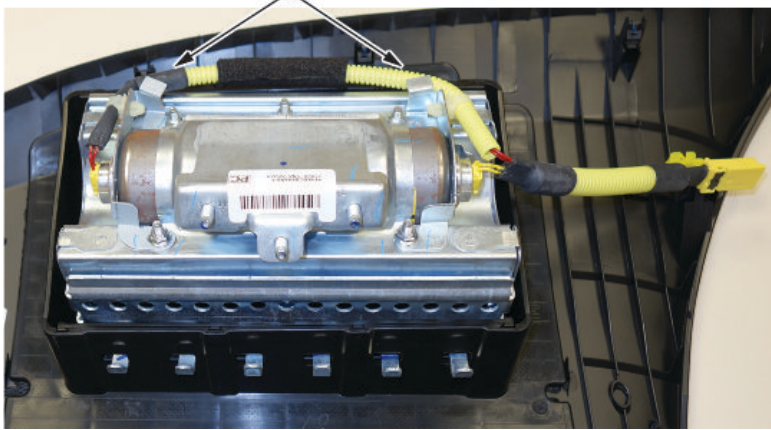


8. Short the yellow wires.


**NOTES**

- **You must cut the yellow wires** for inflator removal and short the yellow wires on the inflator side as indicated to prevent accidental deployment.
- **Do not cut the red wires** because the airbag connector shorts these inflator wires.



8.1. Cut 1–2 inches of the corrugated tube to access the yellow wires.

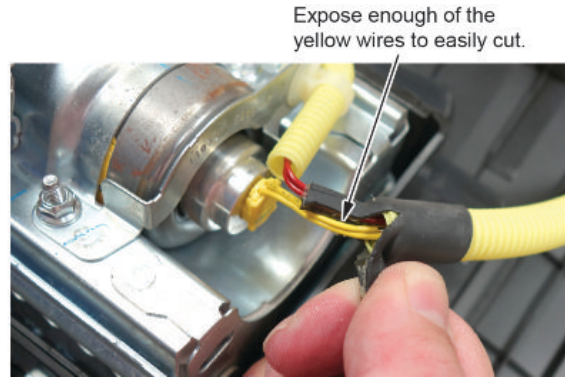

8.2. Cut the yellow wires as shown.

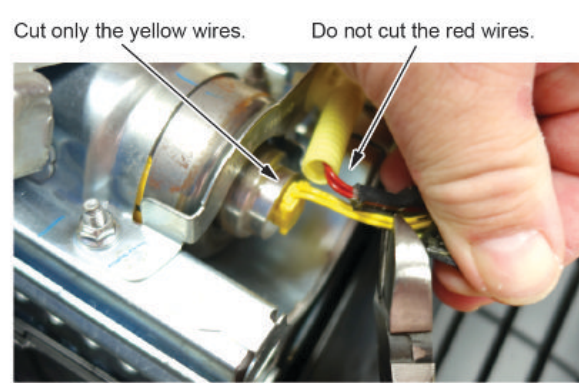


8.3. Strip away about 1 inch of the yellow wire insulation, then twist the wires together.

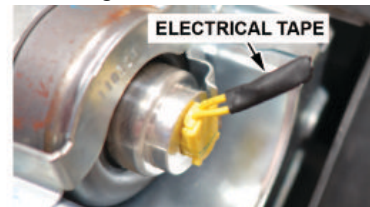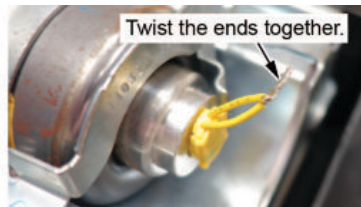

8.4. Tape the twisted ends with electrical tape.

9. Remove the four inflator nuts.

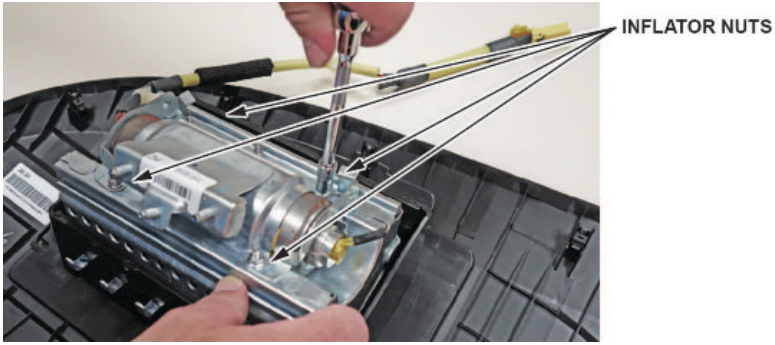


10. Remove the inflator bracket.

**NOTES**

- You can only remove one of the brackets, as the other is welded to the airbag housing.
- Do not reuse the bracket; use the new one that came in the inflator kit.



11. Remove the inflator by pulling it out.

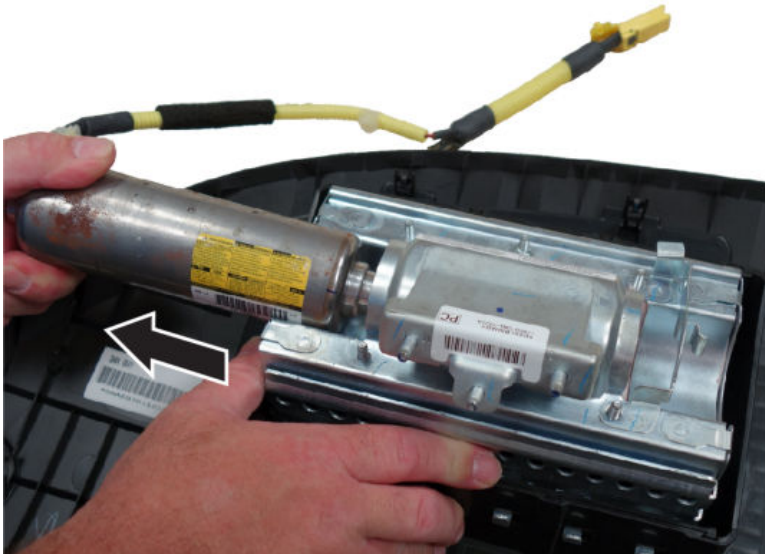

12. Install the new inflator.

**NOTE**

There may be some minor surface rust or corrosion on the new inflator; this is OK.

Click [HERE](#) for a short video about the different variations of the driver's and front passenger's replacement inflators involved with the recalls related to inflators. While both the driver's and front passenger's inflators are shown in the video, this is informational only. Replace inflators only as directed by the iN VIN status inquiry.

**Check your part number against the ones listed for each installation procedure. Use the correct installation procedure for the part you received.**

**NOTE**

These inflators have green collars.


|               |               |
|---------------|---------------|
| 04790-SNA-407 | 04790-SNA-A00 |
|---------------|---------------|

- 12.1. One side of the inflator has a longer collar, a single tab, and a small flat spot on the connector. The other side of the inflator has a shorter collar, two tabs, and a red dot. Make sure you insert the end with the shorter collar into the airbag first.


#### NOTES

- The V-SMART tool can only validate inflators with slotted end caps. You may receive an inflator with solid end caps. This is the correct part to repair the vehicle, but the V-SMART will fail the validation. **The V-SMART validation must fail a total of three times** before you can have your supervisor override the validation using the **Supervisor Inspection Override**.
- Your supervisor can be a service manager, shop foreman, team leader, etc. **The supervisor must inspect your work** to make sure the replacement inflator was installed correctly. When a supervisor enters his or her information, **the supervisor is signing off that the technician's work was inspected and approved**.

**CIVIC:**

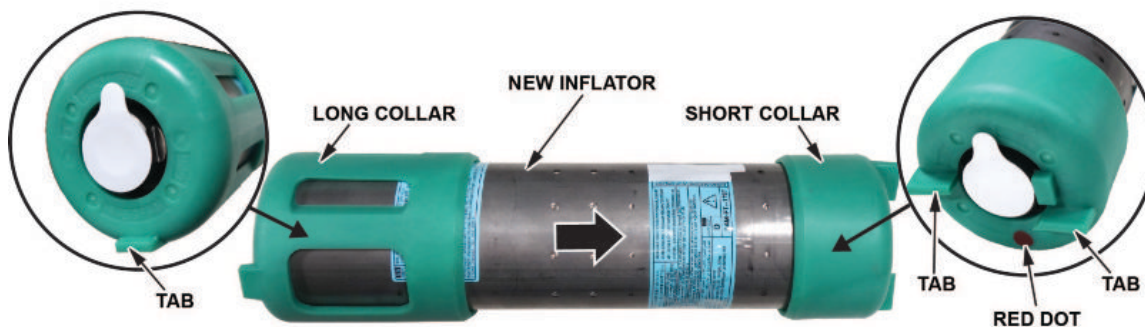


LONG COLLAR      The inflator installation is directional.

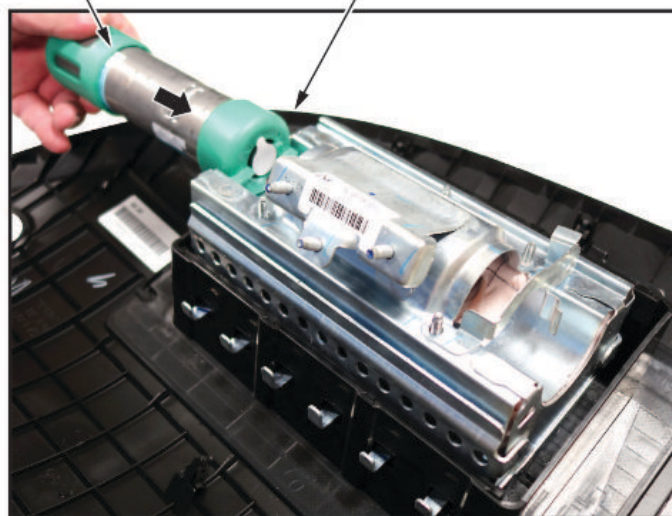

12.2. Slide the inflator in until the plastic collar contacts the bracket. The two tabs should align with the side of the airbag module and the metal tab as shown. There should be no space or gap between the inflator and bracket.

**CIVIC:**

**FIXED BRACKET END**

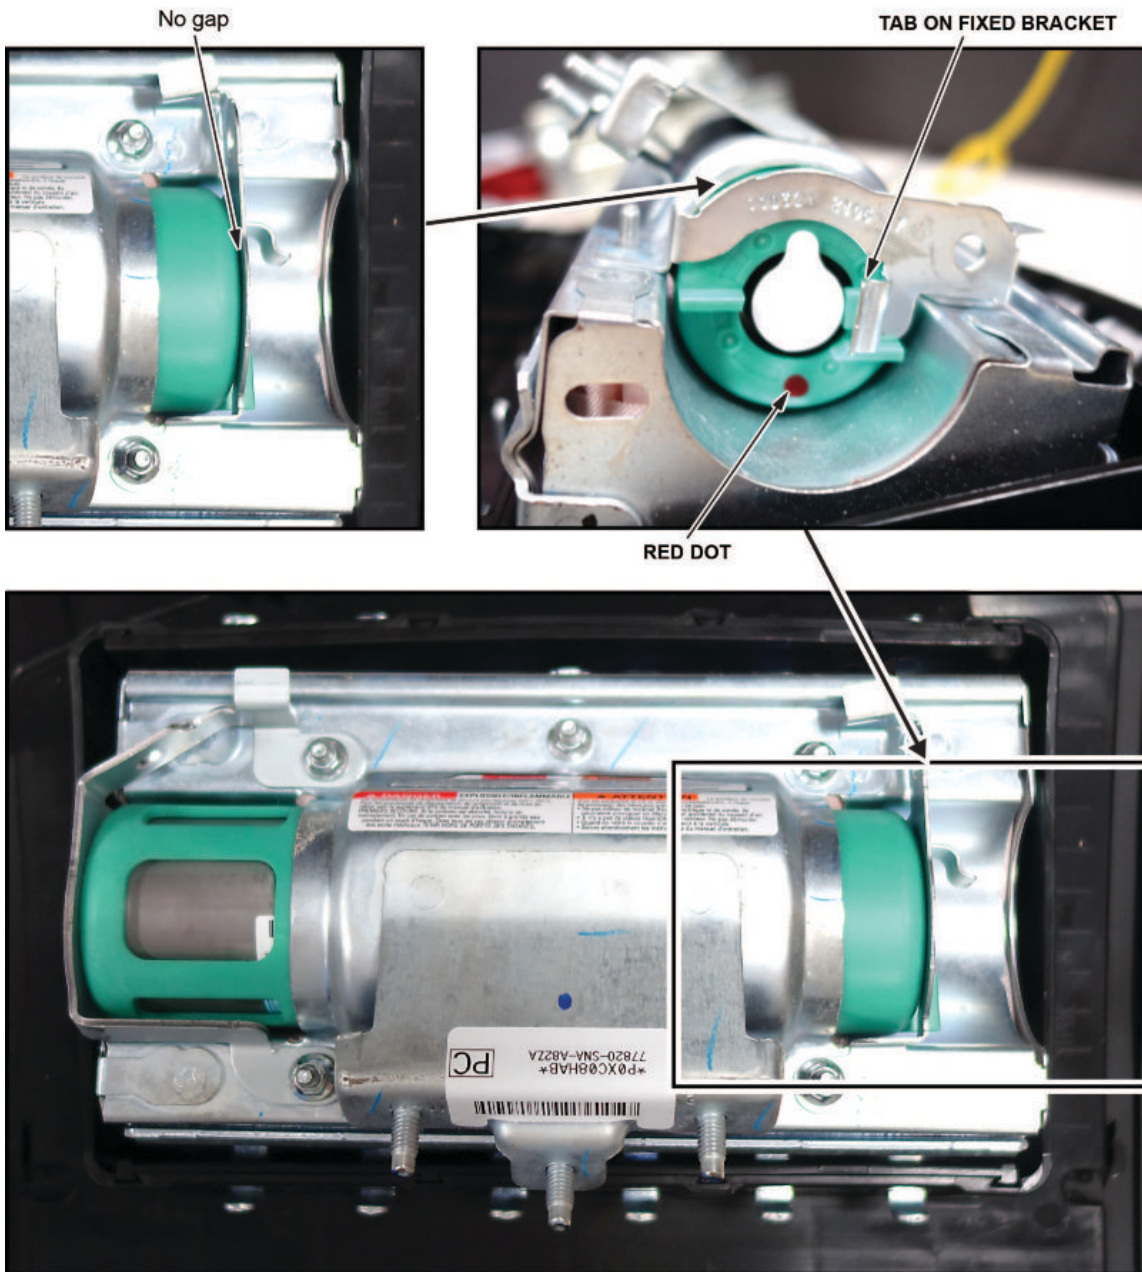




- 12.3. Install the bracket included in the kit onto the airbag module. Check there is no space or gap between the inflator and bracket by pushing the bracket against the inflator.

**NOTE**

The bracket may have a little bit of play before you install the new nuts.

**CIVIC:**


**ADJUSTABLE BRACKET END**

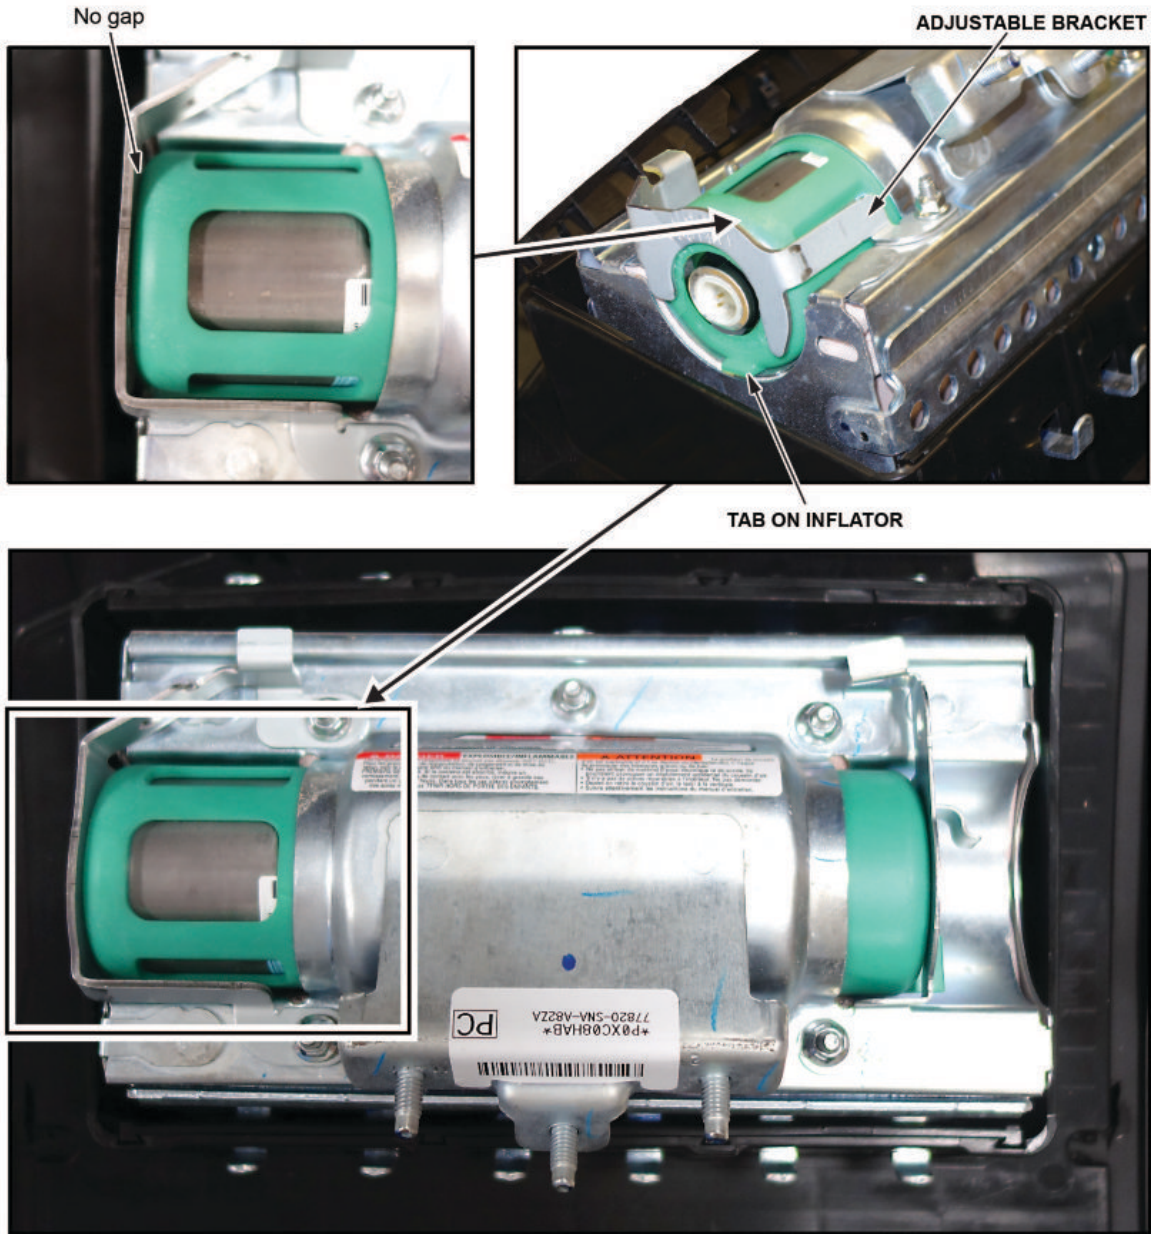


13. Hold the bracket against the inflator, then install the new 5 mm locknuts, and torque them in sequence to **4.0 N•m (34 lb-in)**

**NOTE**

Make sure you push the bracket against the inflator to ensure there are no gaps between the brackets and inflator when torquing the nuts.

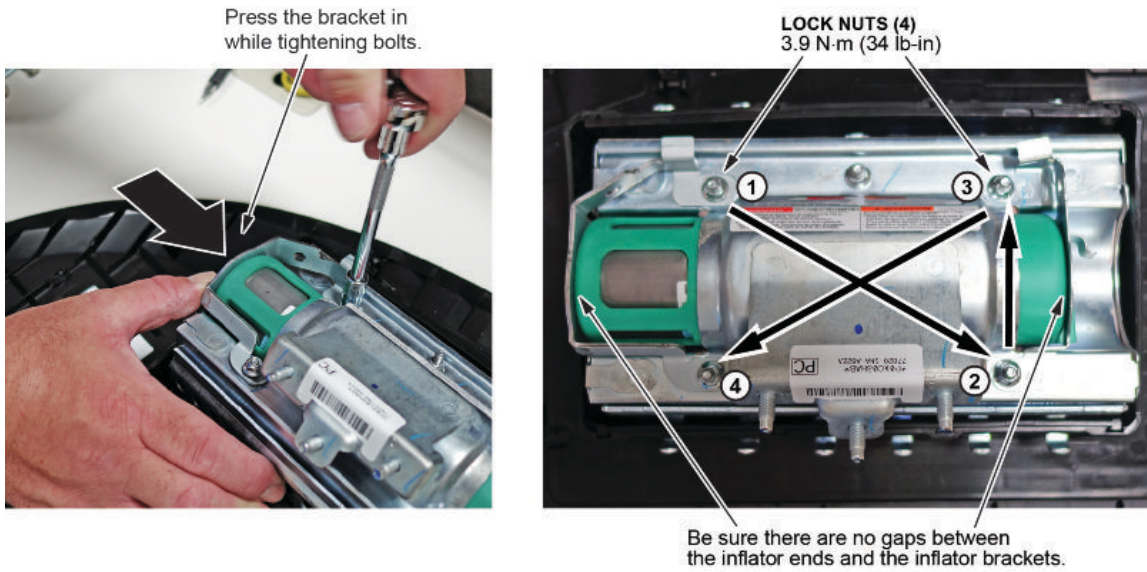

14. Remove the stickers covering the terminals on both sides of the new inflator.

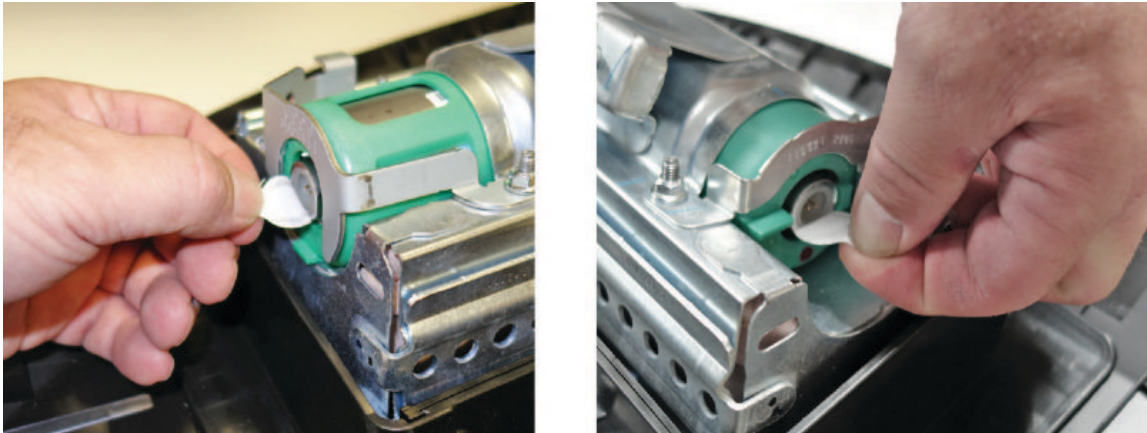

15. Using the V-SMART tool, validate that the airbag replacement inflator is installed correctly.

**NOTES**

- You must validate the front passenger's airbag replacement inflator installation using the V-SMART tool **before** connecting the inflator harness.
- Your warranty claim will not be paid if the V-SMART validation is not completed or the photo is not sent. Make sure you see the **Uploaded Completed** message to confirm the photo was sent to the warranty department.


16. Install the new inflator harness.

16.1. Make sure the airbag and harness are aligned as shown.


**NOTES**

- **The replacement inflator harnesses may have the wire colors in the opposite positions of the original harness.** If you connect the harness incorrectly, the harness cannot be removed and you will not be able to reinstall the airbag because the harness will be too short.
- Connect the red wire connector to the side of the inflator with the red dot.

ORIGINAL INFLATOR HARNESS ROUTING

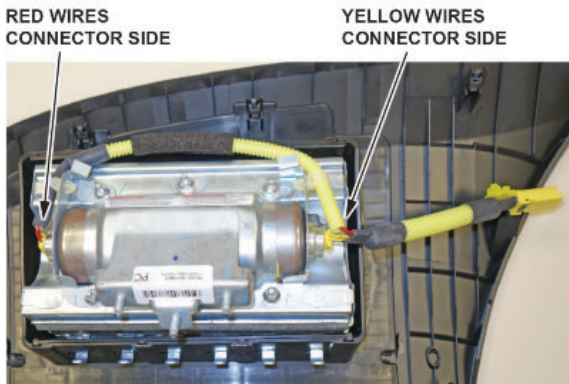


NEW INFLATOR HARNESS ROUTING

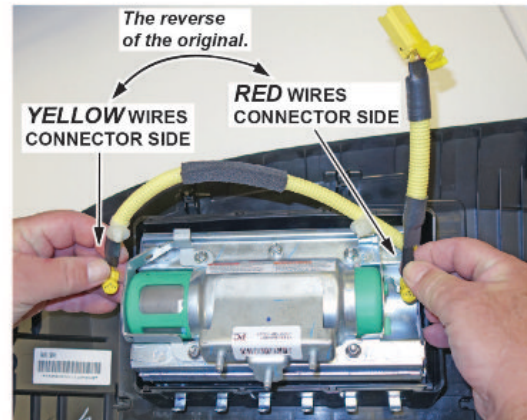

16.2. Connect the red wire connector to the connector on the side with the short plastic collar. Align the "T" shape in the inflator harness connector with the T-shaped inflator connector, then press the connector into place.

① Match up the "T" shape as shown. The connectors are directional.

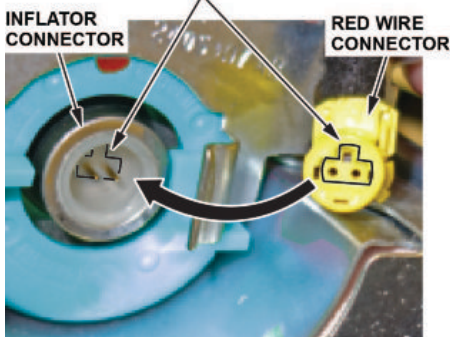

② Press the connector into place until it clicks.



③ Wiggle the connector to make sure it's secure.




16.3. Connect the yellow wire connector to the connector on the side with the long plastic collar.

16.4. After you hear each connector click, wiggle it to make sure it is secure.

**NOTE**

If the connector is not properly aligned, it will come out.

17. Connect the harness to the inflator brackets.

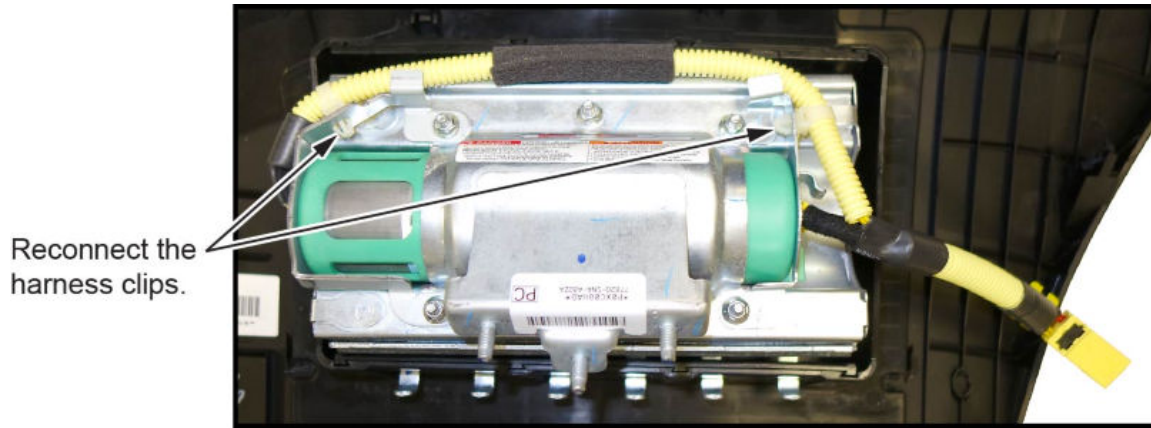

18. Install the passenger's airbag into the vehicle and torque the new locknuts to **9.8 N•m (7.2 lb-ft)** .
19. Connect the battery negative cable and enter the anti-theft code for the audio and navigation system (if applicable), then enter the audio unit presets.
20. Set the clock (for vehicles without navigation).
21. Turn the ignition to ON and make sure the SRS indicator comes on for about 6 seconds, then goes off.
22. Put the original inflator into the box the new one came in. Make sure there is no other hardware in the box because if the package rattles, it will not be accepted by the courier.
23. Follow the shipping instructions outlined in PIB A15-0002 to return the undeployed inflator.
24. Give your warranty clerk the RO that includes the replacement inflator serial number and replacement part number. For the warranty claim to be paid, the **replacement inflator part number** must be included in the warranty claim.


## REPAIR PROCEDURE CR-V

### NOTES

- **If the VIN status inquiry indicates that the vehicle is subject to any open safety recalls, including the driver's airbag inflator, make sure to also complete those recall repairs before returning the vehicle to the customer. If you are unable to complete any open recall, advise the customer of the recall status and when the recall could be completed.**
  - Make sure you have the anti-theft code for the audio and navigation system (if applicable), then write down the frequencies for the audio unit's preset buttons.
  - Be careful not to damage any parts when replacing the inflator, and **follow the procedure exactly**.
  - If, before removing the airbag, you suspect that it may be the incorrect airbag for the vehicle or a counterfeit, **do not remove the airbag**. Contact your DPSM for assistance.
  - Make sure you have reviewed the SRS Precautions and Procedures in the service information before doing the REPAIR PROCEDURE.
1. Turn the ignition to ON, and check if the SRS indicator comes on for about 6 seconds, then turns off.
    - If the indicator comes on, then turns off after about 6 seconds, turn the ignition OFF, then go to step 2.
    - If the indicator does not come on, or if it stays on, contact your DPSM for assistance.
  2. Disconnect the battery negative cable and wait at least 3 minutes before continuing.
  3. Remove the front passenger's airbag. Refer to the applicable vehicle's service information.
  4. Place the airbag, face-down, on a clean shop towel.

### NOTES

- The orientation of the airbag is critical because if the inflator is installed incorrectly, the harness will be too short when you reinstall the airbag.
- The brackets between the various models are similar but may differ from the example shown.

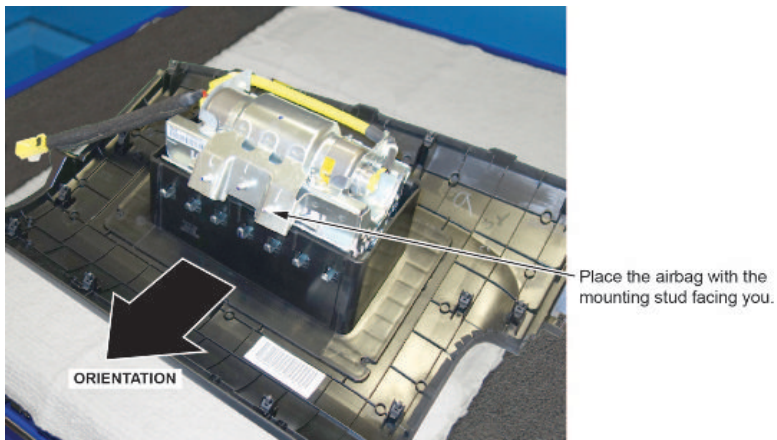


5. Visually inspect the airbag and the inflator for any unusual writing or markings. Refer to IDENTIFYING COUNTERFEIT AIRBAGS.

6. Peel the label located inside the inflator box from its backing, and attach it to the RO. For the warranty claim to be paid, the **replacement inflator part number that you received** must be included in the warranty claim.

**NOTES**


- The replacement part number is printed on the top part of the label, and the serial number is printed on the bottom. **Make sure you attach the label to the RO and give it to the warranty clerk .**
- There may also be a colored sticker located in the kit; ignore it because it is not used.
- Not all inflator kits have a label included. In those cases, write the serial number and part number from the side of the inflator box on the RO. The part number always starts with 047.

**PASSENGER INFLATOR PARTS BOX**

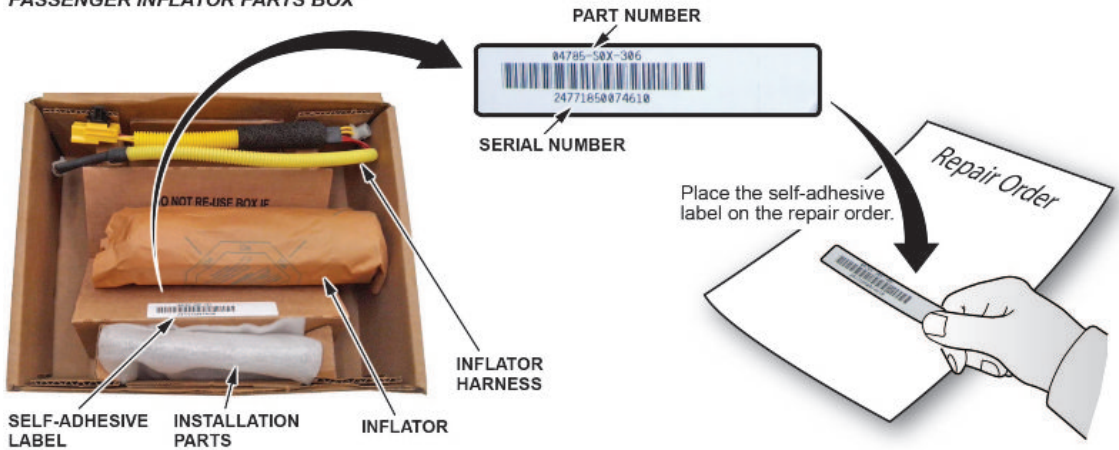

7. Remove the harness from both ends of the inflator bracket.

Release harness clips.

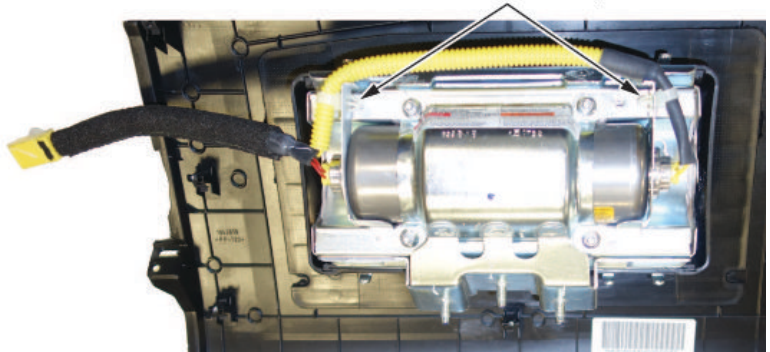


8. Short the yellow wires.


**NOTES**

- **You must cut the yellow wires** for inflator removal and short the yellow wires on the inflator side as indicated to prevent accidental deployment.
- **Do not cut the red wires** because the airbag connector shorts these inflator wires.

8.1. Cut the yellow wires as shown.

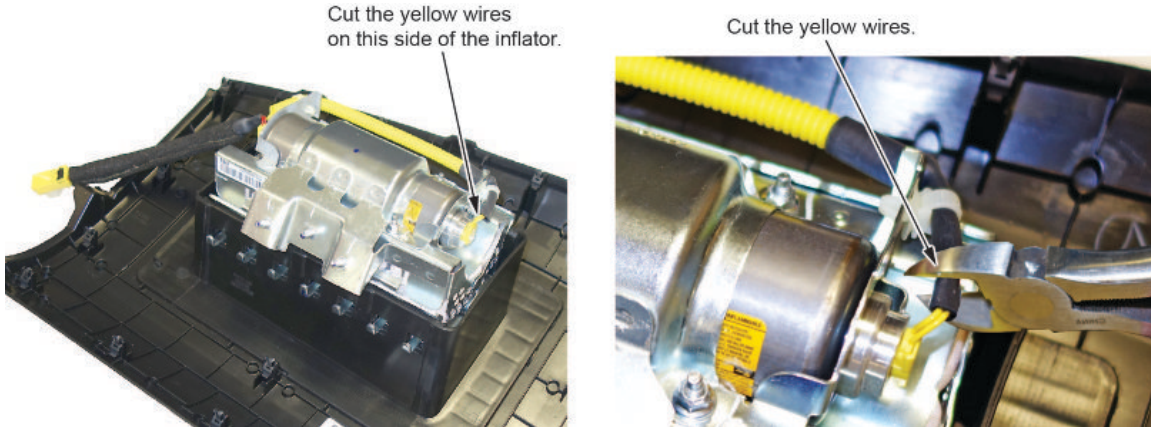


8.2. Strip away about 1 inch of the yellow wire insulation, then twist the wires together.

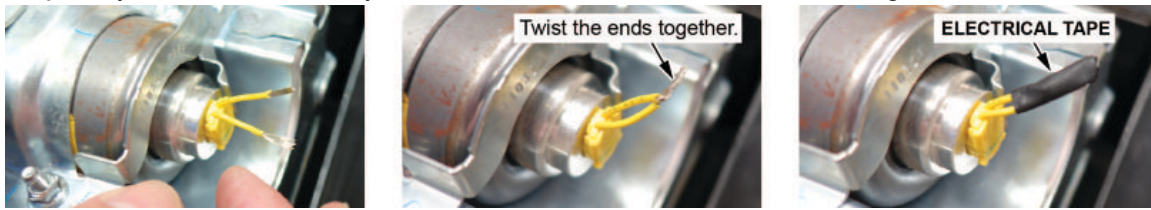

8.3. Tape the twisted ends with electrical tape.


9. Remove the four inflator nuts.

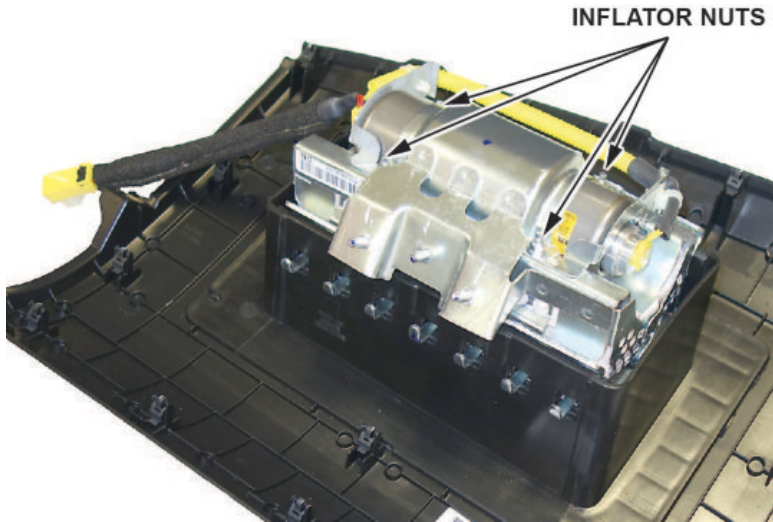

10. Remove the inflator bracket.

**NOTES**

- You can only remove one of the brackets, as the other is welded to the airbag housing.
- Do not reuse the bracket; use the new one that came in the inflator kit.

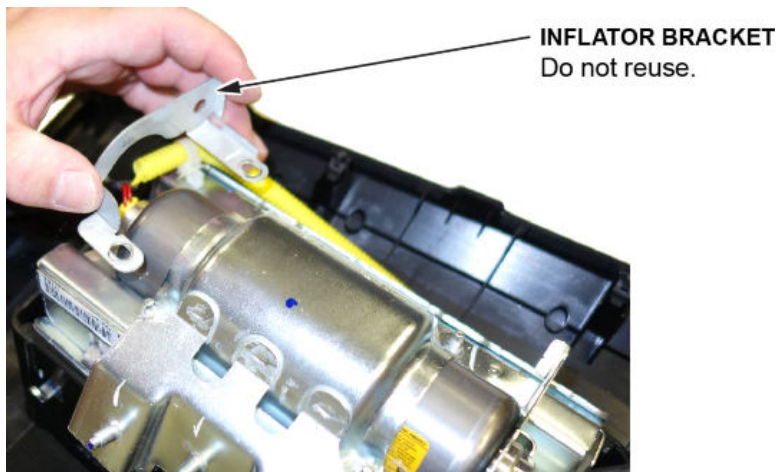

11. Remove the inflator by pushing it out.





12. Install the new inflator.

**NOTE**

There may be some minor surface rust or corrosion on the new inflator; this is OK.

Click [HERE](#) for a short video about the different variations of the driver's and front passenger's replacement inflators involved with the recalls related to inflators. While both the driver's and front passenger's inflators are shown in the video, this is informational only. Replace inflators only as directed by the iN VIN status inquiry.

**Check your part number against the ones listed for each installation procedure. Use the correct installation procedure for the part you received.**

**NOTE**


These inflators have blue collars.

|                   |               |
|-------------------|---------------|
| P/N 04790-SWA-407 | 04790-SWA-A00 |
|-------------------|---------------|


12.1. One side of the inflator has a longer collar, a single tab, and a small flat spot on the connector. The other side of the inflator has a shorter collar, two tabs, and a notch with a red dot. Make sure you insert the end with the shorter collar into the airbag first.

#### NOTES

- The V-SMART tool can only validate inflators with slotted end caps. You may receive an inflator with solid end caps. This is the correct part to repair the vehicle, but the V-SMART will fail the validation. **The V-SMART validation must fail a total of three times** before you can have your supervisor override the validation using the **Supervisor Inspection Override**.
- Your supervisor can be a service manager, shop foreman, team leader, etc. **The supervisor must inspect your work** to make sure the replacement inflator was installed correctly. When a supervisor enters his or her information, **the supervisor is signing off that the technician's work was inspected and approved**.



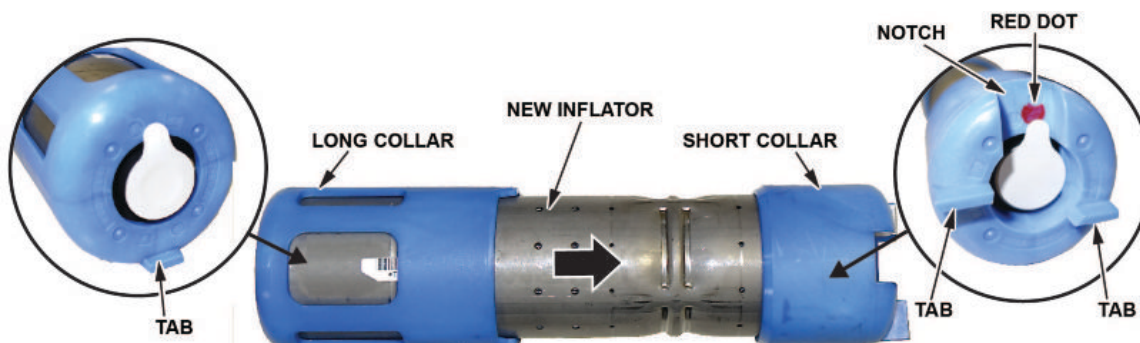


LONG COLLAR The inflator installation is directional.

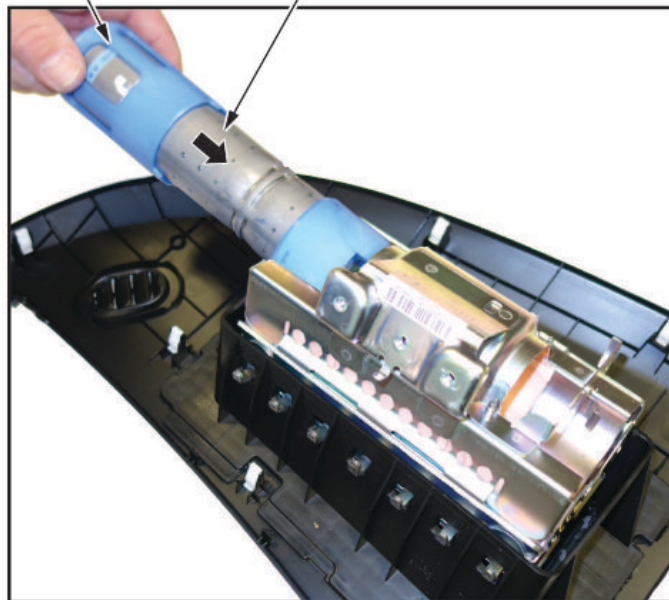

12.2. Slide the inflator in until the plastic collar contacts the bracket. The two tabs should align with the side of the airbag module and the metal tab as shown. There should be no space or gap between the inflator and bracket.

**FIXED BRACKET END**

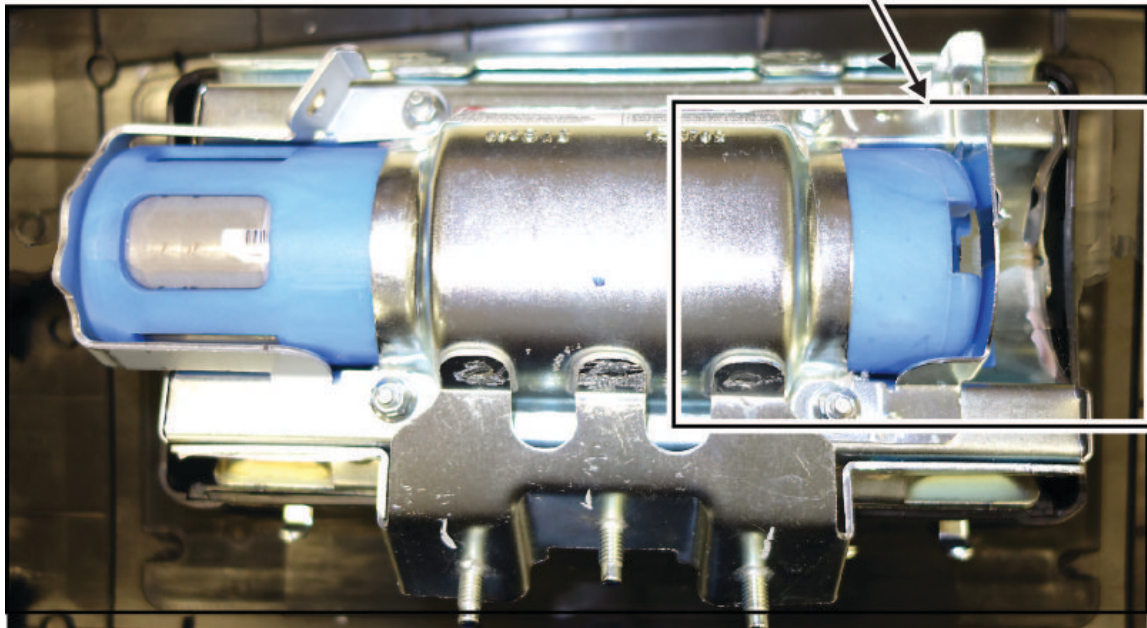
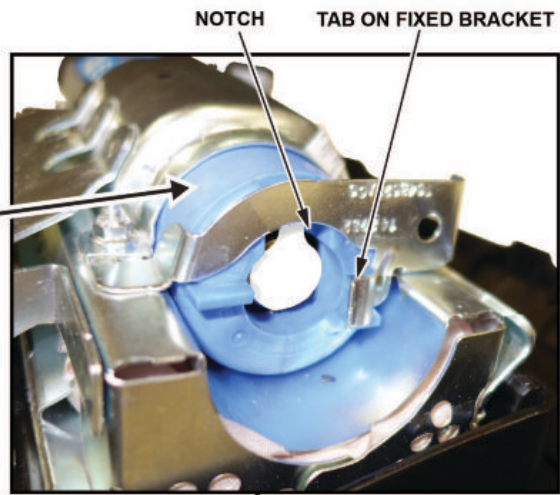
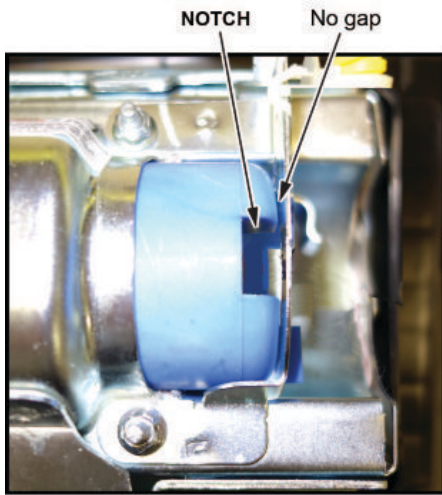


12.3. Install the bracket included in the kit onto the airbag module. Check there is no space or gap between the inflator and bracket by pushing the bracket against the inflator.

**NOTE**

The bracket may have a little bit of play before you install the new nuts.


**ADJUSTABLE BRACKET END**

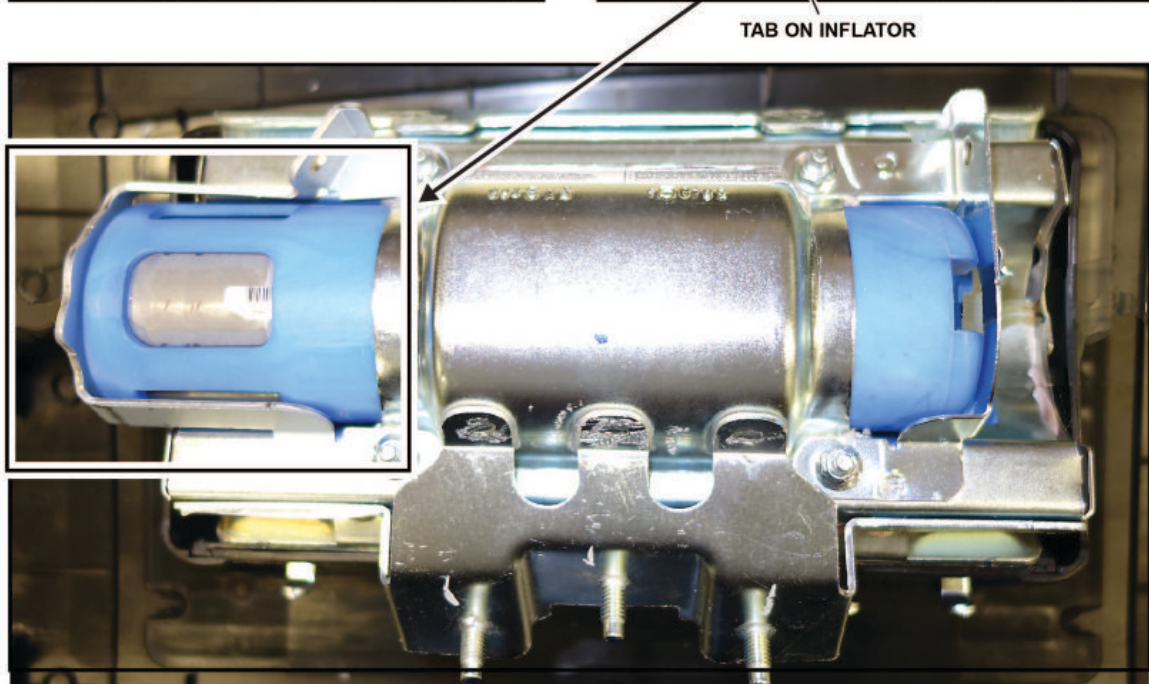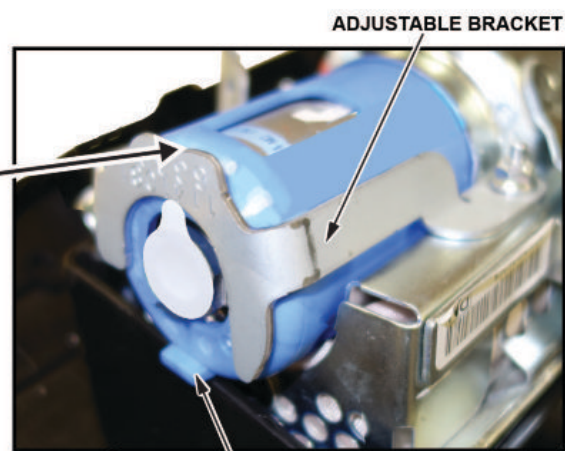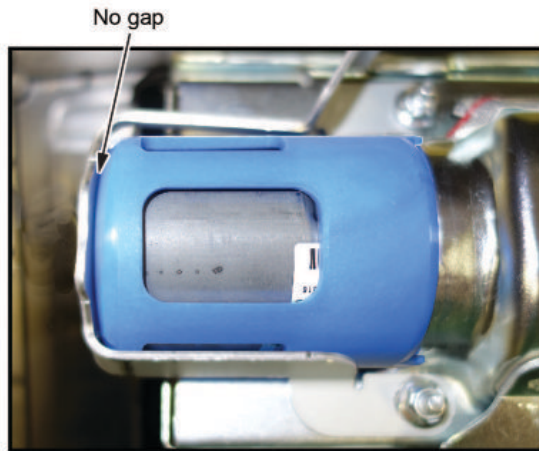


13. Hold the bracket against the inflator, then install the new 5 mm locknuts, and torque them in sequence to **4.0 N•m (34 lb-in)**.

**NOTE**

Make sure you push the bracket against the inflator to ensure there are no gaps between the brackets and inflator when torquing the nuts.

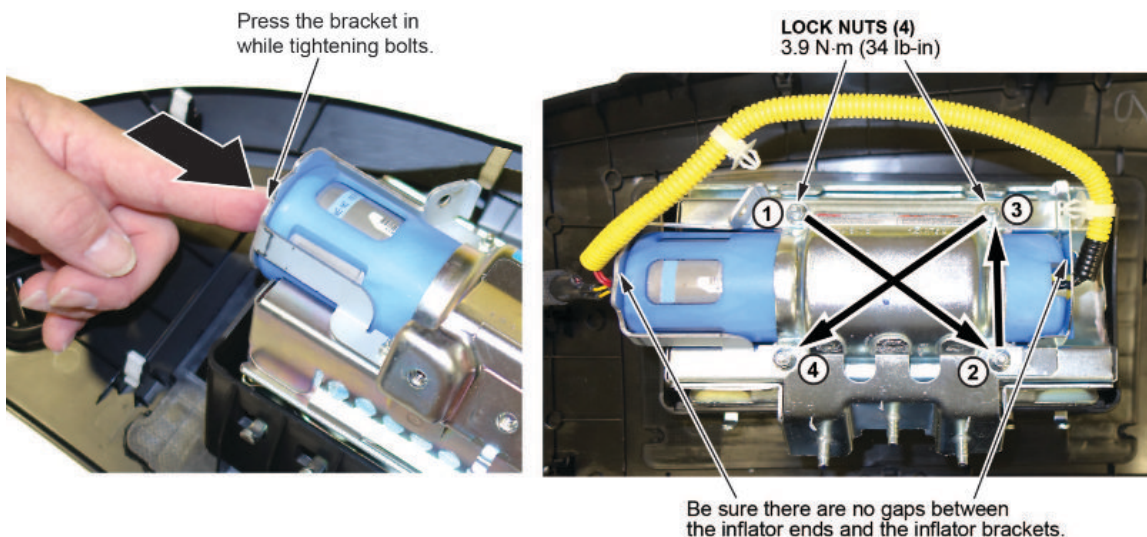

14. Remove the stickers covering the terminals on both sides of the new inflator.

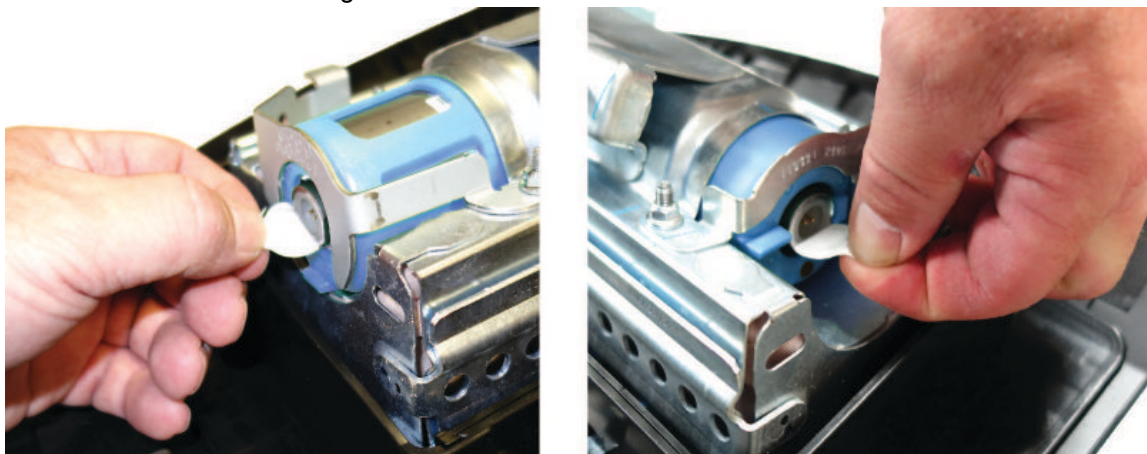

15. Using the V-SMART tool, validate that the airbag replacement inflator is installed correctly.

**NOTES**

- You must validate the front passenger's airbag replacement inflator installation using the V-SMART tool **before** connecting the inflator harness.
- Your warranty claim will not be paid if the V-SMART validation is not completed or the photo is not sent. Make sure you see the **Uploaded Completed** message to confirm the photo was sent to the warranty department.


16. Install the new inflator harness.

16.1. Make sure the airbag and harness are aligned as shown.


**NOTES**

- **The replacement inflator harnesses may have the wire colors in the opposite positions of the original harness.** If you connect the harness incorrectly, the harness cannot be removed and you will not be able to reinstall the airbag because the harness will be too short.
- Connect the red wire connector to the side of the inflator with the red dot.
- On vehicles with the blue inflator, the red dot is not visible because it is covered by the bracket.


ORIGINAL INFLATOR HARNESS ROUTING

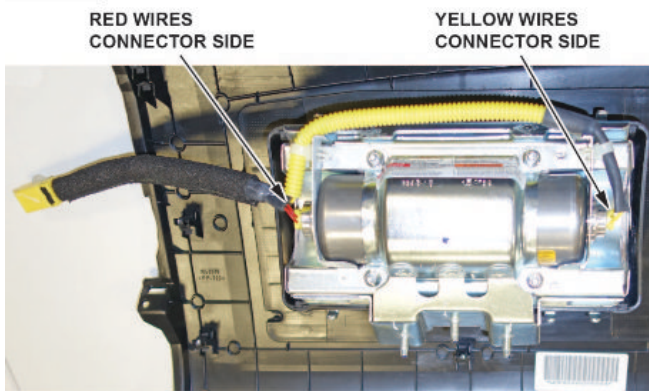

NEW INFLATOR HARNESS ROUTING

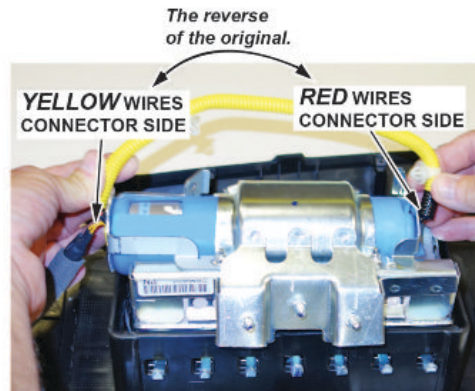

16.2. Connect the red wire connector to the connector on the side with the short plastic collar. Align the “T” shape in the inflator harness connector with the T-shaped inflator connector, then press the connector into place.

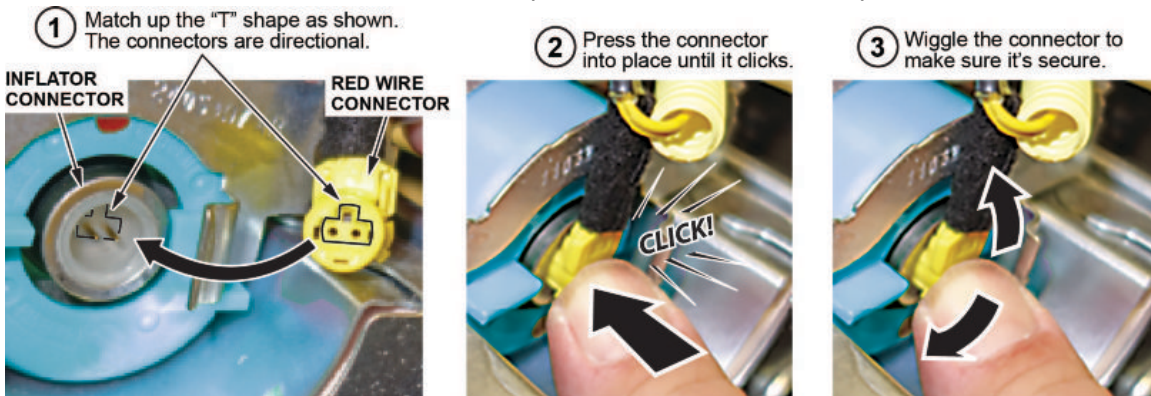

16.3. Connect the yellow wire connector to the connector on the side with the long plastic collar.



16.4. After you hear each connector click, wiggle it to make sure it is secure.

**NOTE**


If the connector is not properly aligned, it will come out.

16.5. Make sure the connector is secure and in place by using the gauge tool. (PSPI6 Gauge Tool P/N: 070AJ-TA00A00 or 07AAJ-TA0AA00).

Be sure the connector is fully seated by checking it with the gauge tool.

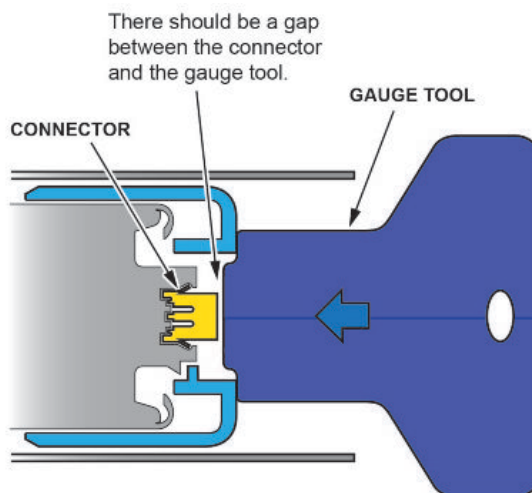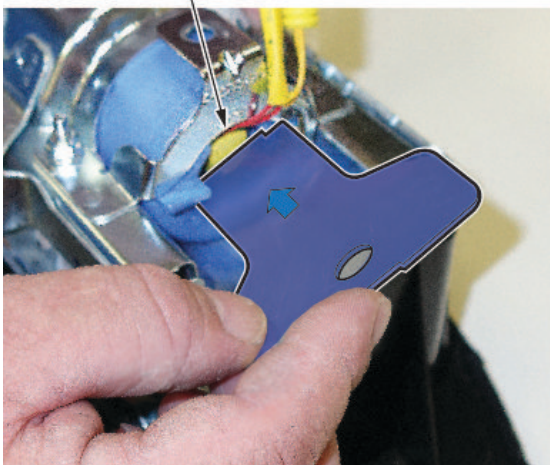

17. Connect the harness to the inflator brackets.

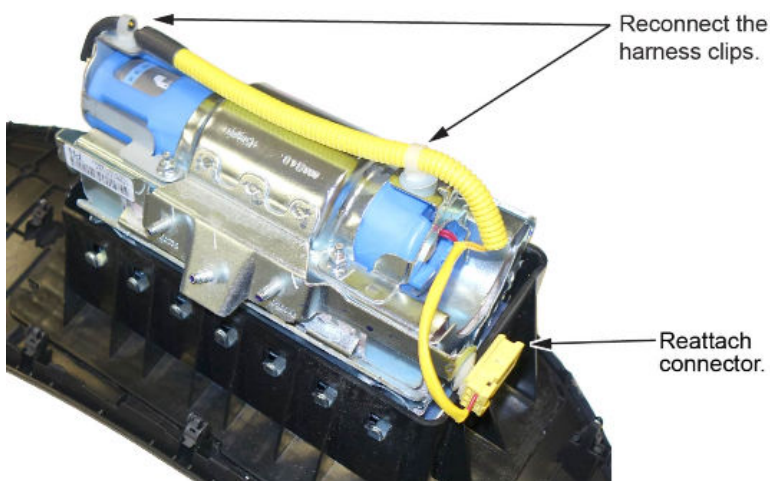


18. Install the passenger's airbag into the vehicle and torque the new locknuts to **9.8 N•m (7.2 lb-ft)** .
19. Connect the battery negative cable and enter the anti-theft code for the audio and navigation system (if applicable), then enter the audio unit presets.
20. Set the clock (for vehicles without navigation).
21. Turn the ignition ON and make sure the SRS indicator comes on for about 6 seconds, then goes off.
22. Put the original inflator into the box the new one came in. Make sure there is no other hardware in the box because if the package rattles, it will not be accepted by the courier.
23. Follow the shipping instructions outlined in PIB A15-0002 to return the undeployed inflator.
24. Give your warranty clerk the RO that includes the replacement inflator serial number and replacement part number. For the warranty claim to be paid, the **replacement inflator part number** must be included in the warranty claim.

### NOTES

- If the VIN status inquiry indicates that the vehicle is subject to any open safety recalls, including the driver's airbag inflator, make sure to also complete those recall repairs before returning the vehicle to the customer. If you are unable to complete any open recall, advise the customer of the recall status and when the recall could be completed.
  - Make sure you have the anti-theft code for the audio and navigation system (if applicable), then write down the frequencies for the audio unit's preset buttons.
  - Be careful not to damage any parts when replacing the inflator, and **follow the procedure exactly**.
  - If, before removing the airbag, you suspect that it may be the incorrect airbag for the vehicle or a counterfeit, **do not remove the airbag**. Contact your DPSM for assistance.
  - Make sure you have reviewed the SRS Precautions and Procedures in the service information before doing the REPAIR PROCEDURE.
1. Turn the ignition to ON position and check if the SRS indicator comes on for about 6 seconds, then turns off.
    - If the indicator comes on, then turns off after about 6 seconds, turn the ignition to OFF, then go to step 2.
    - If the indicator does not come on, or if it stays on, contact your DPSM for assistance.
  2. Disconnect the battery negative cable and wait at least 3 minutes before continuing.
  3. Remove the front passenger's airbag. Refer to the applicable vehicle's service information.
  4. Place the airbag, face-down, on a clean shop towel.

### NOTES

- The orientation of the airbag is critical because if the inflator is installed incorrectly, the harness will be too short when you reinstall the airbag.
- The brackets between the various models are similar but may differ from the example shown.

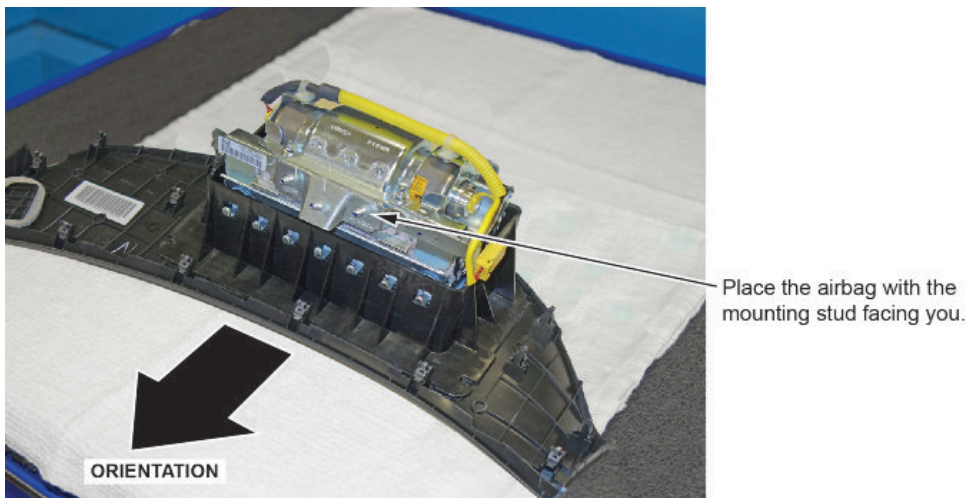

5. Visually inspect the airbag and the inflator for any unusual writing or markings. Refer to IDENTIFYING COUNTERFEIT AIRBAGS.




6. Peel the label located inside the inflator box from its backing, and attach it to the RO. For the warranty claim to be paid, the **replacement inflator part number that you received** must be included in the warranty claim.


**NOTES**

- The replacement part number is printed on the top part of the label, and the serial number is printed on the bottom. **Make sure you attach the label to the RO and give it to the warranty clerk .**
- There may also be a colored sticker located in the kit; ignore it because it is not used.
- Not all inflator kits have a label included. In those cases, write the serial number and part number from the side of the inflator box on the RO. The part number always starts with 047.

**PASSENGER INFLATOR PARTS BOX**

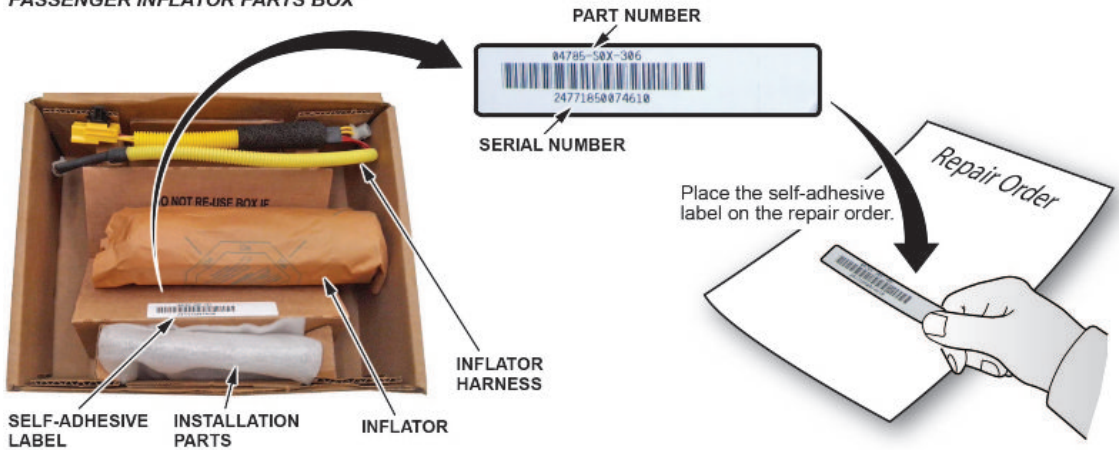

7. Remove the harness from both ends of the inflator bracket.

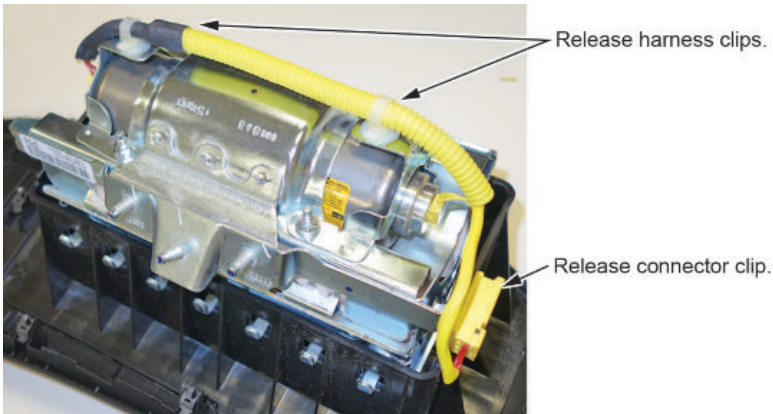


8. Short the yellow wires.


**NOTES**

- **You must cut the yellow wires** for inflator removal and short the yellow wires on the inflator side as indicated to prevent accidental deployment.
- **Do not cut the red wires** because the airbag connector shorts these inflator wires.

8.1. Cut 1–2 inches of the protective tube to access the yellow wires.

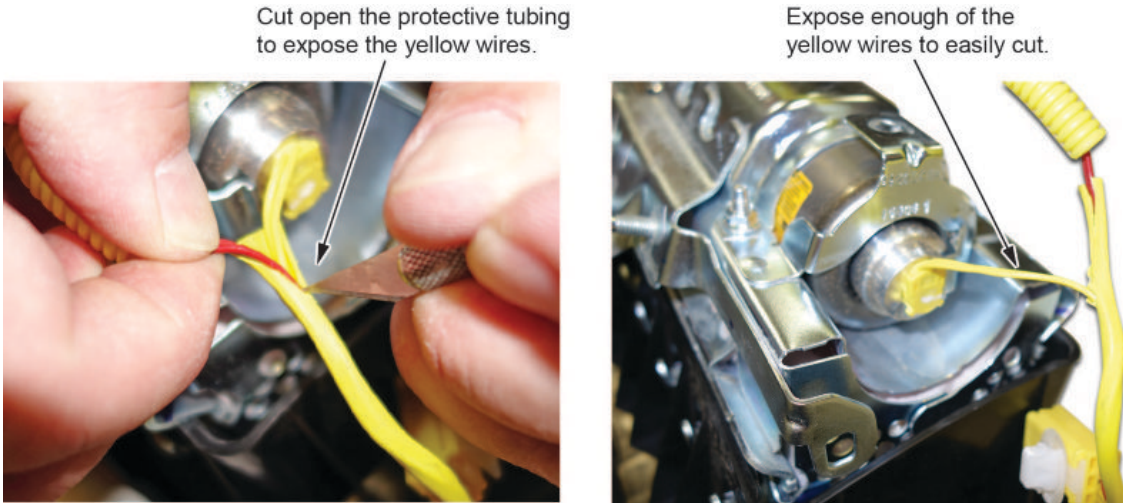

8.2. Cut the yellow wires as shown.

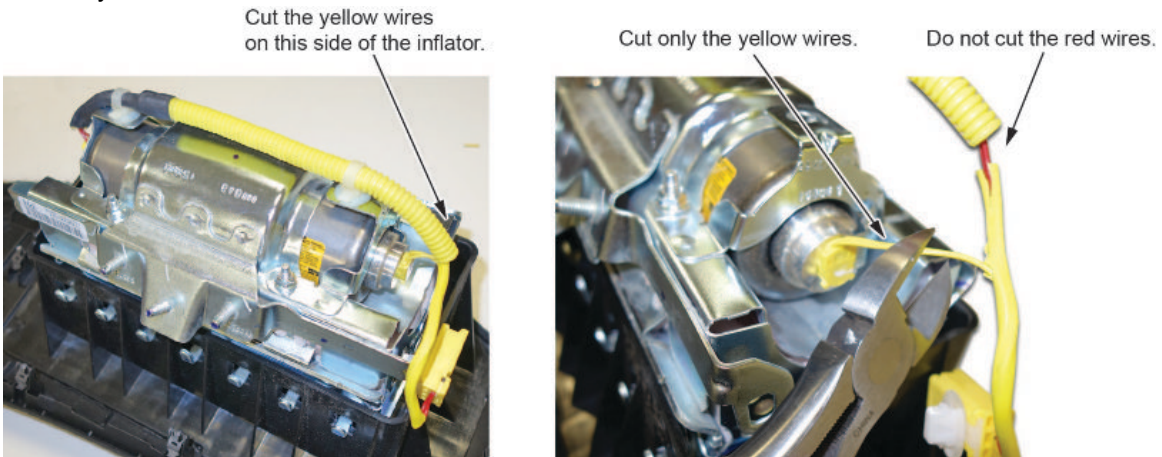


8.3. Strip away about 1 inch of the yellow wire insulation, then twist the wires together.



8.4. Tape the twisted ends with electrical tape.

9. Remove the four inflator nuts.

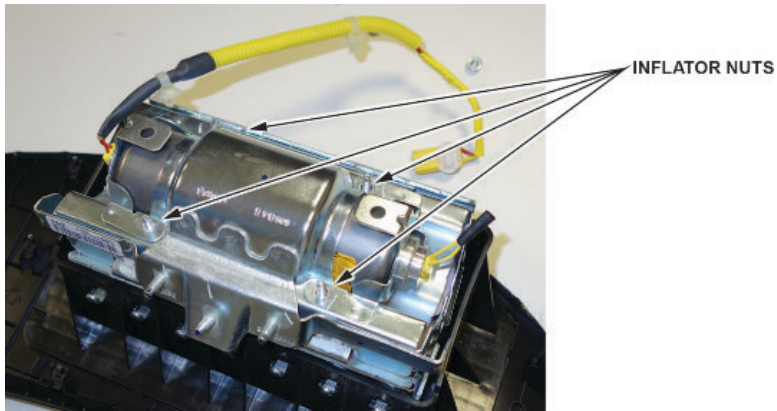

10. Remove the inflator bracket.

**NOTES**

- You can only remove one of the brackets, as the other is welded to the airbag housing.
- Do not reuse the bracket; use the new one that came in the inflator kit.



11. Remove the inflator by pushing it out.



12. Install the new inflator.

**NOTE**

There may be some minor surface rust or corrosion on the new inflator; this is OK.

Click [HERE](#) for a short video about the different variations of the driver's and front passenger's replacement inflators involved with the recalls related to inflators. While both the driver's and front passenger's inflators are shown in the video, this is informational only. Replace inflators only as directed by the iN VIN status inquiry.

**Check your part number against the ones listed for each installation procedure. Use the correct installation procedure for the part you received.**

**NOTE**


These inflators have blue collars.

|               |               |
|---------------|---------------|
| 04790-TK6-407 | 04790-TK6-A00 |
|---------------|---------------|


12.1. One side of the inflator has a longer collar, a single tab, and a small flat spot on the connector. The other side of the inflator has a shorter collar, two tabs, and a notch with a red dot. Make sure you insert the end with the shorter collar into the airbag first.

#### NOTES

- The V-SMART tool can only validate inflators with slotted end caps. You may receive an inflator with solid end caps. This is the correct part to repair the vehicle, but the V-SMART will fail the validation. **The V-SMART validation must fail a total of three times** before you can have your supervisor override the validation using the **Supervisor Inspection Override**.
- Your supervisor can be a service manager, shop foreman, team leader, etc. **The supervisor must inspect your work** to make sure the replacement inflator was installed correctly. When a supervisor enters his or her information, **the supervisor is signing off that the technician's work was inspected and approved**.

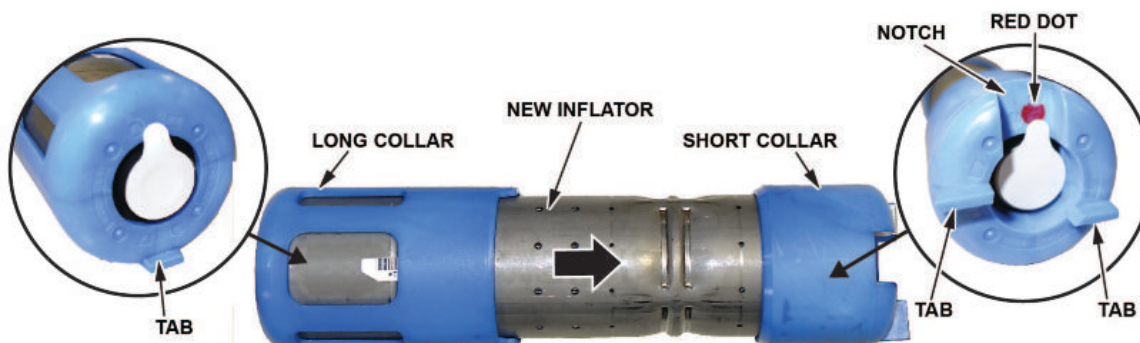


LONG COLLAR The inflator installation is directional.

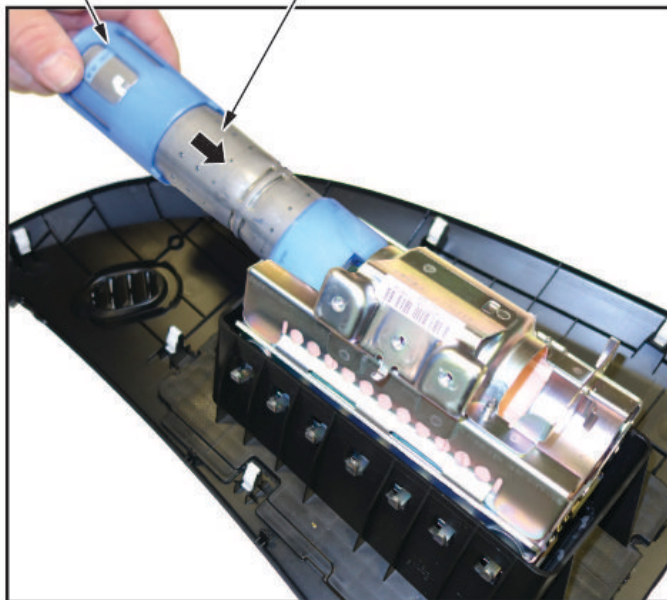

12.2. Slide the inflator in until the plastic collar contacts the bracket. The two tabs should align with the side of the airbag module and the metal tab as shown. There should be no space or gap between the inflator and bracket.


**FIXED BRACKET END**

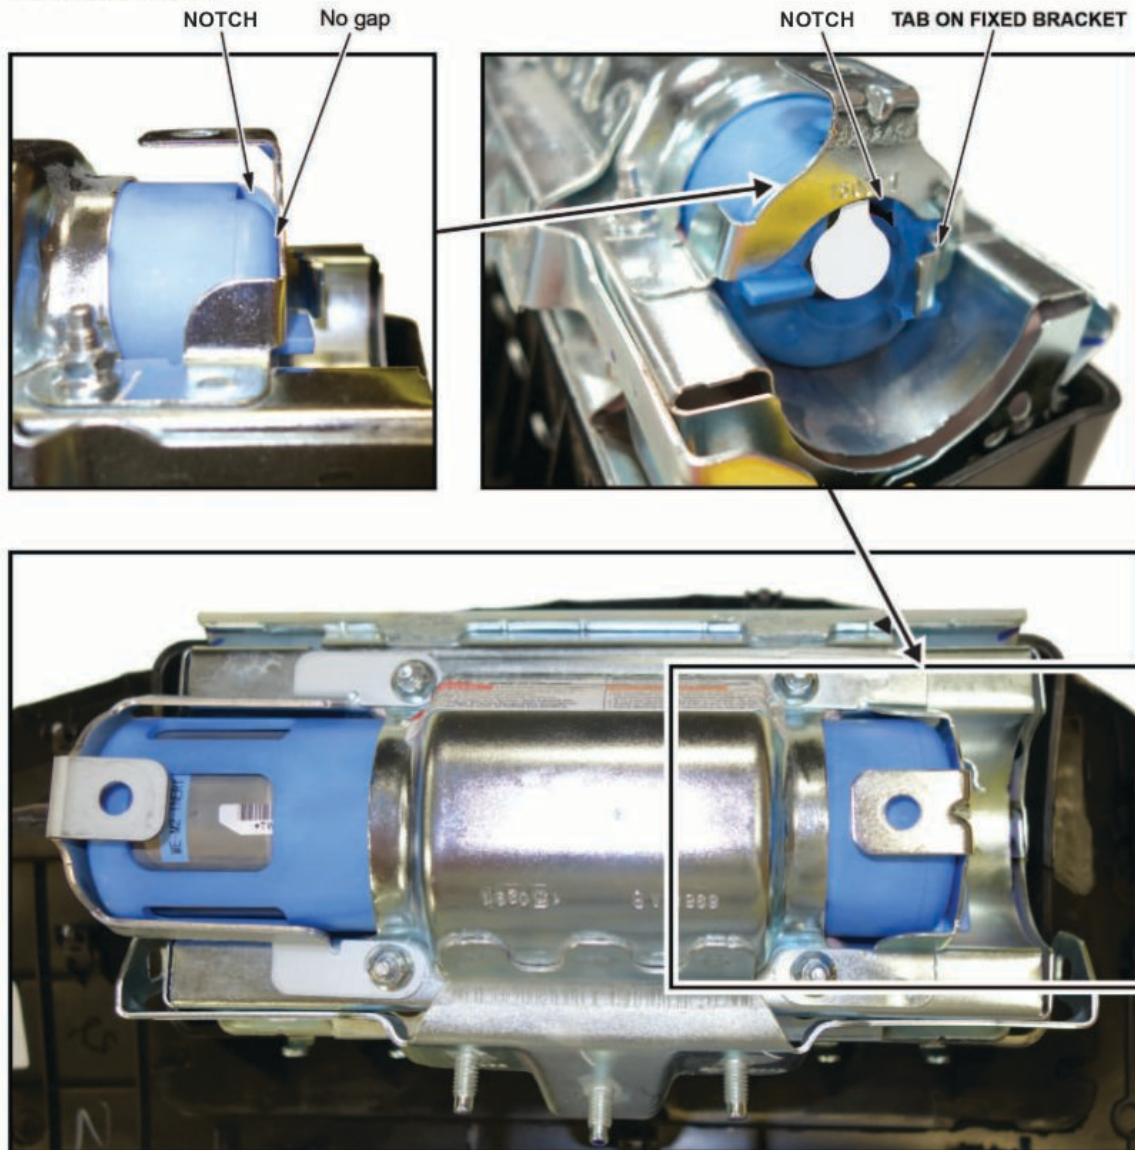


- 12.3. Install the bracket included in the kit onto the airbag module. Check there is no space or gap between the inflator and bracket by pushing the bracket against the inflator.

**NOTE**


The bracket may have a little bit of play before you install the new nuts.

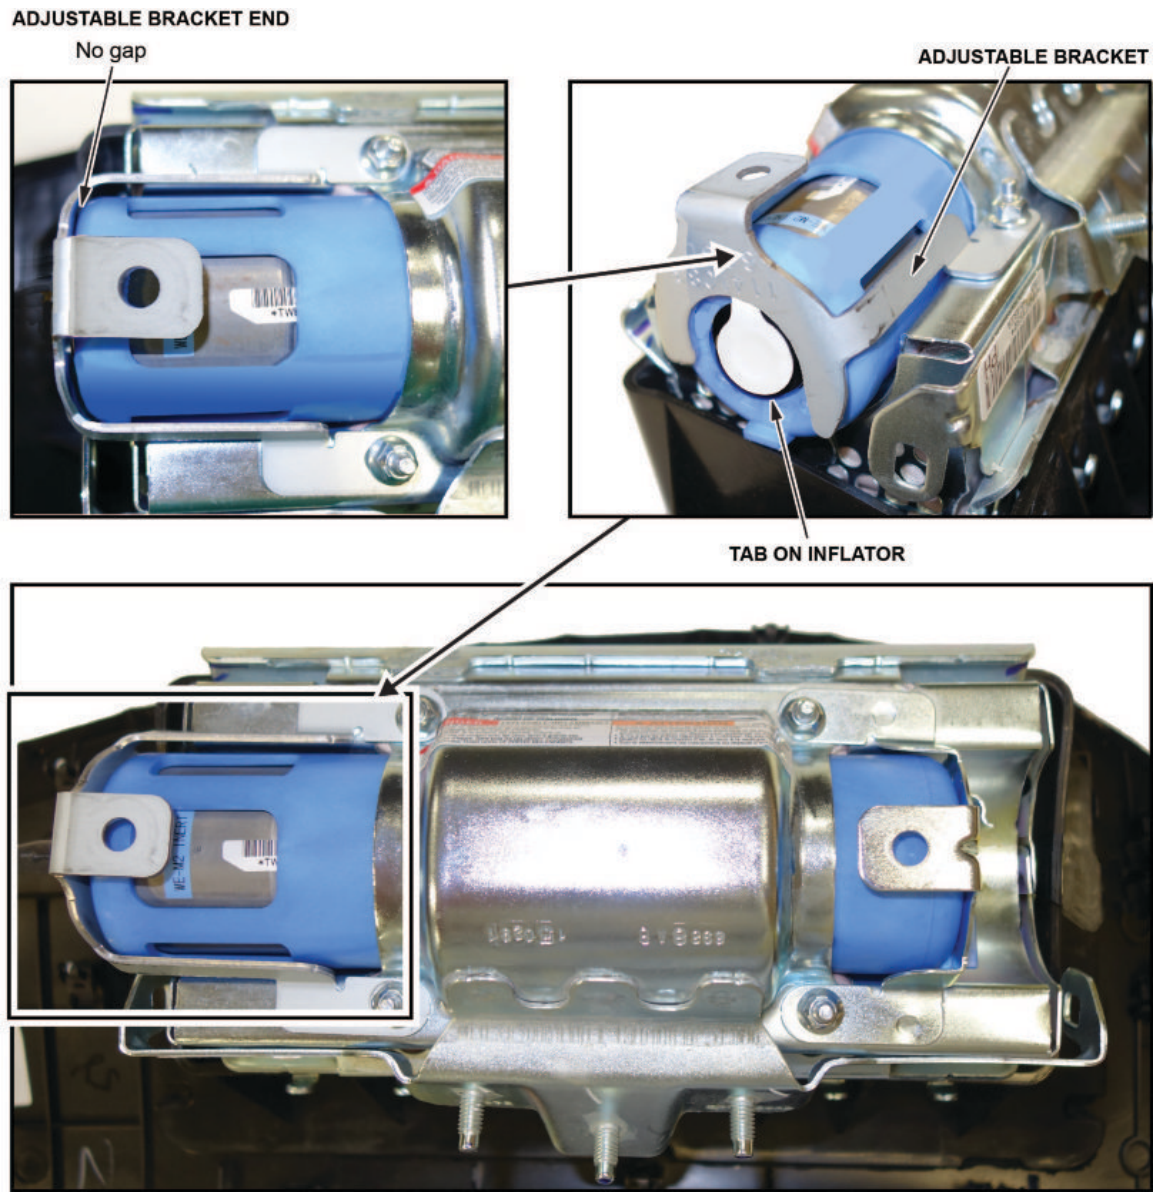

13. Hold the bracket against the inflator, then install the new 5 mm locknuts, and torque them in sequence to **4.0 N•m (34 lb-in)**.

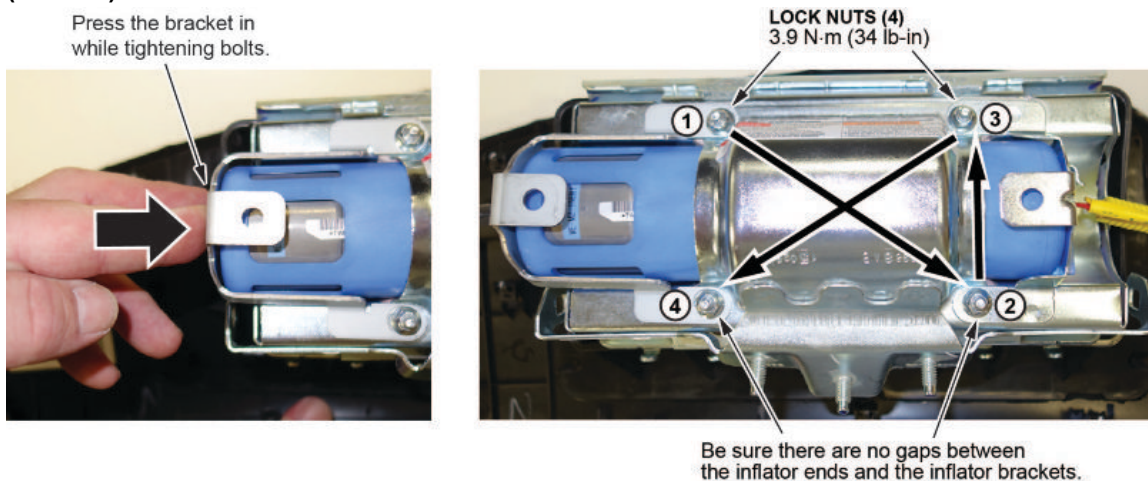

14. Remove the stickers covering the terminals on both sides of the new inflator.

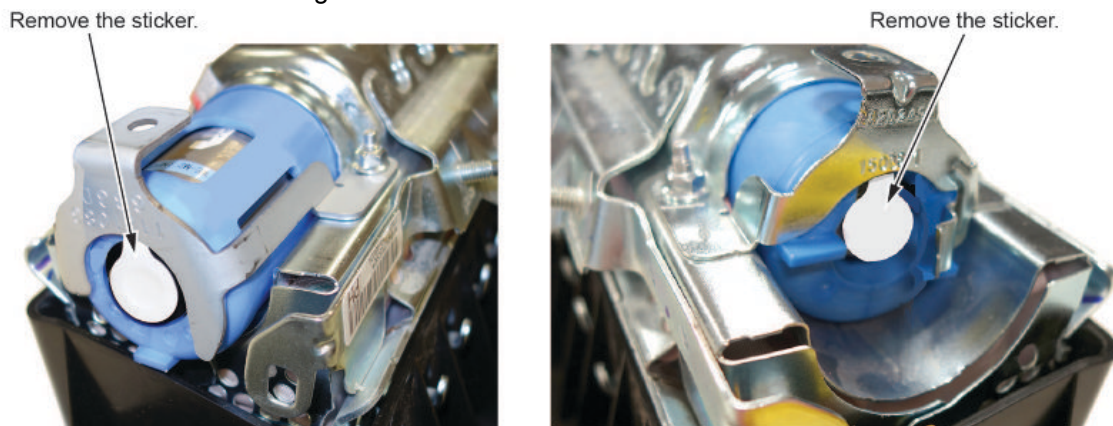

15. Using the V-SMART tool, validate that the airbag replacement inflator is installed correctly.

#### NOTES

- You must validate the front passenger's airbag replacement inflator installation using the V-SMART tool **before** connecting the inflator harness.
- Your warranty claim will not be paid if the V-SMART validation is not completed or the photo is not sent. Make sure you see the **Uploaded Completed** message to confirm the photo was sent to the warranty department.




16. Install the new inflator harness.

16.1. Make sure the airbag and harness are aligned as shown.


**NOTES**

- **The replacement inflator harnesses may have the wire colors in the opposite positions of the original harness.** If you connect the harness incorrectly, the harness cannot be removed and you will not be able to reinstall the airbag because the harness will be too short.
- Connect the red wire connector to the side of the inflator with the red dot.
- On vehicles with the blue inflator, the red dot is not visible because it is covered by the bracket.

ORIGINAL INFLATOR HARNESS ROUTING

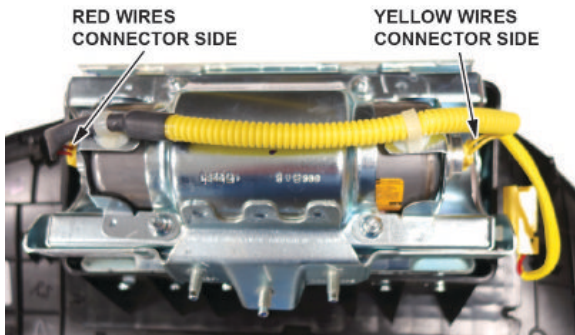


NEW INFLATOR HARNESS ROUTING

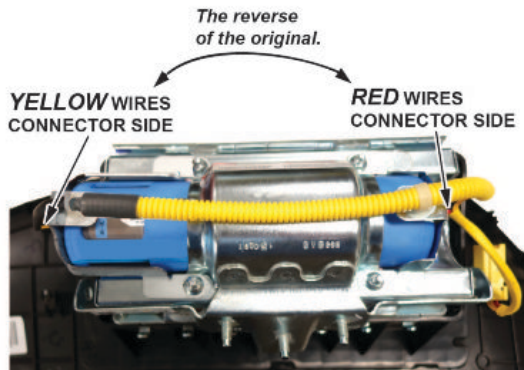

16.2. Connect the red wire connector to the connector on the side with the short plastic collar. Align the "T" shape in the inflator harness connector with the T-shaped inflator connector, then press the connector into place.

① Match up the "T" shape as shown. The connectors are directional.

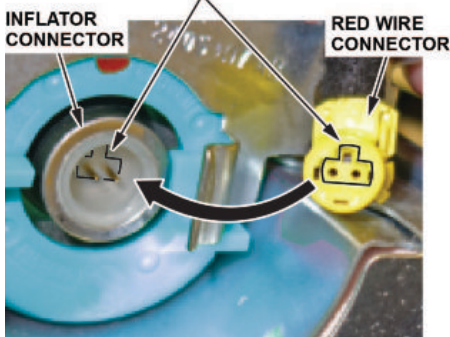

② Press the connector into place until it clicks.



③ Wiggle the connector to make sure it's secure.



16.3. Connect the yellow wire connector to the connector on the side with the long plastic collar.



16.4. After you hear each connector click, wiggle it to make sure it is secure.

**NOTE**


If the connector is not properly aligned, it will come out.

16.5. Make sure the connector is secure and in place by using the gauge tool. (PSPI6 Gauge Tool P/N: 070AJ-TA00A00 or 07AAJ-TA0AA00).

Be sure the connector is fully seated by checking it with the gauge tool.

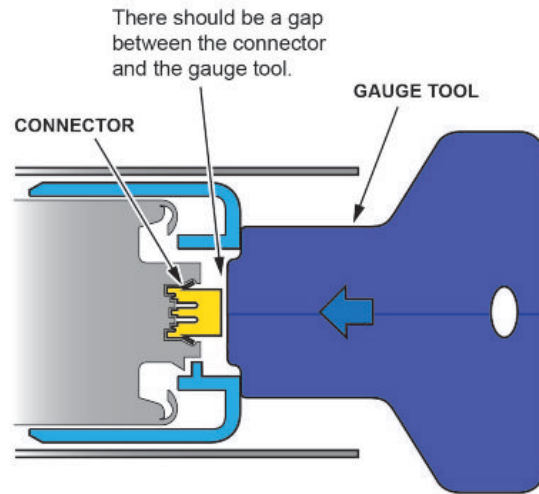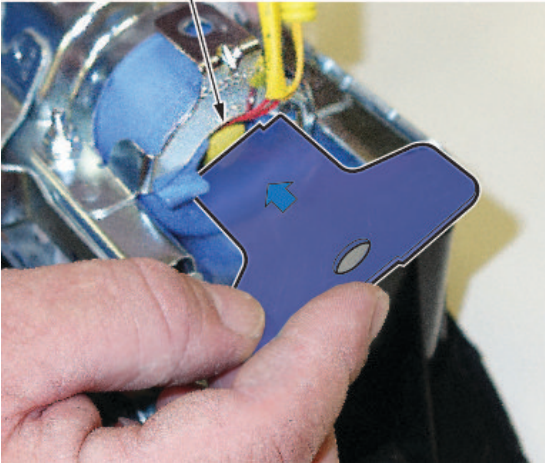

17. Connect the harness to the inflator brackets.

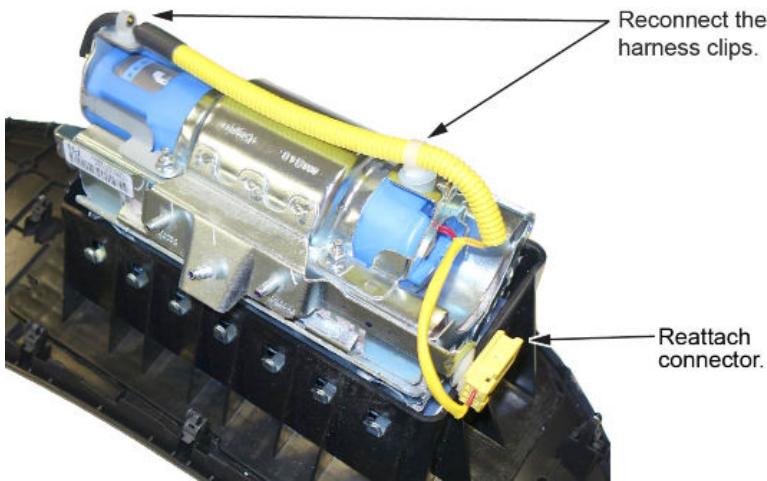

18. Install the passenger's airbag into the vehicle and torque the new locknuts to **9.8 N•m (7.2 lb-ft)** .
19. Connect the battery negative cable and enter the anti-theft code for the audio and navigation system (if applicable), then enter the audio unit presets.
20. Set the clock (for vehicles without navigation).
21. Turn the ignition to ON, and make sure the SRS indicator comes on for about 6 seconds, then goes off.
22. Put the original inflator into the box the new one came in. Make sure there is no other hardware in the box because if the package rattles, it will not be accepted by the courier.
23. Follow the shipping instructions outlined in PIB A15-0002 to return the undeployed inflator.
24. Give your warranty clerk the RO that includes the replacement inflator serial number and replacement part number. For the warranty claim to be paid, the **replacement inflator part number** must be included in the warranty claim.

## REPAIR PROCEDURE INSIGHT

### NOTES


- If the VIN status inquiry indicates that the vehicle is subject to any open safety recalls, including the driver's airbag inflator, make sure to also complete those recall repairs before returning the vehicle to the customer. If you are unable to complete any open recall, advise the customer of the recall status and when the recall could be completed.
  - Make sure you have the anti-theft code for the audio and navigation system (if applicable), then write down the frequencies for the audio unit's preset buttons.
  - Be careful not to damage any parts when replacing the inflator, and **follow the procedure exactly**.
  - If, before removing the airbag, you suspect that it may be the incorrect airbag for the vehicle or a counterfeit, **do not remove the airbag**. Contact your DPSM for assistance.
  - Make sure you have reviewed the SRS Precautions and Procedures in the service information before doing the REPAIR PROCEDURE.
1. Turn the ignition to ON, and check if the SRS indicator comes on for about 6 seconds, then turns off.
    - If the indicator comes on, then turns off after about 6 seconds, turn the ignition OFF, then go to step 2.
    - If the indicator does not come on, or if it stays on, contact your DPSM for assistance.
  2. Disconnect the battery negative cable and wait at least 3 minutes before continuing.
  3. Remove the front passenger's airbag.
    - 3.1. While holding the glove box, release the glove box stops on each side from the dashboard by pushing them in, then lower the glove box.
    - 3.2. Disconnect the dashboard wire harness 4P connector from the front passenger's airbag.
    - 3.3. Remove the two mounting nuts from the bracket.
    - 3.4. Remove the front passenger's airbag assembly from the dashboard.

### NOTES

- The front passenger's lid has pawls on each side that attach it to the dashboard.
  - Take care not to scratch the dashboard or the front passenger's lid.
4. Place the airbag, face-down, on a clean shop towel.

### NOTE

The orientation of the airbag is critical because if the inflator is installed incorrectly, the harness will be too short when you reinstall the airbag.

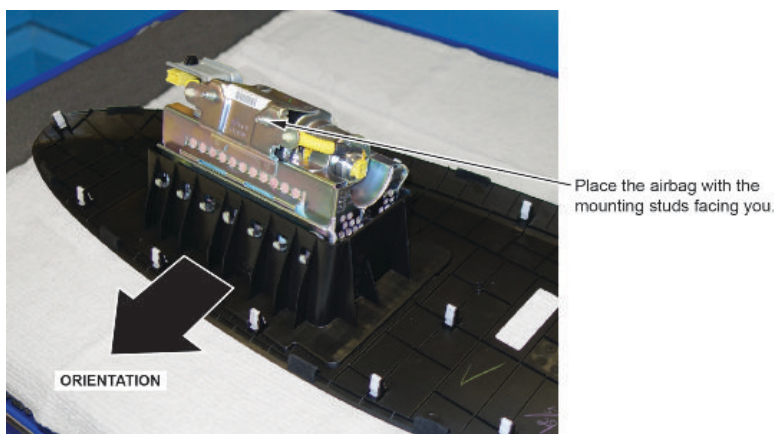


5. Visually inspect the airbag and the inflator for any unusual writing or markings. Refer to IDENTIFYING COUNTERFEIT AIRBAGS.
6. Peel the label located inside the inflator box from its backing, and attach it to the RO. For the warranty claim to be paid, the **replacement inflator part number that you received** must be included in the warranty claim.


**NOTES**

- The replacement part number is printed on the top part of the label and the serial number is printed on the bottom. **Make sure you attach the label to the RO and give it to the warranty clerk .**
- There may also be a colored sticker located in the kit; ignore it because it is not used.
- Not all inflator kits have a label included. In those cases, write the serial number and part number from the side of the inflator box on the RO. The part number always starts with 047.

**PASSENGER INFLATOR PARTS BOX**

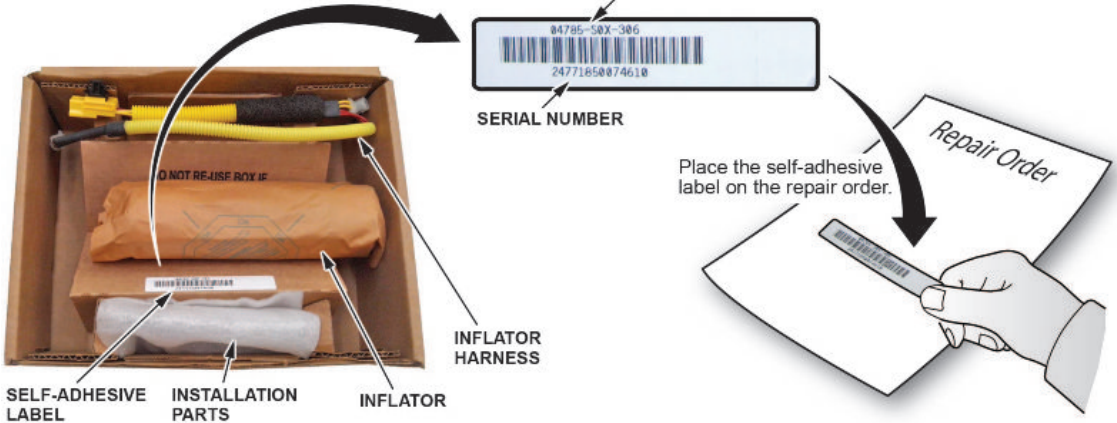

7. Remove the harness from the inflator bracket.  
Release connector clip.

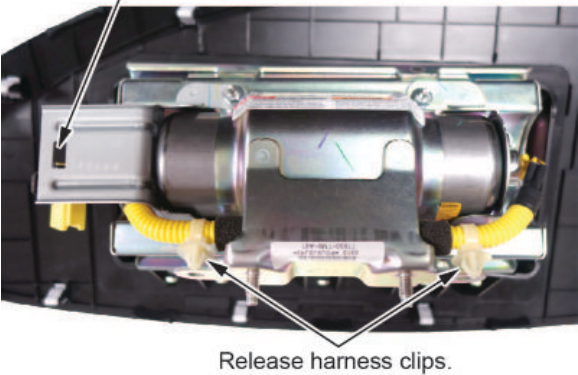


8. Short the yellow wires.


**NOTES**

- **You must cut the yellow wires** for inflator removal and short the yellow wires on the inflator side as indicated to prevent accidental deployment.
- **Do not cut the red wires** because the airbag connector shorts these inflator wires.

8.1. Cut the yellow wires next to the white harness clip as shown.

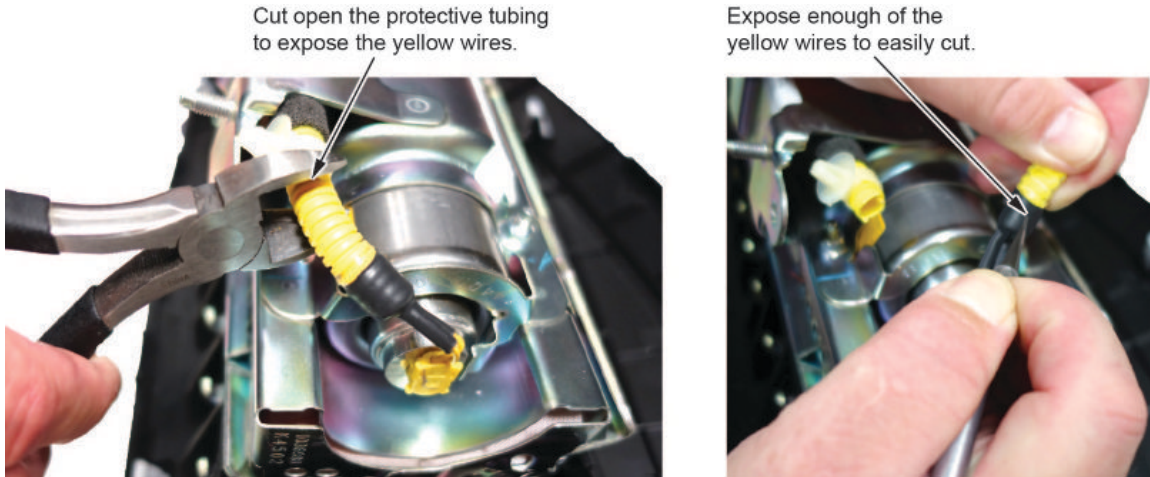


8.2. Strip away about 1 inch of the yellow wire insulation, then twist the wires together.

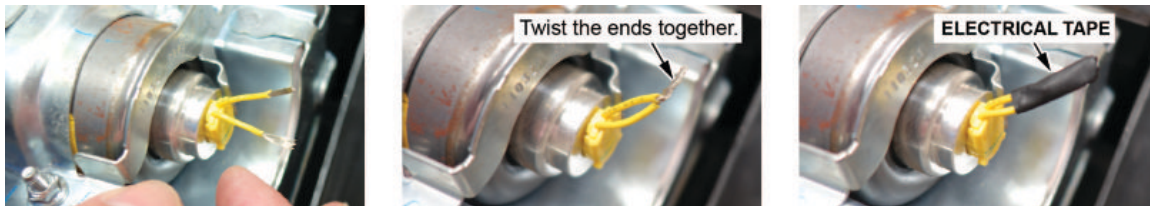

8.3. Tape the twisted ends with electrical tape.


9. Remove the four inflator nuts.

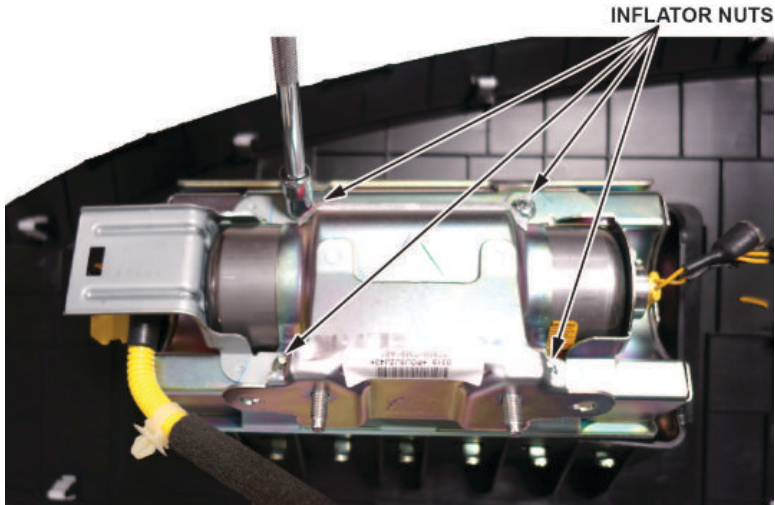

10. Remove the inflator bracket.

**NOTES**

- You can only remove one of the brackets, as the other is welded to the airbag housing.
- Do not reuse the bracket; use the new one that came in the inflator kit.

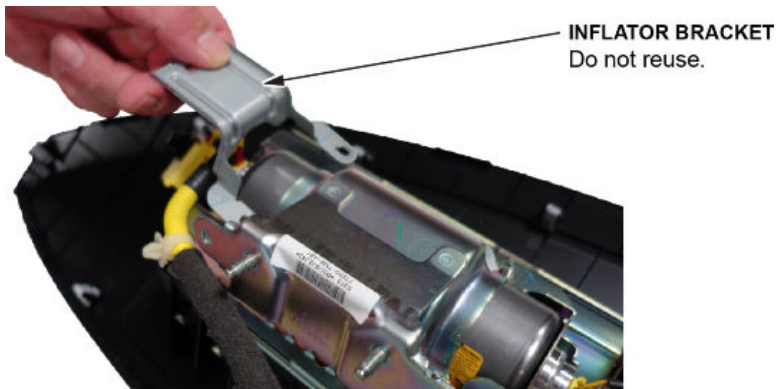

11. Remove the inflator by pulling it out.



12. Install the new inflator.

**NOTE**

There may be some minor surface rust or corrosion on the new inflator; this is OK.

Click [HERE](#) for a short video about the different variations of the driver's and front passenger's replacement inflators involved with the recalls related to inflators. While both the driver's and front passenger's inflators are shown in the video, this is informational only. Replace inflators only as directed by the iN VIN status inquiry.

**Check your part number against the ones listed for each installation procedure. Use the correct installation procedure for the part you received.**

**NOTE**


These inflators have blue collars.

|               |               |
|---------------|---------------|
| 04790-TM8-407 | 04790-TM8-A00 |
|---------------|---------------|


- 12.1. One side of the inflator has a longer collar, a single tab, and a small flat spot on the connector. The other side of the inflator has a shorter collar, two tabs, and a notch with a red dot. **Make sure you insert the end with the shorter collar into the airbag first.**

#### NOTES

- The V-SMART tool can only validate inflators with slotted end caps. You may receive an inflator with solid end caps. This is the correct part to repair the vehicle, but the V-SMART will fail the validation. **The V-SMART validation must fail a total of three times** before you can have your supervisor override the validation using the **Supervisor Inspection Override**.
- Your supervisor can be a service manager, shop foreman, team leader, etc. **The supervisor must inspect your work** to make sure the replacement inflator was installed correctly. When a supervisor enters his or her information, **the supervisor is signing off that the technician's work was inspected and approved.**

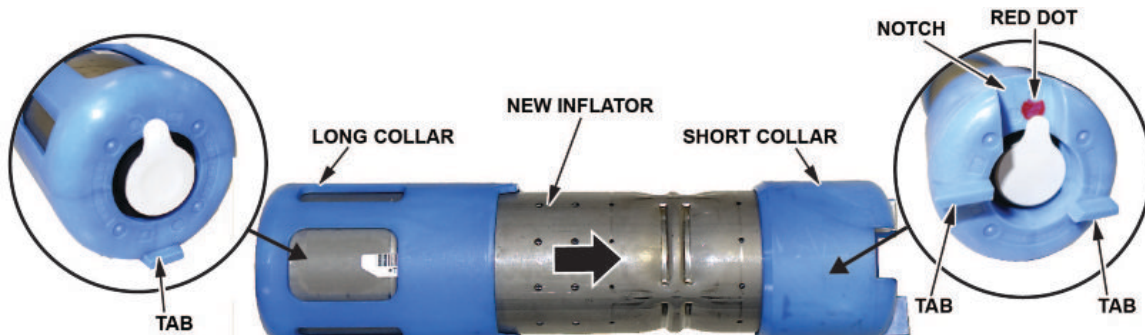




LONG COLLAR The inflator installation is directional.

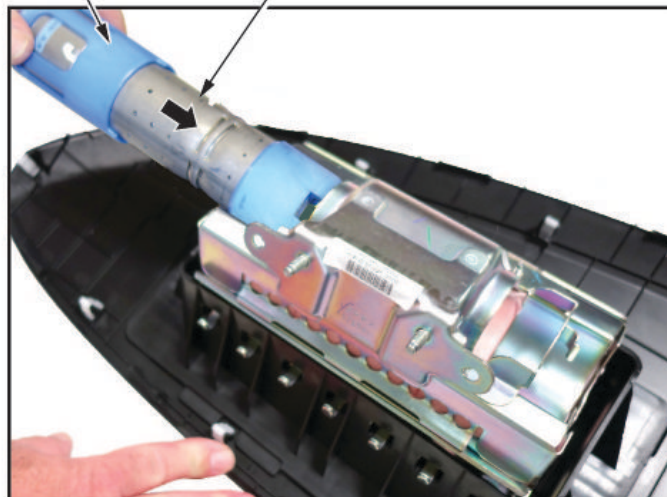



12.2. Slide the inflator in until the plastic collar contacts the bracket. The two tabs should align with the side of the airbag module and the metal tab as shown. There should be no space or gap between the inflator and bracket.

**FIXED BRACKET END**

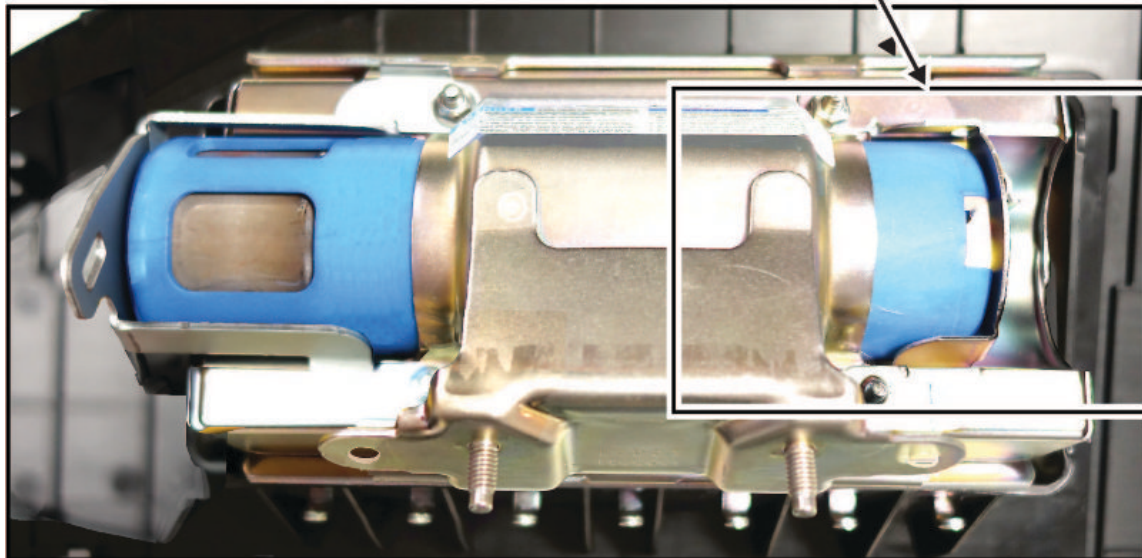
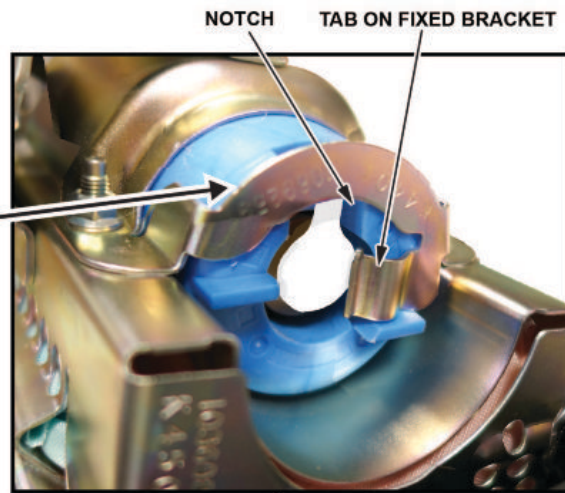
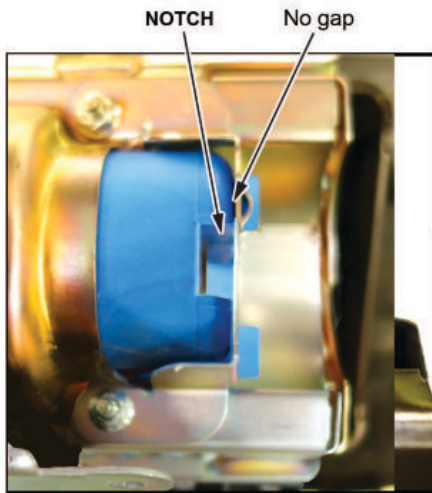


12.3. Install the bracket included in the kit onto the airbag module. Check there is no space or gap between the inflator and bracket by pushing the bracket against the inflator.

**NOTE**

The bracket may have a little bit of play before you install the new nuts.


**ADJUSTABLE BRACKET END**

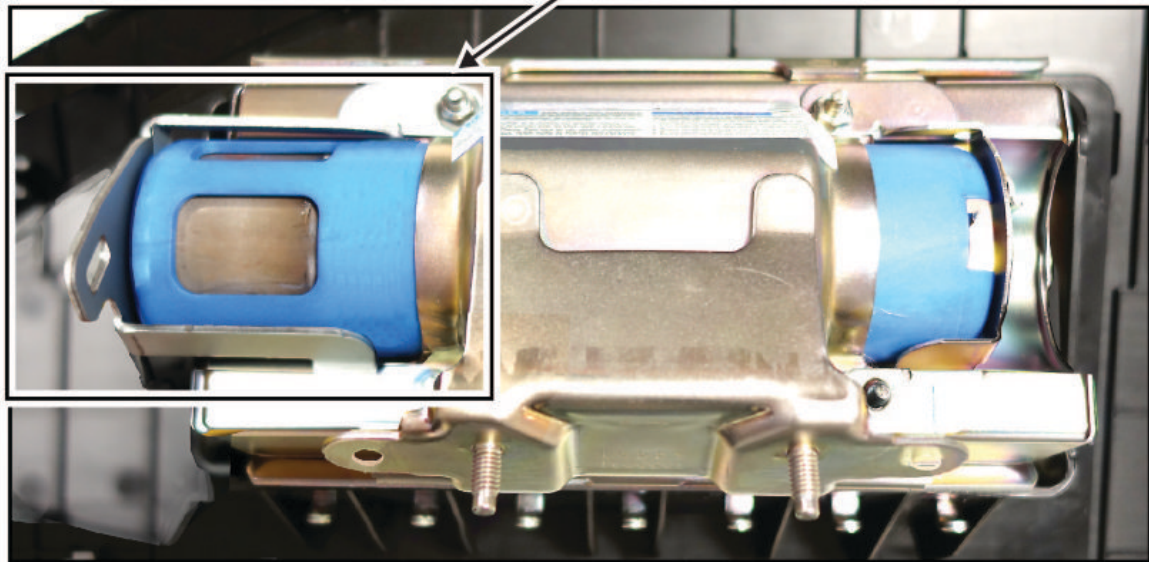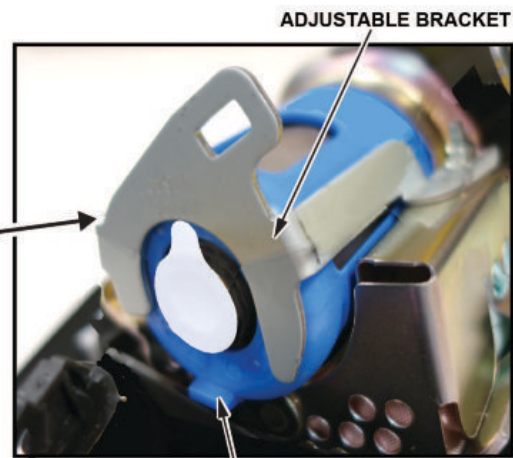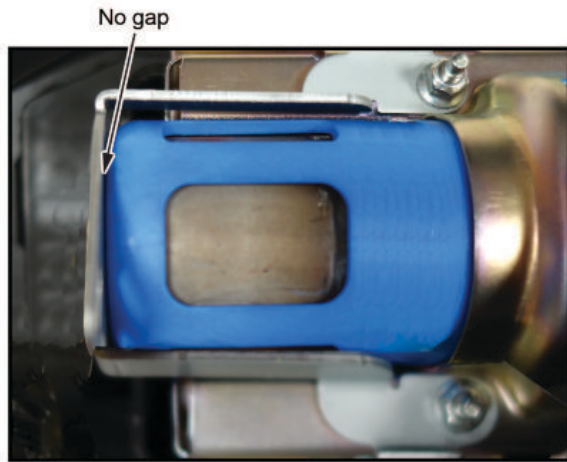

13. Hold the bracket against the inflator, then install the new 5 mm locknuts and torque them in sequence to **4.0 N•m (34 lb-in)**.

**NOTE**

Make sure you push the bracket against the inflator to ensure there are no gaps between the brackets and inflator when torquing the nuts.

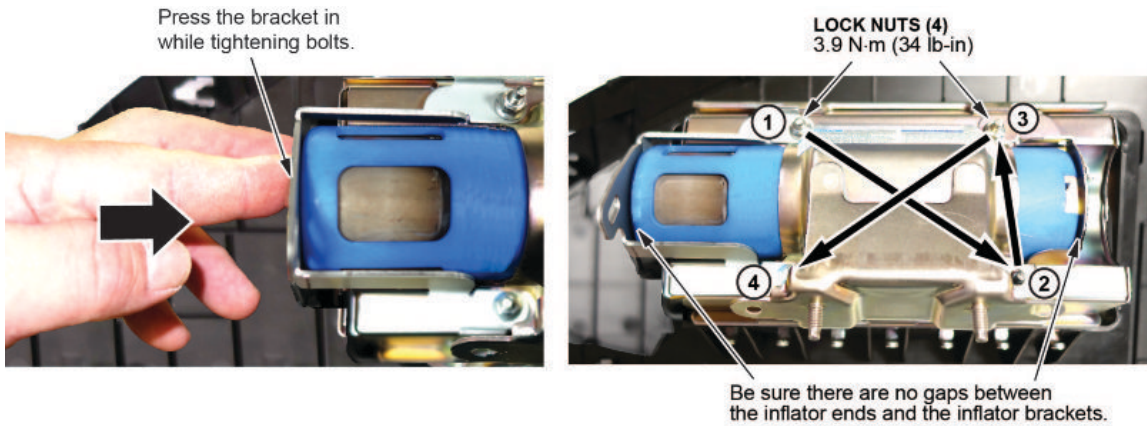

14. Remove the stickers covering the terminals on both sides of the new inflator.



15. Using the V-SMART tool, validate that the airbag replacement inflator is installed correctly.

**NOTES**

- You must validate the front passenger's airbag replacement inflator installation using the V-SMART tool **before** connecting the inflator harness.
- Your warranty claim will not be paid if the V-SMART validation is not completed or the photo is not sent. Make sure you see the **Uploaded Completed** message to confirm the photo was sent to the warranty department.


16. Install the new inflator harness.

16.1. Make sure the airbag and harness are aligned as shown.


**NOTES**

- **The replacement inflator harnesses may have the wire colors in the opposite positions of the original harness.** If you connect the harness incorrectly, the harness cannot be removed and you will not be able to reinstall the airbag because the harness will be too short.
- Connect the red wire connector to the short collar side of the inflator with the red dot.
- The red dot may be difficult to see because of the bracket.

ORIGINAL INFLATOR HARNESS ROUTING

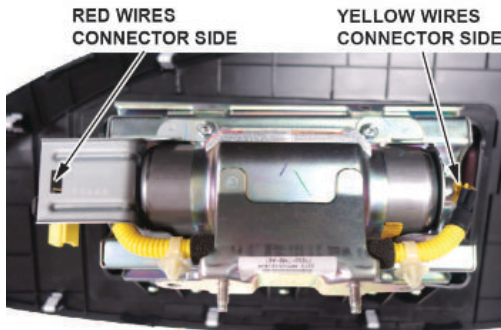


NEW INFLATOR HARNESS ROUTING

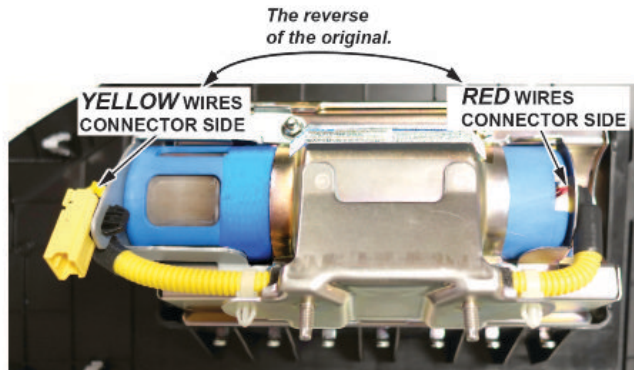

16.2. Connect the red wire connector to the connector on the side with the short plastic collar. Align the "T" shape in the inflator harness connector with the T-shaped inflator connector, then press the connector into place.

① Match up the "T" shape as shown. The connectors are directional.

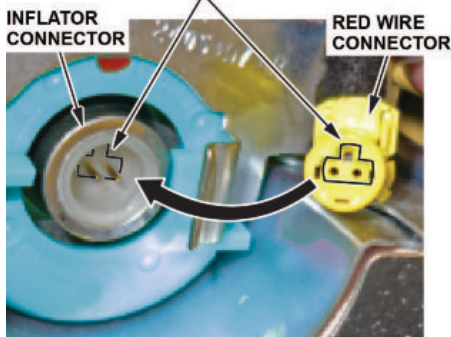

② Press the connector into place until it clicks.



③ Wiggle the connector to make sure it's secure.



16.3. Connect the yellow wire connector to the connector on the side with the long plastic collar.



16.4. After you hear each connector click, wiggle it to make sure it is secure.

**NOTE**

If the connector is not properly aligned, it will come out.

16.5. Make sure the connector is secure and in place by using the gauge tool. (PSP16 Gauge Tool P/N: 070AJ-TA00A00 or 07AAJ-TA0AA00).


Be sure the connector is fully seated by checking it with the gauge tool.

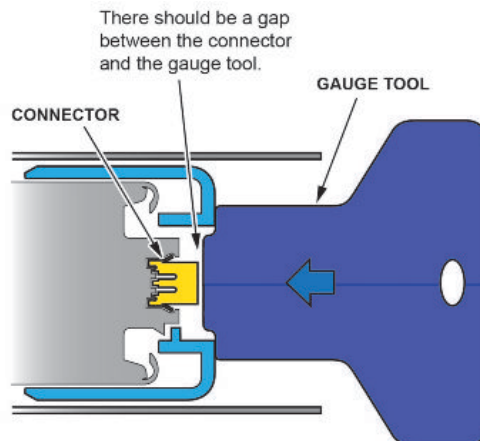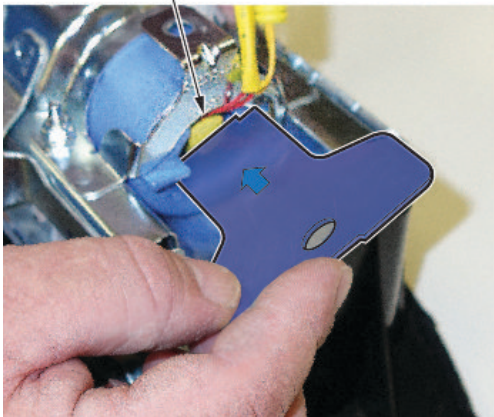

17. Connect the harness to the inflator brackets.

17.1. Connect the harness clips as shown.


17.2. Attach the 4-pin connector to the bracket as shown.

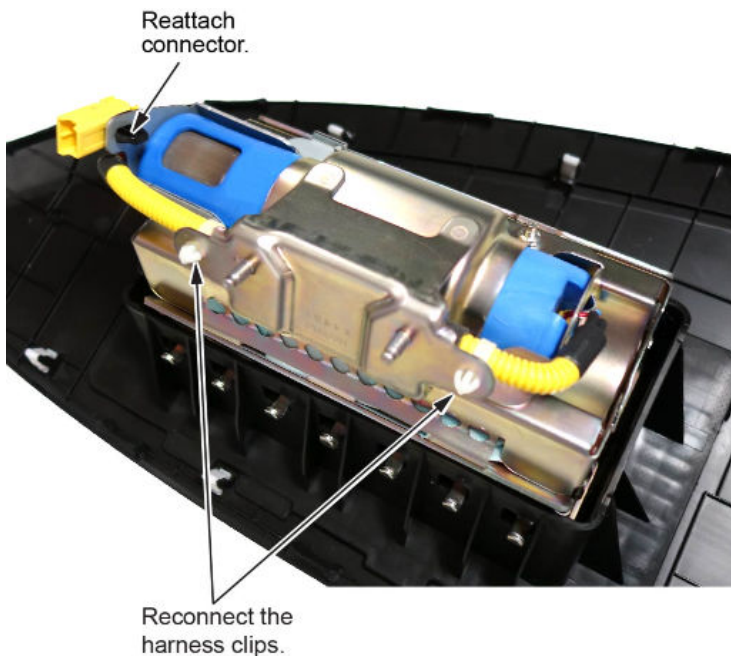


18. Install the passenger's airbag into the vehicle and torque the new locknuts to **9.8 N•m (7.2 lb-ft)**.
19. Connect the battery negative cable and enter the anti-theft code for the audio and navigation system (if applicable), then enter the audio unit presets.
20. Set the clock (for vehicles without navigation).
21. Turn the ignition to ON, and make sure the SRS indicator comes on for about 6 seconds, then goes off.
22. Put the original inflator into the box the new one came in. Make sure there is no other hardware in the box because if the package rattles, it will not be accepted by the courier.
23. Follow the shipping instructions outlined in PIB A15-0002 to return the undeployed inflator.
24. Give your warranty clerk the RO that includes the replacement inflator serial number and replacement part number. For the warranty claim to be paid, the **replacement inflator part number** must be included in the warranty claim.

### NOTES


- **If the VIN status inquiry indicates that the vehicle is subject to any open safety recalls, including the driver's airbag inflator, make sure to also complete those recall repairs before returning the vehicle to the customer. If you are unable to complete any open recall, advise the customer of the recall status and when the recall could be completed.**
  - Make sure you have the anti-theft code for the audio and navigation system (if applicable), then write down the frequencies for the radio's preset buttons.
  - Be careful not to damage any parts when replacing the inflator, and **follow the procedure exactly**.
  - If, before removing the airbag, you suspect that it may be the incorrect airbag for the vehicle or a counterfeit, **do not remove the airbag**. Contact your DPSM for assistance.
  - Make sure you have reviewed the SRS Precautions and Procedures in the service information before doing the REPAIR PROCEDURE.
1. Turn the ignition switch to the ON (II) position and check if the SRS indicator comes on for about 6 seconds, then turns off.
    - If the indicator comes on, then turns off after about 6 seconds, turn the ignition OFF, then go to step 2.
    - If the indicator does not come on, or if it stays on, contact your DPSM for assistance.
  2. Disconnect the battery negative cable and wait at least 3 minutes before continuing.
  3. Remove the front passenger's airbag.
    - 3.1. Remove the front passenger's dashboard trim by referring to the service information.
    - 3.2. Disconnect the front passenger's airbag 4P connector from the dashboard wire harness.

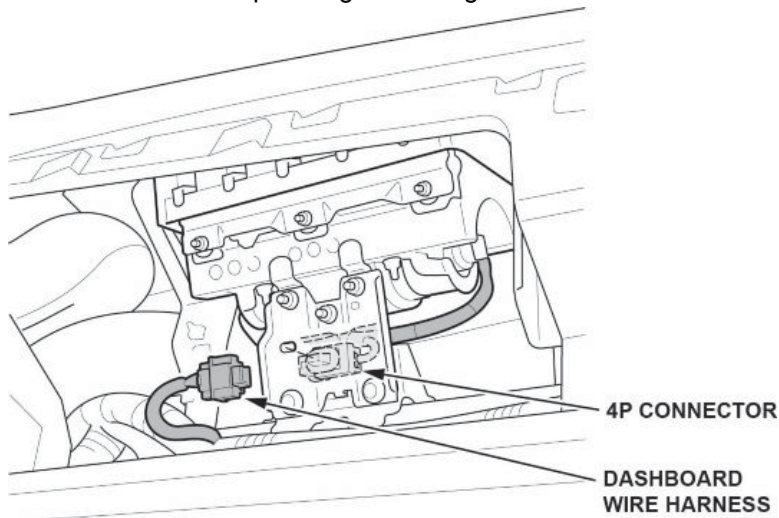


3.3. Remove the mounting nuts and bolts to remove the bracket.

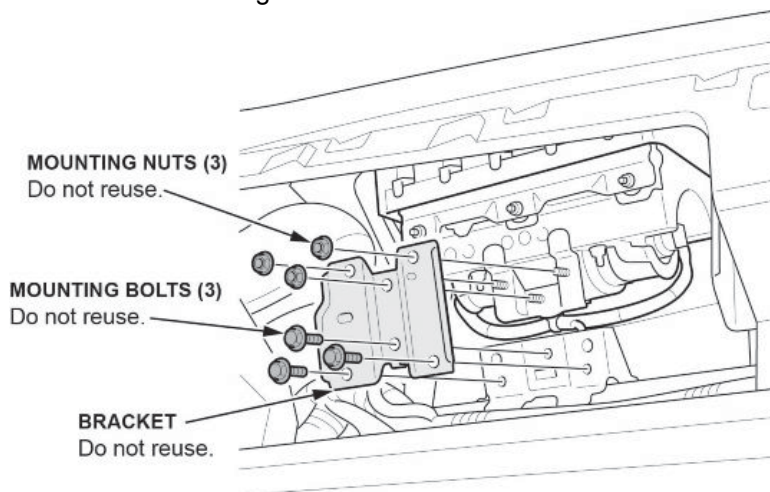


3.4. Remove the mounting nuts from the hook plate.

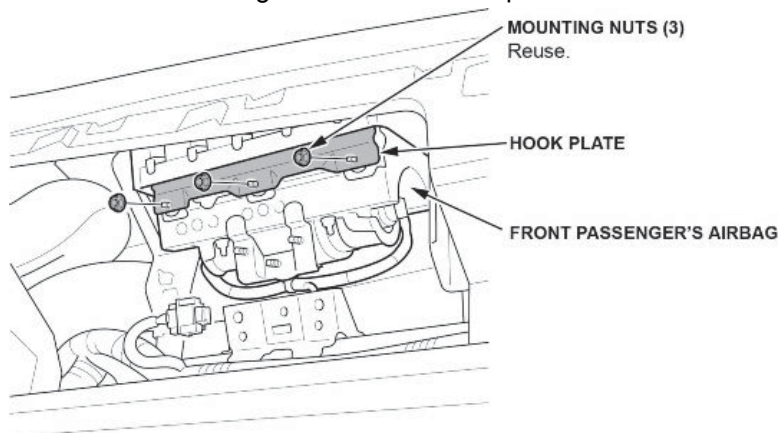

3.5. Release the hooks on the hook plate from the front passenger's airbag housing and remove the hook plate.

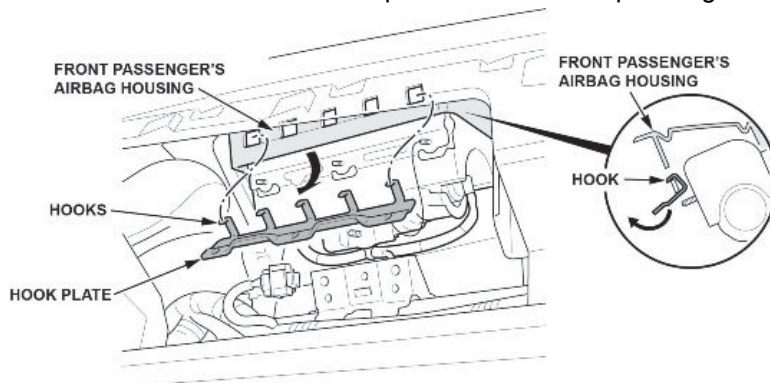


3.6. Remove the front passenger's airbag.

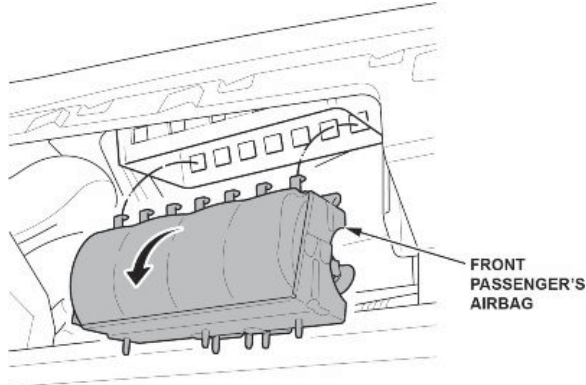

4. Place the airbag, face-down, on a clean shop towel.

**NOTE**

The orientation of the airbag is critical because if the inflator is installed incorrectly, the harness will be too short when you reinstall the airbag.

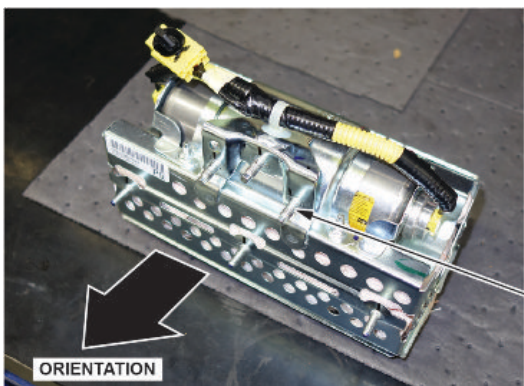

5. Visually inspect the airbag and the inflator for any unusual writing or markings. Refer to IDENTIFYING COUNTERFEIT AIRBAGS.




6. Peel the label located inside the inflator box from its backing, and attach it to the RO. For the warranty claim to be paid, the **replacement inflator part number that you received** must be included in the warranty claim.


**NOTES**

- The replacement part number is printed on the top part of the label and the serial number is printed on the bottom. **Make sure you attach the label to the RO and give it to the warranty clerk .**
- There may also be a colored sticker located in the kit; ignore it because it is not used.
- Not all inflator kits have a label included. In those cases, write the serial number and part number from the side of the inflator box on the RO. The part number always starts with 047.

**PASSENGER INFLATOR PARTS BOX**

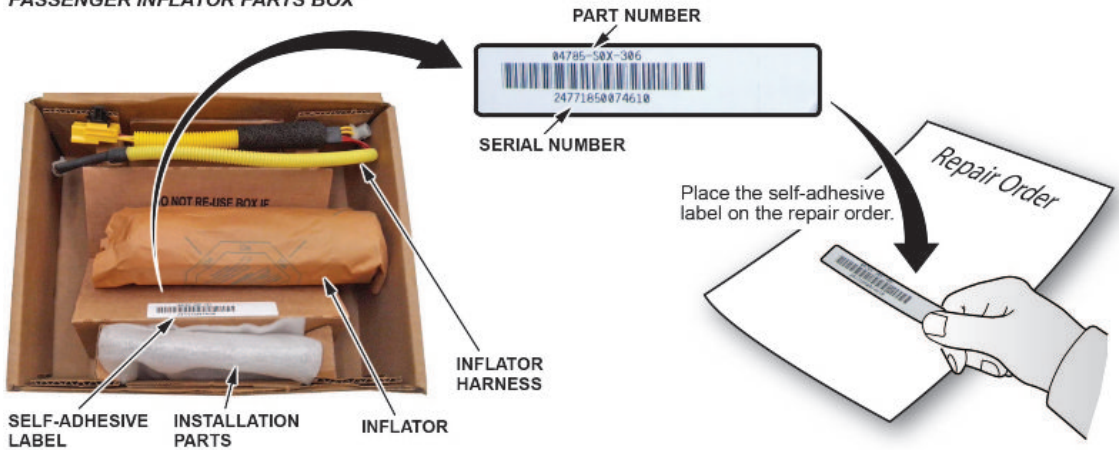

7. Remove the harness from the inflator bracket.  
Release harness clip.

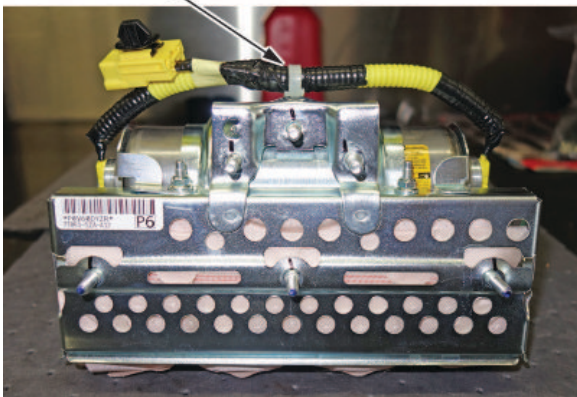


8. Short the yellow wires.


**NOTES**

- **You must cut the yellow wires** for inflator removal and short the yellow wires on the inflator side as indicated to prevent accidental deployment.
- **Do not cut the red wires** because the airbag connector shorts these inflator wires.
- There is glue securing the black insulation to the yellow wires. Be careful not to cut the wires when removing the insulation.

8.1. Cut the yellow wires as shown.

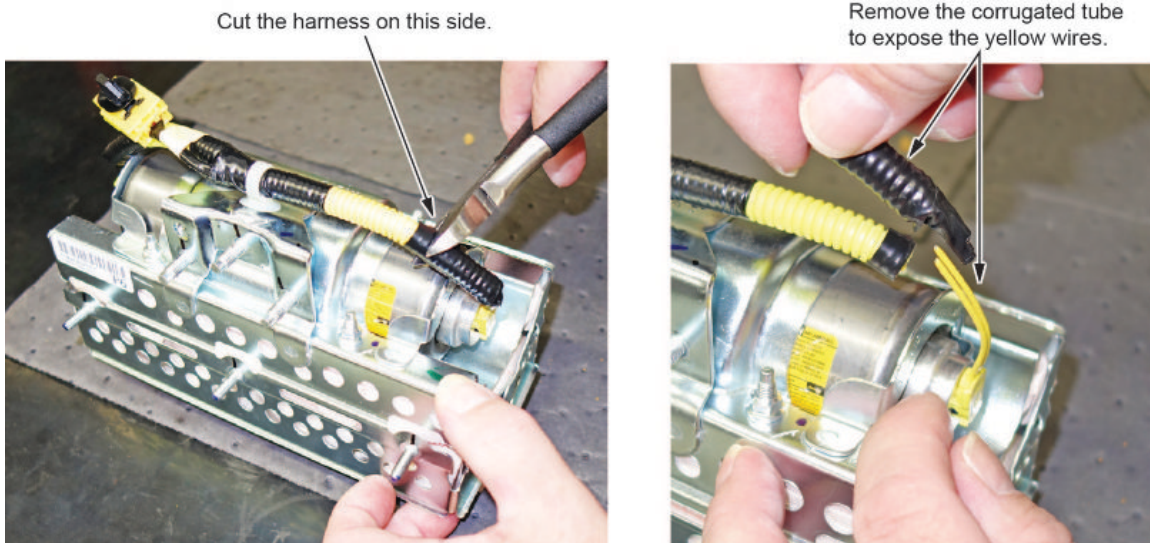


8.2. Strip away about 1 inch of the yellow wire insulation, then twist the wires together.

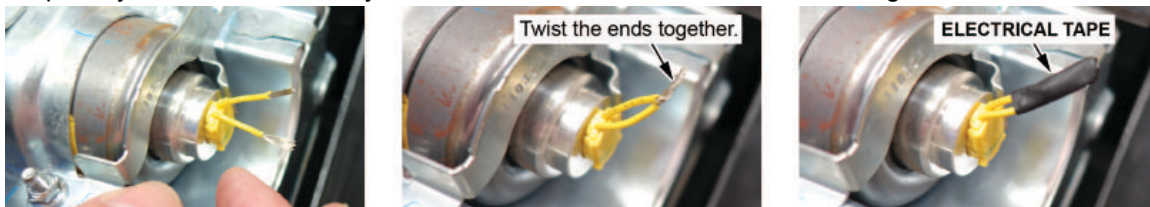

8.3. Tape the twisted ends with electrical tape.


9. Remove the four inflator nuts.

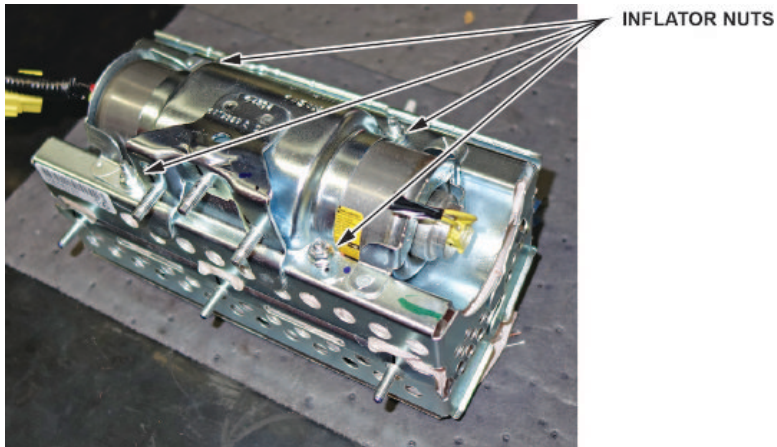


10. Remove the inflator bracket.

**NOTES**

- You can only remove one of the brackets, as the other is welded to the airbag housing.
- Do not reuse the bracket; use the new one that came in the inflator kit.

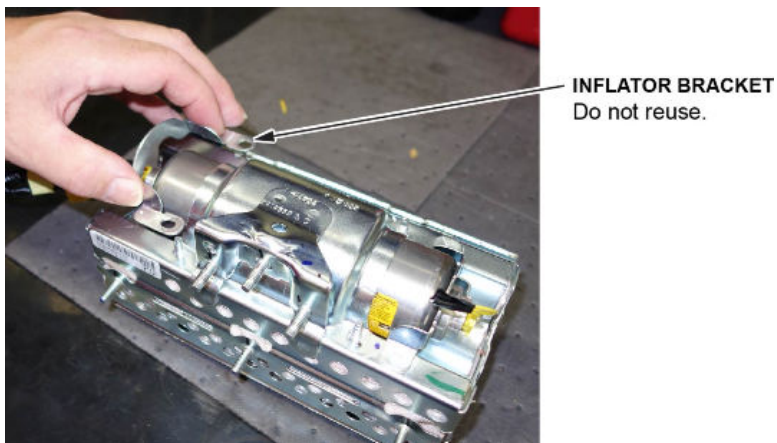

11. Remove the inflator by pulling it out.

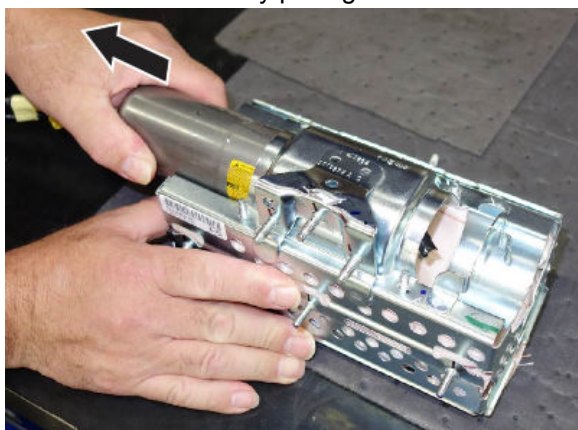

12. Install the new inflator.

**NOTE**

There may be some minor surface rust or corrosion on the new inflator; this is OK.

Click [HERE](#) for a short video about the different variations of the driver's and front passenger's replacement inflators involved with the recalls related to inflators. While both the driver's and front passenger's inflators are shown in the video, this is informational only. Replace inflators only as directed by the iN VIN status inquiry.

**Check your part number against the ones listed for each installation procedure. Use the correct installation procedure for the part you received.**

**NOTE**



These inflators have blue collars.

|               |               |
|---------------|---------------|
| 04790-SZA-407 | 04790-SZA-A00 |
|---------------|---------------|

- 12.1. One side of the inflator has a longer collar, a single tab, and a small flat spot on the connector. The other side of the inflator has a shorter collar, two tabs, and a notch with a red dot. **Make sure you insert the end with the shorter collar into the airbag first.**


#### NOTES

- The V-SMART tool can only validate inflators with slotted end caps. You may receive an inflator with solid end caps. This is the correct part to repair the vehicle, but the V-SMART will fail the validation. **The V-SMART validation must fail a total of three times** before you can have your supervisor override the validation using the **Supervisor Inspection Override**.
- Your supervisor can be a service manager, shop foreman, team leader, etc. **The supervisor must inspect your work** to make sure the replacement inflator was installed correctly. When a supervisor enters his or her information, **the supervisor is signing off that the technician's work was inspected and approved.**

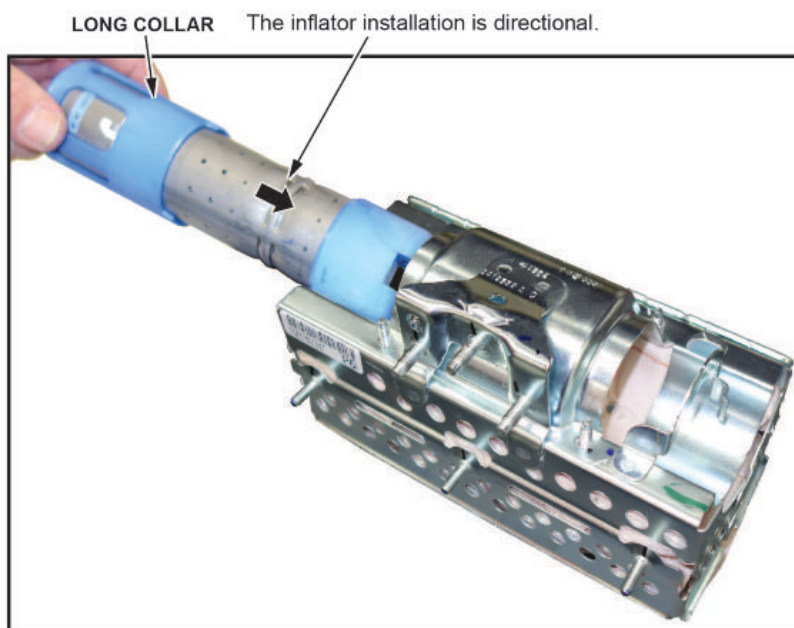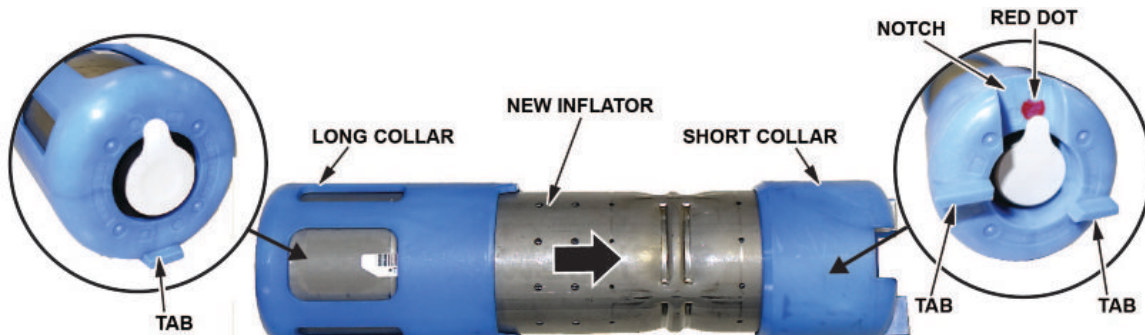

12.2. Slide the inflator in until the plastic collar contacts the bracket. The two tabs should align with the side of the airbag module and the metal tab as shown. There should be no space or gap between the inflator and bracket.

**FIXED BRACKET END**

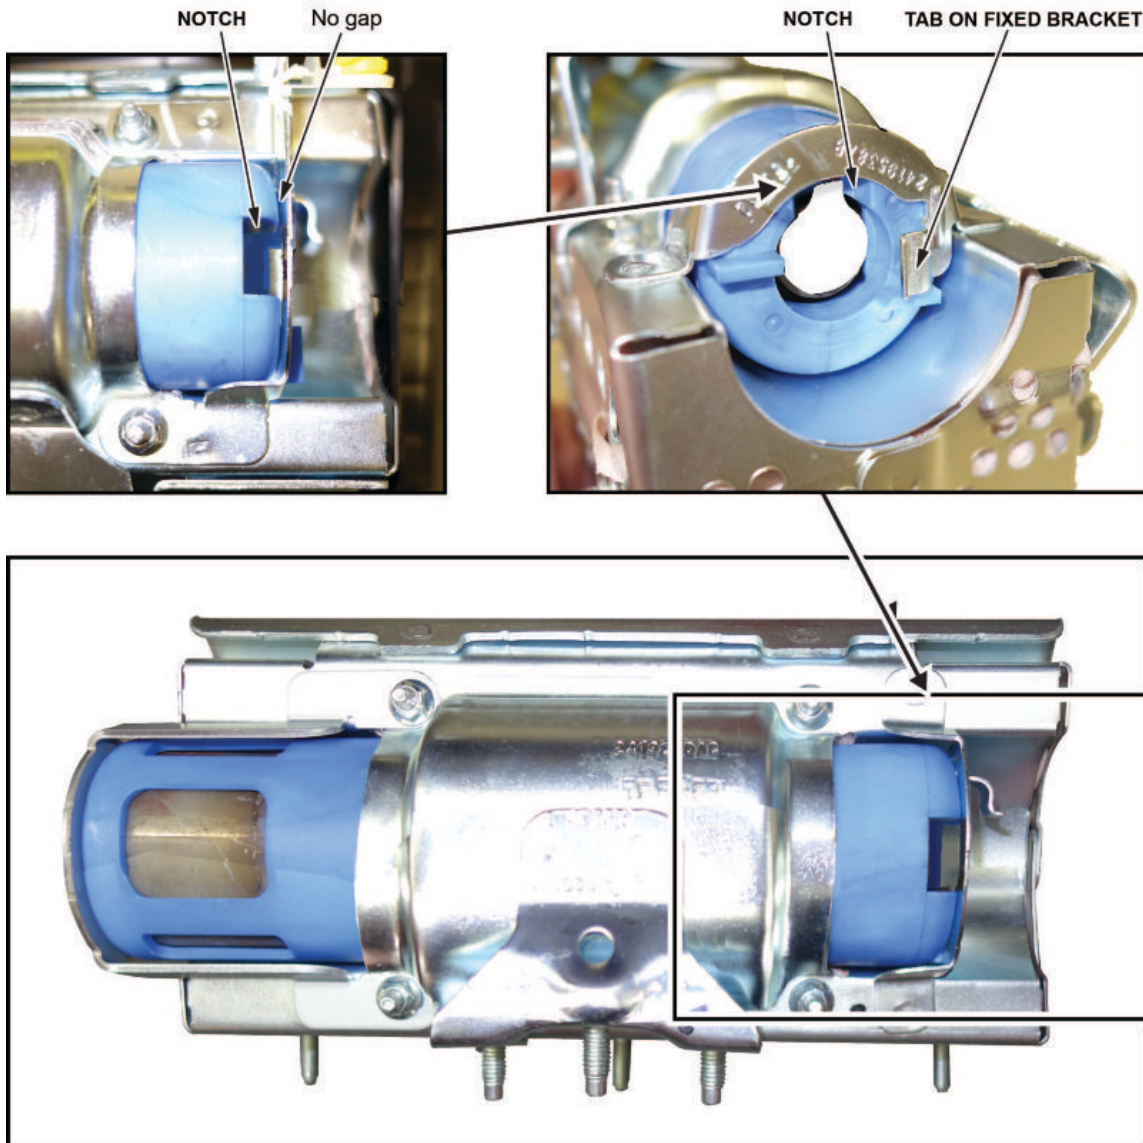


- 12.3. Install the bracket included in the kit onto the airbag module. Check there is no space or gap between the inflator and bracket by pushing the bracket against the inflator.

**NOTE**

The bracket may have a little bit of play before you install the new nuts.


**ADJUSTABLE BRACKET END**

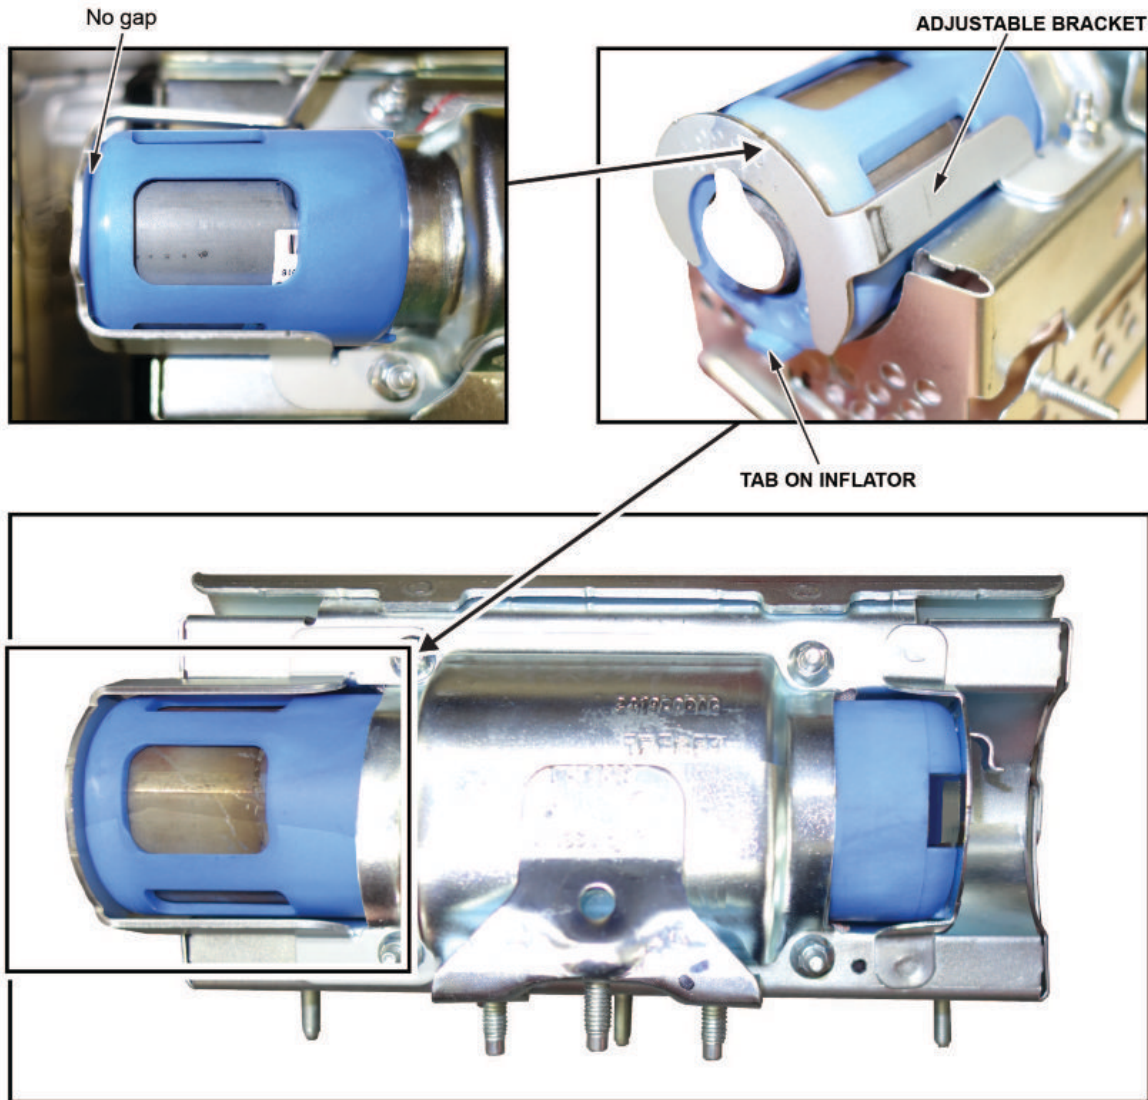


13. Hold the bracket against the inflator, then install the new 5 mm locknuts and torque them in sequence to **3.9 N·m (34 lb-in)**.

**NOTE**

Make sure you push the bracket against the inflator to ensure there are no gaps between the brackets and inflator when torquing the nuts.

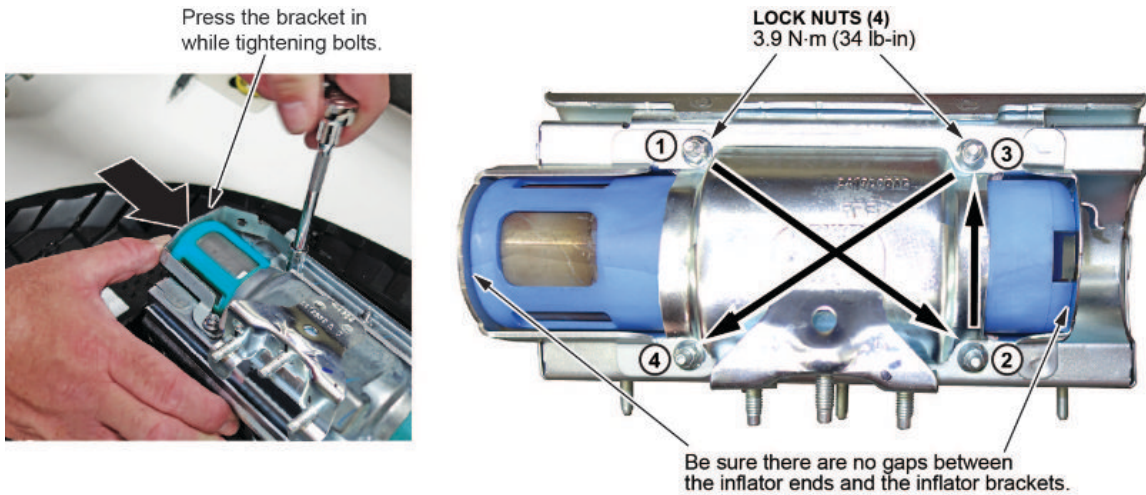

14. Remove the stickers covering the terminals on both sides of the new inflator.

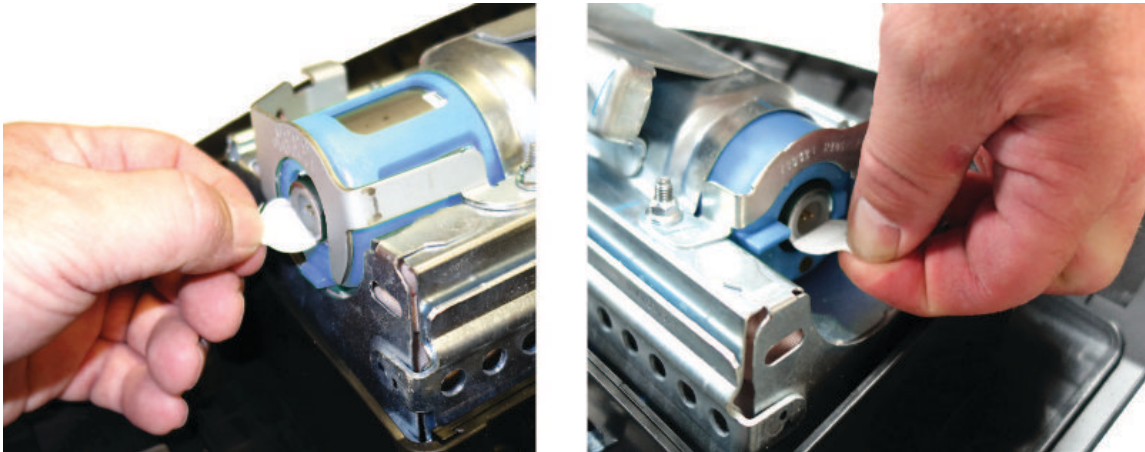

15. Using the V-SMART tool, validate that the airbag replacement inflator is installed correctly.

**NOTES**

- You must validate the front passenger's airbag replacement inflator installation using the V-SMART tool **before** connecting the inflator harness.
- Your warranty claim will not be paid if the V-SMART validation is not completed or the photo is not sent. Make sure you see the **Uploaded Completed** message to confirm the photo was sent to the warranty department.




16. Install the new inflator harness.

16.1. Make sure the airbag and harness are aligned as shown.


**NOTES**

- **The replacement inflator harnesses may have the wire colors in the opposite positions of the original harness.** If you connect the harness incorrectly, the harness cannot be removed and you will not be able to reinstall the airbag because the harness will be too short.
- Connect the red wire connector to the short collar side of the inflator with the red dot.
- The red dot may be difficult to see because of the bracket.


ORIGINAL INFLATOR HARNESS ROUTING

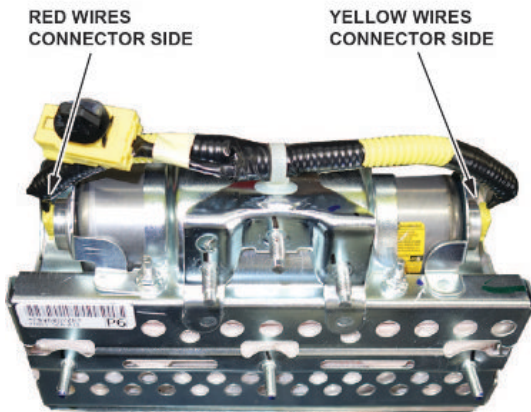

NEW INFLATOR HARNESS ROUTING

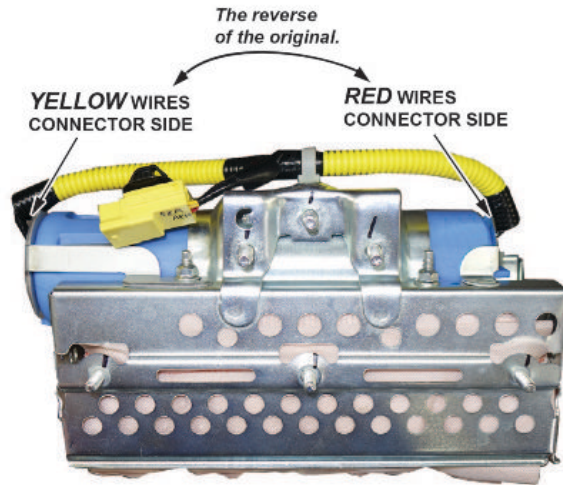

16.2. Connect the red wire connector to the connector on the side with the short plastic collar. Align the “T” shape in the inflator harness connector with the T-shaped inflator connector, then press the connector into place.

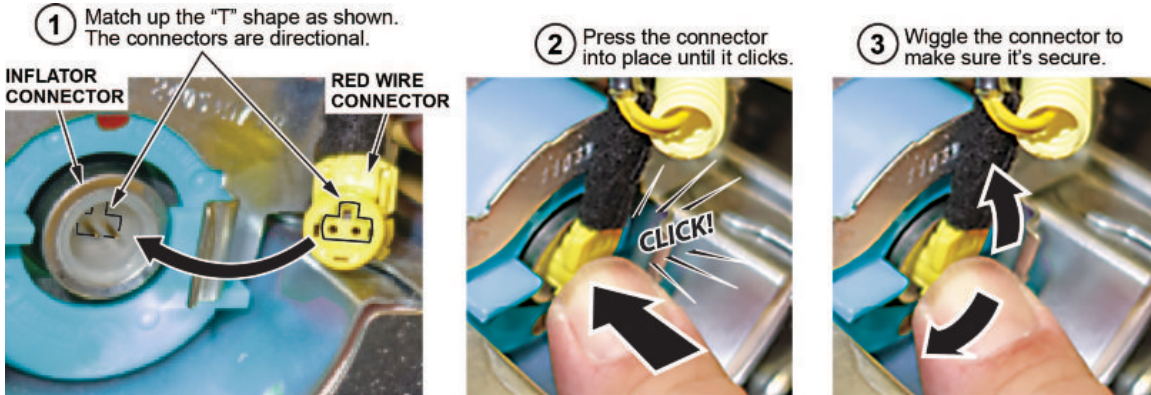

16.3. Connect the yellow wire connector to the connector on the side with the long plastic collar.



16.4. After you hear each connector click, wiggle it to make sure it is secure.

**NOTE**


If the connector is not properly aligned, it will come out.

16.5. Make sure the connector is secure and in place by using the gauge tool. (PSP16 Gauge Tool P/N: 070AJ-TA00A00 or 07AAJ-TA0AA00).

Be sure the connector is fully seated by checking it with the gauge tool.

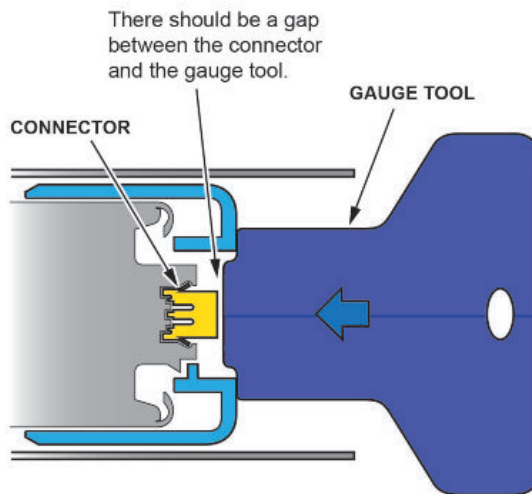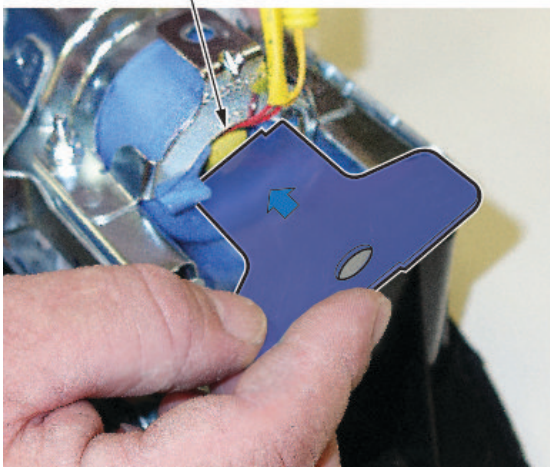


17. Connect the harness to the inflator brackets.

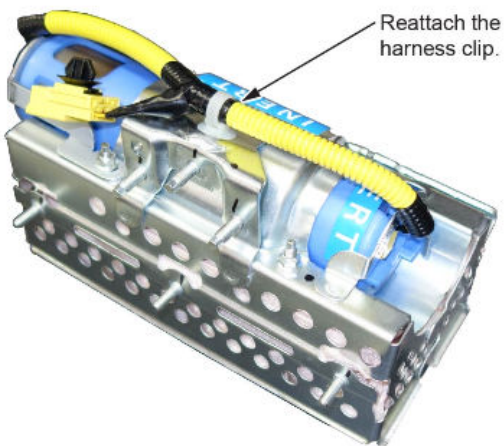


18. Install the front passenger's airbag with the new inflator.


18.1. Install the hooks of the front passenger's airbag into the front passenger's airbag housing.

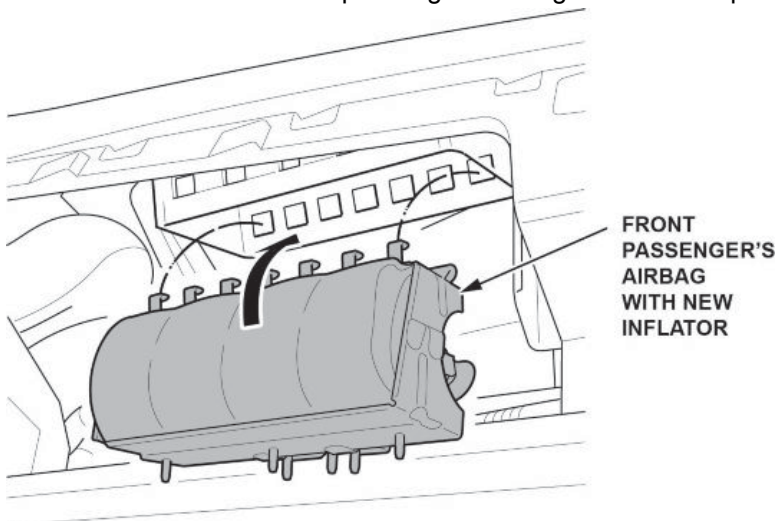


18.2. Insert the hooks of the hook plate into the front passenger's airbag housing.

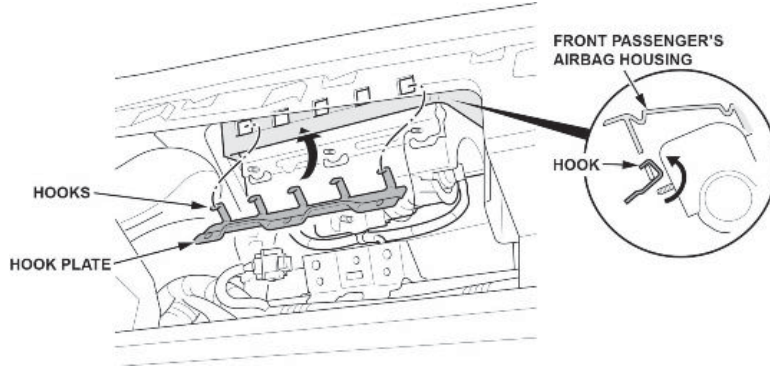

18.3. Install the hook plate with the original mounting nuts.

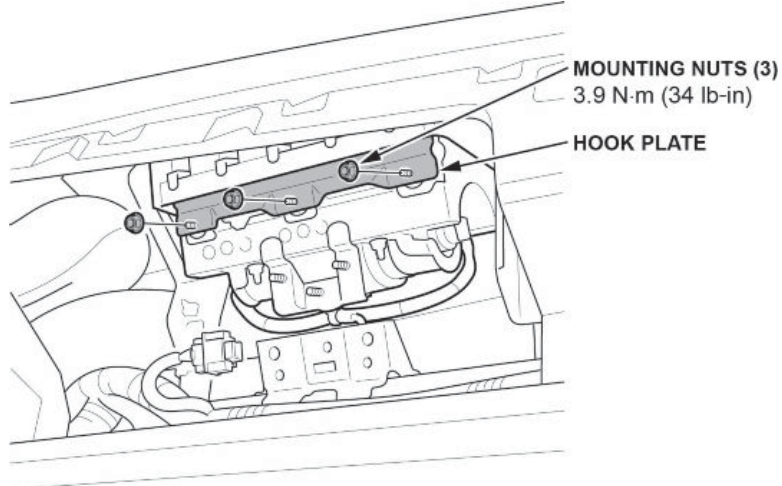


18.4. Install the new support bracket with the new mounting nuts and torque them to 9.4 N·m (6.9 lb-ft), then loosely install the new bolts.

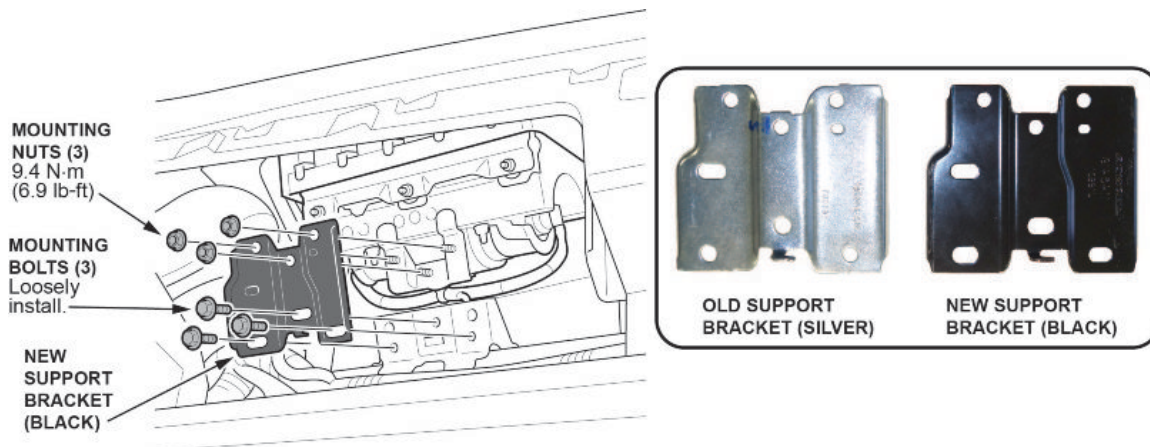


18.5. Push the bracket to the left and hold it while torquing the mounting bolts to 9.4 N·m (6.9 lb-ft).

**NOTE**

You must keep the bracket pushed to the left to make sure there is more than 5 mm between the inflator connector and the bracket as shown.

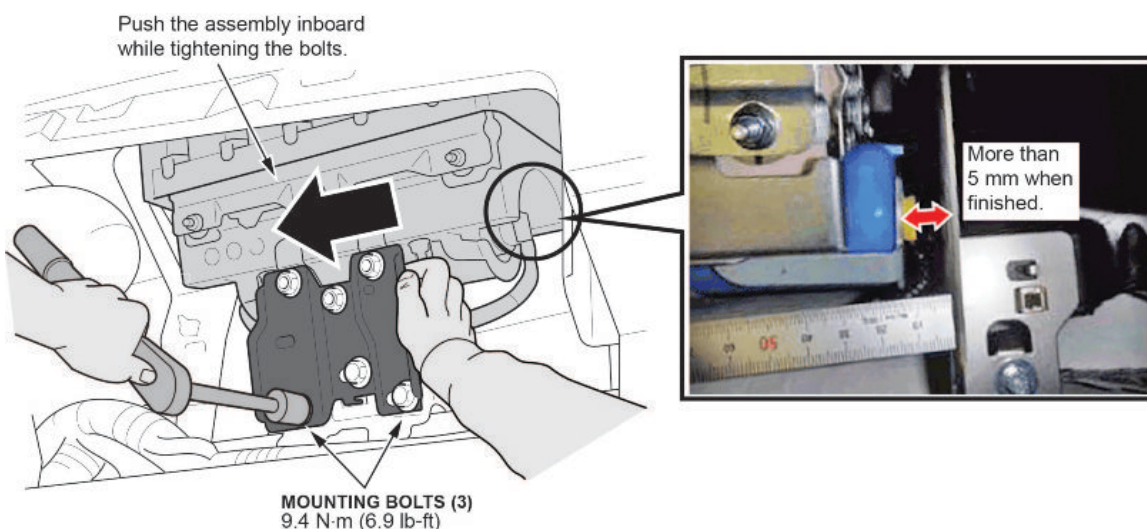

18.6. Connect the dashboard wire harness 4P connector to the front passenger's airbag 4P connector then install the connector clip.

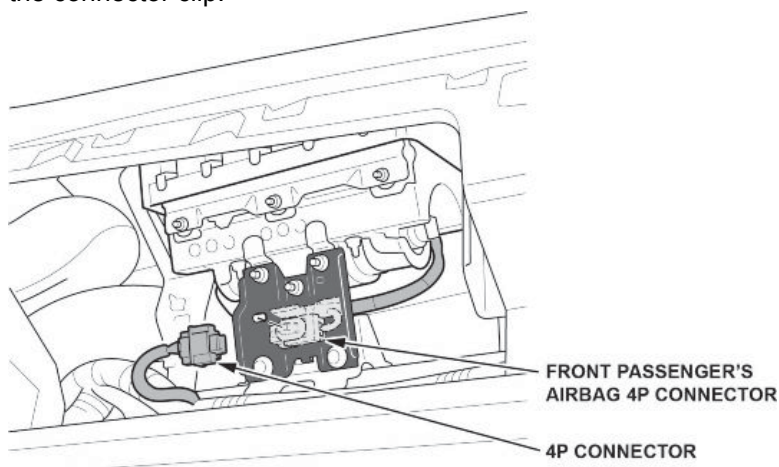

- 18.7. Install the passenger's dashboard trim by referring to the service information.
19. Connect the battery negative cable and enter the anti-theft code for the audio and navigation system (if applicable), then enter the audio unit presets.
20. Set the clock (for vehicles without navigation).
21. Turn the ignition to ON and make sure the SRS indicator comes on for about 6 seconds, then goes off.
22. Put the original inflator into the box the new one came in. Make sure there is no other hardware in the box because if the package rattles, it will not be accepted by the courier.
23. Follow the shipping instructions outlined in PIB A15-0002 to return the undeployed inflator.
24. Give your warranty clerk the RO that includes the replacement inflator serial number and replacement part number. For the warranty claim to be paid, the **replacement inflator part number** must be included in the warranty claim.

END