

△WARNING: All involved customers must be notified, all involved units must be corrected as per instruction herein.

Campaign no.: 2020-0008

October 15, 2020 Subject: Possible Front Wheel Loss

MODEL YEAR	MODEL	ADMISSIBLE UNITS
2020	Ryker®	Go to BOSSWeb/Warranty/Campaign Monitoring to know the quantity of units in your inventory impacted by this campaign

IMPORTANT

 When a vehicle comes in for service, always type the VIN in Knowledge Center to check for pending campaigns or alerts.



No.

2020-6

 When performing any work on a vehicle, it is good practice to connect it to BUDS2 to ensure that all needed updates are done.



PROBLEM

The front wheel assembly may not have been performed properly (torque application and installation of the red locking clip). In some situations, this could result in a wheel loss, increasing the risk of a crash.

SOLUTION

Retorque the front wheel nuts and reinstall the red locking clip.

Fill in the MANDATORY CERTIFICATION FORM.

MANDATORY TOOLS

REQUIRED TOOL

65MM SOCKET (P/N 529 036 457)



Calibrated torque wrench ranging up to 350 N•m (258 lbf•ft).*




* Torque wrench calibration must be performed each year.

CORRECTIVE ACTION


Refer to RYKER PDI BULLETIN if needed.

Retorquing the Wheel Nuts

1. Turn the handlebar and lock the wheel hub with a locking device (such as a long Allen key or a tempered steel rod).

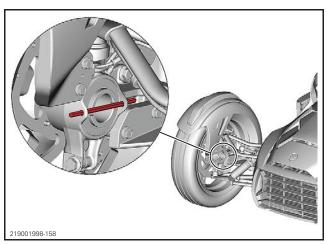

2. Remove the RED locking clip.

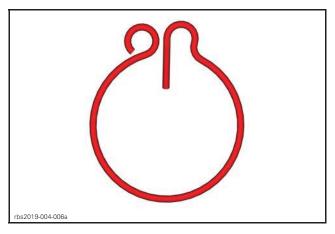

3. Verify torque.

TIGHTENING TORQUE			
Center lock wheel nut	300 N•m ± 15 N•m (221 lbf•ft ± 11 lbf•ft)		

NOTICE Never use impact tools to tighten wheel nuts.

IMPORTANT

If the wheel nut was NOT properly torqued and the wheel assembly is found to be loose, it will be necessary to validate that the wheel assembly components are all in good condition.


In the case of damaged parts, the standard warranty guidelines apply.

Installing the Red Locking Clip

- 1. Reinstall the red locking clip.
- 2. RED locking clip installation is **Mandatory**


The folded end must point inside the drive axle.

A properly installed red locking clip is sitting well into the groove all around the nut.

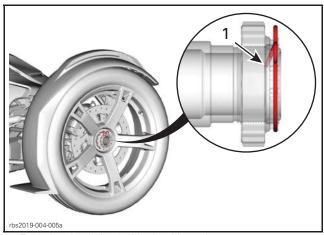


1. Folded end pointing inside the drive axle

NOTICE Never untighten the nut to align the RED locking clip hole. Tighten the nut to the nominal value, then tighten further to align the hole.

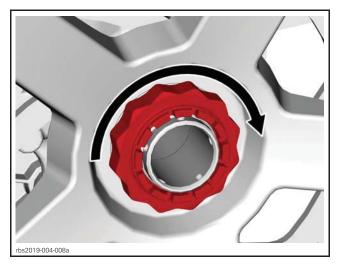

3. Remove locking device from the wheel hub.

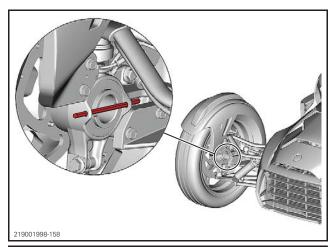

A WARNING

Failure to install the RED locking clip may cause the loss of a wheel if the center lock wheel nut becomes loose.

MANDATORY CERTIFICATION FORM

This form MUST be signed by the technician who performed the procedure and by the Master technician or Service Manager as confirmation that the service was performed as per BRP's required procedure.

It MUST be signed by the customer.

A copy of the form must be given to the customer. Dealership must keep his copy in the vehicle's file as proof.



A TEMPLATE OF THE FORM IS PROVIDED WITH THIS BULLETIN.

WARRANTY

Submit a warranty claim using the following information.

For claiming procedure, refer to the *DEALER/DISTRIBUTOR WARRANTY GUIDE*.

