

# Removing/Installing Canopy Rod

## REMOVING CANOPY ROD

### Step 1

Extend canopy: Grasp zipper tab and unzip canopy extension, then grasp front of Canopy and pull it forward.

### Step 2

Locate canopy rod in canopy hub and gently pull up at the base to remove it from the canopy hub, as shown in **Figure 1**. Repeat on the other side.

### Step 3

Remove canopy rod from canopy sleeve by pulling gently.

## INSTALLING CANOPY ROD

### Step 1

Position canopy rod so that the ends are facing away from you and curving up, as shown in **Figure 2**.

### Step 2

Use right hand to pick up the right side of the canopy rod and insert end through bottom of elastic loop on the left side of canopy, as shown in **Figure 3**.

### Step 3

Insert end of canopy rod into canopy sleeve, as shown in **Figure 4**.

Push canopy rod through canopy sleeve until the end of the canopy rod comes out the other side. If the canopy fabric bunches, it may be necessary to slide the canopy fabric along the canopy rod from the top of the canopy as the canopy rod reaches the right side of the canopy.

### Step 4

Insert end of canopy rod through top of elastic loop on right side of canopy, and even the canopy rod out.

### Step 5

Insert end of canopy rod into hole in canopy hub and push down to make sure it is fully seated, as shown in **Figure 5**. Repeat on other side.

### Step 6

Check to make sure that both ends of canopy rod are through the elastic below the canopy sleeve on each side of the canopy, and fully inserted into the hole in the canopy hub.

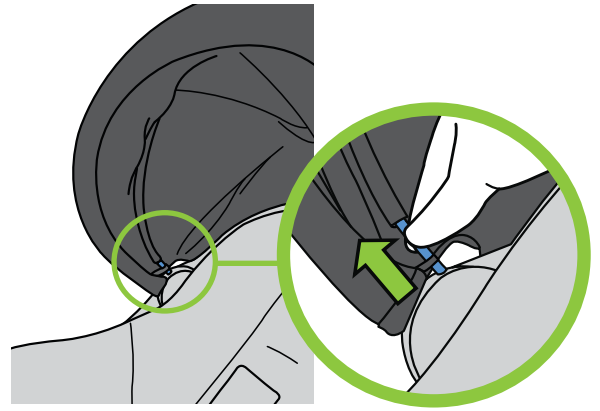


Figure 1

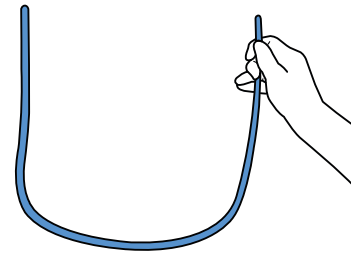


Figure 2

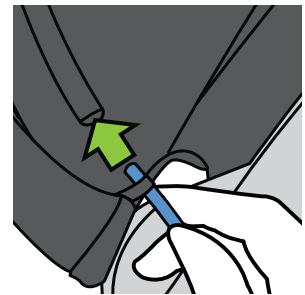


Figure 3

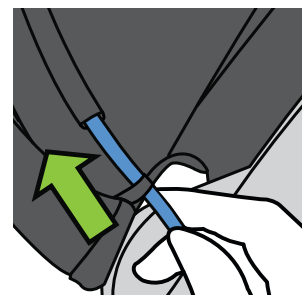


Figure 4

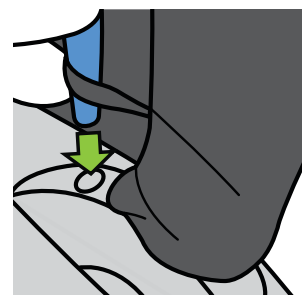


Figure 5