

RECALL 21V575, 2021-459 - REMEDY INSTRUCTIONS



Make(s): TRACER
Model(s): TRT22RBS
Model Year(s): 2021

Concern:
The water heater exhaust may melt and cause distortion on the passenger side rear tail lamp.

Repair Code: RC-028-01-00-004084
Allotted Time: 1.50 HRS.
Inspection Code: N/A
Allotted Time: N/A
Photo(s) Required: YES
Prior Authorization Required: YES
Part(s) Kit Number: F100282000
Part(s) Return: NO

Disconnect the vehicles' battery Positive and Negative, disconnect any House battery(s) Positive and Negative, if equipped with a generator ensure it is off and lastly, ensure the vehicle is disconnected from shore power. Block any tires/wheels to prevent the vehicle from rolling. Failure to do so may result in electrocution, fire or other personal injury, property damage and/or death.

PRIOR TO BEGINNING THIS PROCEDURE, TURN OFF THE LPG AT THE LP TANKS

STEP 1:

1. REMOVE THE LENS FROM THE REAR PASSENGER TAIL LAMP TO GAIN ACCESS TO THE FASTENERS;
2. REMOVE FASTENERS AND SET ASIDE FOR REUSE;
3. MAKE A NOTE OR TAKE A PHOTO OF WHICH WIRES ARE CONNECTED TO THE TAIL LAMP;
4. MAKE A NOTE OR TAKE A PHOTO OF HOW THE PUTTY SEAL IS APPLIED TO THIS TAIL LAMP THIS WILL NEED TO APPLIED IN THE SAME MANOR TO THE REPLACEMENT TAIL LAMP;
5. CUT OR DISCONNECT THE WIRES ON THE WIRES COMING OUT OF THE REAR WALL FROM THE UNIT;
NOTE – DO NOT CUT AND REUSE THE TAIL LAMP WIRES
6. DISCARD THE TAIL LAMP.

STEP 2:

1. REINSTALL THE REPLACEMENT TAIL LAMP BY CONNECTING THE WIRES TOGETHER USING THE NOTE OR PHOTO TAKEN DURING STEP ONE;
2. APPLY PUTTY TO THE FASTENER HOLES/MIMIC THE WAY THE PUTTY SEAL WAS FROM THE TAIL LAMP FROM STEP ONE;
3. ENSURE THE WIRE CONNECTIONS ARE PROPER AND SECURE;
4. FEED THE WIRE(S) BACK INTO THE REAR WALL, PLACING THE TAIL LAMP IN THE SAME SPOT AS THE DISCARDED TAIL LAMP;
5. ALIGN THE FASTENER HOLES AND SECURE THE TAIL LAMP TO THE REAR WALL;
6. AVOID STRIPPING OUT THE FASTENER BY TAKING CARE NOT OVER TIGHTEN;
7. INSTALL THE TAIL LAMP LENS.

STEP 3:

1. REMOVE WATER HEATER EXTERIOR ACCESS DOOR AND DISCARD;
2. DISCONNECT THE LP GAS HOSE FROM THE WATER HEATER;
3. INSIDE THE UNIT TO THE LEFT OF THE ENTRY DOOR AT THE BOTTOM OF THE WARDROBE CABINET IS THE WATER HEATER ACCESS PANEL, LOCATE AND REMOVE THIS PANEL (SET ASIDE FOR REINSTALLATION);
4. LOCATE AND UNPLUG THE 110V CORD FROM THE RECEIPT THAT THE WATER HEAT IS PLUGGED IN TO;
5. TRACE THE 12V WIRING TO THE WATER HEATER AND DISCONNECT;
6. DISCONNECT THE WATER LINES FROM THE REAR OF THE WATER HEATER;
7. ON THE FACE OF THE WATER HEATER, LOCATE AND REMOVE ALL FASTENERS THAT SECURE THE WATER HEATER TO THE REAR WALL;
8. USING A TOOL, CUT THE SILICONE SECONDARY SEAL THAT IS AROUND THE WATER HEATER FLANGE;
9. USING A TOOL, GENTLY PRY IN VARIOUS SPOTS BETWEEN THE REAR WALL AND THE WATER HEATER FLANGE;
10. PUSH THE WATER HEATER OUT OF THE OPENING FROM INSIDE OF THE UNIT.

STEP 4:

1. INSTALL THE SUBURBAN WATER HEATER REPLACEMENT PER THE INSTALLATION INSTRUCTIONS PROVIDED WITH THE WATER HEATER;
2. CONNECT WATER LINES, 110V AND 12V PER THE SUBURBAN WATER HEATER INSTALLATION INSTRUCTIONS;
3. FILL WATER HEATER AND WATCH FOR WATER LEAKS;
4. REINSTALL THE WATER HEATER ACCESS PANEL AT THE BASE OF THE WARDROBE CABINET;
5. CONNECT LP GAS SUPPLY;
6. TURN LP GAS ON AND APPLY LEAK TEST LIQUID TO THE CONNECTION;
7. PERFORM LP GAS DROP TEST AND BURN OFF;
8. PLUG VEHICLE IN AND TEST WATER HEATER OPERATION;
9. CLAIM REPAIR CODES.