

AMB6 - Checking Three-Point Belt and Replacing it if Necessary (Stop Delivery/Recall Campaign)

Model Line: **911 (992)**

Model Year: **As of 2021 up to 2022**

Country/Market: USA (C02)
Canada (C36)

Concerns: **Child locking function on front three-point belt (passenger's side)**

Information: **There is a possibility that the child-seat lock on the three-point belts in the affected vehicles will not always function properly due to a defective locking lever.**

As a result, the legal requirements for the child-seat lock function of the three-point belts may not be met.

Action required: **Check front three-point belt (passenger's side) and replace if necessary.**

Affected Vehicles: Only vehicles assigned to the campaign (see also PCSS Vehicle Information).

Parts required

If necessary remove the parts from the corresponding invoicing scope after checking the three-point belt.
For invoicing scopes, see
⇒ *Technical Information 'Warranty processing'*

Required tools



Information

No tools are required for checking the three-point belt.

Tools:



Information

The 911 (992) is equipped with either a **lithium starter battery** (l-no. J2A) or an **AGM starter battery** (l-no. JOV, J4K) as standard.

This depends on the following:

- Country version
- Model type
- Vehicle equipment

Lithium starter batteries must only be charged using a **suitable battery charger** that has a current and voltage-controlled charge map.

For further information about the battery chargers to be used, see ⇒ *Workshop Manual '270689 Charging battery/vehicle electrical system'*.

- Battery charger with a current rating of **at least 90 A** and, if required, **also with a current and voltage-controlled charge map** for lithium starter batteries, e.g. **VAS 5908 battery charger 90A**
- **9900 - PIWIS Tester 3**
- Torque wrench, 6 – 50 Nm (4.5 – 37 ftlb.), e.g. **VAG 1331A Torque wrench, 6-50 Nm (4.5-37 ftlb.)**
- **VAS 6494 - Torque screwdriver, 1.5-3 Nm (1-2 ftlb.)**
- Assembly wedge (commercially available)

Checking three-point belt, front (passenger side)

Work

Checking three-point belt, front (passenger side)

Procedure:

- 1 Insert three-point belt with the seat-belt fastener into the seat-belt buckle and lock it ⇒ *Closing three-point belt*.




Closing three-point belt

- 2 Pull the belt strap out completely ⇒ *Pulling out belt strap* in order to activate the child locking function (ALR automatic locking retractor).



Pulling out belt strap

- 3 Allow the belt strap to retract slowly, checking whether an audible click can be heard while it retracts ⇒ *Retracting belt strap*.

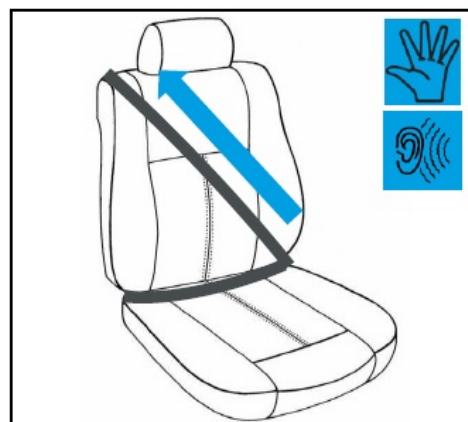


Retracting belt strap

- 4 As soon as the belt strap has retracted, check whether it can be pulled out completely again or is blocked ⇒ *Pulling out belt strap and checking belt locking system*.

When checking the three-point belt, if you discover that the **belt strap does not block**, the three-point belt must be replaced. To do this, continue with:

- ⇒ *Technical Information '270689 Replacing front three-point belt (passenger's side) (Coupé)' or*
- ⇒ *Technical Information '270689 Replacing front three-point belt (passenger's side) (Targa)' or*
- ⇒ *Technical Information '270689 Replacing front three-point belt (passenger's side) (Cabriolet)'*

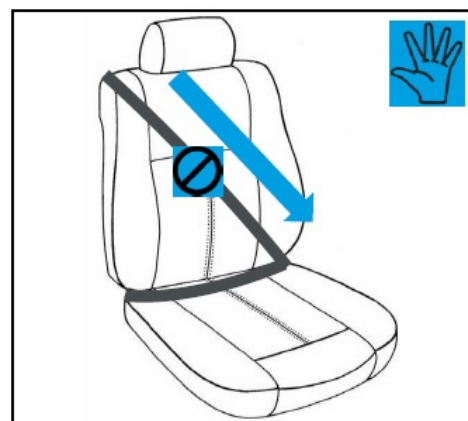

Pulling out belt strap and checking belt locking system

If the belt strap blocks and an audible click can be heard when the three-point belt retracts:

- **Repeat steps 1 to 4 four times**



Information

If the child-lock function does not comply with specifications once during the five checks, the three-point belt in question must be replaced.

If five tests confirm that the child locking function of the three-point belt works according to specifications, the three-point belt does **not** have to be replaced.

If the **three-point belt works according to specifications**, the campaign must be completed as follows:

- Enter the campaign in the Warranty and Maintenance booklet
- End of remedial action

Replacing front three-point belt (passenger's side) (Coupé)



Incorrect handling of seat-belt pretensioner unit

- Triggering of seat-belt pretensioner unit
- ⇒ Observe safety regulations for handling seat-belt pretensioner units. ⇒ *Workshop Manual '6X00IN Safety regulations for handling airbag and seat-belt pretensioner units'*
- ⇒ Observe disposal regulations for seat-belt pretensioner units. ⇒ *Workshop Manual '6X00IN Disposal of airbag and seat-belt pretensioner units'*
- ⇒ After disconnecting the battery, wait 1 minute before disconnecting the seat-belt pretensioner unit.
- ⇒ Remove ignition key and disconnect the battery. Route or insulate the ground strap so that all contact with a ground carrier is avoided. ⇒ *Workshop Manual '2X00IN Work instructions after disconnecting the battery'*
- ⇒ If removed for an extended period, the seat-belt pretensioner unit must be stored in a safe place.
- ⇒ Transport the seat-belt pretensioner unit in such a way that the belt strap can retract safely if it is actuated.



Information

- The seat-belt pretensioner may only be installed when the ground cable of the vehicle battery is disconnected.
- The vehicle battery may only be re-connected after the seat belt has been re-installed.


Information

Dispose of replaced and non-ignited airbag and seat-belt pretensioner units in accordance with local legal requirements and transport regulations.

 Work
 Procedure:

Preparatory work

- 1 Remove cover (technical equipment space).
⇒ *Workshop Manual '852219 Removing and installing cover (technical equipment space)'*
- 2 Loosen battery ground strap.
⇒ *Workshop Manual '978509 Loosening and securing ground strap for battery'*
- 3 Remove B-pillar trim panel.
⇒ *Workshop Manual '706719 Removing and installing B-pillar trim panel'*
- 4 Remove inner door sill trim.
⇒ *Workshop Manual '680519 Removing and installing the inner door sill trim'*
- 5 Remove rear belt lock.
⇒ *Workshop Manual '692519 Removing and installing rear belt lock'*
- 6 Remove rear seat cushion.
⇒ *Workshop Manual '745719 Removing and installing rear seat cushions'*
- 7 Remove rear headliner.
⇒ *Workshop Manual '708519 Removing and installing rear headliner'*
- 8 Remove C-pillar trim panel.
⇒ *Workshop Manual '706819 Removing and installing C-pillar trim panel'*
- 9 Remove rear side trim panel.
⇒ *Workshop Manual '707519 Removing and installing rear side trim panel'*

Replacing front three-point belt (passenger's side)

- Replace front three-point belt (passenger's side).
For instructions see:
⇒ *Workshop Manual '69111901 Removing and installing front three-point belt (Coupé)'*
and
⇒ *Workshop Manual '691155 Replacing front three-point belt'*

 Work
 Procedure:

Concluding work

- 1 Install rear side trim panel.
⇒ *Workshop Manual '707519 Removing and installing rear side trim panel'*

- 2 Install C-pillar trim panel.
⇒ *Workshop Manual '706819 Removing and installing C-pillar trim panel'*
- 3 Install rear headliner.
⇒ *Workshop Manual '708519 Removing and installing rear headliner'*
- 4 Install rear seat cushion.
⇒ *Workshop Manual '745719 Removing and installing rear seat cushions'*
- 5 Install rear belt lock.
⇒ *Workshop Manual '692519 Removing and installing rear belt lock'*
- 6 Install inner door sill trim.
⇒ *Workshop Manual '680519 Removing and installing inner door sill trim'*
- 7 Install B-pillar trim panel.
⇒ *Workshop Manual '706719 Removing and installing B-pillar trim panel'*
- 8 Secure battery ground strap.
⇒ *Workshop Manual '978509 Loosening and securing ground strap for battery'*
- 9 Follow work instructions after disconnecting the battery.
⇒ *Workshop Manual '2X00IN Work instructions after disconnecting the battery'*
- 10 Install cover (technical equipment space).
⇒ *Workshop Manual '852219 Removing and installing cover (technical equipment space)'*
- 11 Enter the campaign in the Warranty and Maintenance booklet.

Replacing front three-point belt (passenger's side) (Cabriolet)



WARNING

Incorrect handling of seat-belt pretensioner unit

- Triggering of seat-belt pretensioner unit
- ⇒ Observe safety regulations for handling seat-belt pretensioner units. ⇒ *Workshop Manual '6X00IN Safety regulations for handling airbag and seat-belt pretensioner units'*
- ⇒ Observe disposal regulations for seat-belt pretensioner units. ⇒ *Workshop Manual '6X00IN Disposal of airbag and seat-belt pretensioner units'*
- ⇒ After disconnecting the battery, wait 1 minute before disconnecting the seat-belt pretensioner unit.
- ⇒ Remove ignition key and disconnect the battery. Route or insulate the ground strap so that all contact with a ground carrier is avoided. ⇒ *Workshop Manual '2X00IN Work instructions after disconnecting the battery'*

- ⇒ If removed for an extended period, the seat-belt pretensioner unit must be stored in a safe place.
- ⇒ Transport the seat-belt pretensioner unit in such a way that the belt strap can retract safely if it is actuated.



Incorrect handling of safety bolts

- Danger of injury
 - Loss of torque
- ⇒ Always use new fastening screws and nuts following removal.
 - ⇒ Carry out a visual inspection of parts used.
 - ⇒ Observe specified tightening torques.
 - ⇒ Observe specified tightening sequence.



Information

Dispose of replaced and non-ignited airbag and seat-belt pretensioner units in accordance with local legal requirements and transport regulations.



Information

- The seat-belt pretensioner may only be installed when the ground cable of the vehicle battery is disconnected.
- The vehicle battery may only be re-connected after the seat belt has been re-installed.

Work
Procedure:

Preparatory work

- 1 Remove cover (technical equipment space).
⇒ *Workshop Manual '852219 Removing and installing cover (technical equipment space)'*
- 2 Loosen battery ground strap.
⇒ *Workshop Manual '978509 Loosening and securing ground strap for battery'*
- 3 Remove inner door sill trim.
⇒ *Workshop Manual '680519 Removing and installing the inner door sill trim'*
- 4 Remove rear belt lock.
⇒ *Workshop Manual '692519 Removing and installing rear belt lock'*
- 5 Remove rear seat cushion.
⇒ *Workshop Manual '745719 Removing and installing rear seat cushions'*

- 6 Remove rear side trim panel.
⇒ *Workshop Manual '70751915 Removing and installing rear side trim panel'*

Work
Procedure:

Replacing front three-point belt (passenger's side)

- Replace front three-point belt (passenger's side).
For instructions see:
⇒ *Workshop Manual '69111915 Removing and installing front three-point belt (Cabrio)'*
and
⇒ *Workshop Manual '691155 Replacing front three-point belt'*

Work
Procedure:

Concluding work

- 1 Install rear side trim panel.
⇒ *Workshop Manual '70751915 Removing and installing rear side trim panel'*
- 2 Install rear seat cushion.
⇒ *Workshop Manual '745719 Removing and installing rear seat cushions'*
- 3 Install rear belt lock.
⇒ *Workshop Manual '692519 Removing and installing rear belt lock'*
- 4 Install inner door sill trim.
⇒ *Workshop Manual '680519 Removing and installing inner door sill trim'*
- 5 Install B-pillar trim panel.
⇒ *Workshop Manual '706719 Removing and installing B-pillar trim panel'*
- 6 Secure battery ground strap.
⇒ *Workshop Manual '978509 Loosening and securing ground strap for battery'*
- 7 Follow work instructions after disconnecting the battery.
⇒ *Workshop Manual '2X00IN Work instructions after disconnecting the battery'*
- 8 Install cover (technical equipment space).
⇒ *Workshop Manual '852219 Removing and installing cover (technical equipment space)'*
- 9 Enter the campaign in the Warranty and Maintenance booklet.

Replacing front three-point belt (passenger's side) (Targa)



WARNING

Incorrect handling of seat-belt pretensioner unit

- **Triggering of seat-belt pretensioner unit**

- ⇒ Observe safety regulations for handling seat-belt pretensioner units. ⇒ *Workshop Manual '6X00IN Safety regulations for handling airbag and seat-belt pretensioner units'*
- ⇒ Observe disposal regulations for seat-belt pretensioner units. ⇒ *Workshop Manual '6X00IN Disposal of airbag and seat-belt pretensioner units'*
- ⇒ After disconnecting the battery, wait 1 minute before disconnecting the seat-belt pretensioner unit.
- ⇒ Remove ignition key and disconnect the battery. Route or insulate the ground strap so that all contact with a ground carrier is avoided. ⇒ *Workshop Manual '2X00IN Work instructions after disconnecting the battery'*
- ⇒ If removed for an extended period, the seat-belt pretensioner unit must be stored in a safe place.
- ⇒ Transport the seat-belt pretensioner unit in such a way that the belt strap can retract safely if it is actuated.



WARNING

Incorrect handling of safety bolts

- Danger of injury
- Loss of torque
- ⇒ Always use new fastening screws and nuts following removal.
- ⇒ Carry out a visual inspection of parts used.
- ⇒ Observe specified tightening torques.
- ⇒ Observe specified tightening sequence.



Information

Dispose of replaced and non-ignited airbag and seat-belt pretensioner units in accordance with local legal requirements and transport regulations.



Information

- The seat-belt pretensioner may only be installed when the ground cable of the vehicle battery is disconnected.
- The vehicle battery may only be re-connected after the seat belt has been re-installed.

Work
Procedure:

Preparatory work

- 1 Remove cover (technical equipment space).
⇒ *Workshop Manual '852219 Removing and installing cover (technical equipment space)'*
- 2 Loosen battery ground strap.
⇒ *Workshop Manual '978509 Loosening and securing ground strap for battery'*

- 3 Remove trim panel for roll-over bar.
⇒ *Workshop Manual '70811910 Removing and installing trim panel for roll-over bar'*
- 4 Remove rear cover.
⇒ *Workshop Manual '70531910 Removing and installing rear cover'*
- 5 Remove belt strap guide.
⇒ *Workshop Manual '69261911 Removing and installing belt strap guide - section on "Removing"*
- 6 Remove inner door sill trim.
⇒ *Workshop Manual '680519 Removing and installing the inner door sill trim'*
- 7 Remove rear belt lock.
⇒ *Workshop Manual '692519 Removing and installing rear belt lock'*
- 8 Remove rear seat cushion.
⇒ *Workshop Manual '745719 Removing and installing rear seat cushions'*
- 9 Remove rear side trim panel.
⇒ *Workshop Manual '70751910 Removing and installing rear side trim panel'*

Work
Procedure:

Replacing front three-point belt (passenger's side)

- Replace front three-point belt (passenger's side).
For instructions see:
⇒ *Workshop Manual '69111911 Removing and installing front three-point belt'*
and
⇒ *Workshop Manual '691155 Replacing front three-point belt'*

Work
Procedure:

Concluding work

- 1 Install rear side trim panel.
⇒ *Workshop Manual '70751915 Removing and installing rear side trim panel'*
- 2 Install rear seat cushions.
⇒ *Workshop Manual '70751910 Removing and installing rear side trim panel'*
- 3 Install rear belt lock.
⇒ *Workshop Manual '692519 Removing and installing rear belt lock'*
- 4 Install inner door sill trim.
⇒ *Workshop Manual '680519 Removing and installing inner door sill trim'*
- 5 Install belt strap guide.
⇒ *Workshop Manual '69261911 Removing and installing belt strap guide'*

- 6 Install rear cover.
⇒ *Workshop Manual '70531910 Removing and installing rear cover'*
- 7 Install trim panel for roll-over bar.
⇒ *Workshop Manual '70811910 Removing and installing trim panel for roll-over bar'*
- 8 Secure battery ground strap.
⇒ *Workshop Manual '978509 Loosening and securing ground strap for battery'*
- 9 Follow work instructions after disconnecting the battery.
⇒ *Workshop Manual '2X00IN Work instructions after disconnecting the battery'*
- 10 Install cover (technical equipment space).
⇒ *Workshop Manual '852219 Removing and installing cover (technical equipment space)'*
- 11 Enter the campaign in the Warranty and Maintenance booklet.

Warranty processing

Scope 1: **Checking three-point belt**

Checking three-point belt Includes: Checking three-point belt ⇒ Damage Code AMB6 99 000 1	Labor time: 29 TU
--------------------------------------------------------------------------------------------------------------	--------------------------

Scope 2-27: Not relevant for this vehicle type.

Scope 28: **Checking and replacing front three-point belt (passenger's side)**

- 911 Coupé

Checking and replacing front three-point belt (passenger's side) Includes: Checking three-point belt Replacing front three-point belt (passenger's side) – teaching seat-belt pretensioner Select the relevant version (color) of the three-point belt and specify it in the warranty claim. For M-no. 4QR	Labor time: 145 TU						
<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 35%;">Required part numbers:</td> <td style="width: 40%;">Designation</td> <td style="width: 25%;"></td> </tr> <tr> <td></td> <td style="text-align: center;">– Use</td> <td style="text-align: right;">Qty.</td> </tr> </table>	Required part numbers:	Designation			– Use	Qty.	
Required part numbers:	Designation						
	– Use	Qty.					

992857706M A23	⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M 1S1	⇒ Three-point seat belt, Racing Yellow – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M N13	⇒ Three-point seat belt, Guards Red – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M OG6	⇒ Three-point seat belt, Bordeaux Red – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M OI9	⇒ Three-point seat belt, Atacama Beige – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M OL8	⇒ Three-point seat belt, Chalk – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M OS1	⇒ Three-point seat belt, Truffle Brown – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M OX6	⇒ Three-point seat belt, Agave Green – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M U01	⇒ Three-point seat belt, sliver – front (passenger's side) – M-no. 4QR	1 ea.
or for M-no. 4QQ		

992857706J N13	⇒ Three-point seat belt, Guards Red – front (passenger's side) – M-no. 4QQ	1 ea.
or		
992857706J OI9	⇒ Three-point seat belt, Atacama Beige – front (passenger's side) – M-no. 4QQ	1 ea.
or		
992857706J U01	⇒ Three-point seat belt, sliver – front (passenger's side) – M-no. 4QQ	1 ea.
Additional parts required for replacing the three-point belt		
9A700775500	⇒ Cylinder screw, M12 x 14 x 18 – belt installing	1 ea.
N 91026201	⇒ Hexagonal nut, M10 – seat-belt lock (rear)	2 ea.
N 98925801	⇒ Cylinder screw, 7/16 - 20UNFX42 – Belt installing (rear)	1 ea.
992885731A	⇒ Bolts – C-pillar trim panel	1 ea.
N 98926102	⇒ Cylinder screw, 7/16"-20 x 32 – belt reel	1 ea.
99951603201	⇒ Hexagon nut, M6 – Belt installing	1 ea.
For M-no. Also use 4QE or 4QQ (REVERSIBLE SEAT-BELT PRETENSIONERS)		
N 91096701	⇒ Internal hexagon round/oval-head screw, M6 x 16 – Belt reel (top)	1 ea.
⇒ Damage Code AMB6 99 000 2		

Scope 29: **Checking and replacing front three-point belt (passenger's side)**

- 911 Targa

Checking and replacing front three-point belt (passenger's side)

Labor time: **157 TU**

Includes: Checking three-point belt
 Replacing front three-point belt (passenger's side)
 – teaching seat-belt pretensioner

Select the relevant version (color) of the three-point belt and specify it in the warranty claim.

For M-no. 4QR

Required part numbers:	Designation – Use	Qty.
992857706M A23	⇒ Three-point seat belt, black – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M 1S1	⇒ Three-point seat belt, Racing Yellow – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M N13	⇒ Three-point seat belt, Guards Red – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M OG6	⇒ Three-point seat belt, Bordeaux Red – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M OI9	⇒ Three-point seat belt, Atacama Beige – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M OL8	⇒ Three-point seat belt, Chalk – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M OS1	⇒ Three-point seat belt, Truffle Brown – front (passenger's side) – M-no. 4QR	1 ea.
or		

992857706M OX6	⇒ Three-point seat belt, Agave Green – front (passenger's side) – M-no. 4QR	1 ea.
or		
992857706M U01	⇒ Three-point seat belt, sliver – front (passenger's side) – M-no. 4QR	1 ea.
or for M-no. 4QQ		
992857706J N13	⇒ Three-point seat belt, Guards Red – front (passenger's side) – M-no. 4QQ	1 ea.
or		
992857706J OI9	⇒ Three-point seat belt, Atacama Beige – front (passenger's side) – M-no. 4QQ	1 ea.
or		
992857706J U01	⇒ Three-point seat belt, sliver – front (passenger's side) – M-no. 4QQ	1 ea.
Additional parts required for replacing the three-point belt		
9A700775500	⇒ Cylinder screw, M12 x 14 x 18 – belt installing	1 ea.
N 91026201	⇒ Hexagonal nut, M10 – seat-belt lock (rear)	2 ea.
992885731A	⇒ Bolts – Rear side trim panel	1 ea.
N 98926102	⇒ Cylinder screw, 7/16"-20 x 32 – belt reel	1 ea.
99951603201	⇒ Hexagon nut, M6 – Belt installing	1 ea.
For M-no. Also use 4QE or 4QQ (REVERSIBLE SEAT-BELT PRETENSIONERS)		
N 91096701	⇒ Internal hexagon round/oval-head screw, M6 – Belt reel (top)	1 ea.
⇒ Damage Code AMB6 99 000 2		

Scope 30: **Checking and replacing front three-point belt (passenger's side)**

- 911 Cabriolet

Checking and replacing front three-point belt (passenger's side)

Labor time: **120 TU**

Includes: Checking three-point belt
 Replacing front three-point belt (passenger's side)
 – teaching seat-belt pretensioner

Select the relevant version (color) of the three-point belt and specify it in the warranty claim.

For M-no. 4QR

Required part numbers:	Designation – Use	Qty.
992857706P A23	⇒ Three-point seat belt, black – front (passenger's side)	1 ea.
or		
992857706P 1S1	⇒ Three-point seat belt, Racing Yellow – front (passenger's side)	1 ea.
or		
992857706P N13	⇒ Three-point seat belt, Guards Red – front (passenger's side)	1 ea.
or		
992857706P OG6	⇒ Three-point seat belt, Bordeaux Red – front (passenger's side)	1 ea.
or		
992857706P OI9	⇒ Three-point seat belt, Atacama Beige – front (passenger's side)	1 ea.
or		
992857706P OL8	⇒ Three-point seat belt, Chalk – front (passenger's side)	1 ea.
or		
992857706P OS1	⇒ Three-point seat belt, Truffle Brown – front (passenger's side)	1 ea.
or		
992857706P OX6	⇒ Three-point seat belt, Agave Green – front (passenger's side)	1 ea.
Additional parts required for replacing the three-point belt		
9A700775500	⇒ Cylinder screw, M12 x 14 x 18 – belt installing	1 ea.

N 91026201	⇒ Hexagonal nut, M10 – seat-belt lock (rear)	2 ea.
992885731A	⇒ Bolts – Rear side trim panel	1 ea.
N 98926102	⇒ Cylinder screw, 7/16"-20 x 32 – belt reel	1 ea.
For M-no. Also use 4QE or 4QQ (REVERSIBLE SEAT-BELT PRETENSIONERS)		
N 91096701	⇒ Internal hexagon round/oval-head screw, M6 x 16 – Belt reel (top)	1 ea.
⇒ Damage Code AMB6 99 000 2		

Important Notice: Technical Bulletins issued by Porsche Cars North America, Inc. are intended only for use by professional automotive technicians who have attended Porsche service training courses. They are written to inform those technicians of conditions that may occur on some Porsche vehicles, or to provide information that could assist in the proper servicing of a vehicle. Porsche special tools may be necessary in order to perform certain operations identified in these bulletins. Use of tools and procedures other than those Porsche recommends in these bulletins may be detrimental to the safe operation of your vehicle, and may endanger the people working on it. Properly trained Porsche technicians have the equipment, tools, safety instructions, and know-how to do the job properly and safely. Part numbers listed in these bulletins are for reference only. The work procedures updated electronically in the Porsche PIWIS diagnostic and testing device take precedence and, in the event of a discrepancy, the work procedures in the PIWIS Tester are the ones that must be followed.

© 2021 Porsche Cars North America, Inc.