

The V.I.N. tag is broken into four sections. You will need to replace all four sections.

IMPORTANT: DO NOT APPLY NEW LABELS OVER THE EXISTING LABELS.

- 1. Locate sections 1, 2 and 4 on the driver's side of your unit, typically just above the baggage door. Remove sections 1, 2 and 4 from your sidewall using a plastic scraping tool being careful not to scratch your unit. You may use isopropanol alcohol to assist with adhesion removal if needed.
- 2. Locate sections 1, 2 and 4 in the new set you received in the mail, remove from backer and carefully place on side wall in the order you removed them.
- 3. Locate section 3 in the door jamb closest to the hinge of the entrance door. Remove section 3 from your door jamb using a plastic scraping tool, being careful not to scratch your unit. You may use isopropanol alcohol to assist with adhesion removal.
- 4. Remove section 3 from the backer and place on the inside of the door jamb.




Section 3 – Cargo capacities applied to the inside of the door jamb.



Section 4 – Federal ID

Section 1 – Capacity

Section 2- Tire information

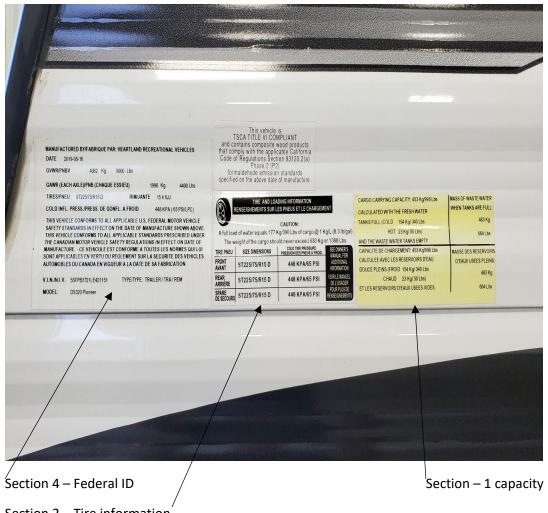

Section 2 – Tire information