



Repair Instructions:

MICRO MINNIE FLX SPARE TIRE CARRIER

Tools Needed: Torque wrench, Impact gun, 9/16" socket, 13/16" socket.

REPAIR INSTRUCTIONS:

Using the impact gun and 13/16" socket, remove nuts from spare tire and set tire aside. Remove the tire carrier bolts that attach it to the bumper with 9/16" socket and discard old parts EXCEPT U-BOLT.

Hold the new tire carrier into place and attach the U-bolts around the bumper and into the holes on the carrier.

Thread the U-bolt nuts onto the bolts enough to prevent the carrier from slipping but also so the carrier can still slide on the bumper.

Place spare tire onto the new carrier so that the upper lug goes through the hole and the lower one goes through the center of the rim.

Thread the tire nuts onto these bolts. Using the torque wrench, tighten the nuts to 65 ft-lbs.

Adjust carrier location as to not block taillights or license plate.

Once location is set, tighten the U-bolt nuts to 20 ft-lbs.