

# **HONDA** Service Bulletin



Applies To: **2007–11 CR-V** – ALL July 10, 2012

## **Exhaust System Squeaks**

(Supersedes 08-049, dated August 15, 2008, to revise the information marked by the black bars)

#### **REVISION SUMMARY**

In Applies To, the model year range was changed. Under SYMPTOM, additional information was added. Under PARTS INFORMATION, the part numbers were changed, and a new required part was added. Under REPAIR PROCEDURE, step 7 was changed.

#### SYMPTOM

The exhaust system squeaks when the engine rocks back and forth under the following conditions:

- The steering wheel is turned from lock to lock.
- The A/C is activated.
- The engine has any load applied.

© 2012 American Honda Motor Co., Inc. - All Rights Reserved

#### PROBABLE CAUSE

The front exhaust gasket is sticking to the front flange of the TWC (three way catalytic converter) inlet.

#### **CORRECTIVE ACTION**

Clean both flanges with an angle grinder and a Scotch-Brite™ Roloc™ surface conditioning disc, and replace the gaskets.

#### PARTS INFORMATION

**Exhaust Gasket:** 

P/N 18229-SWA-305

Gasket. Pre-chamber:

P/N 18393-SS0-J30 (2007-2009) P/N 18302-SP0-003 (2010-2011)

Self-locking Nut: (three required) P/N 90212-SA5-003

#### **REQUIRED MATERIALS**

Scotch-Brite Roloc Surface Conditioning Disc: (Medium abrasive [maroon] or equivalent) 3M P/N: 61-5001-4196-7

#### WARRANTY CLAIM INFORMATION

The normal warranty applies.

Operation Number: 3110A2 Flat Rate Time: 0.4 hour

P/N 18229-SLJ-023 Failed Part:

Defect Code: 03214 Symptom Code: 04205

Skill Level: Repair Technician



1 of 2

### **REPAIR PROCEDURE**

- 1. Raise the vehicle on a lift.
- 2. Support the TWC with a transmission jack.
- 3. Remove the exhaust flange nuts and bolts.
- 4. Remove the TWC, and discard both gaskets.
- 5. Place the TWC in a vise.
  - NOTE: Make sure not to bend the pipe or scratch it excessively.
- 6. Stuff a shop towel into the exhaust pipe to keep debris out. Use a 90-degree angle grinder with a Scotch-Brite Roloc surface conditioning disc to remove all old gasket material.

Clean the surface of the flange.



- 7. Install the TWC with new gaskets and new nuts. Torque the nuts to 33 N-m (25 lb-ft) and the bolts to 22 N·m (16 lb-ft).
  - NOTE: It may be necessary to walk the new exhaust gasket onto the primary catalyst, and then lightly tap the gasket into place.
- 8. Test-drive the vehicle to verify that the squeak is gone.

2 of 2 08-049