


Shown on model 209

- A1p13 Multifunction display
- A1r1 Instrument illumination brightness control and reset button
- S110s1 Scroll forward/back button
- S110s3 System selection button
- S111s1 Buttons + and - for setting specific functions and volume control

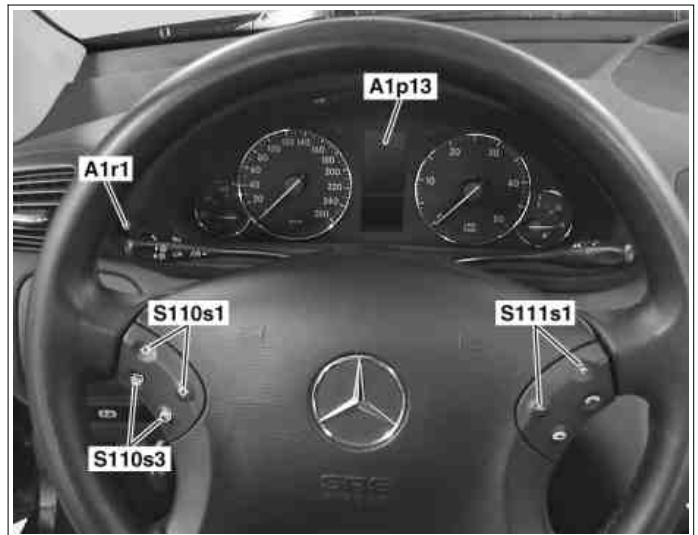

P54.30-9423-11

	Resetting		
1	Close trunk lid or liftgate as well as engine hood and doors	Vehicles with code (494) USA version	
2	Turn transmitter key in electronic ignition switch (EIS) control unit to position "1"		
3	Press system selection button (S110s3) repeatedly until basic display "kilometer reading or temperature display" or "speed display" is shown in multifunction display (A1p13)		
4	Briefly press the instrument illumination brightness control and reset button (A1r1) 3 times	<b>i</b> An acoustic signal can be heard and the voltage is shown in the multifunction display (A1p13).	
5	Turn transmitter key in electronic ignition switch (EZS) control unit to position "2"		
6	Press lower scroll forward/back button (S110s1)	<b>i</b> The "Service indicator" appears in the multifunction display (A1p13).	
7	Press instrument illumination brightness control and reset button (A1r1) once briefly	<b>i</b> The menu "Oil type" for selecting the specification of the engine oil used appears in the multifunction display (A1p13).	
8	Select the engine oil grade used by pressing the + and - buttons, setting of specific functions and volume control (S111s1).	Vehicles with spark ignition engine and oil selection. <b>i</b> To achieve the maximum service interval, engine oil which complies with Specifications for Operating Fluids, Sheet 229.5 must be used and confirmed. <b>i</b> The selection option can vary depending on the engine.	
9	Press upper scroll forward/back button (S110s1) to confirm	<b>i</b> "Confirm oil reset, press R button for 3 s" appears in the multifunction display (A1p13).	
10	Press and hold down instrument illumination brightness control and reset button (A1r1) for 3 s	<b>i</b> "Service confirmed" appears in the multifunction display (A1p13).	
11	Press upper scroll forward/back button (S110s1)	<b>i</b> The "Service indicator" appears in the multifunction display (A1p13).	
12	Press upper system selection button (S110s3)	<b>i</b> The basic display "kilometer reading or temperature display" or the "speed display" appears in the multifunction display (A1p13).	
13	Turn transmitter key in electronic ignition switch (EZS) control unit to position "0"		