


- A1p13 Multifunction display
- A1s3 Trip odometer reset button
- S110s1 Scroll forward/back button
- S110s3 System selection button
- S111s1 Buttons + and - for setting specific functions and volume control

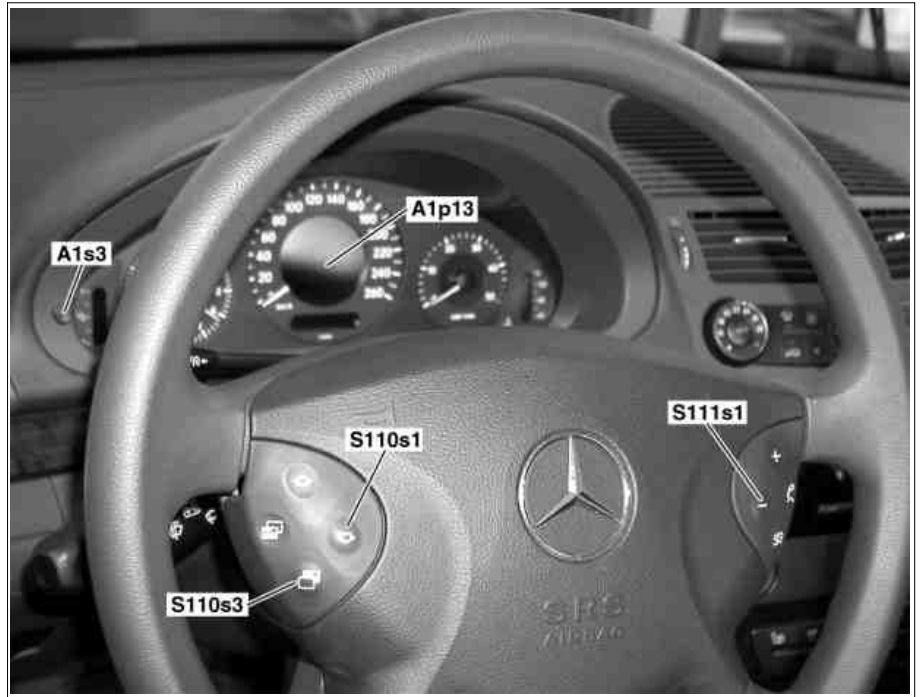

P54.30-6741-06

	Resetting		
1	Close trunk lid or liftgate as well as engine hood and doors	Vehicles with code (494) USA version	
2	Turn transmitter key in electronic ignition switch (EIS) control unit to position "1"		
3	Press system selection button (S110s3) repeatedly until the basic display "kilometer reading or temperature display" or speed display is shown in the multifunction display (A1p13)		
4	Briefly press trip odometer reset button (A1s3) 3 times.	i An acoustic signal can be heard and the voltage is shown in the multifunction display (A1p13).	
5	Press lower scroll forward/back button (S110s1)	i The "Service menu" appears in the multifunction display (A1p13).	
6	Press buttons + and -, setting of specific functions and volume control (S111s1) repeatedly and select "Confirmation" menu item		
7	Press lower system selection button (S110s3) to confirm.	i "Confirmation" appears in the multifunction display (A1p13) and the menu item "Complete service" is highlighted.	
8	Press lower system selection button (S110s3) to confirm.	i "Service confirmed" appears in the multifunction display (A1p13).	
9	Press the top system selection button (S110s3) repeatedly until the "Service menu" is shown in the multifunction display (A1p13)		
10	Using the + and - buttons, setting of specific functions and volume control (S111s1) select the menu item "Special work"		
11	Press lower system selection button (S110s3) to confirm.		
12	Using the + and - buttons, setting of specific functions and volume control (S111s1), select menu item "Service 13"		
13	Press lower system selection button (S110s3) to confirm.		
14	Select the engine oil grade used by pressing the + and - buttons, setting of specific functions and volume control (S111s1).	Vehicles with spark ignition engine and oil selection.	

		i To achieve the maximum service interval, engine oil which complies with Specifications for Operating Fluids, Sheet 229.5 must be used and confirmed.	
15	Press lower system selection button (S110s3) to confirm.	i The message "Position confirmed" appears in the multifunction display (A1p13).	
16	Press upper system selection button (S110s3) repeatedly until basic display "kilometer reading or temperature display" or "speed display" is shown in multifunction display (A1p13)		
17	Turn transmitter key in electronic ignition switch (EZS) control unit to position "0"		