

Model 453

Shown: model 453 with code K35  
(Instrument cluster with monochrome display)

- 1 Multifunction display
- 2 OK button
- 3 Scroll forward button



P00.20-2904-06

Shown: model 453 with code K36  
(Instrument cluster with 8.9 cm (3.5") color display)

- 1 Multifunction display
- 2 OK button
- 3 Scroll forward button



P00.20-2827-06

	Preparatory activity		
1	Close front-end flap, doors and liftgate		
	<b>Read out maintenance data</b>		
2	Switch electronic ignition lock control unit to position "1" (circuit 15R)	<b>i</b> There must be no fault messages in the multifunction display (1).	
3	Press Scroll forward button (3) repeatedly until standard display "Trip distance/total distance" appears in multifunction display (1)	<b>i</b> Kilometer or mileage reading must be noted in the reception report.	

4	Use Scroll forward button (3) to select "Messages and service" menu page on multifunction display (1)	<p><b>i</b> The number of wrench symbols that appear on the multifunction display (1) indicates the service which is due: One wrench symbol for service A, 2 wrench symbols for service B.</p> <p><b>i</b> Service A or B must be noted in the reception report.</p>	
	<b>Reset service indicator</b>		
5	Press and hold OK button (2) until wrench symbol flashes on "Messages and service" menu page on multifunction display (1) and then keep depressed for another 20 s	<p><b>i</b> If the OK button (2) is held down for another 20 s after the wrench symbol starts to flash on the multifunction display (1), the service interval indicator is reset and country-specific intervals are displayed.</p>	
	<b>Finishing activity</b>		
6	Switch electronic ignition lock control unit to position "0"		