



Alternator Testing With the GR8 Alternator/Starter Tester (AST)

(Replaces 10-033, Service Manual Update: Alternator Testing, dated September 14, 2011)

(Supersedes 12-001, dated February 27, 2013, to revise the information marked by the black bars)

REVISION SUMMARY

In Applies To, added 2015 and 2016 model years.

BACKGROUND

The GR8 AST is capable of testing alternators. All warranty repairs to the alternator require your dealership to use the GR8 AST.

REQUIRED TOOLS

GR8 Alternator/Starter Tester (AST):

P/N MTRA270A (AST Module only)

Go to **iN > Service > Service Bay > Diagnostic Tools Software Versions** for the latest GR8 AST software version.

TOOL REQUIREMENTS

The GR8 software must be updated within 3 days of a new software update release.


Refer to S/B 09-034, *GR8 Battery Diagnostic Station Update Information*.

WARRANTY CLAIM INFORMATION

OP#	Description	FRT
118100	Replace alternator	See flat rate table
118100F	Test alternator using GR8 AST tester	0.2 hour

- Failed Part: Use original equipment part
- Defect Code: 03214
- Symptom Code: 06702
- Skill Level: Repair Technician
- DTC: Enter 15-digit test code into claim

- Alternator warranty claims are not accepted without the 15-digit test code from the GR8 AST.
- If any alternator claim is returned unpaid it may have one of the following codes:
 - Error code 2020 - one or more DTC fields are incomplete.
 - Error code 202 - no problem found on alternator test.
 - Error code 2022 - alternator test was done before repair order was opened.
 - Error code 2023 - repair order was closed before alternator test was done.
- For all DTC codes resulting in alternator replacement, you must do the alternator test to obtain the 15-digit test code.
- Enter the 15-digit code into warranty claim Diagnostic Trouble Codes fields one, two, and three.

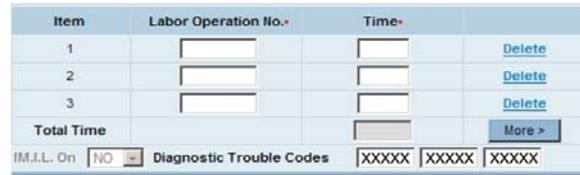

- The alternator test printout that states **REPLACE ALTERNATOR** must be attached to the repair order or the warranty claim will be subject to debit.
- The alternator claim will be returned to the dealership unpaid with an error code if the tester print-out does not state **REPLACE ALTERNATOR**.
- Any alternator replaced must have a warranty claim tag attached to it.
- If you have an alternator under warranty that needs replacement for a non-electrical defect (noise or seized), contact your District Parts and Service Manager (DPSM) for help.



CLIENT INFORMATION: The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by “do-it-yourselfers,” and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Acura automobile dealer.


REPAIR PROCEDURE

ALTERNATOR TEST


1. Ask the client to describe the events that led up to the problem. Many charging system complaints are caused by leaving the headlights or interior lights on, headlight flicker (a normal condition), or installing aftermarket accessories with a high parasitic draw that drains the battery.
2. Visually inspect the alternator and battery cables and grounding straps to confirm that the connections are clean and tight. If there are any damaged parts or loose connections, repair them as needed.
3. Place the GR8 AST by the driver's side front tire.
NOTE: Make sure the engine is at normal operating temperature before testing. If not, hold the engine speed at 3,000 rpm in Park (P) or Neutral (N) until the radiator fan comes on twice, then let it idle.




4. With the engine OFF, turn the GR8 ON, and connect it to the vehicle:
 - Connect the negative (-) lead to the negative battery terminal.
 - Connect the positive (+) lead to the positive battery terminal.
5. In the main menu, scroll over to the SYSTEM icon, and press the SELECT key.

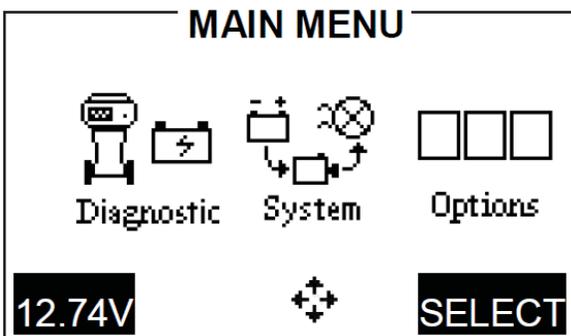


6. Use the arrow or numerical keys to select TECHNICIAN ID, and press NEXT to continue.

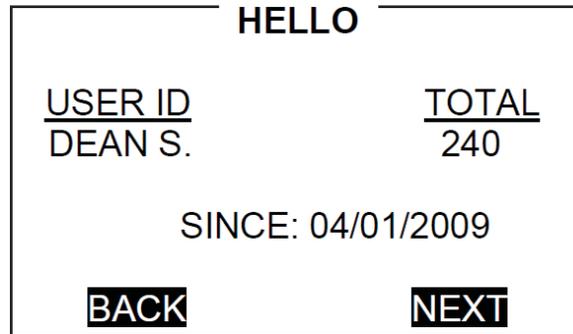

7. Select the type of vehicle being tested.

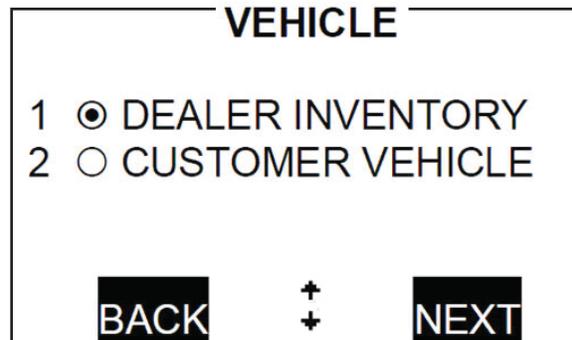

8. When prompted, verify that the test cables and clamps are in good working order, and press NEXT to continue.
9. Scroll up or down to select the model year of the vehicle being tested, and press NEXT to continue.

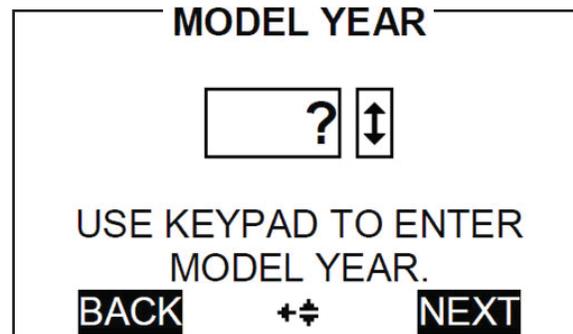

- Remove the control module from the top of the GR8, and take it into the vehicle. Press NEXT to continue.



- When prompted, turn the ignition switch to ON (II). Make sure all electrical loads are off at this time then press NEXT.

STARTER TEST

TURN IGNITION ON BUT
DO NOT START VEHICLE.

TURN ALL LOADS
OFF.

BACK **NEXT**

- Start the engine, and follow the prompts on the next few screens.

- When prompted, rev the engine to 3,000–3,500 rpm until the tester tells you to HOLD the rpm level.

TESTING

REV ENGINE TO
3000-3500 RPM



HOLD ENGINE RPM!

END

NOTE: If you do not rev the vehicle within the first 10 seconds, or the tool cannot detect the engine speed, you will have to rev the engine to 3,000–3,500 rpm, hold at that rpm level, and hit NEXT to continue.

TESTING

REV ENGINE TO
3000-3500 RPM AND
PRESS NEXT WHILE
HOLDING ENGINE RPM

END **NEXT**

- While holding the rpm level, the tester will acquire data. Continue to closely follow the prompts until the test is complete.

TESTING

ACQUIRING DATA.....

HOLD ENGINE RPM
AT 3000-3500 RPM

PLEASE WAIT

- Turn the ignition switch to LOCK (0), and press NEXT to continue.
- Place the GR8 control module back on the GR8, and press NEXT to display the results.

23. Press PRINT to print the results.

SYSTEM TEST

Test Info
2011 ACURA
TL 3.5/4D
CCA 500
FLOODED

RESULTS

GOOD BATTERY
RATED: 500 CCA
MEASURED: 473 CCA
MEASURED VOLTS: 12.85
DEGREES F: 65

GOOD BATTERY



12.85V
473 CCA

BATTERY
TEST CODE
5UG34-LA013


MID INFO
09E5UP-RJ0000-0000000

STARTER TEST

RESULTS

CRANKING NORMAL

VOLTAGE: 11.00V
STARTING TIME: 1.04S

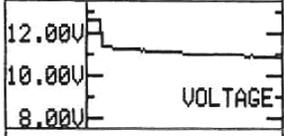

12.00V
10.00V
8.00V

VOLTAGE


STARTER CODE
3GEHJ-QP441-C3000

ALTERNATOR TEST

RESULTS

BAD ALTERNATOR
REPLACE
ALTERNATOR.

NO LOAD	LOADED
14.02V	12.95V
25.5A	130.0A

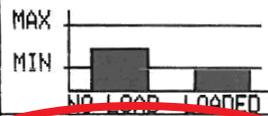

MAX
MIN

NO LOAD LOADED

ALTERNATOR CODE
07N5Q-44W41-00NQB

User ID: TECH 1

15-DIGIT TEST CODE