



Procedure: L140-03.04

Operation: BJA control unit replacement

- 1.1 It is recommended to have two rigid plastic (long, flat) blades available.
- 1.2 Insert the two blades in the two sides of the Bja control unit in the car (see yellow arrows in fig.1)
- 1.3 Gently lever the control unit out (be careful not to damage the leather facing).
- 1.4 Position the control unit parallel to the console and press the part right in.
- 1.5 To confirm the part in question has been positioned correctly, make sure the controls work properly (e.g. the window moves).

fig. 1

