



TECHNICAL SERVICE BULLETIN

6.7L - Chassis Cab/DRW Pickup Only - Oil Consumption - Extended Idle Vehicles

19-2053
21 March
2019

Model:

Ford
2017-2019 F-Super Duty
2016-2019 F-650/F-750

Issue: Some 2017-2019 F-Super Duty chassis cab/dual rear wheel (DRW) pickup vehicles and 2016-2019 F-650/F-750 vehicles equipped with a 6.7L engine may exhibit an oil consumption concern in applications where the engine is idled for extended periods of time. This may be due to high crankcase pressure as a result of the crankcase ventilation filter element becoming restricted. To resolve the concern, replace the crankcase vent oil separator. The new crankcase vent oil separator appears different from the old crankcase vent oil separator as it no longer includes a serviceable filter element.

Action: Follow the service procedure steps to correct the condition on vehicles that meet all of the following criteria:

- 6.7L diesel engine
- One of the following vehicles:
 - 2016-2019 F-650/F-750
 - 2017-2019 F-Super Duty chassis cab
 - 2017-2019 F-Super Duty DRW pickup

Parts

Part Number	Description	Quantity
FC3Z-6A785-F	Crankcase Vent Oil Separator	1
W503275-S437	Left Fuel Supply Tube Bolts	2
W714647-S442	Fuel Injection Pump Supply Tube Assembly Bracket Stud	1

Warranty Status: Eligible Under Provisions Of New Vehicle Limited Warranty Coverage And Emissions Warranty Coverage Warranty/ESP coverage limits/policies/prior approvals are not altered by a TSB. Warranty/ESP coverage limits are determined by the identified causal part and verified using the OASIS part coverage tool.

Labor Times

Description	Operation No.	Time
2016-2019 F-650/F-750 6.7L: Replace The Crankcase Vent Oil Separator (Do Not Use With Any Other Labor Operations)	192053A	0.7 Hrs.
2017-2019 F-Super Duty 6.7L DRW: Replace The Crankcase Vent Oil Separator (Do Not Use With Any Other Labor Operations)	192053B	0.9 Hrs.

Repair/Claim Coding

Causal Part:	6A785
--------------	-------

Condition Code: 55

Tool List For F-Super Duty

Drive	Tool Name
1/4"	Ratchet
1/4"	Torque Wrench
1/4"	Power Tool
1/4"	3" Extension
1/4"	8 mm Socket
1/4"	10 mm Socket
	Trim Tool
	Knife
	Blow Tip

Tool List For F-650/F-750

Drive	Tool Name
1/4"	Ratchet
1/4"	Torque Wrench
1/4"	Power Tool
1/4"	3" Extension
1/4"	8 mm Socket
	Trim Tool

Service Procedure

1. Remove and discard the crankcase vent oil separator. Refer to Workshop Manual (WSM), Section 303-08.
2. Install a new crankcase vent oil separator. Refer to WSM, Section 303-08.
 - (1). The new crankcase vent oil separator appears different from the old crankcase vent oil separator as it no longer includes a serviceable filter element.

© 2019 Ford Motor Company
All rights reserved.

NOTE: The information in Technical Service Bulletins is intended for use by trained, professional technicians with the knowledge, tools, and equipment to do the job properly and safely. It informs these technicians of conditions that may occur on some vehicles, or provides information that could assist in proper vehicle service. The procedures should not be performed by "do-it-yourselfers". Do not assume that a condition described affects your car or truck. Contact a Ford or Lincoln dealership to determine whether the Bulletin applies to your vehicle. Warranty Policy and Extended Service Plan documentation determine Warranty and/or Extended Service Plan coverage unless stated otherwise in the TSB article. The information in this Technical Service Bulletin (TSB) was current at the time of printing. Ford Motor Company reserves the right to supersede this information with updates. The most recent information is available through Ford Motor Company's on-line technical resources.