Service Alert

Mazda North American Operations Irvine, CA 92618-2922



Subject:

2019 MAZDA3 SERVICE CAUTIONS FOR NEW AND REVISED FEATURES

Service Alert No.: SA-010/19

Last Issued: 06/13/2019

BULLETIN NOTES

This Service Alert supersedes the previously issued Service Alert(s) listed below: The changes are noted in Red

Previous Service Alert(s):	Date(s) Issued:
SA-010/19	06/07/19, 05/09/19,05/02/19, 04/25/19,04/11/19, 03/29/19, 03/21/19, 03/15/19,03/08/19, 03/06/19, 03/05/19, 02/25/19

APPLICABLE MODEL(S)/VINS

2019 Mazda3

DESCRIPTION

The new 2019 Mazda3 has new and revised features that are different from previous models, and may be difficult to understand. This Service Alert provides valuable information to support potential dealer and customer concerns.

Index

PDI fuse
Front Wiper Service Caution
i-ACTIVSENSE Switch
Traffic Sign Recognition (TSR)
MAZDA CONNECT Power Function
MAZDA CONNECT Center Display View
In-Vehicle Digital Owner's Manual
Navigation System
SIRIUSXM Data Service
Power Door Locks
Auxiliary Key
Transmitter Battery Saving Function
Keyless Entry Using Auxiliary Key
Rear Door Child Safety Locks Operation

Link Seat & Climate Control Temperatures

Seat Warmer Turns OFF

Page **1** of **26**

 Service Alert No.: SA-010/19
 Last Issued: 06/13/2019

Electric Parking Brake (EPB)
A/C Air Temperature Is Not Cold
Tire Pressure Monitoring System (TPMS)
Condition Based Maintenance
M-MDS (MDARS)
Part Replacement

Item	Service Information

Page 2 of 26

Fuse Block Fuse to be Installed at PDI (JM1 = Japan built) (Engine Compartment) 1. There is only one fuse removed at the factory that should be installed at PDI. It is fuse F27 (25A). The fuse is stored in the lid of the fuse box with the spare fuses. F1 F2 2. The current PDI form is wrong. It states there are two (2) fuses removed (F46 and F50) that should be installed. The form is being updated with this change. F19 F37 F21 F29 F22 F30 F38 F23 F31 F39 F24 F32 F40 F25 F33 F41 F34 F42 F43 F36 F44 Fuse to be Installed at PDI (3MZ = Mexico built) **Fuse Block** 1. There are two fuses removed at the factory that should be (Left Side) installed at PDI. They are fuse F27 (25A) and F15 (15A). 2. NOTE: On some vehicles, fuse F13 (15A) is being removed F12 instead of F15 at the factory. This causes the Commander switch to be inoperative. F11 F23 3. The F27 (25A) fuse is stored in the lid of the fuse box with the F22 F10 spare fuses. F21 F9 4. The F15 (15A) fuse is stored in the lower panel compartment on F20 the left side of the steering wheel. F8 F19 5. Go to SA-017/19 for details. F18 F7 F17 F6 F16 F4 F15 F3 15 A

Page 3 of 26

Service Alert No.: SA-010/19 Last Issued: 06/13/2019

Front Wiper Service Caution


- 1. Wiper arm park position is located under the hood.
- 2. When servicing front wipers, front wiper service mode is required or damage to wiper arms may occur (see Service Information).
- 3. If wiper arms are replaced, M-MDS is needed for wiper arm adjustment (see Service Information)
- 4. DO NOT use wiper arms as markers when in dealer inventory.

See Owner's Manual ->
Maintenance and Care >
Replacing Windshield Wiper
Blades

MGSS: WINDSHIELD WIPER ARM
AND BLADE ADJUSTMENT


Page 4 of 26

Service Alert No.: SA-010/19 Last Issued: 06/13/2019

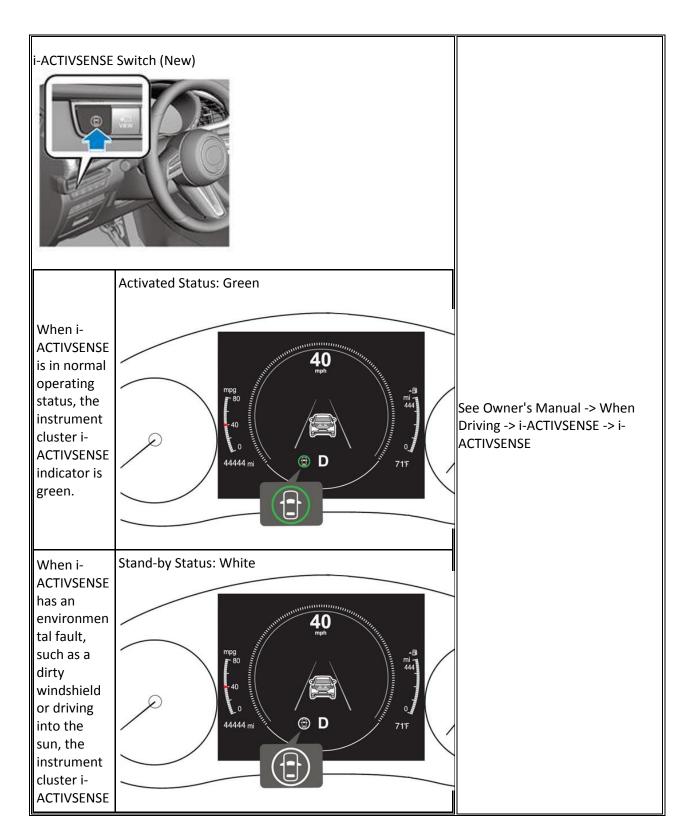

Page 5 of 26

 Service Alert No.:
 SA-010/19
 Last Issued:
 06/13/2019

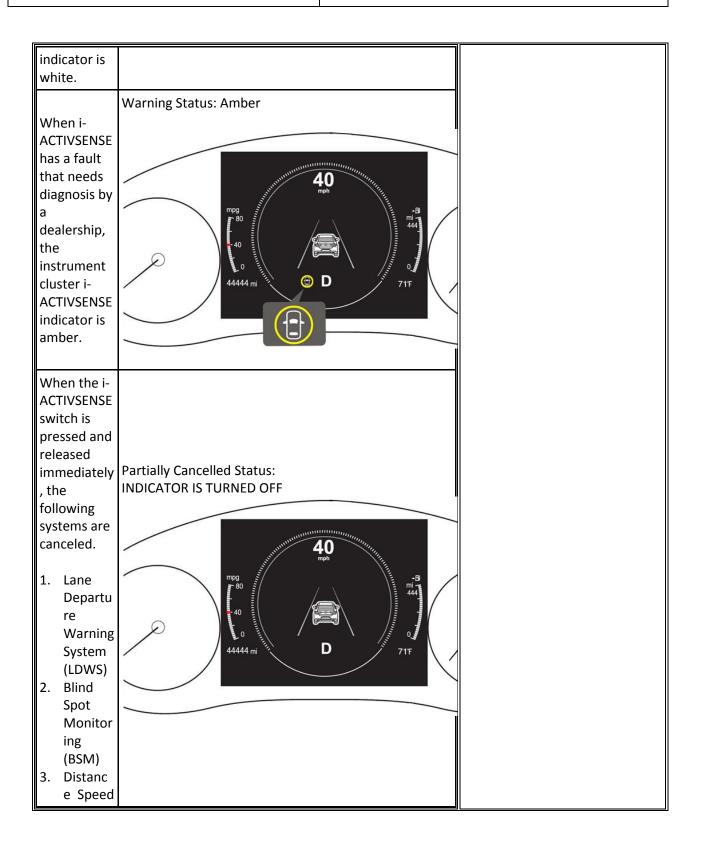


Page 6 of 26

Alert (DSA) 4. Rear Cross Traffic Alert (RCTA) 5. Lanekeep **Assist** System (LAS) To turn the system back to "Activated Status", press the i-**ACTIVSENSE** switch once. NOTE: If MRCC is used, the system will also return "Activated Status". When the i-**ACTIVSENSE** switch is pressed and held, all **Fully Cancelled Status:** systems are I-ACTIVSENSE INDICATOR IS OFF canceled. SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning System (LDWS)

Last Issued: 06/13/2019

Service Alert No.: SA-010/19

Page 7 of 26

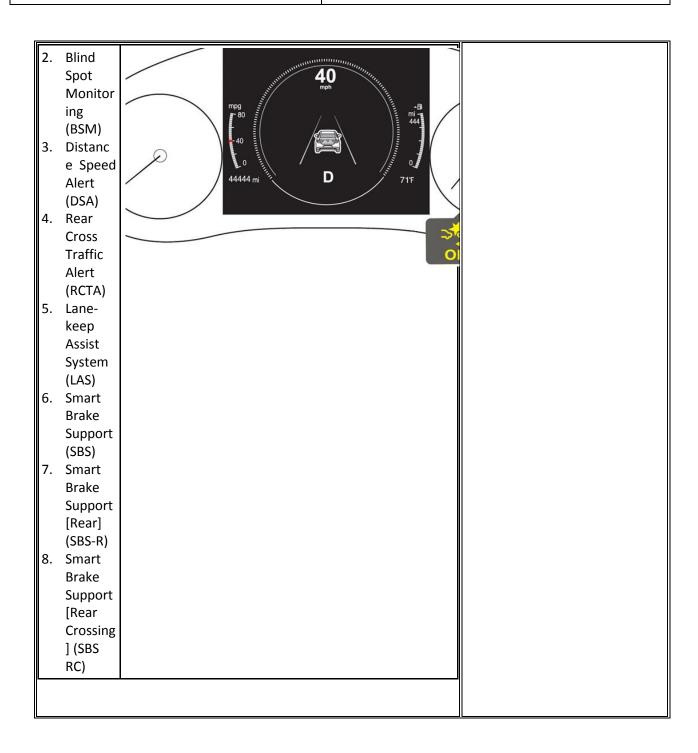

Page 8 of 26

Traffic Sign Recognition (TSR) *

Note:

- 1. TSR function is only available with a dealer installed in-vehicle navigation system accessory.
- 2. TSR function requires Forward Sensing Camera (FSC) recognition or navigation SD card map data when the vehicle is driven.**
- 3. TSR function is not displayed in the Active Driving Display.
- TSR function is disabled when Apple CarPlay[™] or Android Auto[™] is connected.


* Some models

No Function **MAZDA CONNECT** Speed Limit Alert OFF (Default Setting) Driving under the speed limit


See Owner's Manual -> When Driving -> i-ACTIVSENSE -> i-ACTIVSENSE -> Traffic Sign Recognition System (TSR)

MGSS: Traffic Sign Recognition (TSR)

Page **9** of **26**

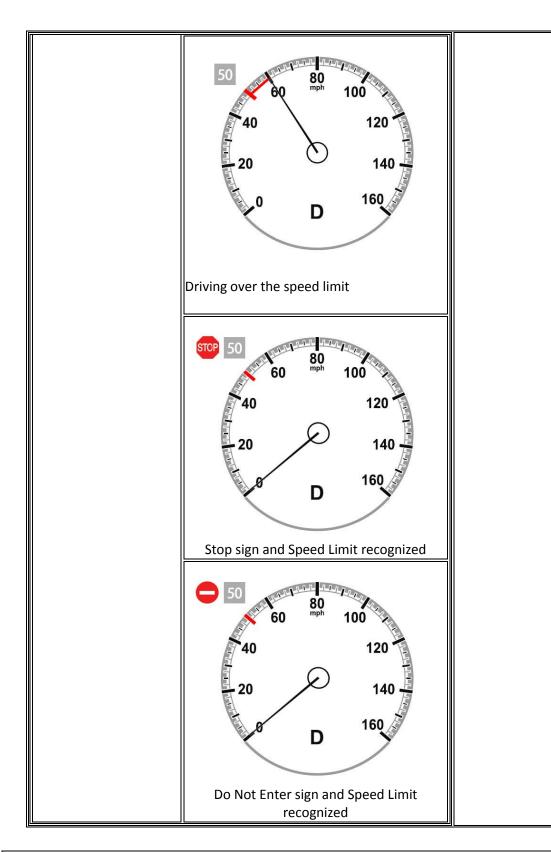

Page 10 of 26

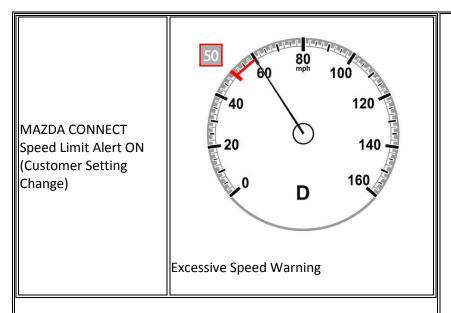

MAZDA CONNECT Speed Limit Alert Customer Settings

- 1. Speed Limit Alert Settings
 - 1. OFF
 - 2. Visual
 - 3. Visual + Audible
- 2. Speed Limit Alert Threshold
 - 1. 0 mph
 - 2. +5 mph
 - 3. +10 mph
- ** SD Card maps may contain information about the speed limits of the roads. The navigation system is able to warn driver if they exceed the current limit. This information may not be available in some areas or may not be fully correct for all roads on the map.

Page **11** of **26**

Service Alert No.: SA-010/19 Last Issued: 06/13/2019

MAZDA CONNECT New Power Off Function



1. Audio Mute - Short press the volume knob (Press again to cancel)

Power Off - Press and hold the volume knob (Press and hold again to Power ON)



See Owner's Manual -> Interior Features -> Mazda Connect

MGSS: ENTERTAINMENT SYSTEM

In-vehicle Owner's Manual installation

Page **12** of **26**

 Service Alert No.: SA-010/19
 Last Issued: 06/13/2019



Page **13** of **26**

Service Alert No.: SA-010/19 **Last Issued:** 06/13/2019

In-Vehicle Digital Owner's Manual

The in-vehicle digital OM can be displayed on the center display while the vehicle is stopped. Customer can search descriptions and watch videos of vehicle features and functions by operating the commander switch.



NOTE:

- 1. The digital owner's manual must be installed during PDI. Due to printing deadlines and later updates to the digital manual, the content of the digital manual may differ from the printed manual.
- USB memory flash drive FAT16 or FAT32 format is required for installation.
- 3. The vehicle's infotainment system will only accept file names [contents.tar] and [contents.sig]. File names with additional suffixes will not be accepted.
- 4. The infotainment system may inadvertently be powered OFF if the diagnostic assist function buttons are not pressed correctly. Simply press and hold the volume knob to power back ON.

Page **14** of **26**

 Service Alert No.: SA-010/19
 Last Issued: 06/13/2019

Navigation System

2019 Mazda3 is not equipped with factory installed navigation system, however, it is available as a dealer installed accessory. **NOTE:** The 2019 Mazda3 accessory navigation SD is made in Japan instead of USA. If you use a made in the USA navigation SD card (for 6th gen) in the 2019 Mazda3, it will not function.





2019 Mazda3

Except 2019 Mazda3

SIRIUSXM Data Service No Free Trial (Preferred Package and above)

- 1. Only available as a paid subscription.
- 2. 2019 Mazda3 is not equipped with factory installed navigation system, however, it is available as a dealer installed accessory.
- 3. SiriusXM Traffic Plus feature requires in-vehicle navigation SD card.

See Owner's Manual -> Interior Features -> Mazda Connect -> Appendix

SA-007/19 - SIRIUSXM DATA SERVICES

Page **15** of **26**

Power Door Locks

Doors Lock With Keys In The Vehicle When Liftgate Lock Switch Is Pressed.

(Japan built) vehicles with VINs lower than JM1BP*****1142789 (produced before May 28, 2019)




DO NOT leave keys in the vehicle. The doors will lock with keys in the vehicle when liftgate lock switch is pressed and liftgate is closed, but the liftgate will not lock in the above condition.

NOTE: This is currently under investigation.

Doors cannot be unlocked using the outside door handle touch sensor The door handle touch sensor system may not operate normally under the following conditions:

- 1. Front passenger (without key) grabs and holds the outside door handle before the driver (with key) touches the drivers outside door handle unlock touch sensor.
- 2. You touch the sensing area of the door lock touch sensor and the sensing area of the door release touch sensor at the same time.

See Owner's Manual ->
Before Driving -> Doors and Locks

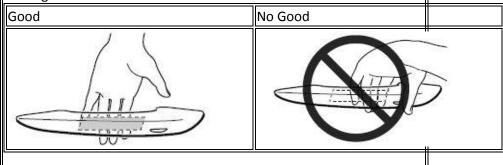

Page **16** of **26**


Auxiliary Key The auxiliary keys need to be inserted into the transmitters during Auxiliary Key Transmitter **NOTE:** The auxiliary keys are small and could be overlooked during PDI. Vehicles arrive at the dealer with Auxiliary Keys Vehicles arrive at the dealer with Transmitters located in the glove compartment* located in the front cup holder* /lanual -> Before s-> Auxiliary ke * Vehicles that arrive at the dealer after business hours, transmitters/duxiliary keys are located in the dealer's early bird key drop box. 1. If one auxiliary key is lost, some key machines can trace cut a new replacement key. 2. If both auxiliary keys are lost, key cutting machines do not recognize vehicle key code and will not cut new replacement keys. 1. Mazda is aware of this issue and is working on a resolution. **Transmitter Note:** 1. If one transmitter is lost, inform the customer to take cautions not to lose the 2nd transmitter. 2. If both transmitters are lost, the vehicle will be disabled. 1. MDARS is not able to program transmitters at this time. 2. Mazda is aware of this issue and is working on a resolution.

Last Issued: 06/13/2019

Service Alert No.: SA-010/19

Page **17** of **26**

 Service Alert No.: SA-010/19
 Last Issued: 06/13/2019

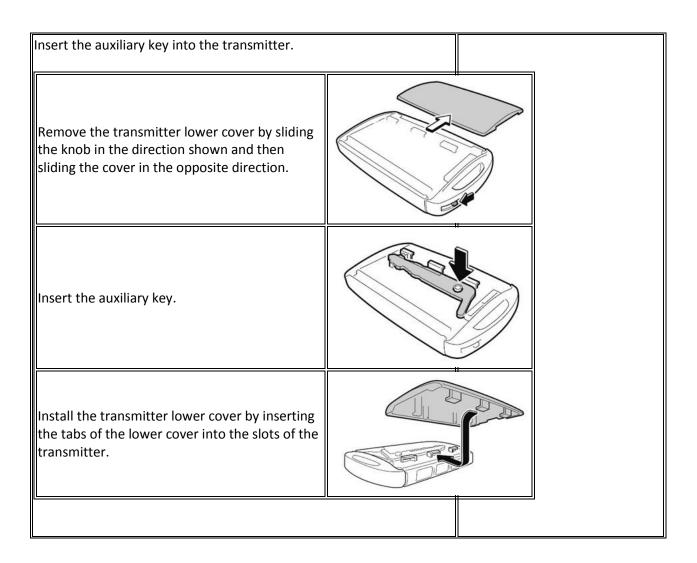

Page **18** of **26**

rvice Alert No.: SA-010/19	Last Issued: 06/13/2019	9
Transmitter Battery Saving Function (Key The new 2019 Mazda3 has a "power sav keyless entry system where <i>some</i> key fo feature could accidentally be enabled an vehicle may be: 1. Engine does not start. 2. Engine does not start unless you hole button. 3. Doors do not unlock using the door her remote. 4. Doors do not lock using the door har remote. 5. Transmitter indicator light does not saven and saven	function built into the b functions are disabled. This ad some concerns with the that for the functions are disabled. The functions are disabled. This add some concerns with the functions are disabled. This are disabled. This are disabled. This are functions are disabled. The function of the start/stop functions are functionally a	urning on the power saving nction feer you have turned on the ower saving function according the following procedure, the azard warning lights and sound perate* one time. Press the lock button on the ansmitter 4 times within 3 econds to turn on the operation dicator light. Press the lock button on the operation dicator light turns on (for 5 econds). Press any of the buttons on the ansmitter to make sure that the operation indicator light does not not only flash. Urning off the power saving function feer you have turned off the ower saving function according the following procedure, the azard warning lights and sound

- 1. Press any of the buttons on the transmitter to make sure that the operation indicator light does not turn on/flash.
- 2. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light.
- 3. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5

Page **19** of **26**

Service Alert No.: SA-010/19	Last Issued: 06/13/2019
	,
	seconds).
	*: with the advanced keyless function
	Also see Owner's Manual -> Before Driving -> Keys -> Power saving function

Page **20** of **26**

Service Alert No.: SA-010/19 Last Issued: 06/13/2019

Keyless Entry Using Auxiliary Key

If the vehicle battery is discharged and/or the key battery is dead, vehicle entry is possible using the auxilary key.



See Owner's Manual -> Before Driving -> Keys -> Auxiliary Key

Then refer to Owner's Manual -> Before Driving -> Doors and Locks -> Unlocking with Auxiliary Key

Rear Door Child Safety Locks Operation

The auxiliary key is required to enable (lock) and disable (unlock) the rear door child safety locks.



- 1. Auxiliary Key
 - 2. Lock
 - 3. Unlock

See Owner's Manual ->
Before Driving -> Doors and Locks
-> Rear Door Child Safety Locks

Page **21** of **26**

Seat Warmer Turns OFF in Manual Mode

JM1 (Japan built) vehicles produced before December 17, 2018 3MZ (Mexico built) vehicles produced before March 19, 2019

- 1. The front seat warmers turn OFF after approximately 10 minutes in manual mode.
- 2. DTC B1030:13 (SEAT WARMER UNIT (LH) CIRCUIT MALFUNCTION (HEATER SIDE)) is stored.
- Front seat warmer functions after seat cool down and ignition OFF
 ON cycle.

Contact Hotline for latest repair information.

Page **22** of **26**

Seat Warmer Will Not Turn ON After Previous Usage JM1 (Japan built) vehicles produced after December 17, 2018 3MZ (Mexico built) vehicles produced after March 19, 2019 1. DTC B1030:13 (SEAT WARMER UNIT (LH) CIRCUIT MALFUNCTION (HEATER SIDE)) is stored. 2. Front seat warmer functions after seat cool down and ignition OFF	
-> ON cycle.	
Contact Hotline for latest repair information.	

Last Issued: 06/13/2019

Service Alert No.: SA-010/19


Page **23** of **26**

 Service Alert No.: SA-010/19
 Last Issued: 06/13/2019

Electric Parking Brake (EPB)

Parking Brake Auto Operation

When the ignition is switched OFF, the parking brake will be applied automatically. The EPB indicator light in the instrument cluster and the EPB switch indicator light turn ON.

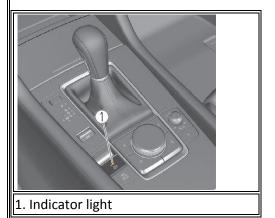

Canceling the Parking Brake Auto Operation

Parking brake auto operation can be canceled using the procedure in the Owner's Manual.

NOTE: When the ignition is cycled back ON, the parking brake auto operation is restored.

peration is restored.

Parking Brake Automatic Release

If the accelerator pedal is depressed with the parking brake applied and all of the following conditions are met, the parking brake is automatically release. When the parking brake is released, the EPB indicator light in the instrument cluster and the EPB switch indicator light turn off.


See Owner's Manual -> When Driving -> Brake -> EPB Auto operation

A/T	M/T	
Engine is running		
Driver's door is closed		
Driver's seat belt is fastened		
Selector lever is in the D, M, or R neutral	Shift lever is in a position othen neutral	r than
position	Clutch pedal is depressed halfway	way

Page 24 of 26

A/C Air Temperature Is Not Cold

When diagnosing A/C performance complaints, use a thermometer as shown below and only compare A/C performance to another vehicle that is the same model/year/HVAC type*.

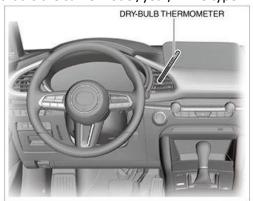

MGSS: REFRIGERANT SYSTEM PERFORMANCE TEST [(US)]

- *HVAC Types:
- 1. FULL-AUTO AIR CONDITIONER
- 2. MANUAL AIR CONDITIONER

Tire Pressure Monitoring System (TPMS) Change
The TPMS system uses a new rubber type direct TPMS. **NOTE:** The new rubber type is not reusable. If the TPMS sensor is removed from the wheel, it must be replaced.



New Rubber Type Old Metal Type

MGSS: TIRE PRESSURE MONITORING SYSTEM (TPMS)

Page **25** of **26**

Service Alert No.: SA-010/19

Last Issued: 06/13/2019

Condition Based Maintenance (Except Canada) The vehicle calculates the maintenance (oil change) timing. MGSS: MAINTENANCE MONITOR OPERATION PROCEDURE 1. This function cannot be turned OFF. 2. Distance until the oil change is available in MAZDA CONNECT. 3. Reset is required after every oil change. New M-MDS (MDARS) A new M-MDS diagnostic tester (MDARS) for 7th generation vehicles (starting with the 2019 Mazda3) is used. 1. Performs more maintenance service functions 2. Performs more complicated vehicle electrical system diagnostic MGSS: BASIC KNOWLEDGE 3. Reprograms more ECU's Parts Replacement When replacing vehicle parts such as ECU's, motors, seats....etc, always refer to MGSS. Some new components may not operate if MGSS new part replacement procedure is not performed.

Page **26** of **26**