

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Service Category General

Section Pre-Delivery Service

Market USA

Toyota Supports
ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2026	LC500, LC500C	

REVISION NOTICE

May 18, 2026 Rev1:

- The Customize ACC Function section has been removed.
- The Required Tools & Equipment section has been updated.

Any previous printed versions of this bulletin should be discarded.

Introduction

Pre-Delivery Service (PDS) is a critical step in satisfying our new car customers. Customer feedback indicates the following areas deserve special attention when performing PDS:

- Careful inspection for paint chips/scratches and body dents/dings.
- Proper operation of electrical accessories (including interior light, clock, and radio reset).
- Interior cleanliness.
- Proper function of mechanical systems.

The PDS process helps identify potential vehicle concerns before customer delivery. After completing the PDS process, maintain accurate PDS records by ensuring the required documents listed below are completed and recorded in accordance with Toyota Warranty Policy.

- GTS+ Health Check
- Completed PDS Check Sheet
- Battery Charge Test Print Out
- GTS+ Tire Pressure Information

Customer retention and proper maintenance of vehicles are and have always been a major focus for Lexus. To help remind customers that regular service is essential to the proper maintenance of the vehicle, dealers are required to install a service reminder sticker before delivery. By doing this, customers will be reminded to return to your dealership for service. Your current service reminder sticker may be used.

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Introduction (continued)

This bulletin contains the PDS procedures that apply specifically to 2026 model year LC 500, and LC 500c.

Refer to [L-PDSB-CS001-D](#), the universal *Check Sheet* that contains PDS steps that apply to all 2026 model year Lexus vehicles. To properly perform a complete PDS, you must complete all procedures contained in this TSB as well as the PDS *Check Sheet*. In addition, if the vehicle is stored for over 30 days, refer to [L-SB-0011-25](#), *Long-Term Vehicle Storage Guidelines*.

Refer to the table below for a definition of terms that may be used in this bulletin.

Table 1.

TERM	ACRONYM	DEFINITION
Conventional Vehicle	CV	A vehicle with only a gasoline engine for propulsion
Electrified Vehicle	EV	A vehicle that utilizes a hybrid or a plug-in hybrid or battery electric system for propulsion
Hybrid Electric Vehicle	HEV	A vehicle with both a gasoline engine and an HV Battery
Plug-in Hybrid Electric Vehicle	PHEV	A vehicle with both a gasoline engine and an HV Battery that can be charged externally
Battery Electric Vehicle	BEV	A vehicle with only an HV Battery that can be charged externally
State of Charge	SOC	The remaining capacity available in a battery
12-Volt	12V	Standard 12V battery used to power electrical systems separate from high voltage components
High Voltage	HV	HV Battery used to power the electrified vehicle

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Table of Contents

• Warranty Policy	4
• Warranty Information	4
• Required Tools & Equipment	4
• D/C Cut Fuses Installation	5
• Front License Plate and Mounting Bracket Installation*	6
• Front and Rear Emergency Towing Eyelet Removal	8
• Front and Rear Emergency Towing Eyelet Hole Cover Installation	9
• Front Wheel Opening Extension Pad Installation	10
• Installation of Rubber Body Plugs	11
• Removal of Wheel Covers	12
• Check Torque of Wheel Fasteners	13
• Tire Pressure Warning System (TPWS) Initialization	14
• Seating Position Control ECU Assembly Initialization	14
• Head Unit System Reset	14
• Dealer Contact Information for Call Dealer Head Unit Function	15
• Navigation — Set Date & Time by GPS	15
• Deletion of Vehicle Alert History	16

*If applicable.

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Warranty Policy

If the need for additional repairs or adjustment is noted during PDS, the required service should be performed under warranty. Reimbursement will be managed under the warranty policy.

The Warranty Policy and Procedures Manual requires that you maintain the completed Check Sheet in the customer's file. If you cannot produce a completed form for each retailed vehicle upon TMS and/or Region/Distributor audit, the PDS payment amount will be subject to debit.

An additional Repair Order completed in conjunction with normal PDS MUST have time punch/flags for service. If multiple repairs are performed, separate time flags MUST be punched for each repair.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

Required Tools & Equipment

REQUIRED EQUIPMENT	SUPPLIER	PART NUMBER	QTY
Techstream ADVi*	ADE	TSADVUNITECP	1
Techstream Lite		TSLP3DLR01	
Techstream Lite (Green Cable)		TSLP2DLR01	

*Essential SST.

NOTE

- Only ONE of the Techstream units listed above is required.
- GTS+ software version 2026.01.003.02 or later is required.
- Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787 or by visiting *TIS – Diagnostics – Tools & Equipment – Techstream Order Portal*.


2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

D/C Cut Fuses Installation

Check the location of the D/C Cut No. 1 and D/C Cut No. 2 fuses (30A). They may have been removed at the assembly plant and temporarily stored in the blank spaces of the relay block in the engine compartment to minimize battery discharge during transportation and storage.

- If the D/C Cut No. 1 and D/C Cut No. 2 fuses (30A) are still in their original location in the relay block, proceed with performing a Health Check using GTS+.
- If the D/C Cut No. 1 and D/C Cut No. 2 fuses (30A) are NOT in its original location, it is necessary to remove the D/C Cut No. 1 and D/C Cut No. 2 fuses (30A) from the blank spaces in the relay block and reinstall it to its original location as shown. After installation, confirm ALL related DTCs are cleared.

Figure 1.

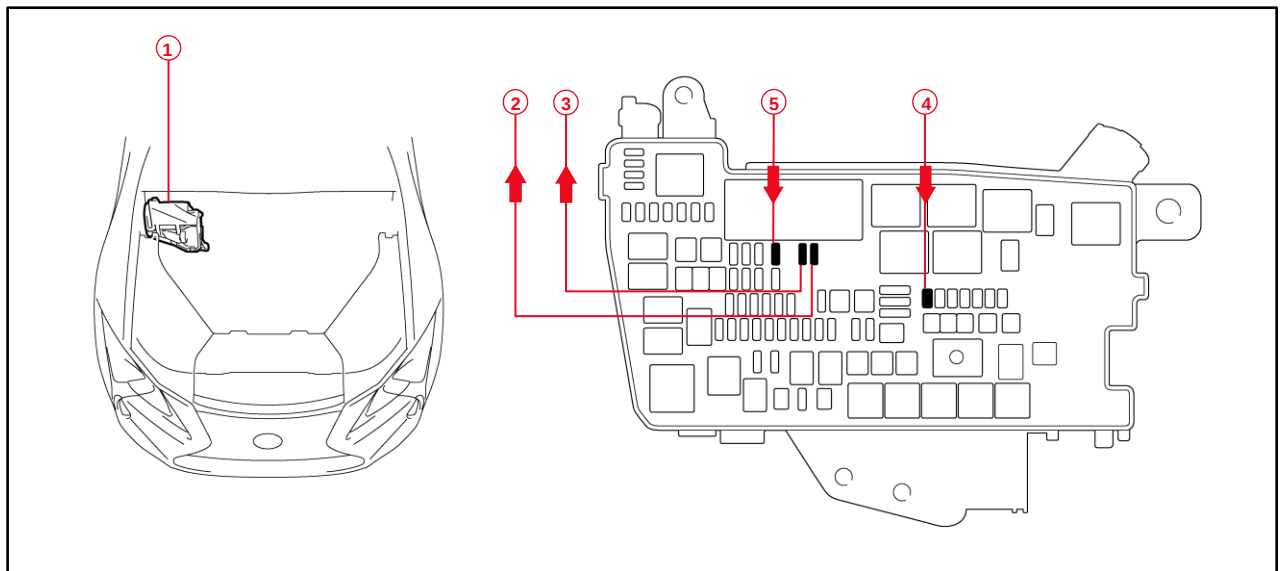

1	Relay Block
2	Remove the D/C Cut No. 1 Fuse (30A) (Blank Space)
3	Remove the D/C Cut No. 2 Fuse (30A) (Blank Space)

4	Install the D/C Cut No. 1 Fuse (30A) (Original Location)
5	Install the D/C Cut No. 2 Fuse (30A) (Original Location)

NOTE

- With the D/C Cut fuse (30A) removed, if ANY DTCs are detected when the ignition is turned ON during transportation, use GTS+ to clear ALL DTCs AFTER ensuring that there are NO malfunctions.
- While the vehicle is stored at the dealership, disconnect the negative (–) battery terminal to prevent battery discharge. Refer to [L-SB-0019-25](#), *Battery Inspection and Maintenance During PDS*, for battery maintenance information.

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Front License Plate and Mounting Bracket Installation

The front license plate mounting bracket and two self-tapping screws are stored in the vehicle. Follow this procedure to install the front license plate mounting bracket and front license plate in states where it is required by law.

1. Align holes "A" of the mounting bracket with the dimples on the front bumper cover. Mark the location of holes "B" on the front bumper cover.

NOTE


- Holes "A" are used to install the mounting bracket onto the bumper cover.
- Holes "B" are used to install the front license plate onto the mounting bracket.

2. Screw the two self-tapping screws directly into the dimples to install the front license plate mounting bracket.

NOTICE

- Do NOT drill into the dimples on the front bumper cover.
- Do NOT overtighten the self-tapping screws.

Figure 2.

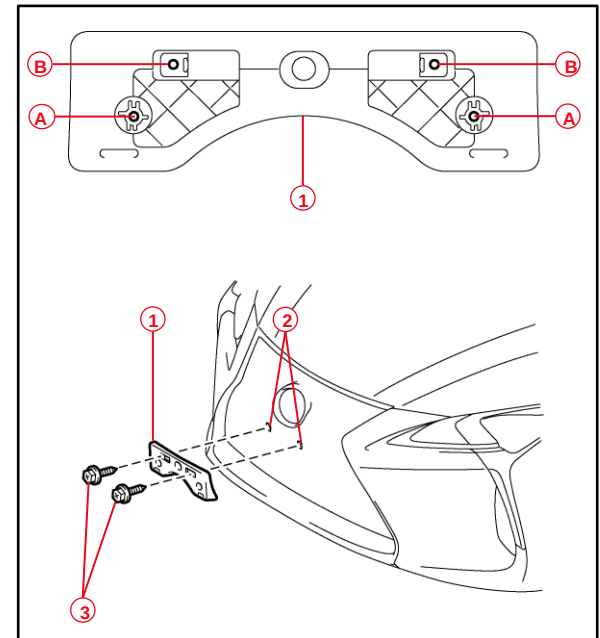

1	Mounting Bracket
2	Dimples
3	Self-tapping Screws
A	Holes "A" for Mounting Bracket
B	Holes "B" for Front License Plate

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)


Front License Plate and Mounting Bracket Installation (continued)

3. Install the front license plate onto the mounting bracket using two noncorroding bolts with the following dimensions:

Length: 15.0 mm (0.59 in.)


Diameter: 6.0 mm (0.24 in.)

Figure 3.

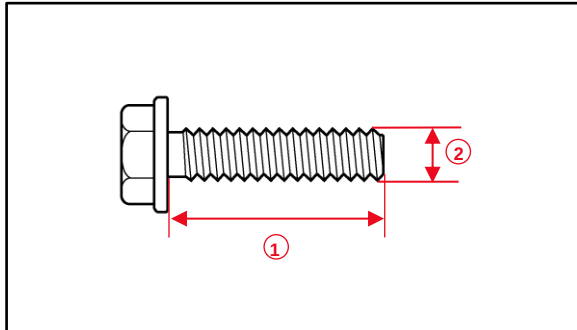

1	Length
2	Diameter

Figure 4.

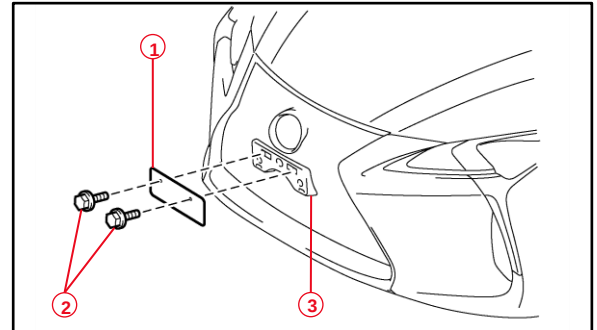

1	Front License Plate
2	Bolts
3	Mounting Bracket

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)


Front and Rear Emergency Towing Eyelet Removal

1. Remove the front and rear emergency towing eyelets from the front and rear bumpers by turning them counterclockwise.

HINT

If it is difficult to loosen the emergency towing eyelets, use a steel bar.

Figure 5.

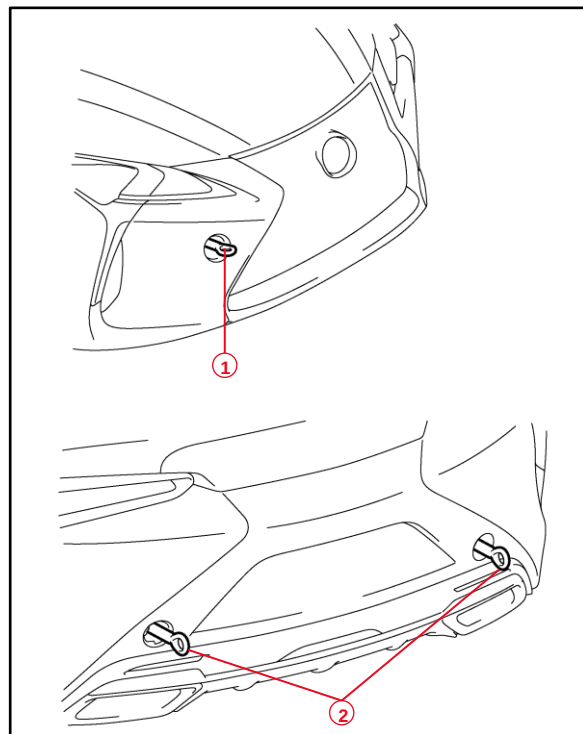


1	Front Emergency Towing Eyelet
2	Rear Emergency Towing Eyelets

2. Place one of the removed emergency towing eyelets into the luggage tray in the luggage compartment.

HINT

Dispose of the other removed emergency towing eyelets.

Figure 6.

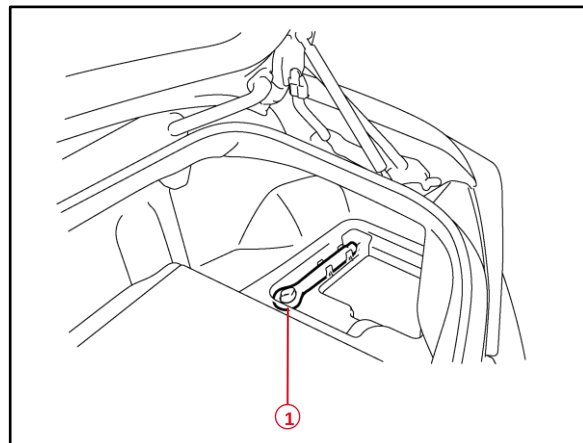

1	Emergency Towing Eyelet
---	-------------------------

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Front and Rear Emergency Towing Eyelet Hole Cover Installation


Install the front and rear emergency towing eyelet hole covers, which are stored in the glove compartment, onto the front and rear bumpers.

1. Insert the arrow-shaped part of the emergency towing eyelet hole cover "A" into the eyelet hole "B" as shown.
2. Install the emergency towing eyelet hole cover to the hole of the bumper.

HINT

Make sure the front emergency towing eyelet hole cover is installed in the front, and the rear emergency towing eyelet hole cover is installed in the rear.

Figure 7.

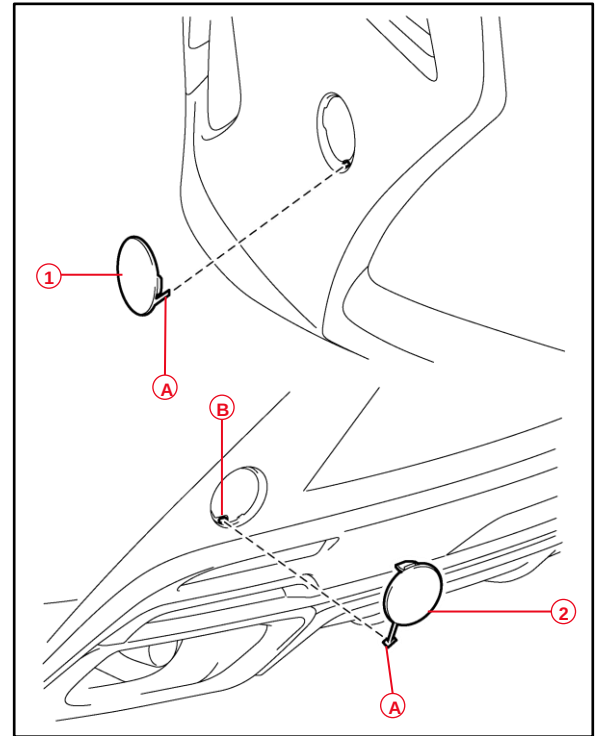

A	Arrow-shaped Part
B	Eyelet Hole
1	Front Emergency Towing Eyelet Hole Cover
2	Rear Emergency Towing Eyelet Hole Cover

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Front Wheel Opening Extension Pad Installation


The front wheel opening extension pad set (right and left front wheel opening extension pads and eight self-tapping screws) is placed in the luggage compartment at the assembly plant to avoid damage in transit.

NOTE

Use the same procedure for the right-hand side and left-hand side. The procedure listed below is for the left-hand side. There is a distinguishable mark on each pad indicating the left-side and right-side pads.

1. Place the left front wheel opening extension pad on the installation position and tighten the four self-tapping screws, as shown in Figure 8.

Figure 8.

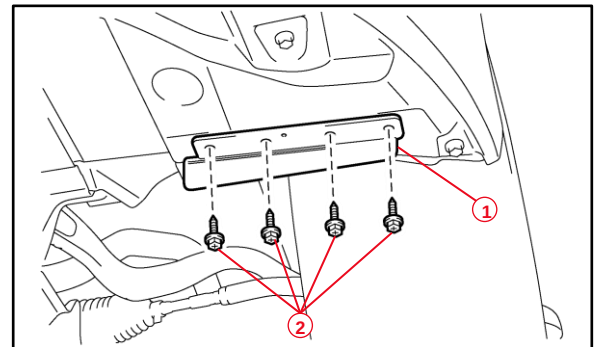


1	Front Wheel Opening Extension Pad
2	Self-tapping Screws

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Installation of Rubber Body Plugs

1. Confirm the number of plugs in the glove box. If two plugs are present, perform substep 2A ONLY. If four plugs are present, perform substep 2A AND substep 2B.
2. Install the plugs according to the instructions below by confirming the number of plugs in the glove box.
 - A. Install two plugs in the rear side member hole or rocker inner hole as shown.
 - B. Install two plugs in the torque box hole or rocker inner hole as shown.

Figure 9.

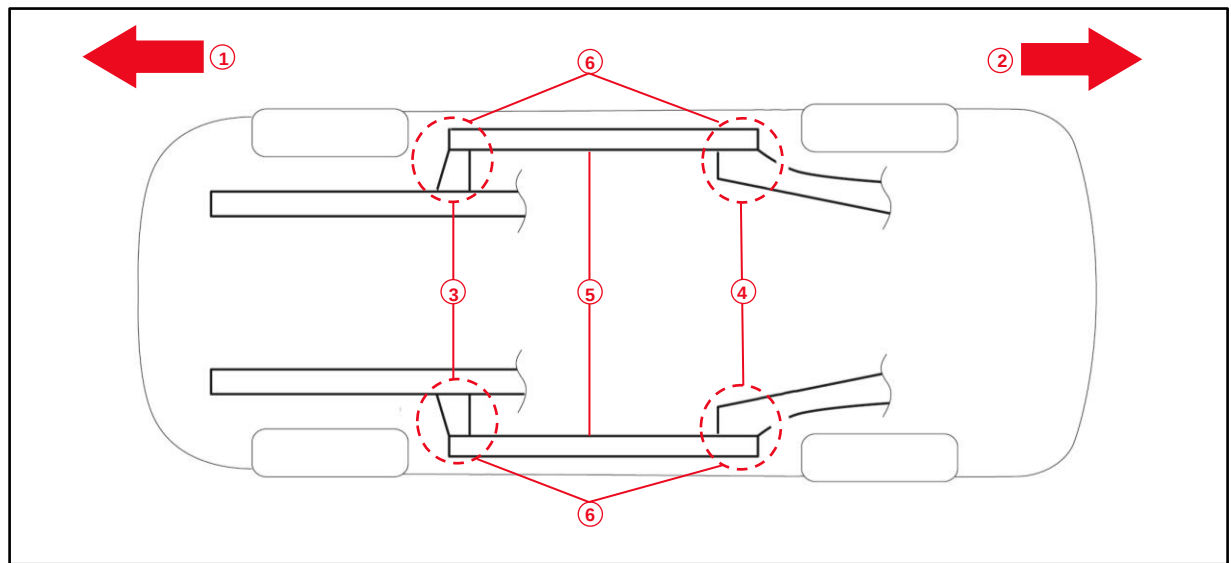

1	Front Side
2	Rear Side
3	Torque Box Hole or Rocker Inner Hole

4	Rear Side Member Hole or Rocker Inner Hole
5	Rocker Inner
6	Install Plug Here (if applicable)

NOTICE

- The installation of these plugs is required to prevent rust.
- These plugs are stored in the glove box.
- The number of plugs may vary according to production locations in the same vehicle model.

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)


Removal of Wheel Covers

1. Remove wheel covers from all four wheels.

NOTE

Be sure to remove the wheel cover while supporting it with one hand.

Figure 10.

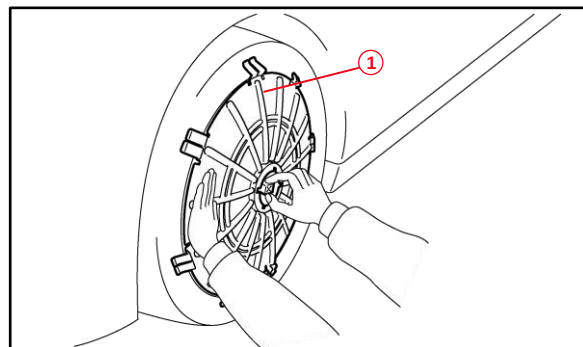


1 Wheel Cover

2. Remove the center clip by compressing it with fingers while pulling out.

NOTE

Dispose of ALL removed wheel covers.

Figure 11.

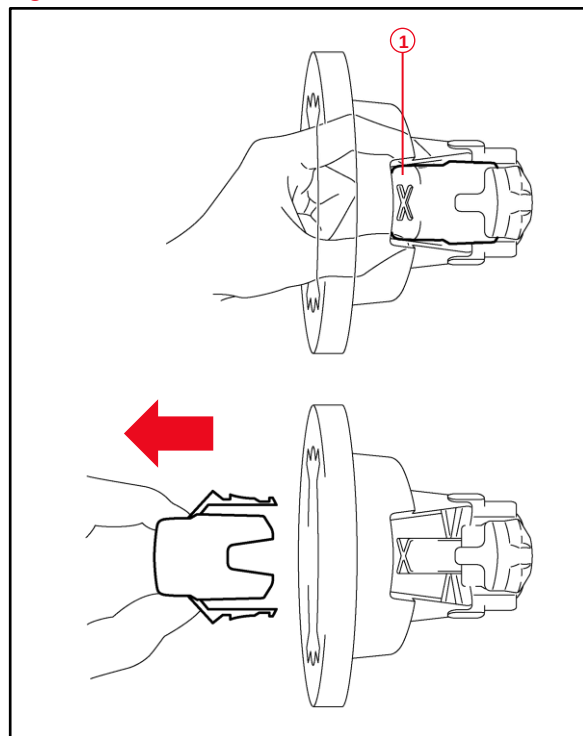

1 Center Clip

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)


Removal of Wheel Covers (continued)

3. Remove the clips and shields from the wheels.

NOTE

Dispose of the removed shield assemblies.

Figure 12.

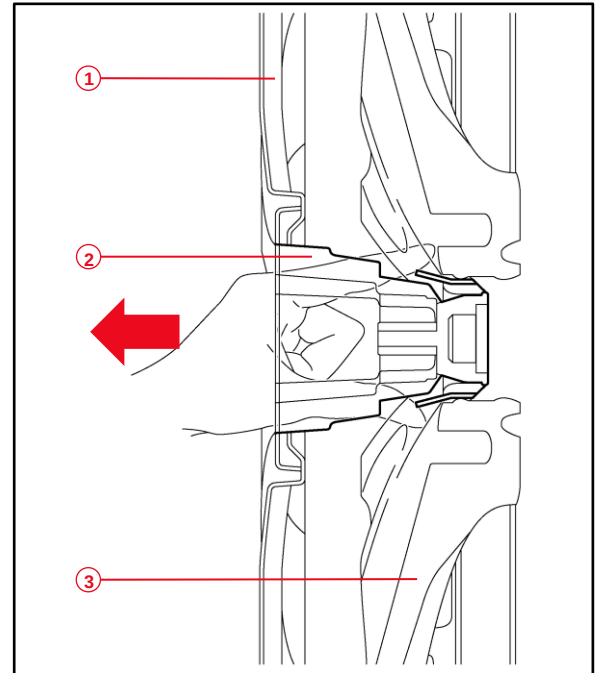

1	Shield
2	Clip
3	Wheel

Check Torque of Wheel Fasteners

Using a calibrated torque wrench, verify the wheel fasteners on each wheel are tightened to at least the specified torque listed in the Repair Manual.

- [2026](#) LC 500:
General – Maintenance – Tire and Wheel – Installation
- [2026](#) LC 500c:
General – Maintenance – Tire and Wheel – Installation

NOTICE

Do NOT continue to tighten once verified.

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Tire Pressure Warning System (TPWS) Initialization

Refer to TIS, applicable model and model year Repair Manual.

- [2026](#) LC 500:
Suspension – Tire Pressure Monitoring – Tire Pressure Warning System – Initialization
- [2026](#) LC 500c:
Suspension – Tire Pressure Monitoring – Tire Pressure Warning System – Initialization

NOTE

- To adjust the tire pressure correctly when the outside temperature is significantly colder than shop temperature, perform a Health Check using GTS+ and select the compensation tire pressure checkbox. Compensation pressures will display on the Health Check results screen. Adjust the tire pressure when the tires are cold.
- This model has four TPWS sensors.

Seating Position Control ECU Assembly Initialization

Follow Registration Procedure step 2, Position Control ECU Assembly Initialization.

Refer to TIS, applicable model and model year Repair Manual:

- [2026](#) LC 500:
Vehicle Interior – Seat – Front Power Seat Control System – Registration
- [2026](#) LC 500c:
Vehicle Interior – Seat – Front Power Seat Control System – Registration

Head Unit System Reset

Prior to vehicle delivery, please confirm that the welcome screen with language options appears on the head unit display when the ignition is switched to the ON position. There may be instances where the welcome screen with language options may not properly appear on the head unit display.

If the welcome screen showing language options is not displayed, complete the following steps:

1. Select the “Settings” option (gear icon).
2. Scroll down and select the “Info & Security” option.
3. The System Reset dialogue box will appear. Select “Reset” to confirm the resetting of the system.
4. Confirm that the welcome screen with language options is now displayed.

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Dealer Contact Information for Call Dealer Head Unit Function (Premium Audio Only)

Refer to the *Multimedia System Owner's Manual* to add dealer contact information.

- [2026](#) LC 500 and LC 500c:
Section 2-8 *Vehicle Settings – Setting Dealer Information*

Navigation — Set Date & Time by GPS

Prior to vehicle delivery, we are asking that dealers please confirm that they have turned the “Set time by GPS” functionality on in each vehicle. Therefore, it is necessary to turn the Set Time by GPS setting to the ON position.

1. Turn the engine switch (power switch) to the ON position (ON mode).
2. Navigate the following menus in the head unit: *Settings – General – Date & Time – Set Date & Time by GPS*.
3. Ensure the Set date & time by GPS function is set to the ON position.

2026 LC 500 and LC 500c Pre-Delivery Service (PDS)

Deletion of Vehicle Alert History

As the D/C Cut fuses are removed, the communication between the various ECUs is interrupted. When the D/C fuses are reinstalled, the communication status is restored, but Lexus Enform Service Connect may store malfunction history in the form of vehicle alert history. Therefore, it is necessary to operate the multi-display and delete the vehicle alert history AFTER installing the D/C Cut fuses during PDS at the dealership.

Deletion Procedure

1. Turn the engine switch (power switch) to the ON position (ON mode).
2. Push the Menu switch on the remote touch device.
3. On the multi-display, enter the following menus: *Info – Vehicle Alert History*.
4. If there is vehicle alert history stored, perform the Delete History operation.

HINT

If there is no vehicle alert history stored, the system will display a message stating "There is no vehicle alert history."

5. When the vehicle alert history deletion confirmation screen is displayed, select "Yes".

HINT

When deletion of the vehicle alert history is complete, the system will display a message stating "There is no vehicle alert history."

6. Turn the engine switch (power switch) to the OFF position (OFF mode).