



Strake Kit - Side


Installation Manual

Genuine Part Number: E2610VC500

Applicable Model: WRX 2022MY~

Components

No.	Part Description	Quantity	No.	Part Description	Quantity
①	Strake Kit - Side RH	1	③	Resin clip (small with a cross head)	2
②	Strake Kit - Side LH	1	④	LABEL	1

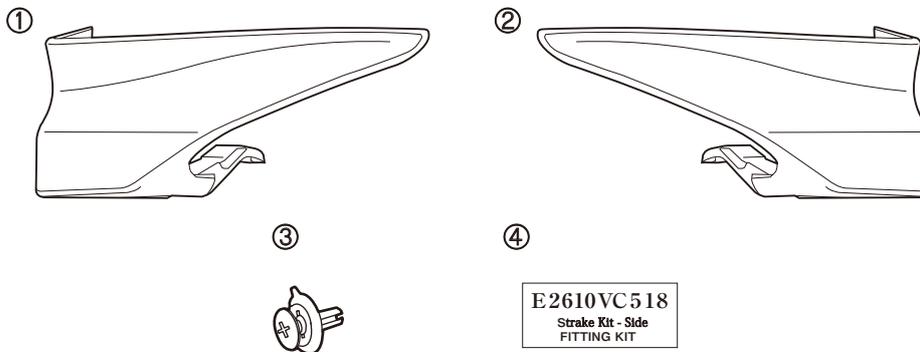


Repair part model number
FITTING KIT (E2610VC518) : ③×2/④×1

Tools

Waste cloth, neutral detergent or cleaning detergent [IPA (isopropyl alcohol) or nonane], masking tape, clip remover, flathead screwdriver, Phillips screwdriver

Completed installation drawing

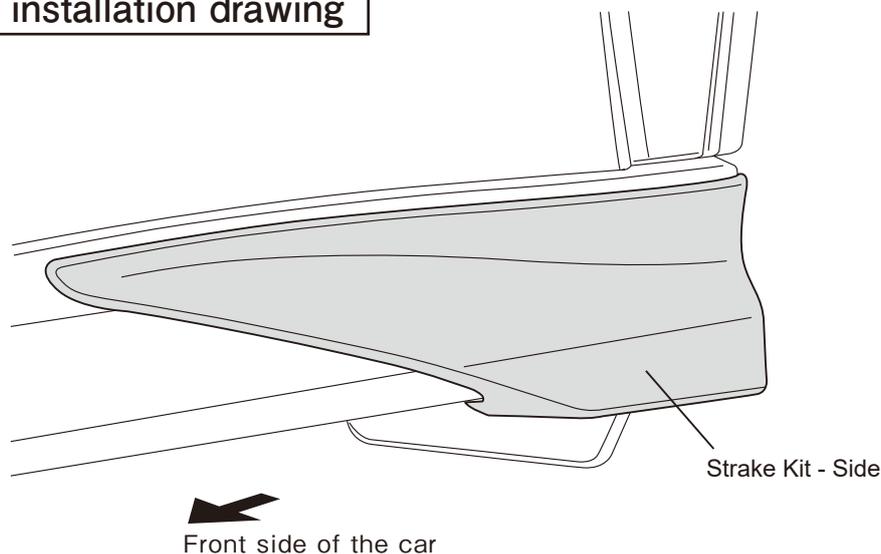

※The completed drawing shows the left side of the car.

Starake Kit - Side

This manual describes how to install the side strakes.

Request

Before installing this product, please ensure to read this manual and carry out proper installation.

Precautions


1. When installing this product, park the car on a level surface and securely apply the parking brake before carrying out the work.
2. Before the installation, use a neutral detergent (or cleaning detergent) and waste cloth to remove any dirt adhering to the car's surface where the side strakes will be attached, and then dry the surface thoroughly. Moreover, if sand or mud adheres to the back of the clip insertion holes, etc., then clean the contaminated sections.
3. Install the side strakes before applying body coating. When installing them on a car that has been coated, remove the coating from the area where double-sided tape is to be applied before installation.
4. During the installation work, pay careful attention not to damage the car with tools, etc.
5. This manual describes how to install the product on the left side. Installation on the right side is symmetrical to that on the left side. Check the shape of the components to be installed before carrying out the work.
6. When the air temperature is 15° C or lower, use a hair dryer to warm up this product and the car surface where double-sided tape is to be applied to approx. 30° C to 50° C. Avoid using an industrial dryer.
7. Double-sided tape does not adhere unless it is adequately pressed. The adhesive strength of double-sided tape significantly decreases when the tape is reapplied. Position the tape properly before applying it to avoid the need for reapplication.
8. The adhesive strength of the double-sided tape gradually increases after it is applied. Avoid washing the car within 24 hours after installation. If the car needs to be washed or waxed on the day of the installation, leave it for at least one hour and use tape, etc. to cover the areas where double-sided tape is applied. Also be careful not to apply excessive force to the side strakes.
9. When blowing air after installing the product, keep the discharge port at least 300 mm away. If it is too close, it may cause the product to peel.
10. When a car has undergone a body coating treatment including glass coating, this product cannot exhibit its original adhesive performance.
Please confirm whether or not a body coating treatment is applied to the car.
Moreover, ensure to remove dirt, oils and fats, etc. adhering to the surface on which the product is to be attached, and also use sufficient pressure to attach it to the car.

<<How to remove a body coating film and confirm the removal>>

- Use a fine-grained compound agent (so as not to affect the car's paint) to rub the coating film off the area on which the product is to be attached.
- After polishing the area, spray water on it. You can confirm that the coating film has been removed when there is no repelling of water on the area.

Installation guidelines

This drawing shows how to install the product on the LH side.

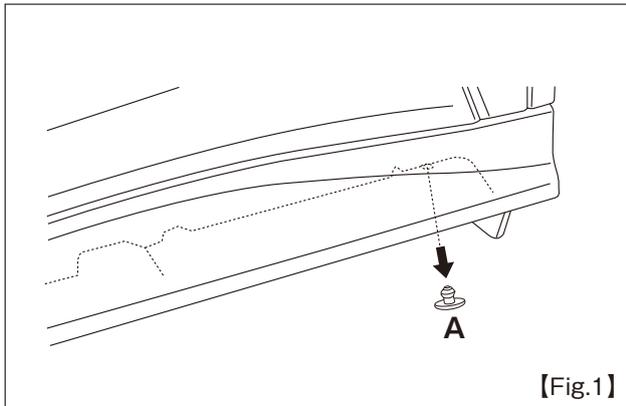

1. Preparation work


Park the car on a level surface and securely apply the parking brake to ensure safe and reliable work.

- (1) Remove the car clip from part A. [Fig.1]



Caution

The removed car clip will not be used.

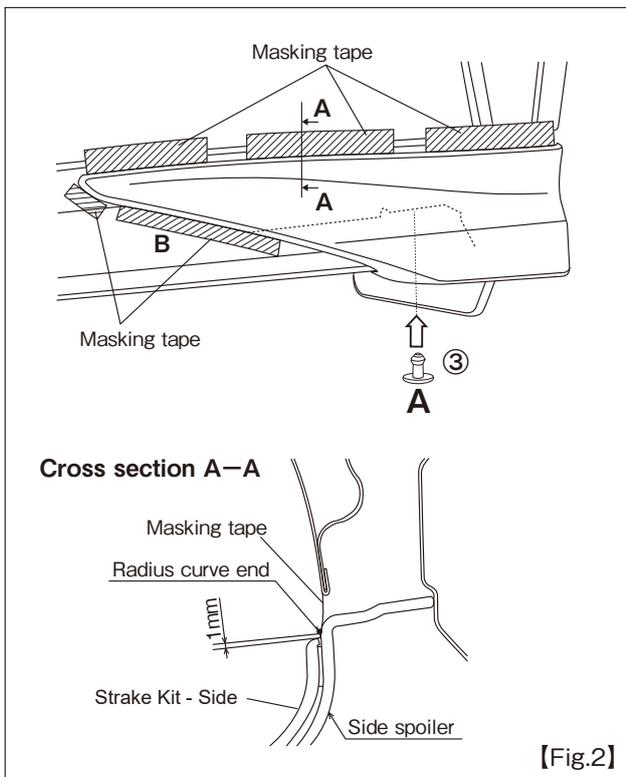

- (2) Position the Strake Kit - Side.

As shown in cross section A-A, apply three pieces of masking tape and align their bottom edges 1mm below the radius curve end of the side spoiler. [Fig.2]

Attach clip (small with a cross head) ③ to part A to fix the Strake Kit - Side.

Temporarily place the Strake Kit - Side to align its top edge with the bottom edge of the three pieces of masking tape, and then apply masking tape along the diagonal edge as shown in B. [Fig.2]

Check for any significant misalignment or interference between the side spoiler and the Strake Kit - Side.

Remove the Strake Kit - Side and the clip ③.




Caution


The removed clip (small with a cross head) will be reused.

Use a neutral detergent (or cleaning detergent) and waste cloth to remove any dirt adhering to the car's surface where the Strake Kit - Side will be attached, and then dry the surface thoroughly.

Moreover, if sand or mud adheres to the back of the clip insertion holes, etc., then clean the contaminated sections.

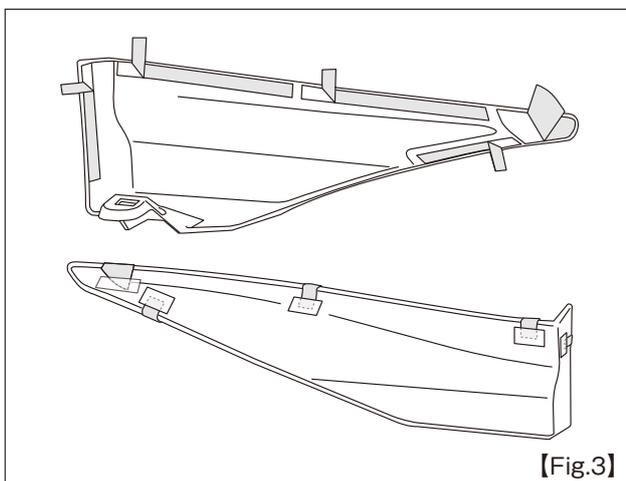

- (3) Partly peel off the liners of the double-sided tape on the back of the Strake Kit - Side and temporarily fix them to the surface of the Strake Kit - Side with masking tape. [Fig.3]

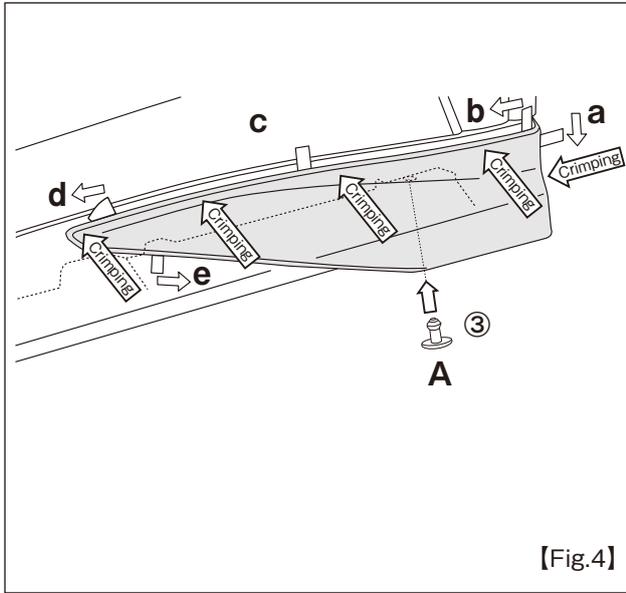

2. Installation work

- (1) Align the edges of the Strake Kit - Side with the edges of the masking tape applied to the side spoiler during the preparation work and temporarily attach the Strake Kit -Side.
- (2) Attach resin clip (small with a cross head) ③ to part A. [Fig.4]
- (3) Peel off the liners of the double-sided tape in the direction of the arrow in order from "a" to "e" and attach the Strake Kit - Side by applying pressure with a force of 49 N or more. [Fig.4]

⚠ Caution

To avoid leaving any gaps between the contact surfaces of the Strake Kit - Side and the side spoiler, carry out the work while ensuring a good fit between them.

The liners of the double-sided tape may break when peeled off; therefore, pay careful attention when carrying out the work.

- (4) After the work is completed, peel off the masking tape from the car.
If the surface of the guard or car is soiled, then wipe it clean.

Install the product on the right side in a similar manner.

This completes the installation work.

⚠ Inspection guidelines

Check the clip engagement and the bonded state of the double-sided tape and there shall be no rattling. There shall be no significant gap or separation.

Revised contents

△	Details of the work	date
00	Newly created document	2021.06.09