



A KIT CONTENTS: 1X

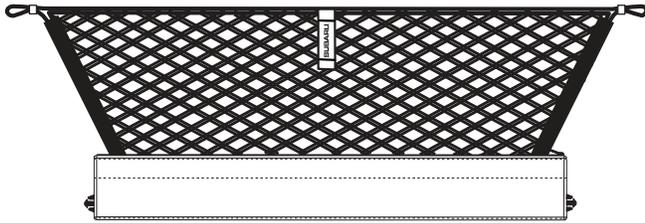

B Note: Upper T-Anchor Assy 2X

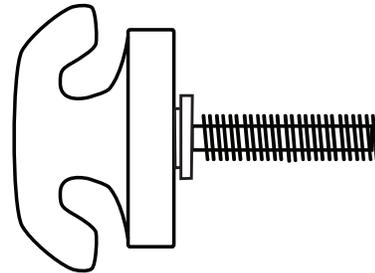

C 2X

Note: Upper U-Nut




D 2X

Note: Upper
M5x22 OD
Nylon Spacer




E 2X

Note: Lower U-Nut




F 2X

Note: Lower Web Strap

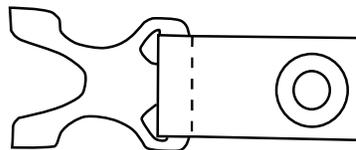

TOOLS REQUIRED:



Meaning of Characters:

 : Remove

 : Install

 : Disconnect

 : Connect

 : Location of pre-arranged mark

 : Driver side rear cargo area

 : Passenger side rear cargo area

T : Tightening Torque







 : Loosen

 : Discard


 : Recyclable

 : View


NOTE: Installation steps shown below are for the passenger's side of the vehicle.
Please follow the same steps for the drivers side.

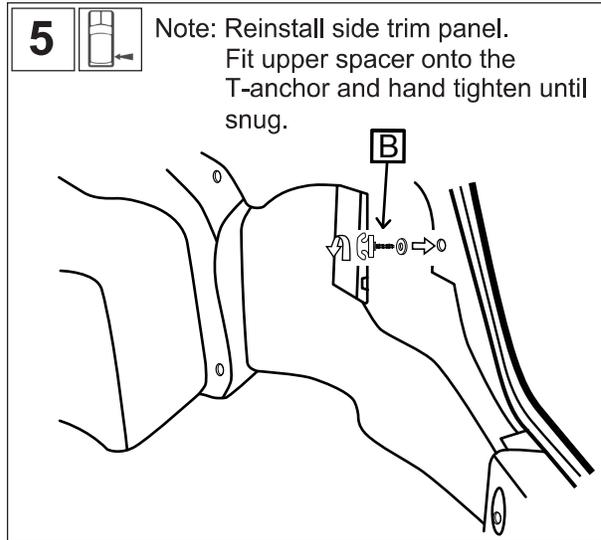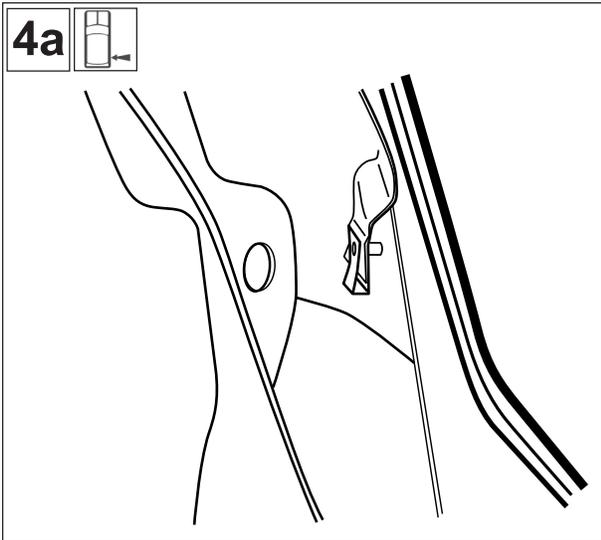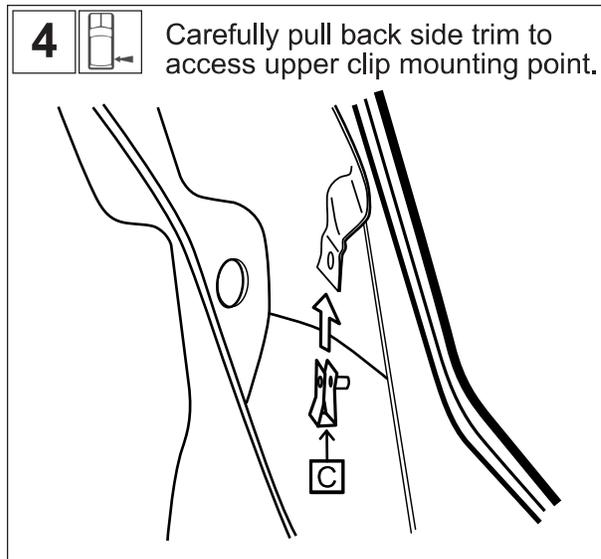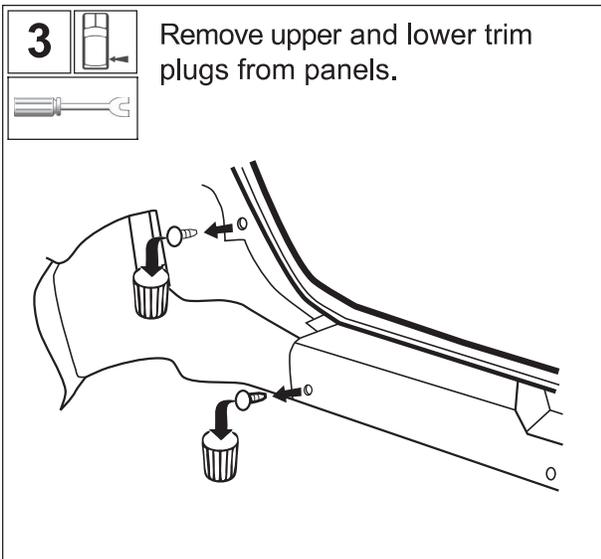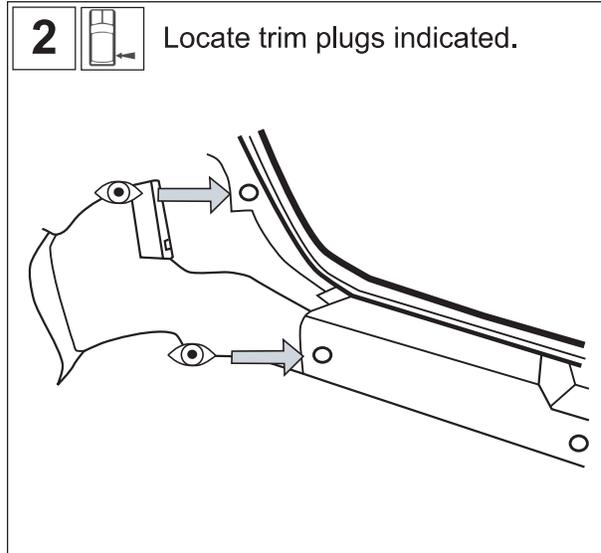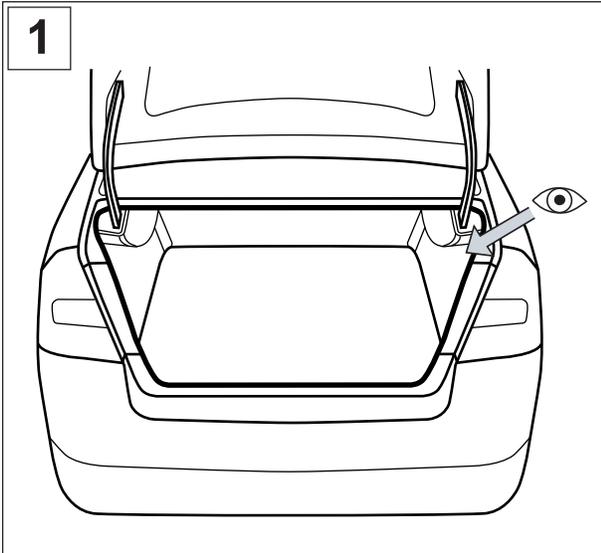

6  To attach web strap, push the panel fastener through the webbing into the lower trim hole until secure.

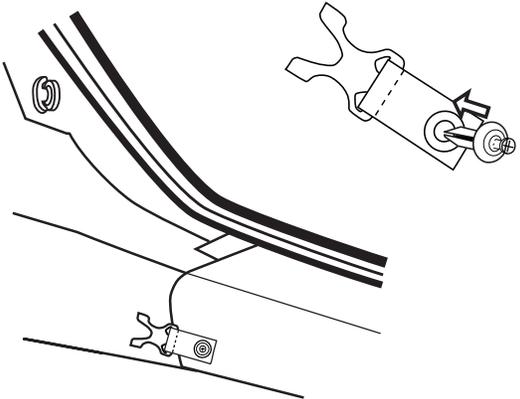


7  Note: Prior to connecting pouch to web strap, ensure buckles are facing the front of the vehicle.

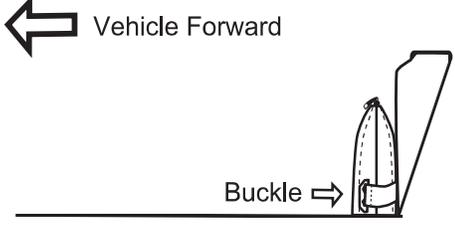


Buckle cargo net latch to lower web strap.

8  (a) To complete final installation, un-zip the pouch making sure the handle is facing toward the rear of the vehicle.

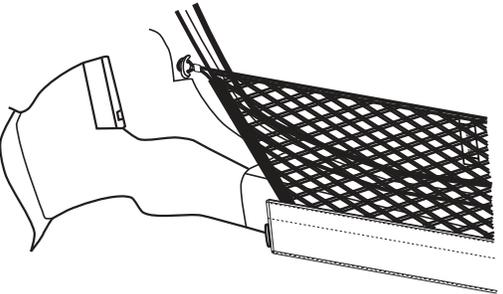


(b) Place each bungee loop around the upper T-anchor as shown in graphic.

A **CONTENU DU NÉCESSAIRE :** **1X**

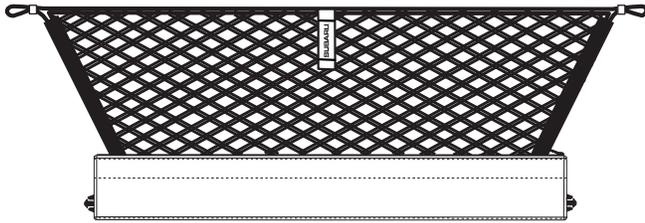

B Remarque : Ancrage en T supérieur **2X**

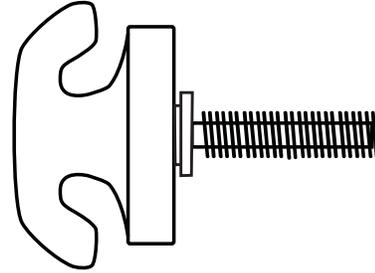

C **2X**

Remarque :
Écrou en U
supérieur




D **2X**

Remarque :
Entretoise de
nylon supérieure
M5x22 OD




E **2X**

Remarque :
Écrou en U inférieur




F **2X**

Remarque : Sangle en toile inférieure

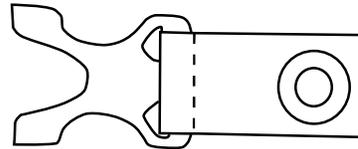

OUTILS REQUIS :



Signification des symboles :

 : Enlever

 : Poser

 : Déconnecter

 : Connecter

 : Emplacement de la marque

 : Espace utilitaire côté conducteur

 : Espace utilitaire côté passager

T : Couple de serrage







 : Desserrer

 : Jeter

 : Recyclable


 : Vue

REMARQUE : Les étapes d'installation ci-après s'adressent au côté passager du véhicule.
Vous devez suivre les mêmes étapes pour le côté conducteur.

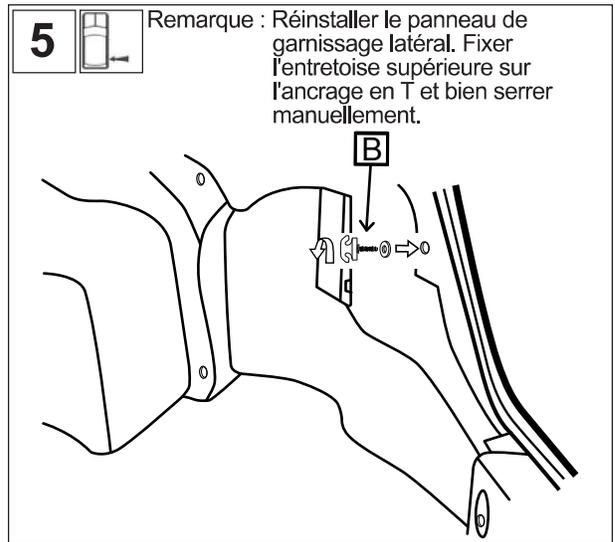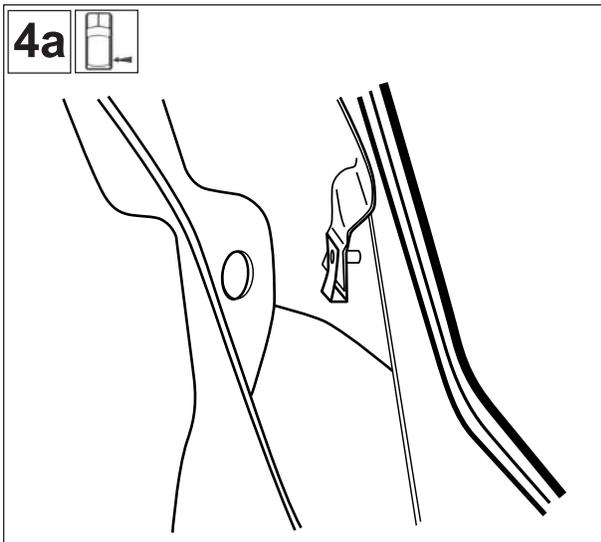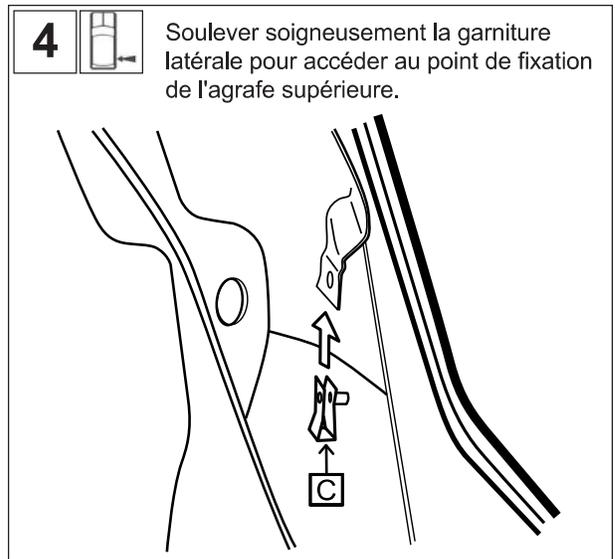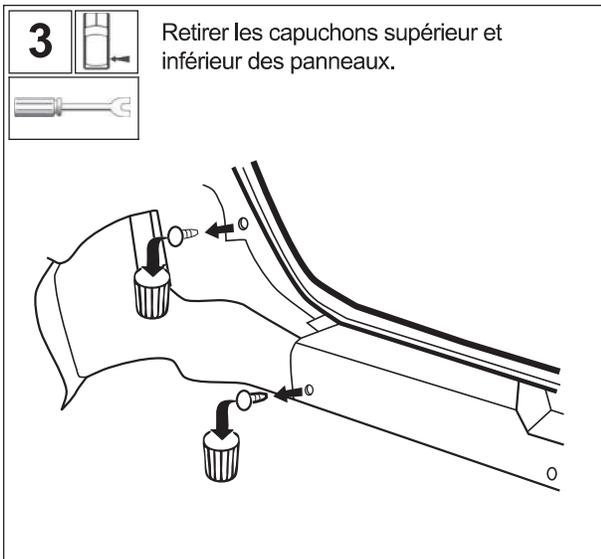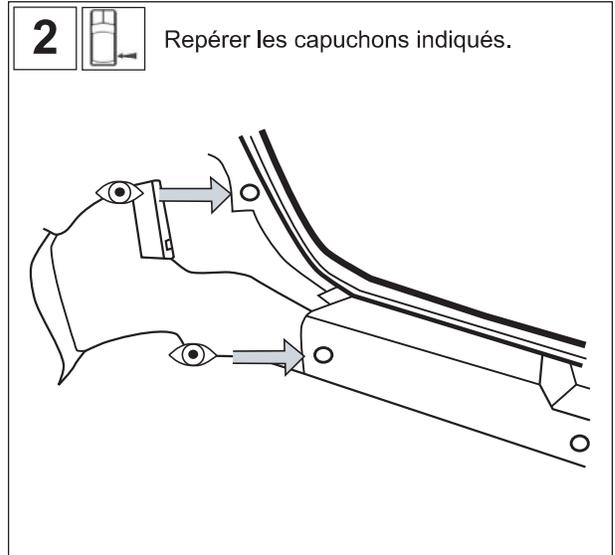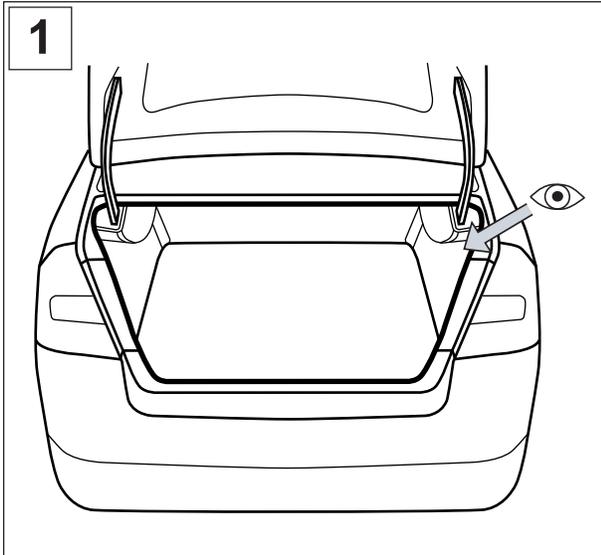


6

Pour fixer la sangle en toile, pousser la fixation du panneau dans le filet dans le trou du panneau de garnissage inférieur jusqu'à ce qu'elle soit bien en place.

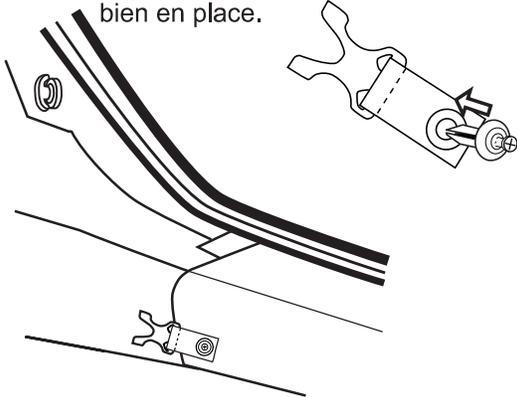**7**


Remarque : Avant d'attacher le sachet à la sangle, s'assurer que les boucles sont orientées vers l'avant du véhicule.

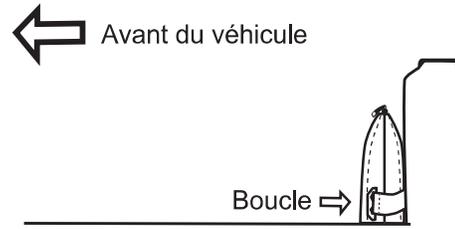

Boucler le verrou du filet à bagages à la sangle en toile inférieure.

8

(a) Pour terminer l'installation, ouvrir la pochette en vous assurant que la poignée est orientée vers l'arrière du véhicule.

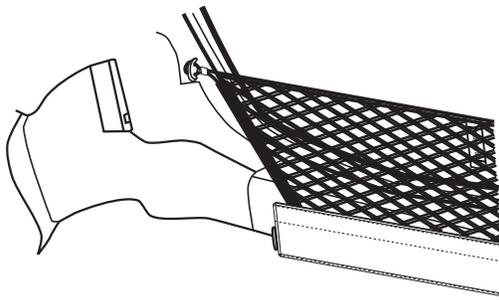

(b) Insérer chaque anneau autour de l'ancrage en T supérieur comme montré sur le graphique.