



**SUBARU**

Part Number: H451SAN100

*Installation Instructions*

Description: Fog Light Kit, Outback

**Kit Contents**



Fog Lights, Driver: 1  
Passenger: 1



Relay: 1



Switch: 1



Bolt: 2



Clip: 2

**Tools Required**

10mm Socket and Ratchet



Philips and flat head screw drivers



Torque Wrench


Trim Tool



**Icon Legends / Cautions**



: Remove/Disconnect

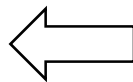

: Install




: Location of Clip or Screw

- 1) Read all instructions before proceeding with installation. If uncomfortable performing any procedures, have installation performed by a Subaru dealer technician.
- 2) Take care not to damage vehicle components during removal and installation.
- 3) Route wiring so that it does not rub against any sharp edges.



**Installation**

**1-1**

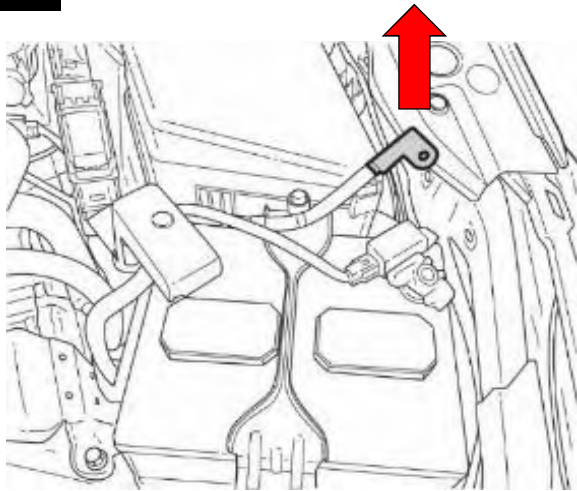


Disconnect Negative (-) battery cable from the battery sensor terminal. Hold the battery sensor carefully when removing the 10mm nut.

**1-2**



Remove three (3) clips and pull down the fender liner. Free fog lamp harness connector from the breakaway tape.


**1-3**

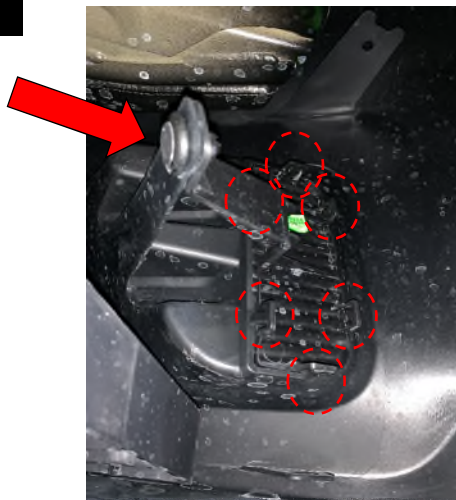

Remove clip from fog cover blank

Squeeze six (6) tabs and push fog cover blank forward to release

**1-4**

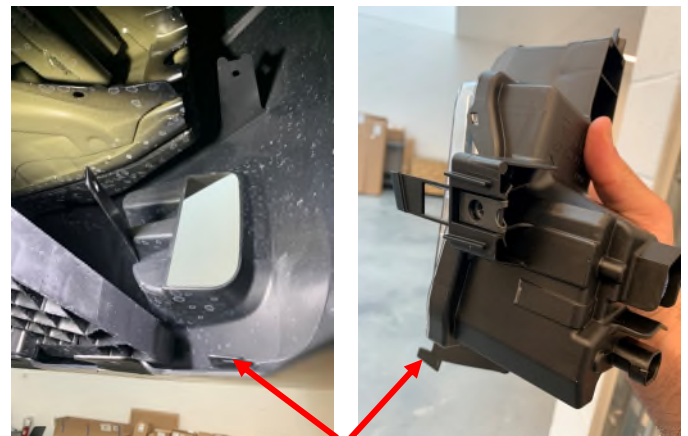

Lower Clip

Ensure correct fog lamp is selected for each side of vehicle.


Place fog lamp into position inside bumper and push forward to engage lower clip.



**Installation**

**1-5**

Top clip location

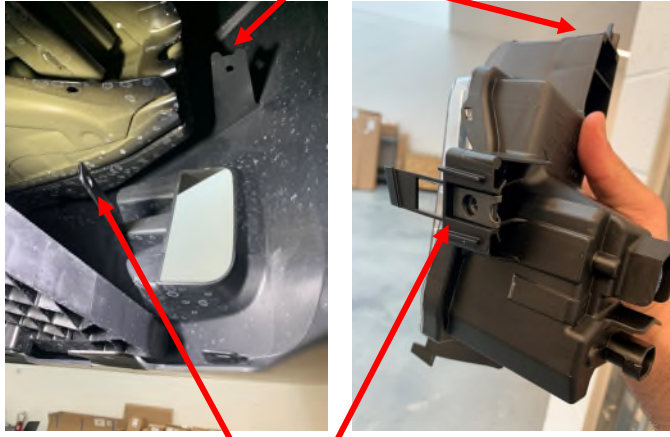

Bolt Location

With Fog Lamp in position, hand thread bolt into side of lamp assembly.

Locate top clip hole and insert/lock clip.

Torque to bolt 7.5 Nm (5.5 ft lbs)

Plug in lamp connector, ensure the tab locks into place

**1-6**



Reassemble fender liner.

Repeat install for remaining side of vehicle

**1-7**



Using a trim tool, remove the side cover of the lower dash console

**1-8**




Screw Locations

Remove two (2) philips head screws




**Installation**

**1-9**

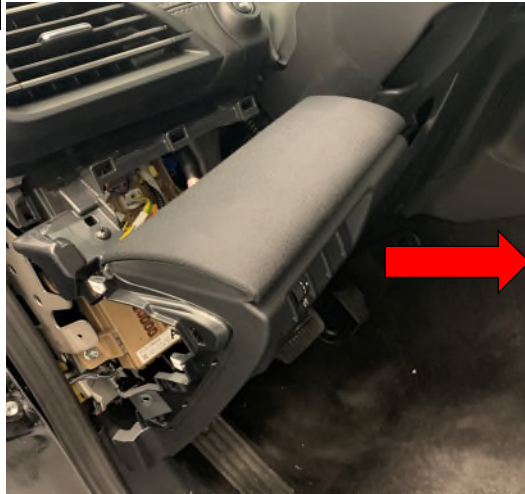

Pull lower dash console rearward to disengage all clips  
Disconnect all connections from switch panel  
Release pre-wired connector

**1-10**

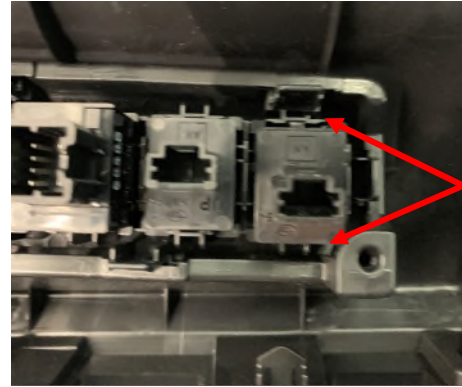

Locking tabs


Using a flat bladed screw driver, release the top and bottom tabs of the right most switch blank.

**1-11**



Install fog lamp switch. Ensure both tabs lock into place.  
Plug in all connections to switch panel  
Reinstall lower dash console

**1-12**

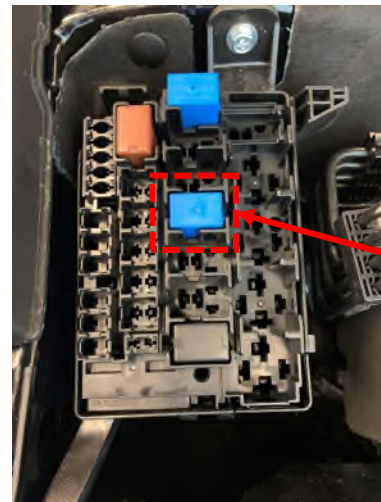

Fog lamp relay location

Open hood and access passenger side relay panel  
Install fog lamp relay into above noted position



**SUBARU**


Part Number: H451SAN100

*Installation Instructions*

Description: Fog Light Kit, Outback

Installation

1-13

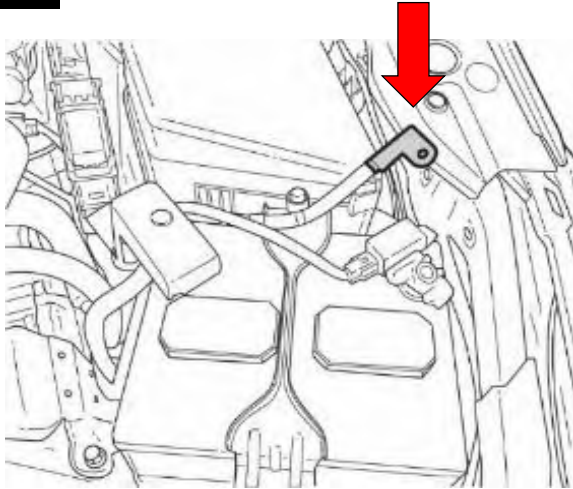

Connect Negative (-) battery cable to the battery sensor terminal.

Torque to 7.5Nm (5.5 ft lbs)