



# SUBARU


Rev 1.0

## LEGACY / OUTBACK Tweeter Kit


## INSTALLATION INSTRUCTION

PART No.

H630SAN100

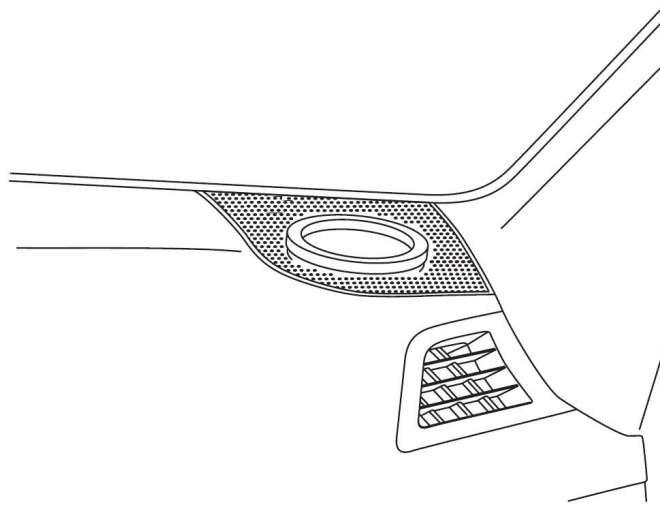


### COMPONENTS

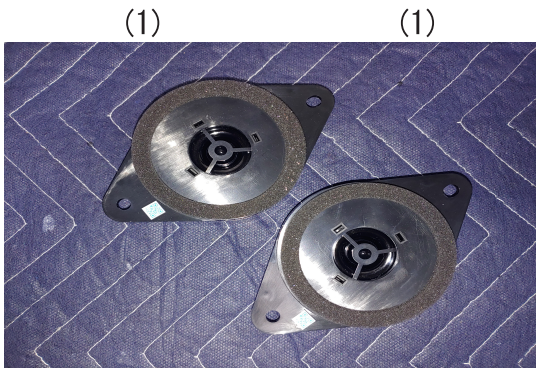


NO.	Name	QTY
1	Tweeter	2
2	Screw	4


### TOOLS NEEDED

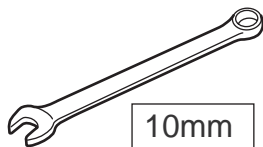

WRENCH

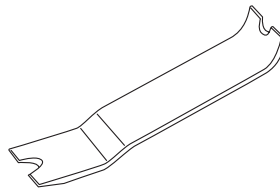

CLIP REMOVER

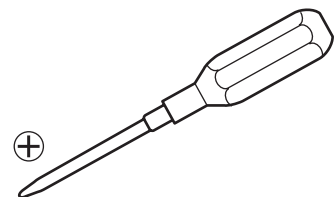

SHORT DRIVER

1

Disconnect From Eyelet

10mm

6

2

7

3

8

Pull breakaway tape

4

Pull breakaway tape

9

$4.5 \pm 1.5 \text{ N} \cdot \text{m}$  ( $46 \pm 15.3 \text{ kgf} \cdot \text{cm}$ ,  $3.3 \pm 1.1 \text{ ft} \cdot \text{lb}$ )

5

$4.5 \pm 1.5 \text{ N} \cdot \text{m}$  ( $46 \pm 15.3 \text{ kgf} \cdot \text{cm}$ ,  $3.3 \pm$

10