





# SUBARU

## Sport Grille

### Installation Manual


Genuine Part Number: J1010AN000 (Non-Turbo), J1010AN010 (Turbo)

Applicable Model: OUTBACK

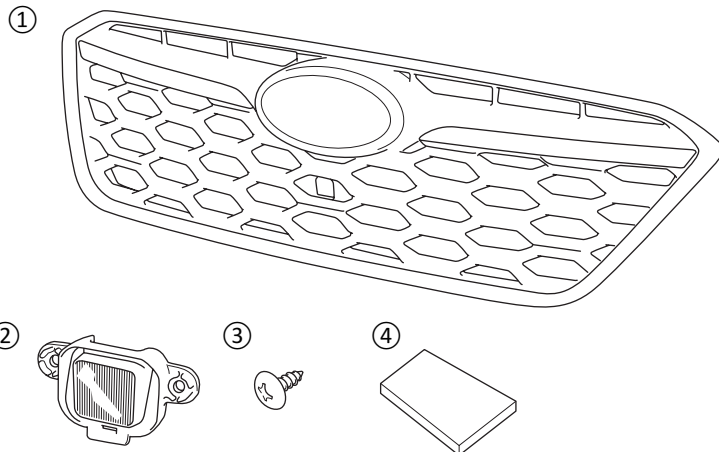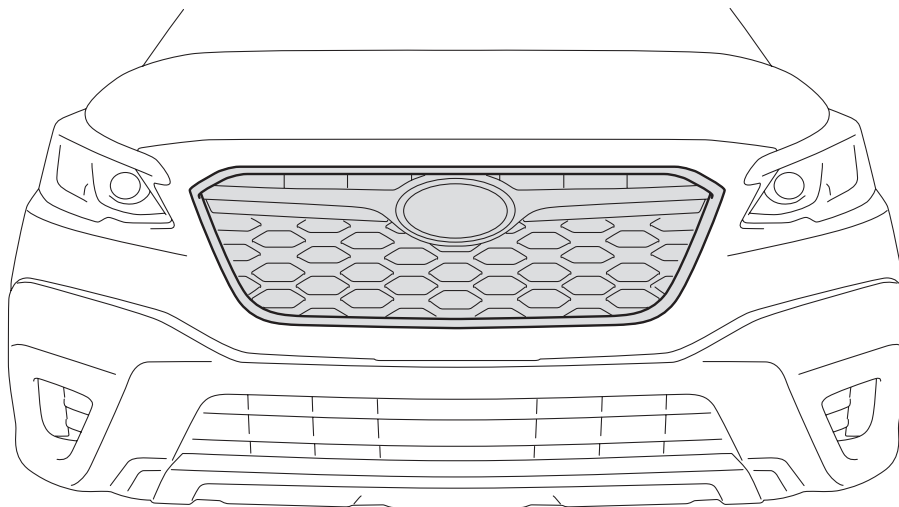


No.	Part Name	Quantity
①	Sport Grille	1
②	Cover Bracket	1
③	Screw (M4 x 12 mm)	2
④	Baffle	1


Combination Wrench (10 mm)

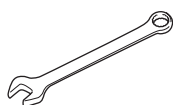


Socket Wrench (10 mm)

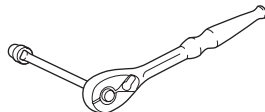


Torque Wrench

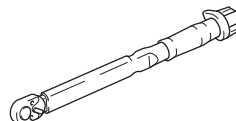


Rubbing Alcohol

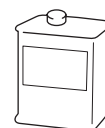


Cloth




Clip Remover

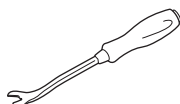


Phillips-head Screwdriver

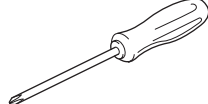

Flathead Screwdriver

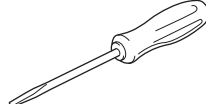


Torque Screwdriver

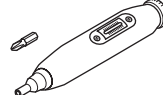


Protective Tape



Protective Sheet

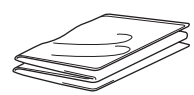


- 1 Clean the area shaded in the figure.


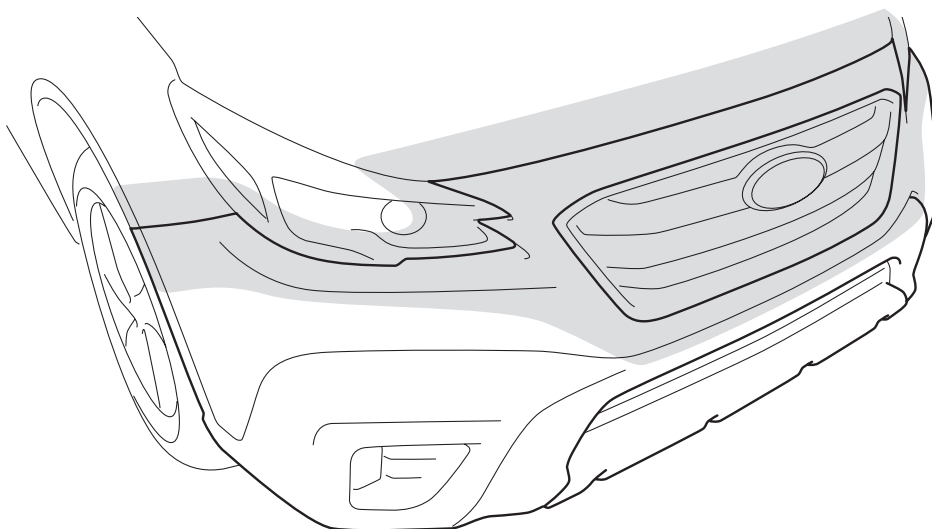


- 2 Reference the vehicle Service Manual when disconnecting the negative battery terminal.

- 3 To prevent scratches, apply Protective Tape around the headlights, the Fender and Front Bumper connecting joint, and Grille.

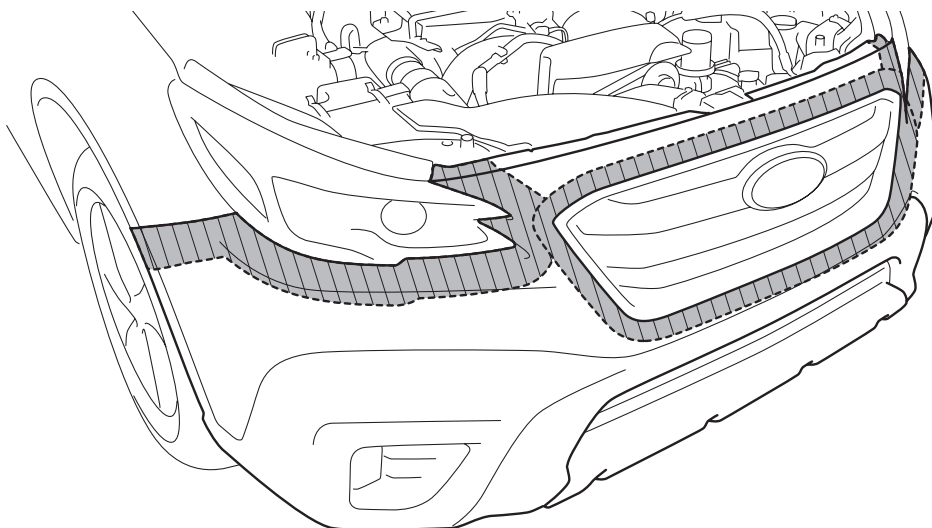


- 4 Remove the 3 clips on the right side of the Front Bumper. Perform the same procedure for the other side.

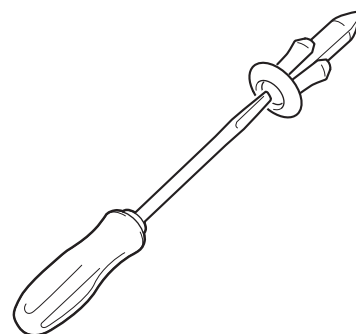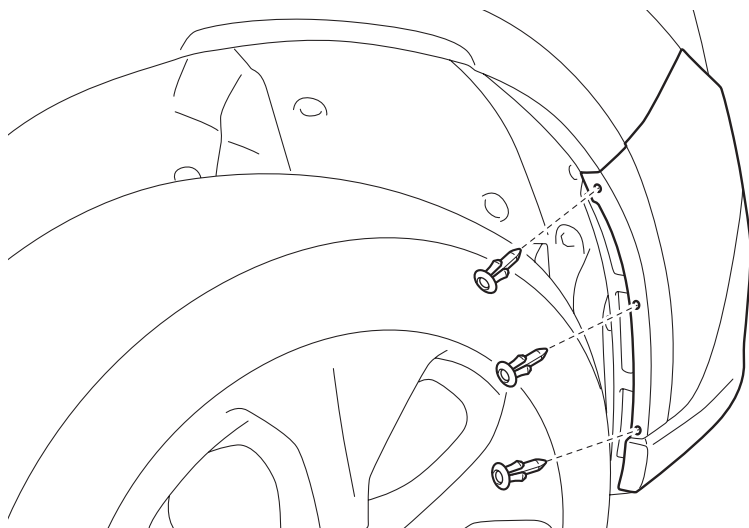


The figure shows the RH side

- 5 Remove the 9 clips on the underside of the Front Bumper. Make special note of how the circled clips attach to the bumper and the overlap sequence of the panels.


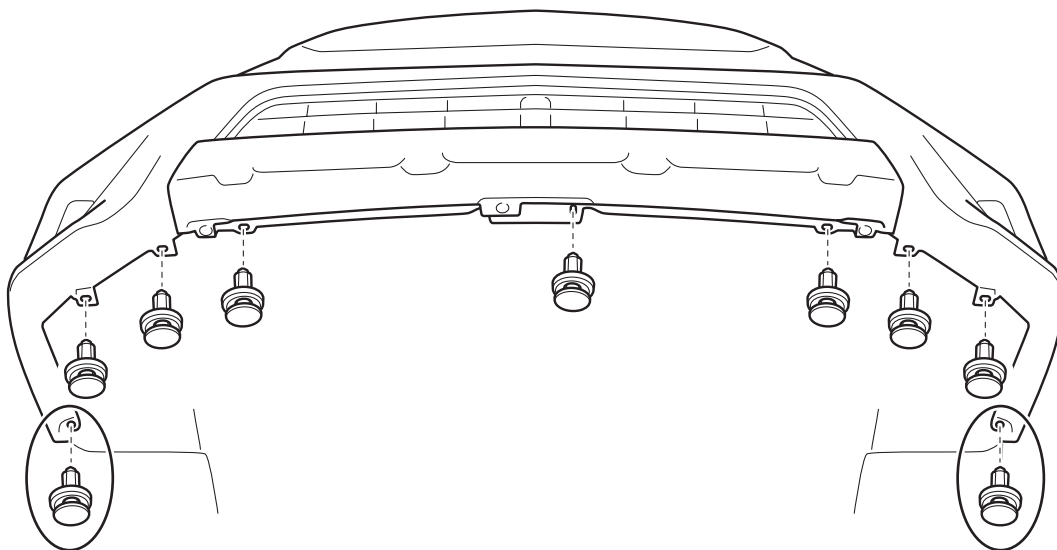


- 6 Remove the 4 Clips and 2 Bolts on the top of the Front Bumper.

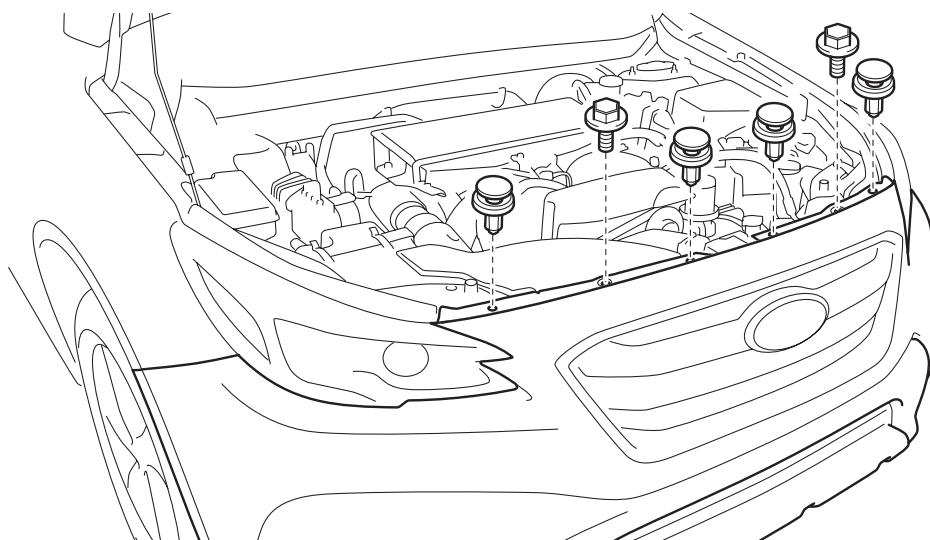

- 7 Disconnect the ① Front Camera Harness connector. Remove just one Clip on the ② Radiator Support Panel. Carefully lift up the ③ ④ Radiator Support Panel and remove the Front Camera Harness Clip.

For Vehicles Equipped  
With Front Camera

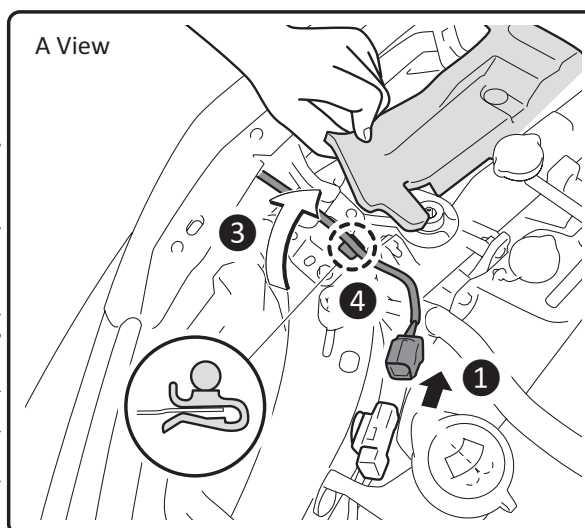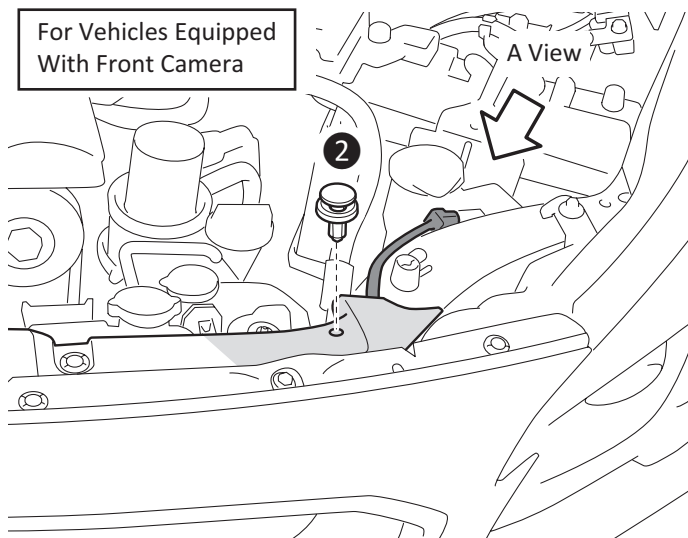


8

Spread out the Protective Sheet. For vehicles with Fog Lamps, disconnect the connectors. Remove the Claws from the side of ① and then the front of ②.

**Take note of the position of the Claws, and slowly and carefully remove them. Forcefully removing the Claws may break them.** Completely remove the ③ Front Bumper and carefully place it on the Protective Sheet.

The figure shows the RH side

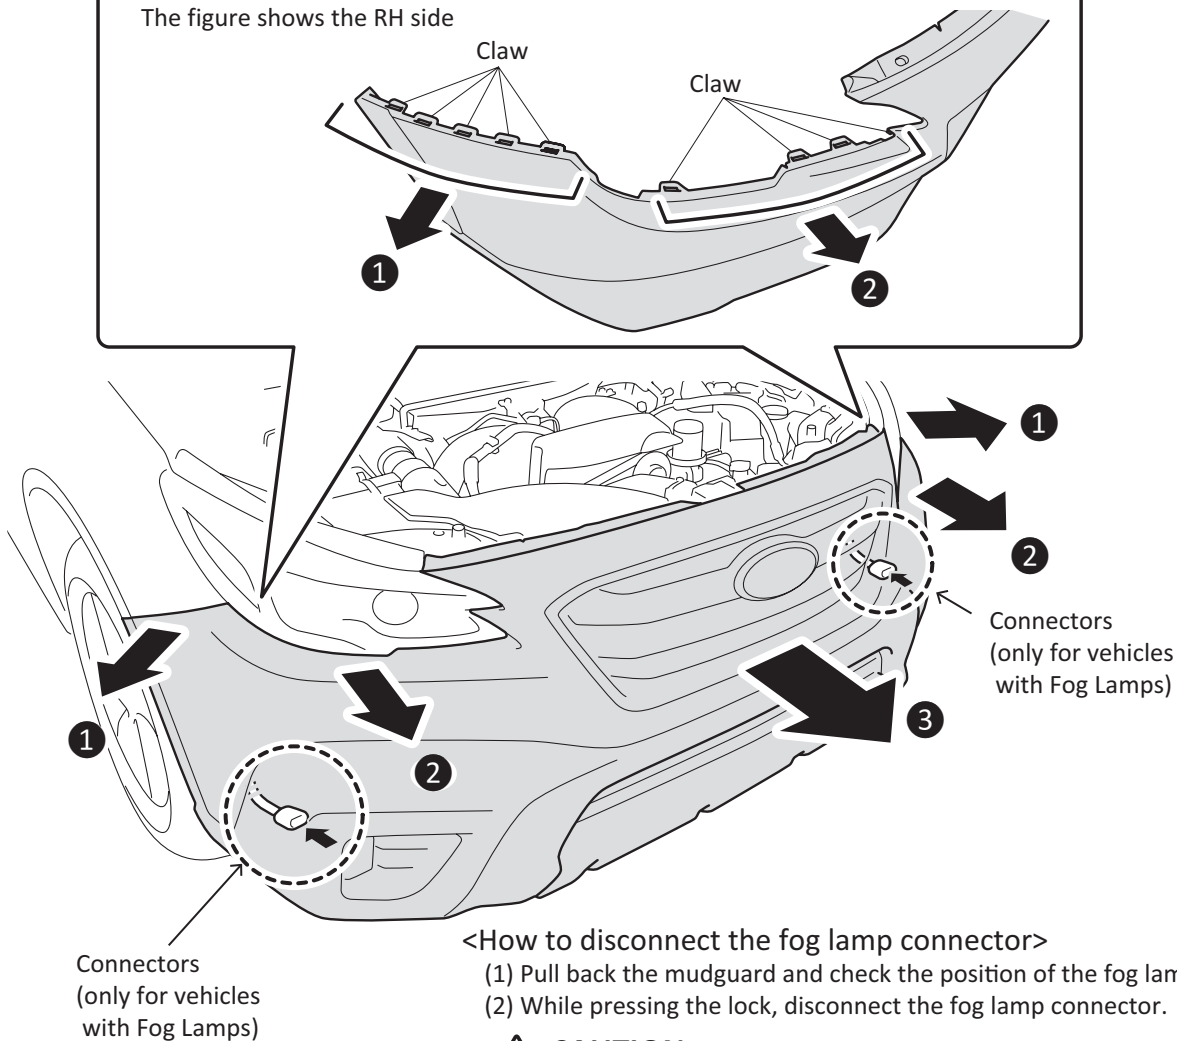

#### <How to disconnect the fog lamp connector>

- (1) Pull back the mudguard and check the position of the fog lamp harness.
- (2) While pressing the lock, disconnect the fog lamp connector.




#### CAUTION

Be careful when disassembling, to avoid injuries to the hands and arms.  
Be sure to disconnect the fog lamp harnesses before removing the front bumper.  
Otherwise, the fog lamp harnesses may become damaged.

9


Remove the 8 Screws on the back side of the Front Bumper. Push the 6 Claws forward and remove the original Grille. **Slowly and carefully remove the Claws. Forcefully removing the Claws may break them.**

The figure shows a vehicle with a camera  
(a vehicle without a camera follows the same procedure)

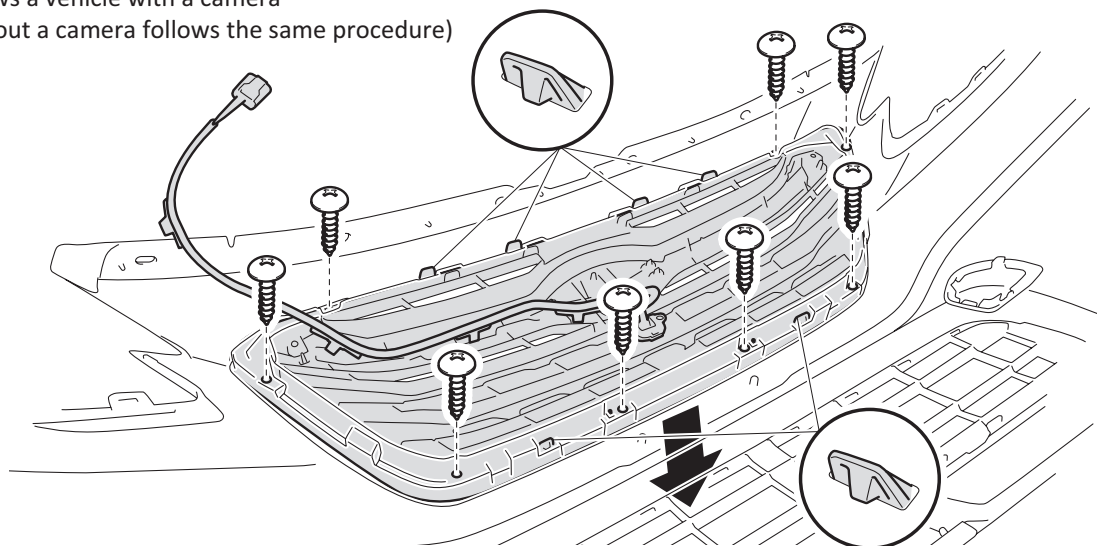


- 10 Remove the 3 Clips and 2 Screws, and then remove the Front Camera.

For Vehicles Equipped  
With Front Camera

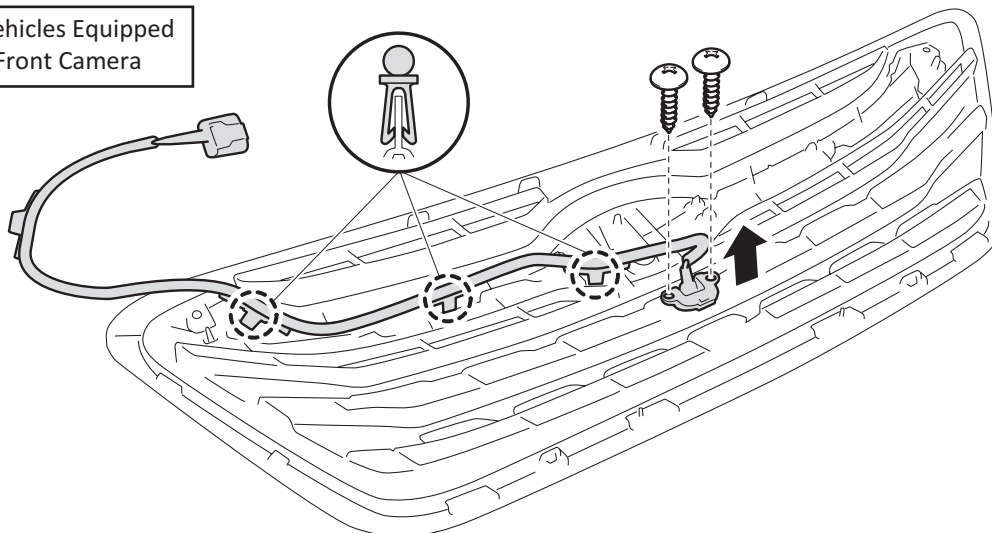

- 11 Place the Sport Grille on the Protective Sheet. Reuse the 2 Screws to attach the Front Camera to the Sport Grille.  
**Make sure to use the guide holes when attaching the Front Camera. Tighten the Screws to the specified torque.**  
Secure the Camera Harness with the 3 Clips.

For Vehicles Equipped  
With Front Camera

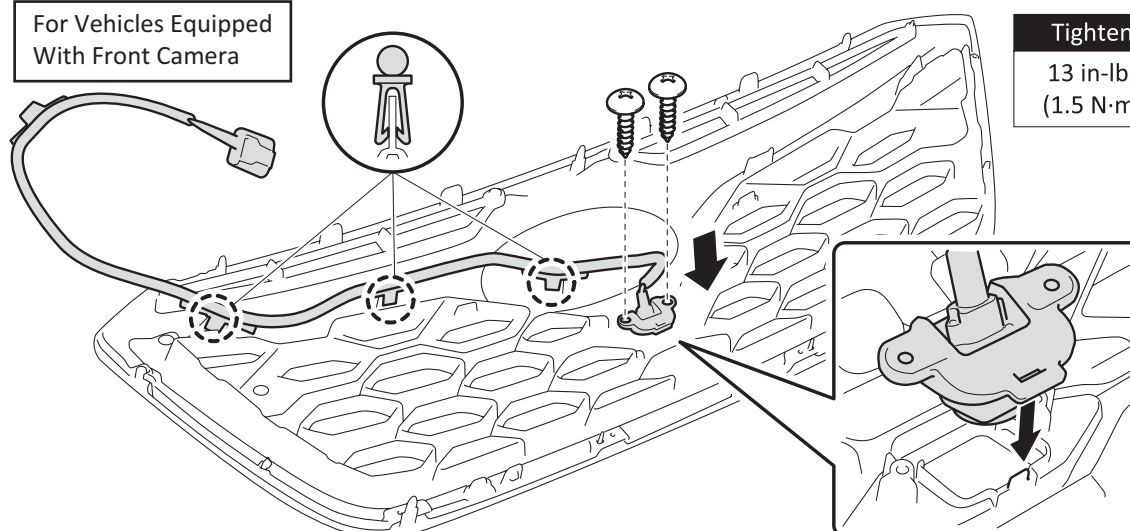


Tightening torque

13 in-lbs  $\pm$  4 in-lbs  
(1.5 N·m  $\pm$  0.5 N·m)

- 12 Place the Sport Grille on the Protective Sheet. Use 2 Screws (M4 x 12 mm) to attach the Cover Bracket to the Sport Grille.  
**Make sure to use the guide holes when attaching the Front Camera. Tighten the Screws to the specified torque.**

For Vehicles Without  
Front Camera

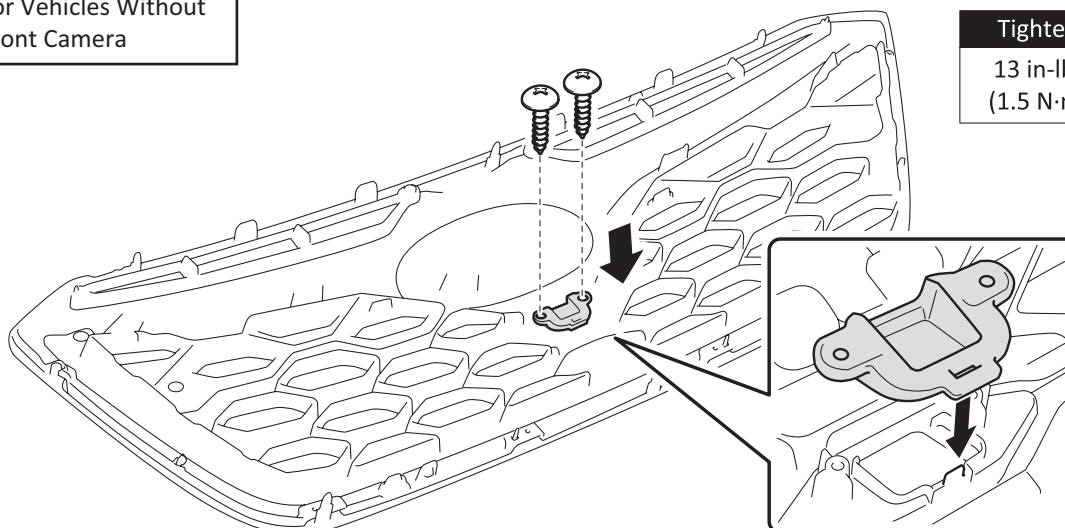


Tightening torque

13 in-lbs  $\pm$  4 in-lbs  
(1.5 N·m  $\pm$  0.5 N·m)




- The figure shows a vehicle with a camera  
(a vehicle without a camera follows the same procedure)

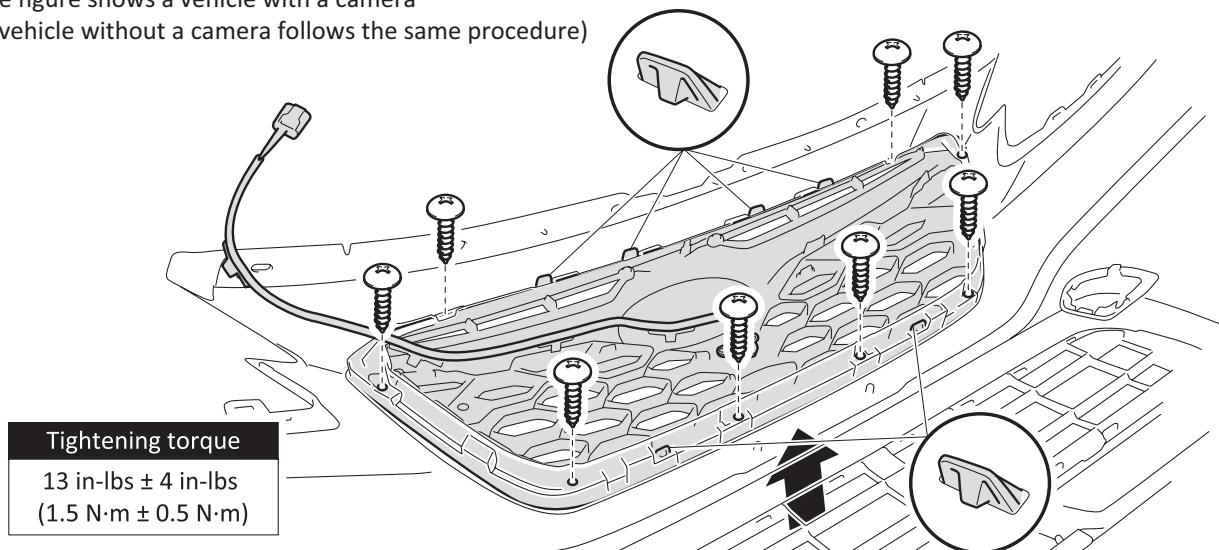

- 
- A detailed technical line drawing of a car engine, viewed from the front-left. The drawing shows various components including the timing belt cover, camshaft, and other engine parts. A callout arrow points from the text 'Timing belt cover' to the corresponding part of the engine.


---

For 2Horn

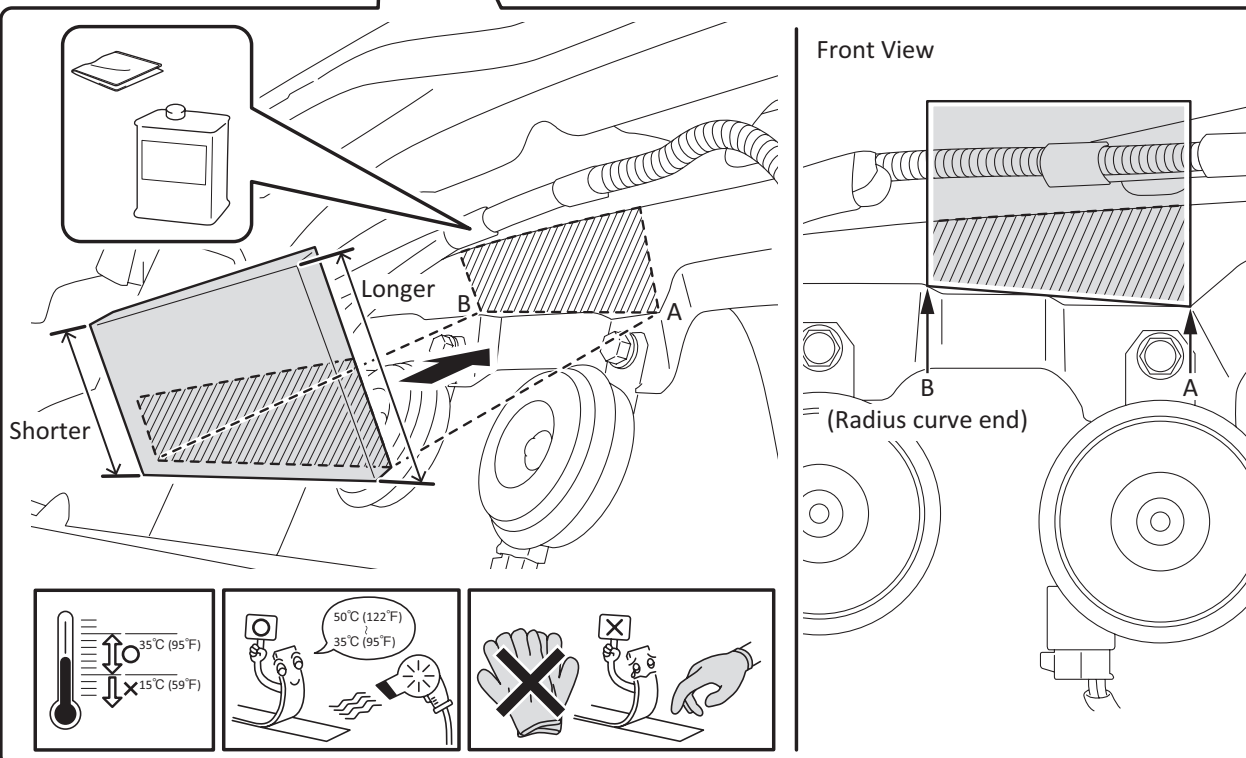


14-b

Locate the baffle installation surface shown below. Clean off any dirt, then wash installation surface thoroughly with rubbing alcohol. Align and temporarily attach the right hand corner of the baffle at A. Then align the left hand corner of the baffle at B (radius curve end). Make sure that the sides of the baffle are vertical, and firmly press on the double-sided tape portion to securely fix the baffle.

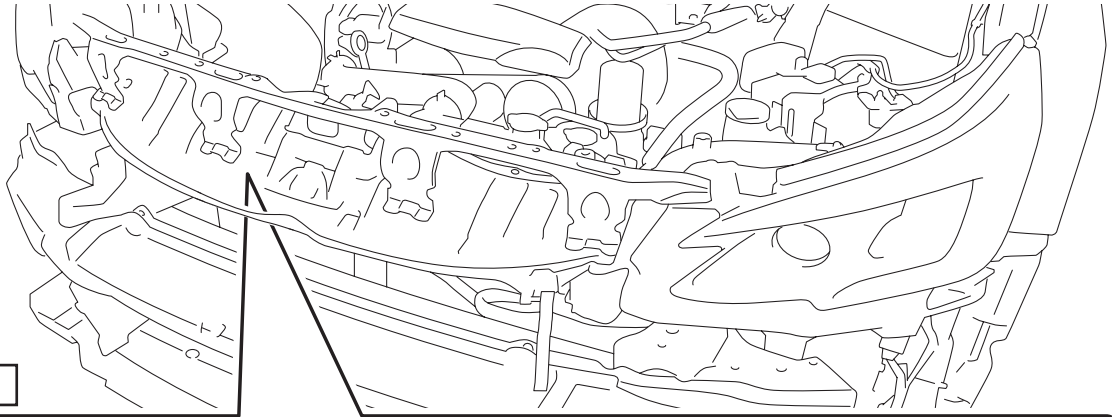


For 1Horn

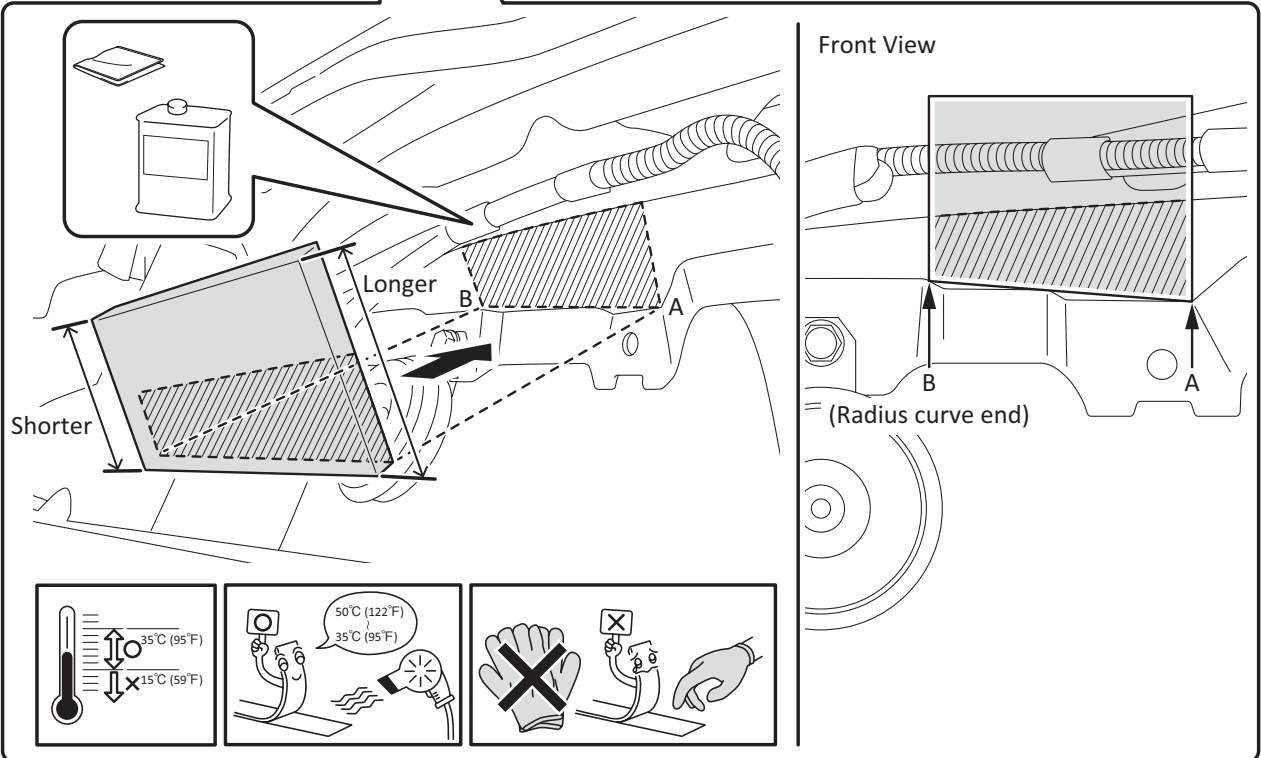


- 15 Carry the ① Front Bumper toward the vehicle and if the vehicle has ② Fog Lamps connect the connectors. Engage the Claws from ③ and then ④, and reinstall the Front Bumper. **Check that the Claws are set in the correct position and then push them in.**

The figure shows the RH side

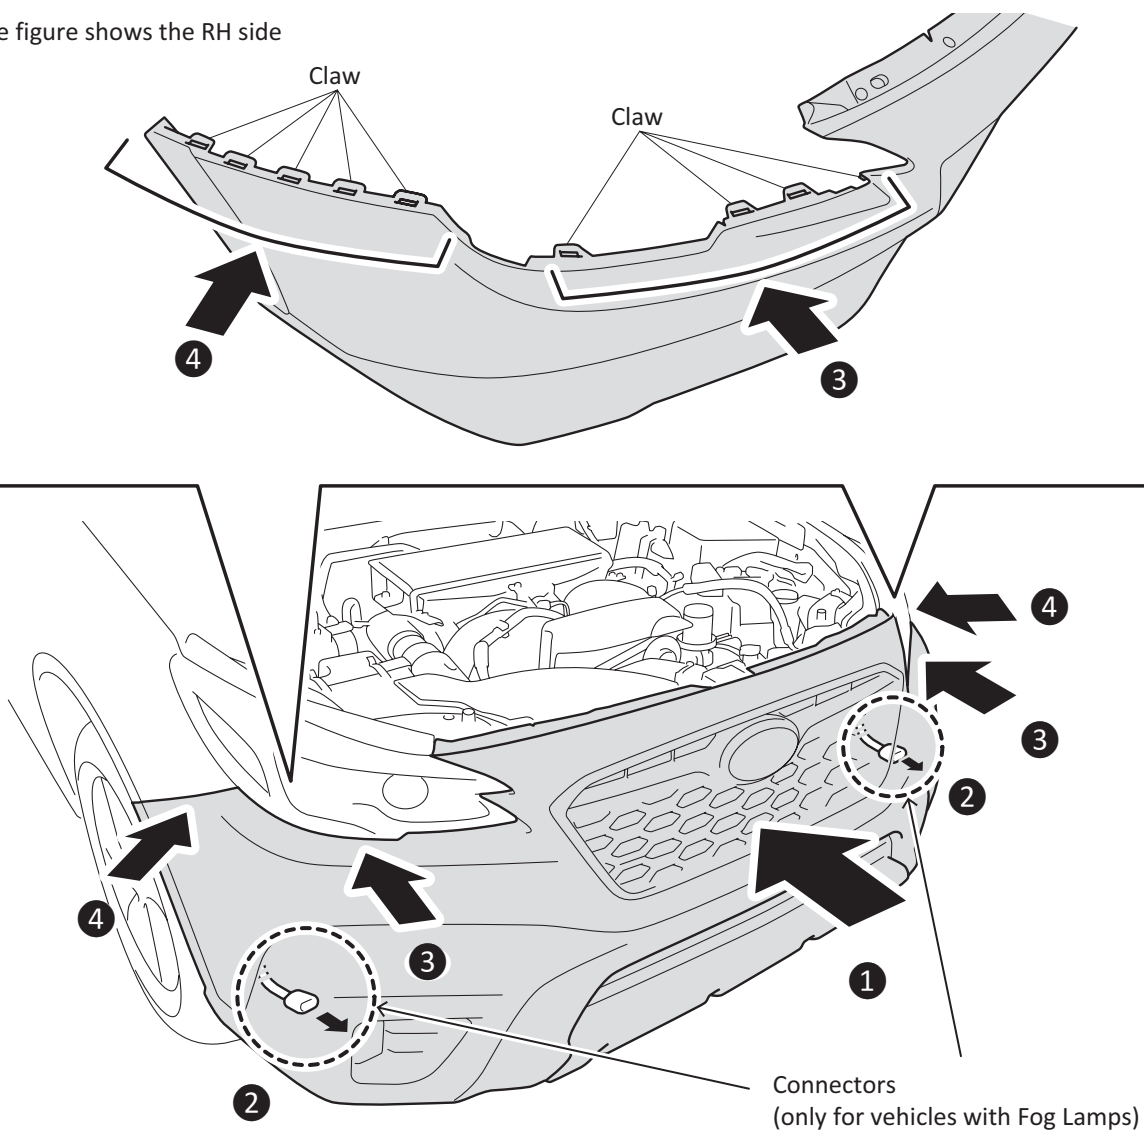


- 16 Carefully lift up the ① ② Radiator Support Panel and secure the Front Camera Harness with the Clip. Connect the ③ Front Camera Harness connector. Secure one Clip on the ④ Radiator Support Panel.

For Vehicles Equipped With Front Camera

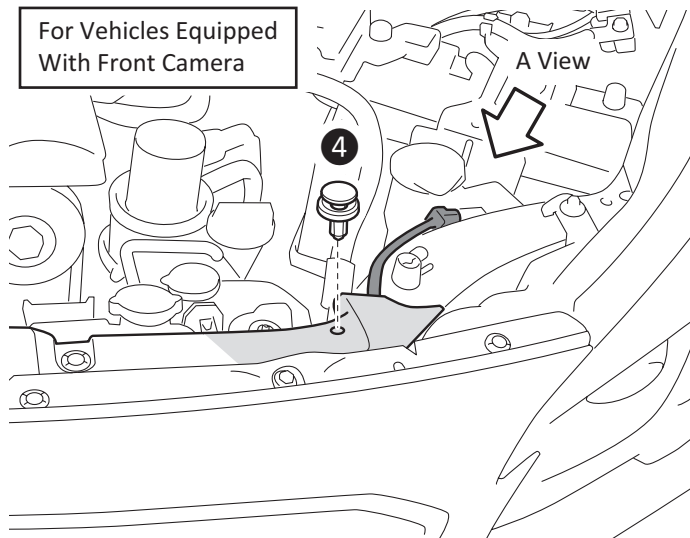

A View

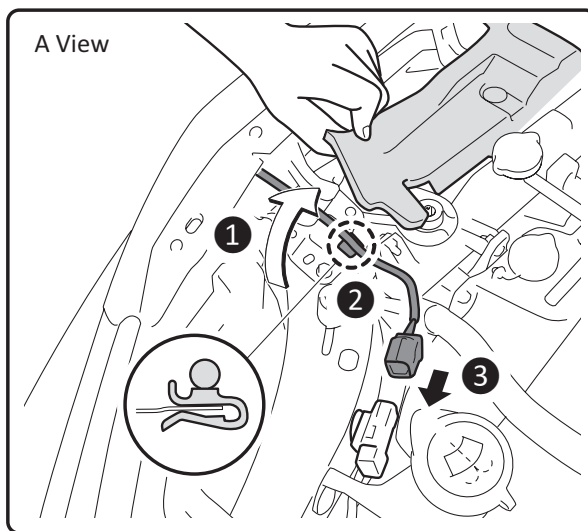






17 Secure the top of the Front Bumper with 4 Clips and 2 Bolts.

Tightening torque


66 in-lbs  $\pm$  18 in-lbs  
(7.5 N·m  $\pm$  2 N·m)

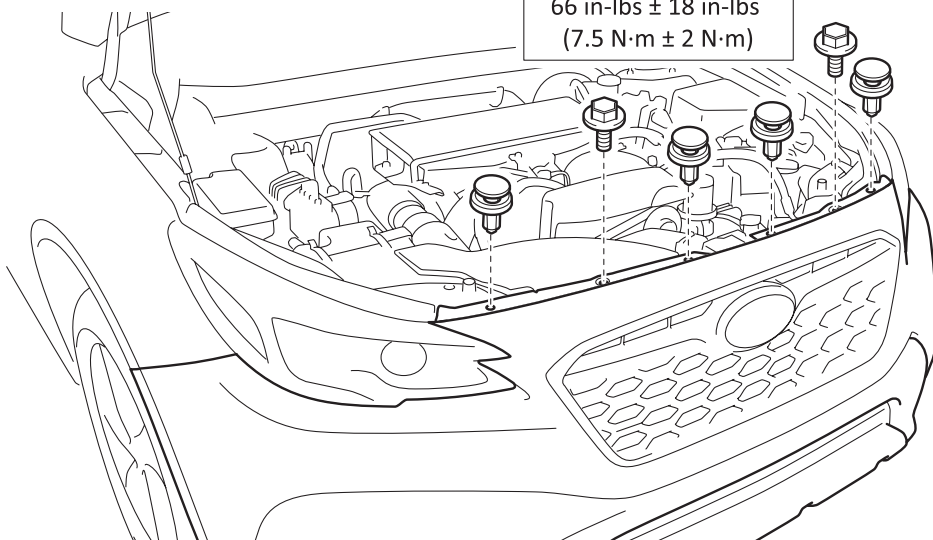

18 Secure the underside of the Front Bumper with 9 Clips.

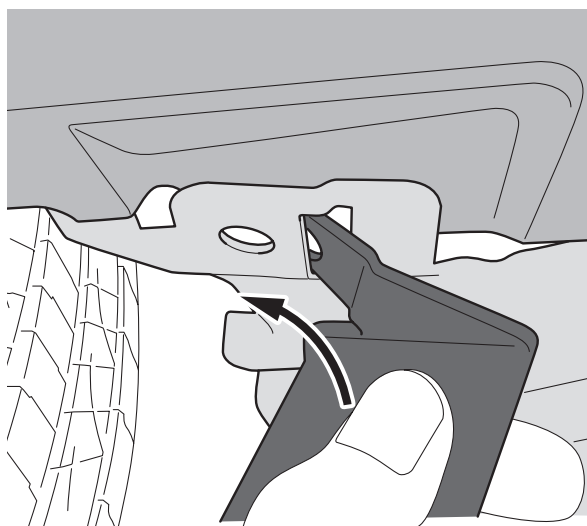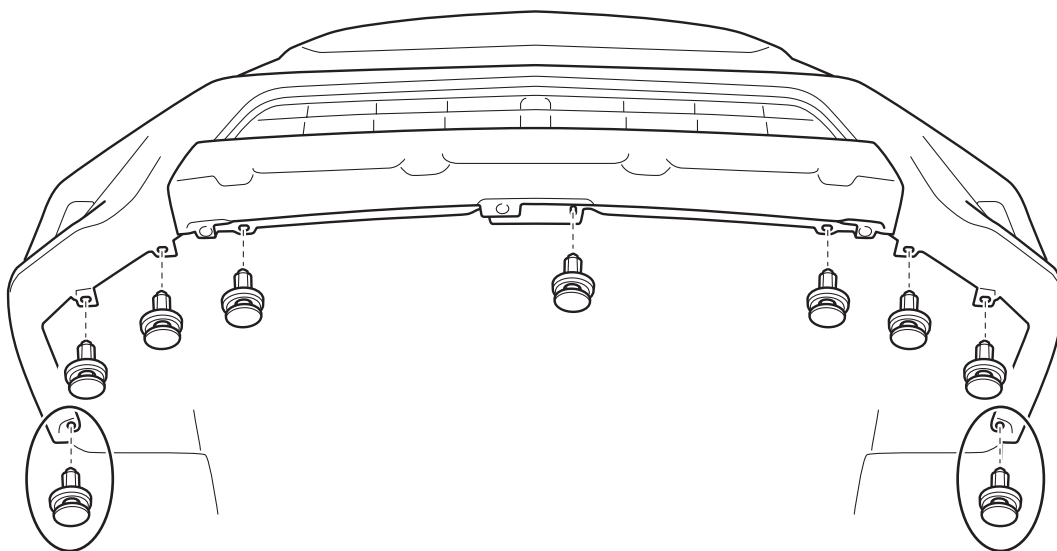

The figure shows the RH side


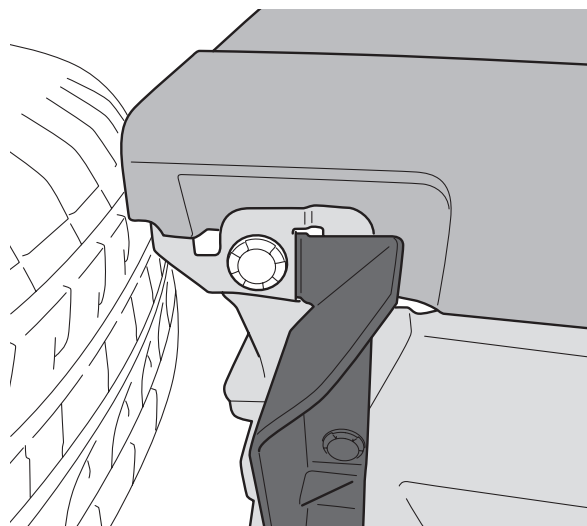


The figure shows the RH side

19

Secure the right side of the Front Bumper with 3 Clips.


Push pointy end to reset clip and then insert into bumper and push button to engage. Perform the same procedure for the other side.

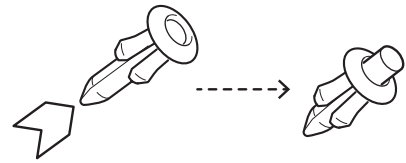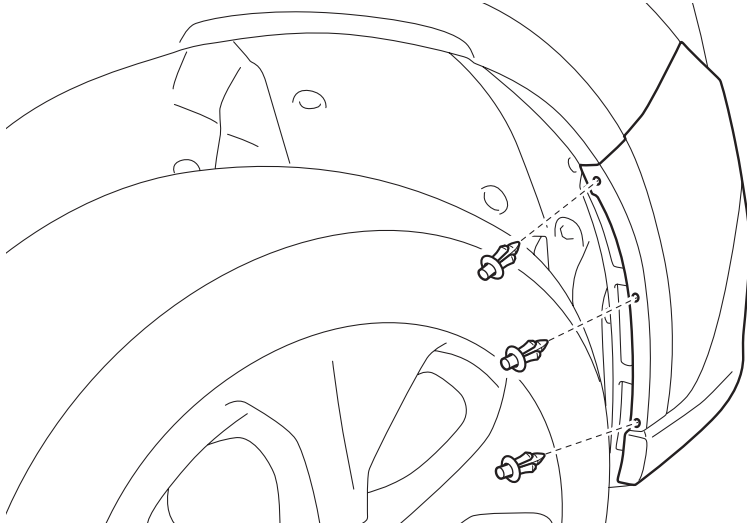

The figure shows the RH side

20

Remove the Protective Tape.

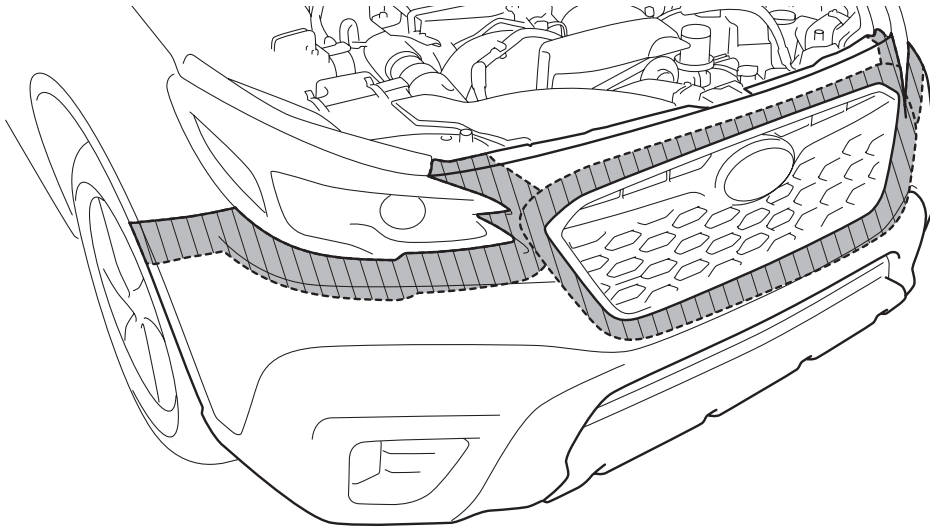

21

Reference the vehicle Service Manual when reconnecting the negative battery terminal.

22

Clean the vehicle. This now completes installation work.

