





PART NUMBER: J131SFN010-Gray
J131SFN020-Red
J131SFN030-Yellow
J131SFN040-Orange
J131SFN050-Gold

IMPREZA AND CROSSTREK - INTERIOR ACCENT LINERS

Installation Instruction



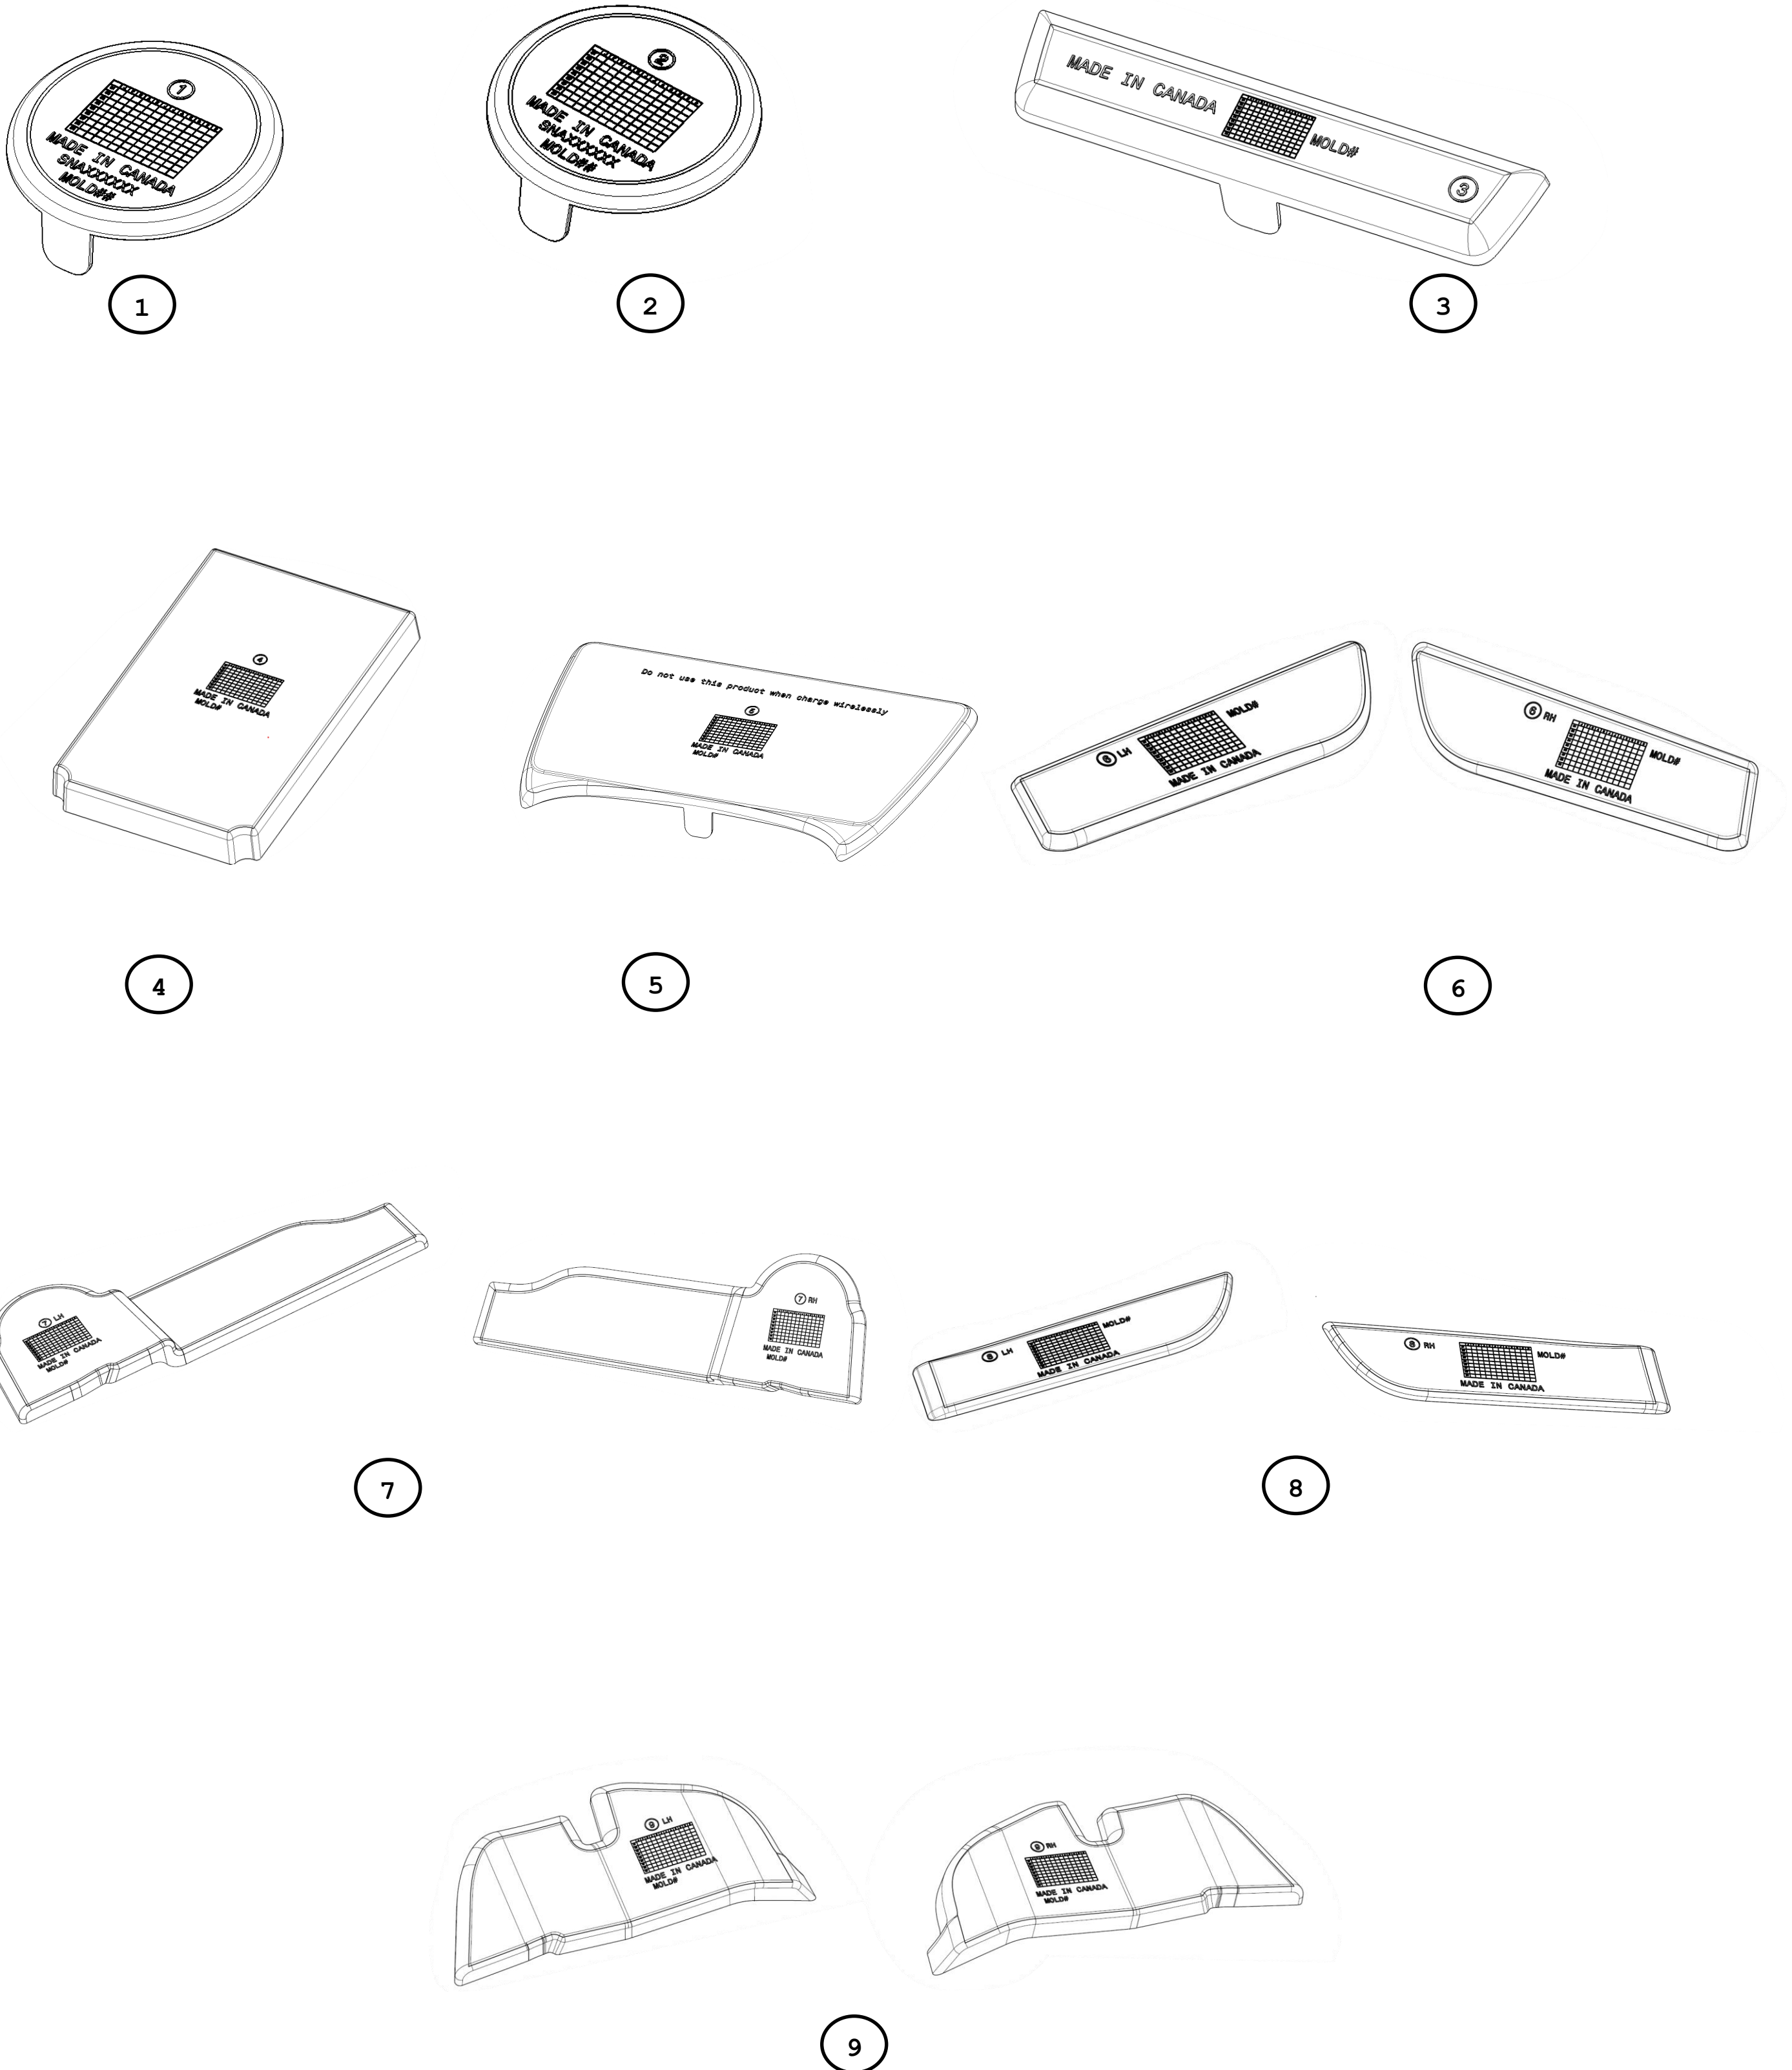


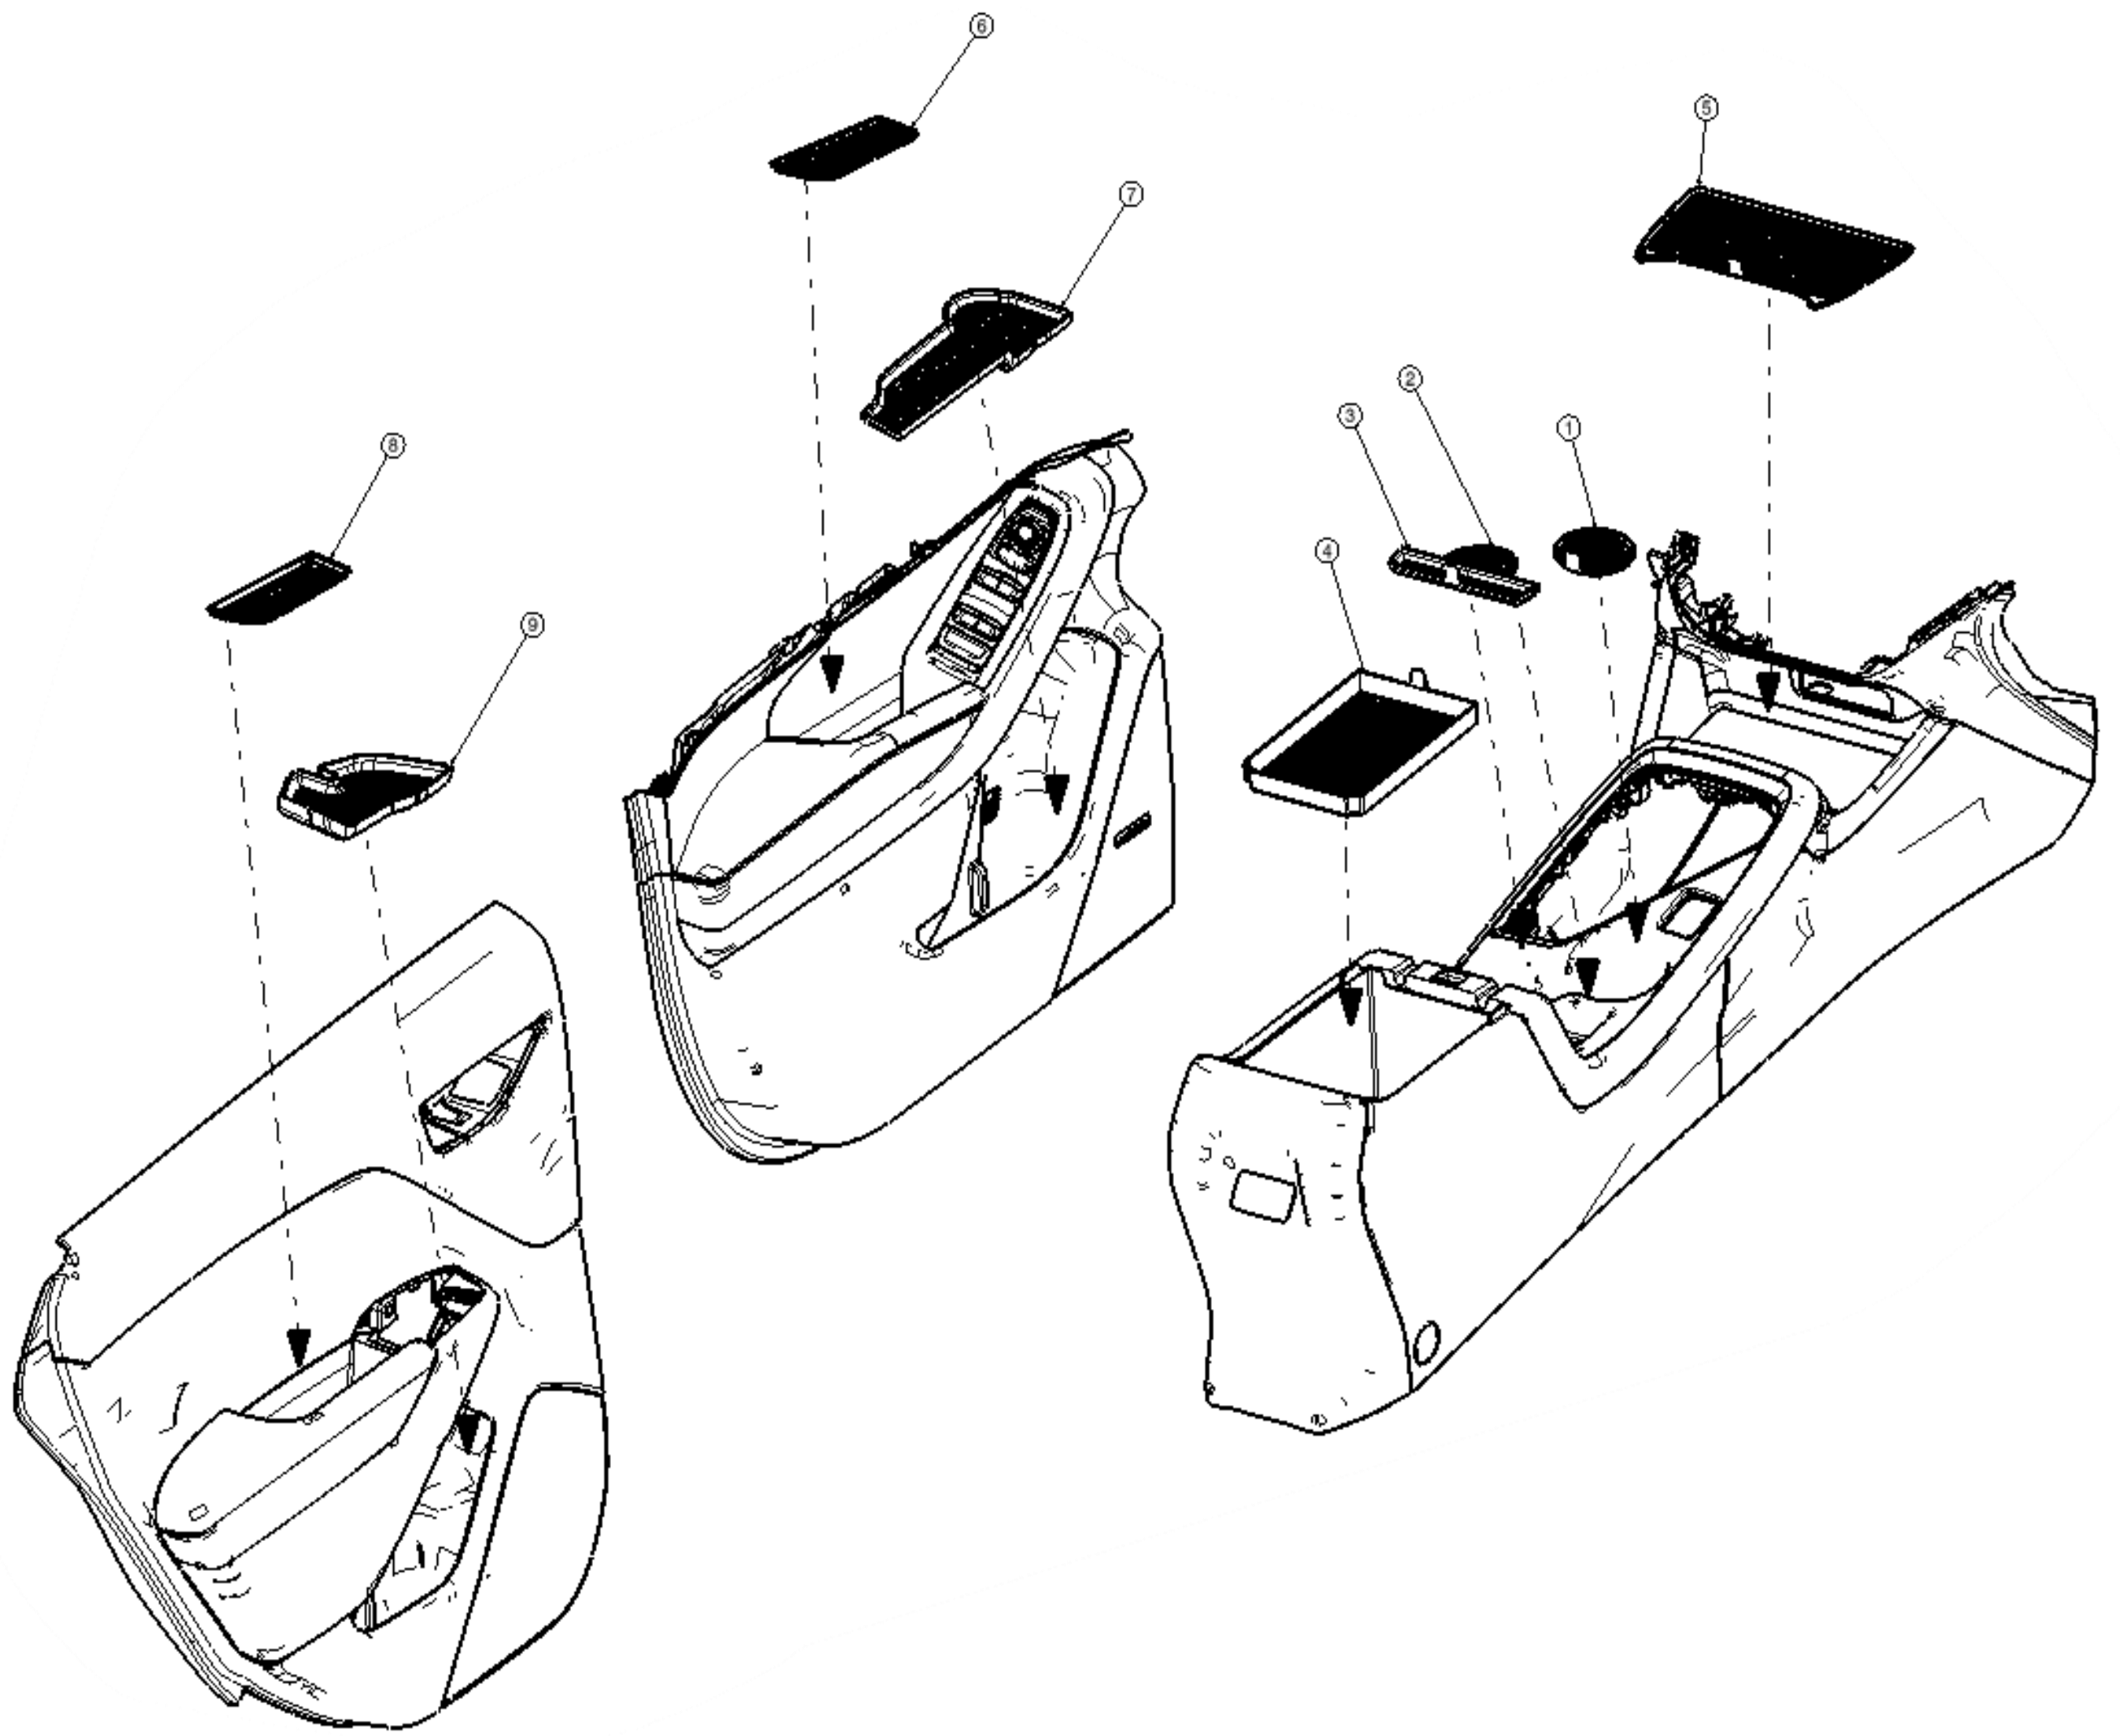




SL NO	PART NAME	LH	RH	QTY
1	CENTER CONSOLE CUP HOLDER INSERT_01	-	-	1
2	CENTER CONSOLE CUP HOLDER INSERT_02	-	-	1
3	CENTER CONSOLE INSERT	-	-	1
4	CENTER CONSOLE TRAY INSERT	-	-	1
5	FORWARD POCKET INSERT	-	-	1
6	FRONT DOOR PULL INSERT	1	1	-
7	FRONT DOOR POCKET INSERT	1	1	-
8	REAR DOOR GRAB INSERT	1	1	-
9	REAR DOOR POCKET INSERT	1	1	-

NOTE: BEFORE INSTALLING THE INSERT, MAKE SURE THAT ALL THE POCKETS ARE EMPTIED.




1

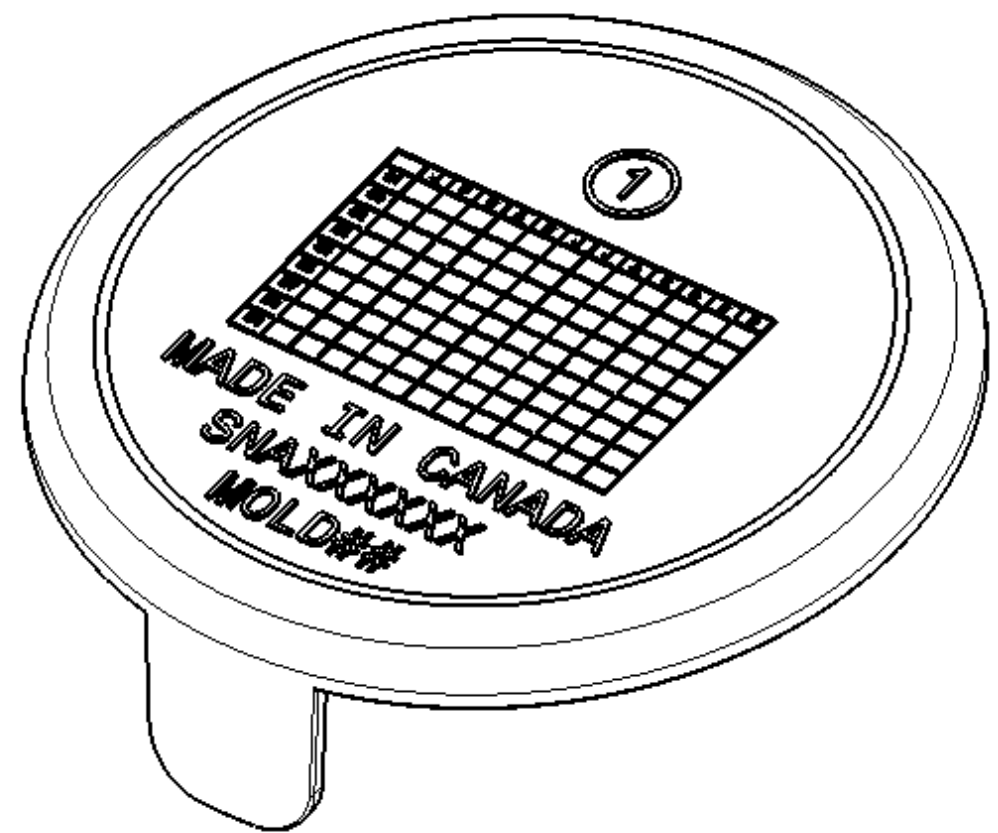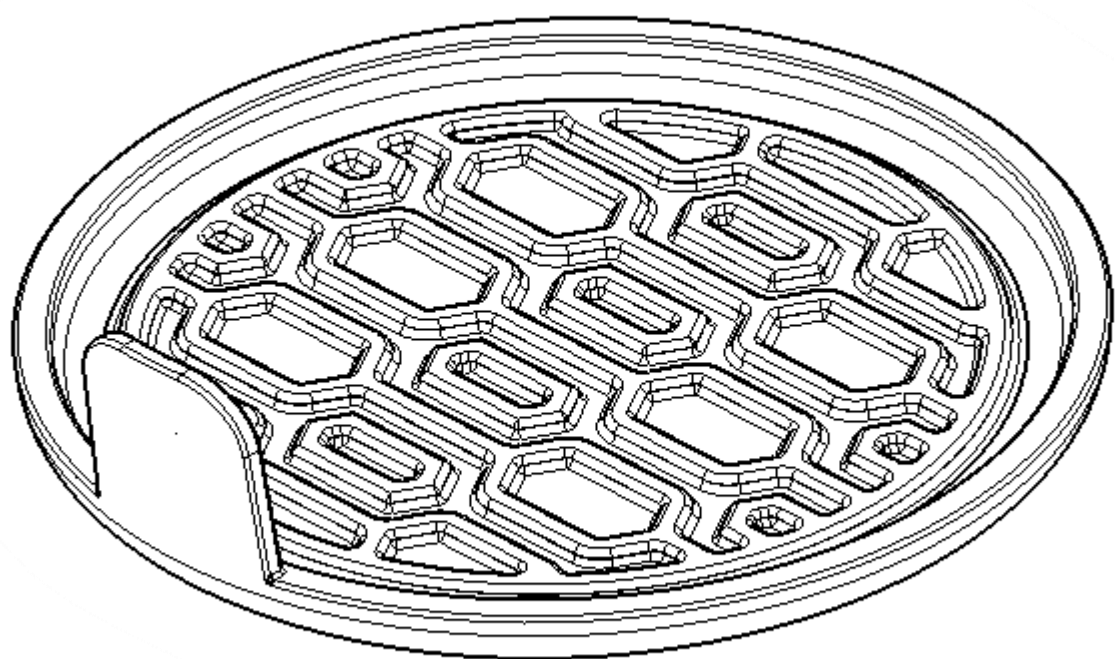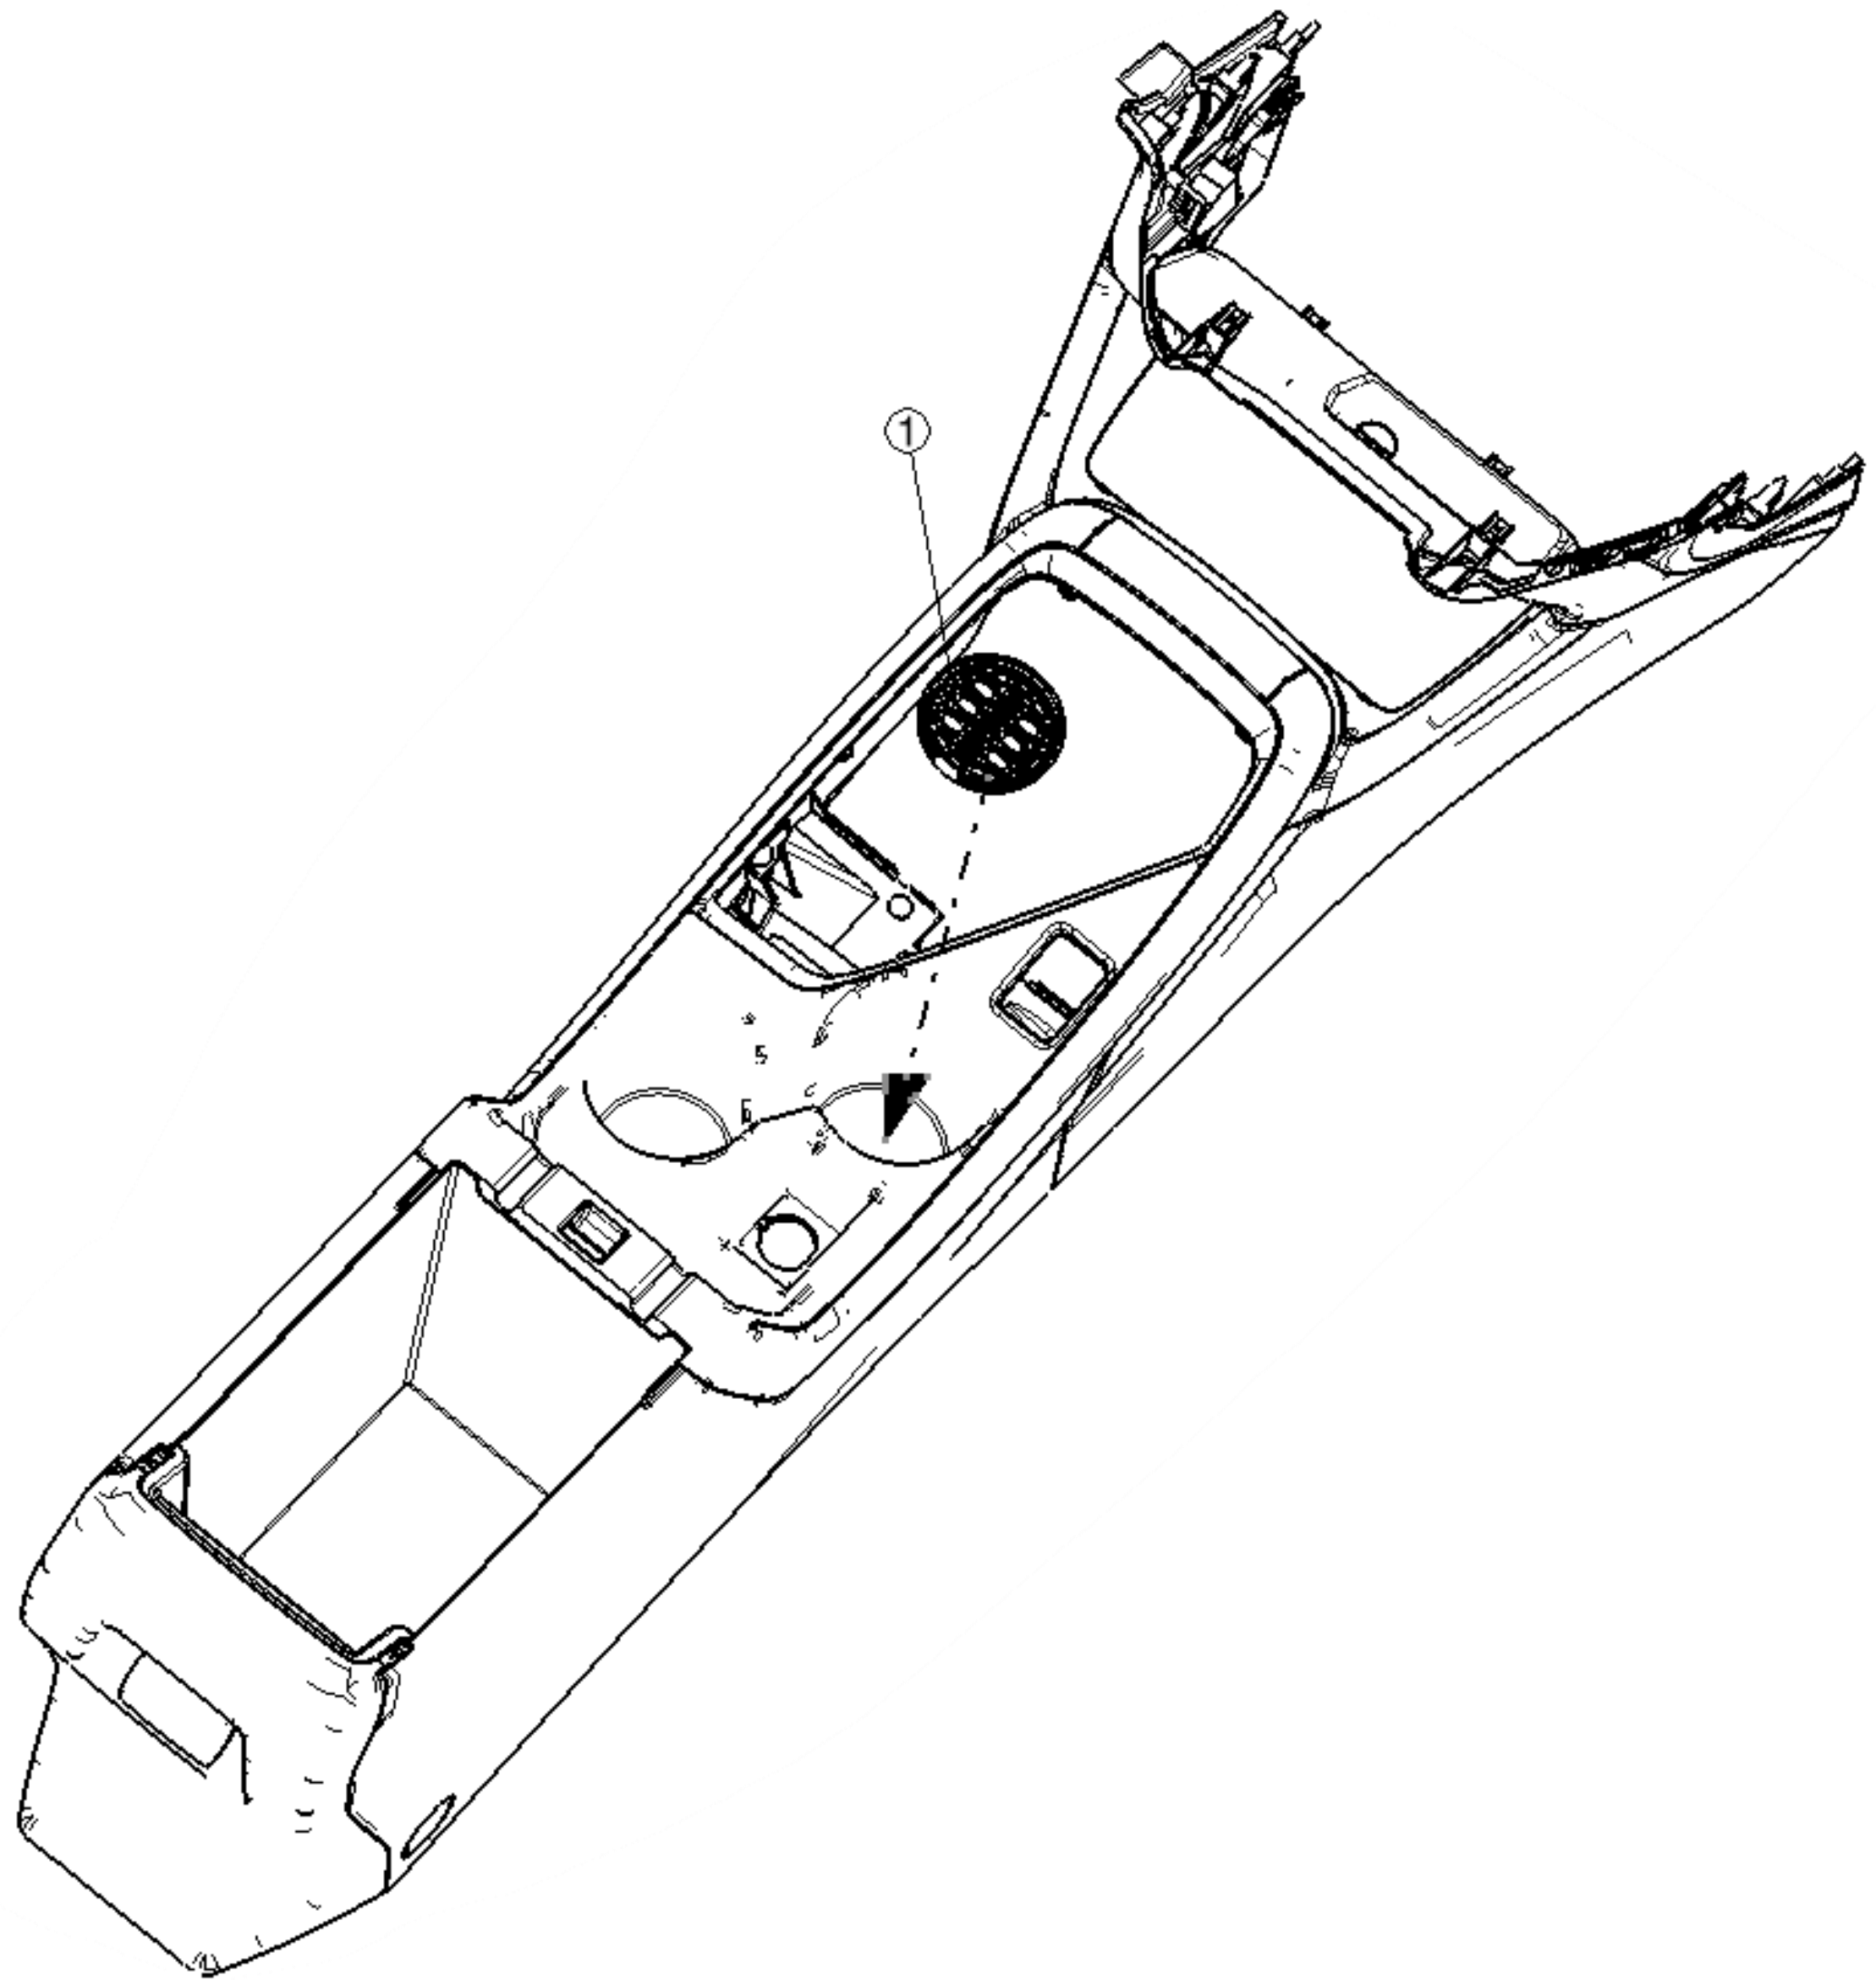




2

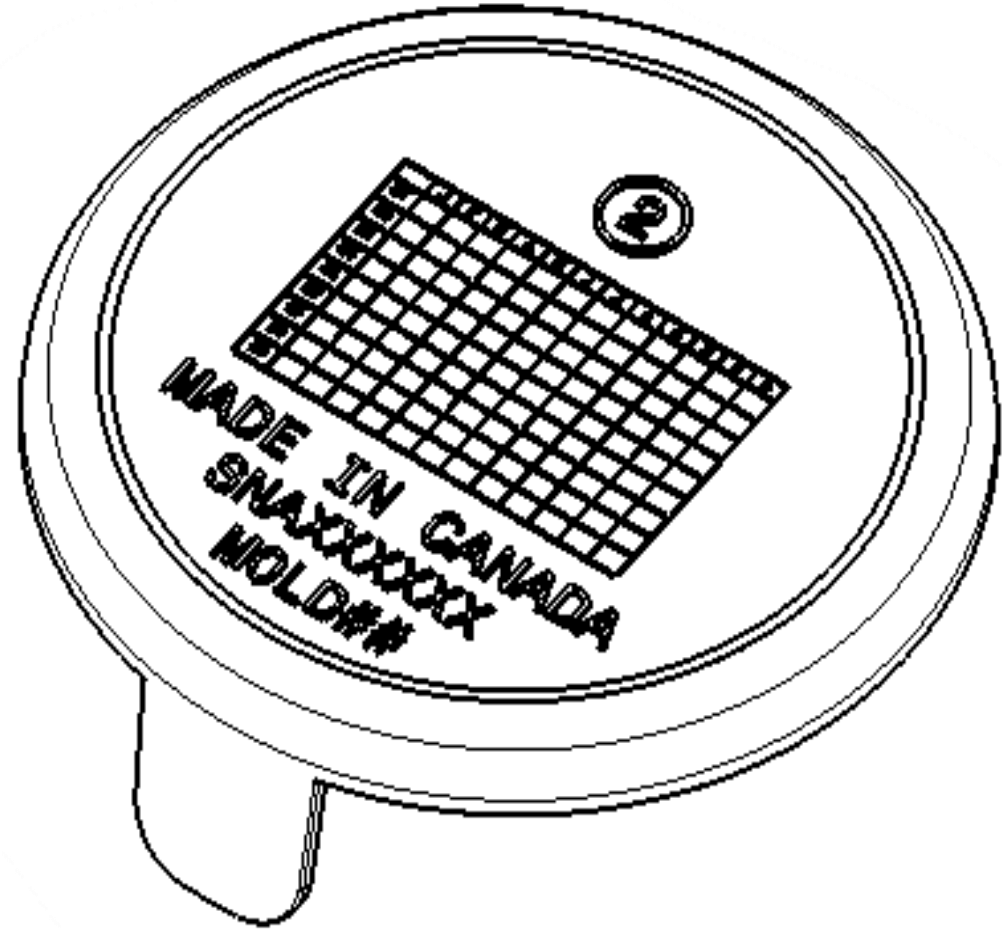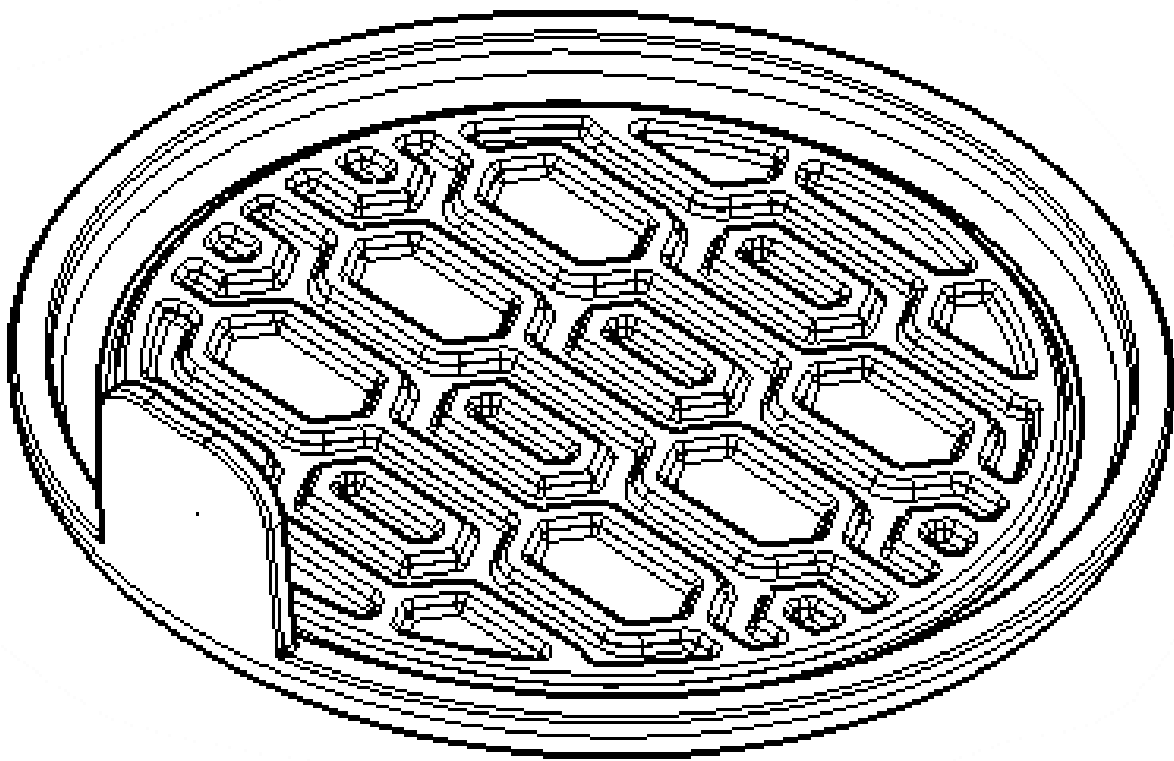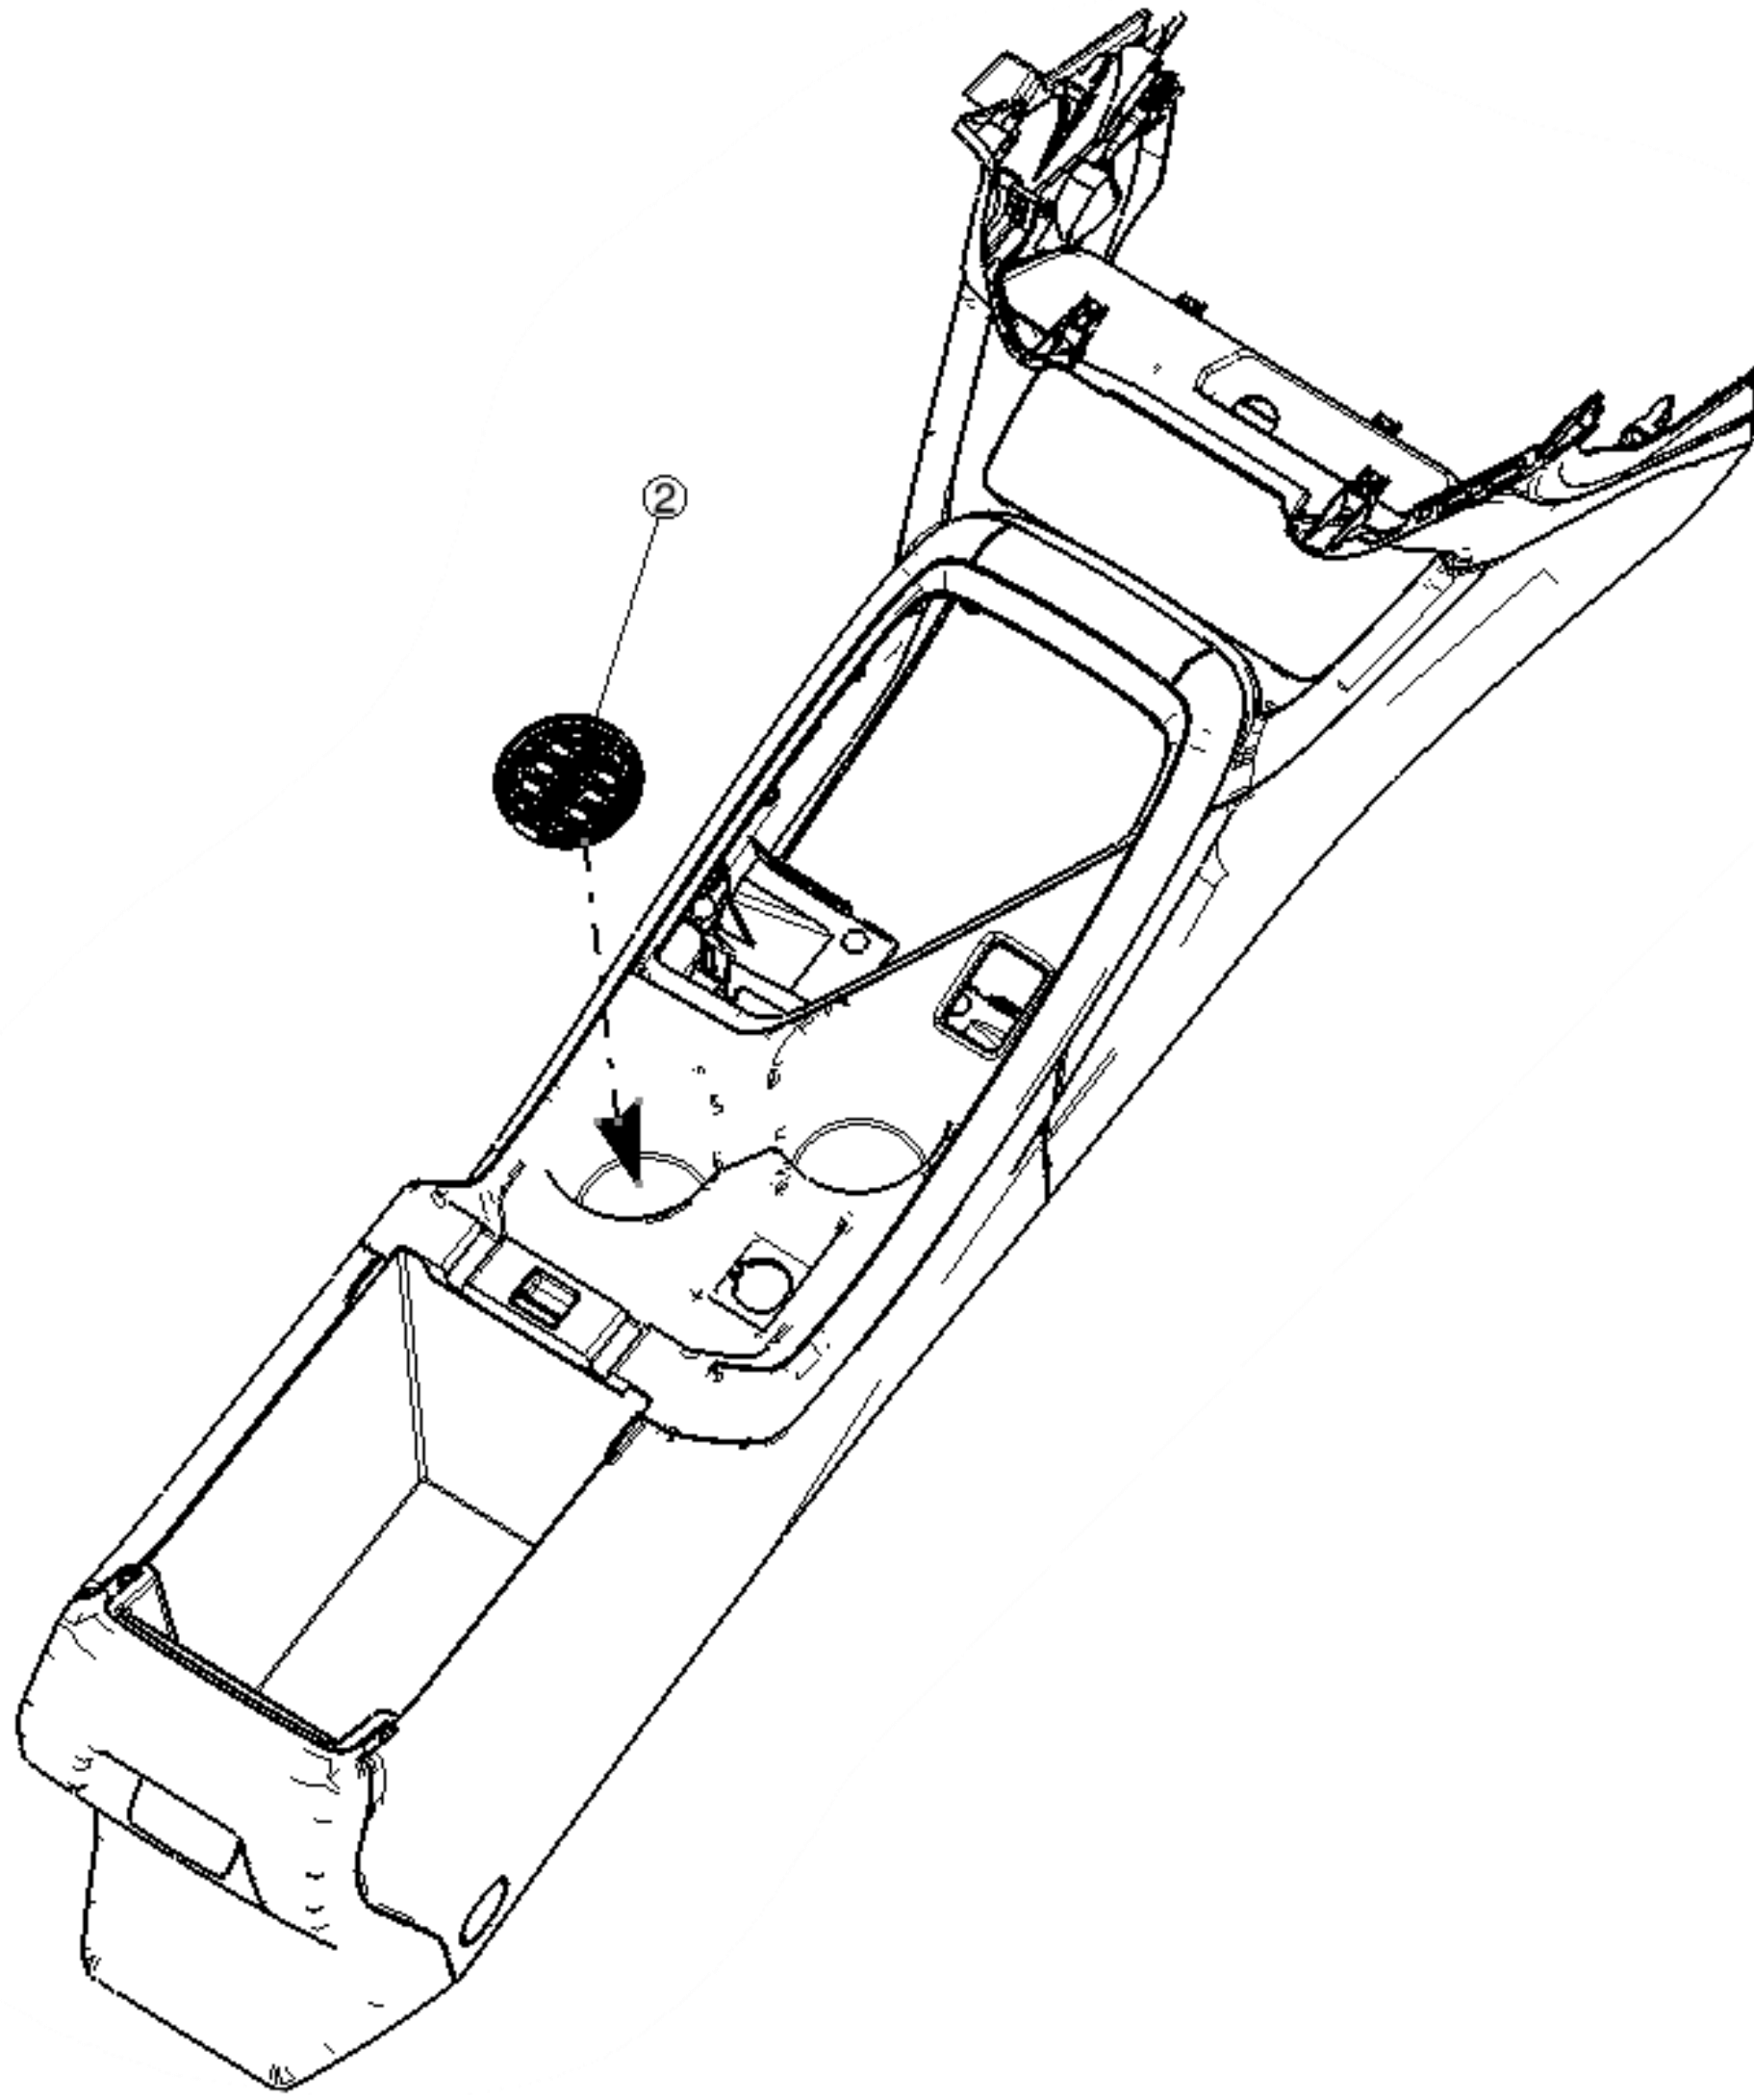




3

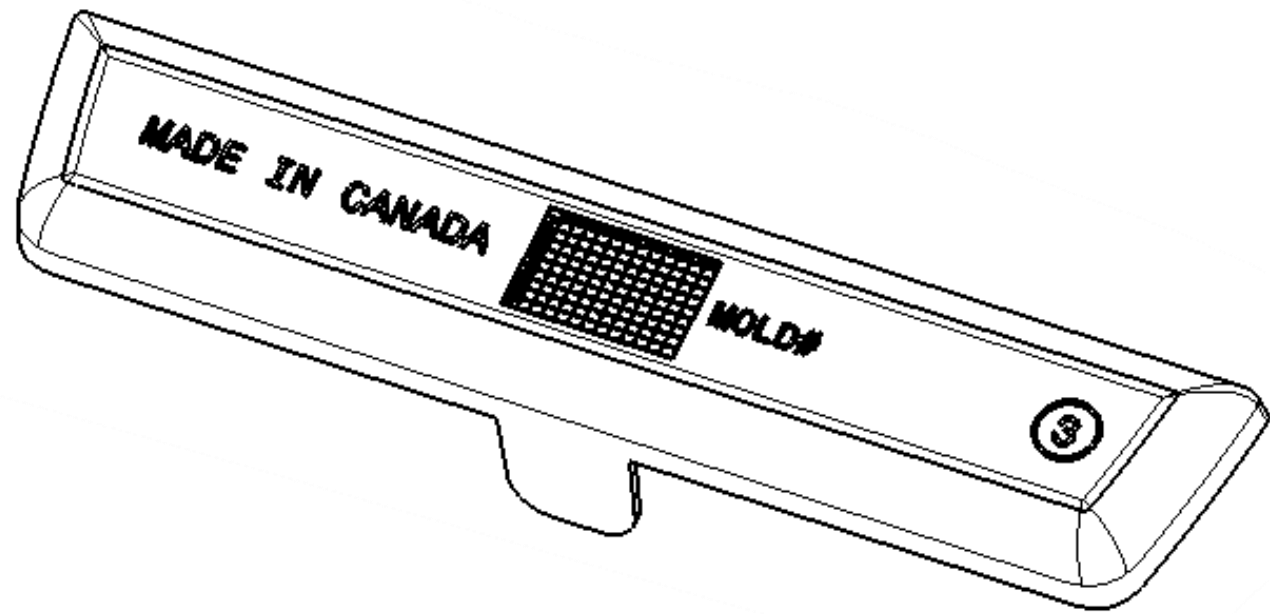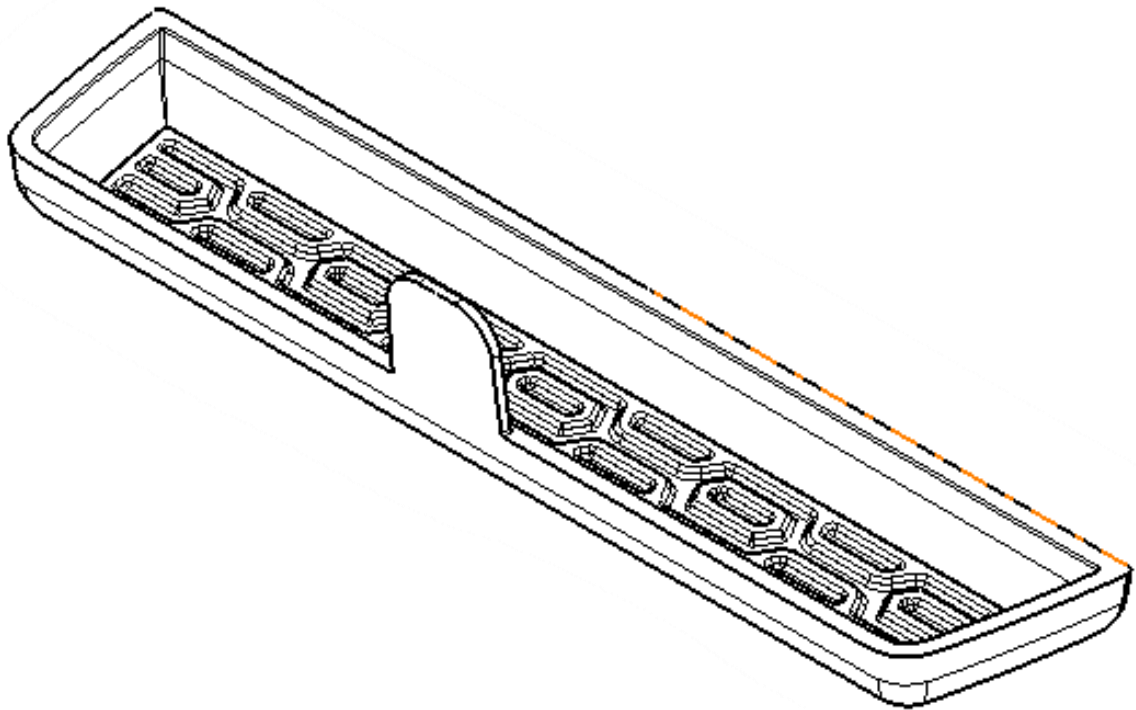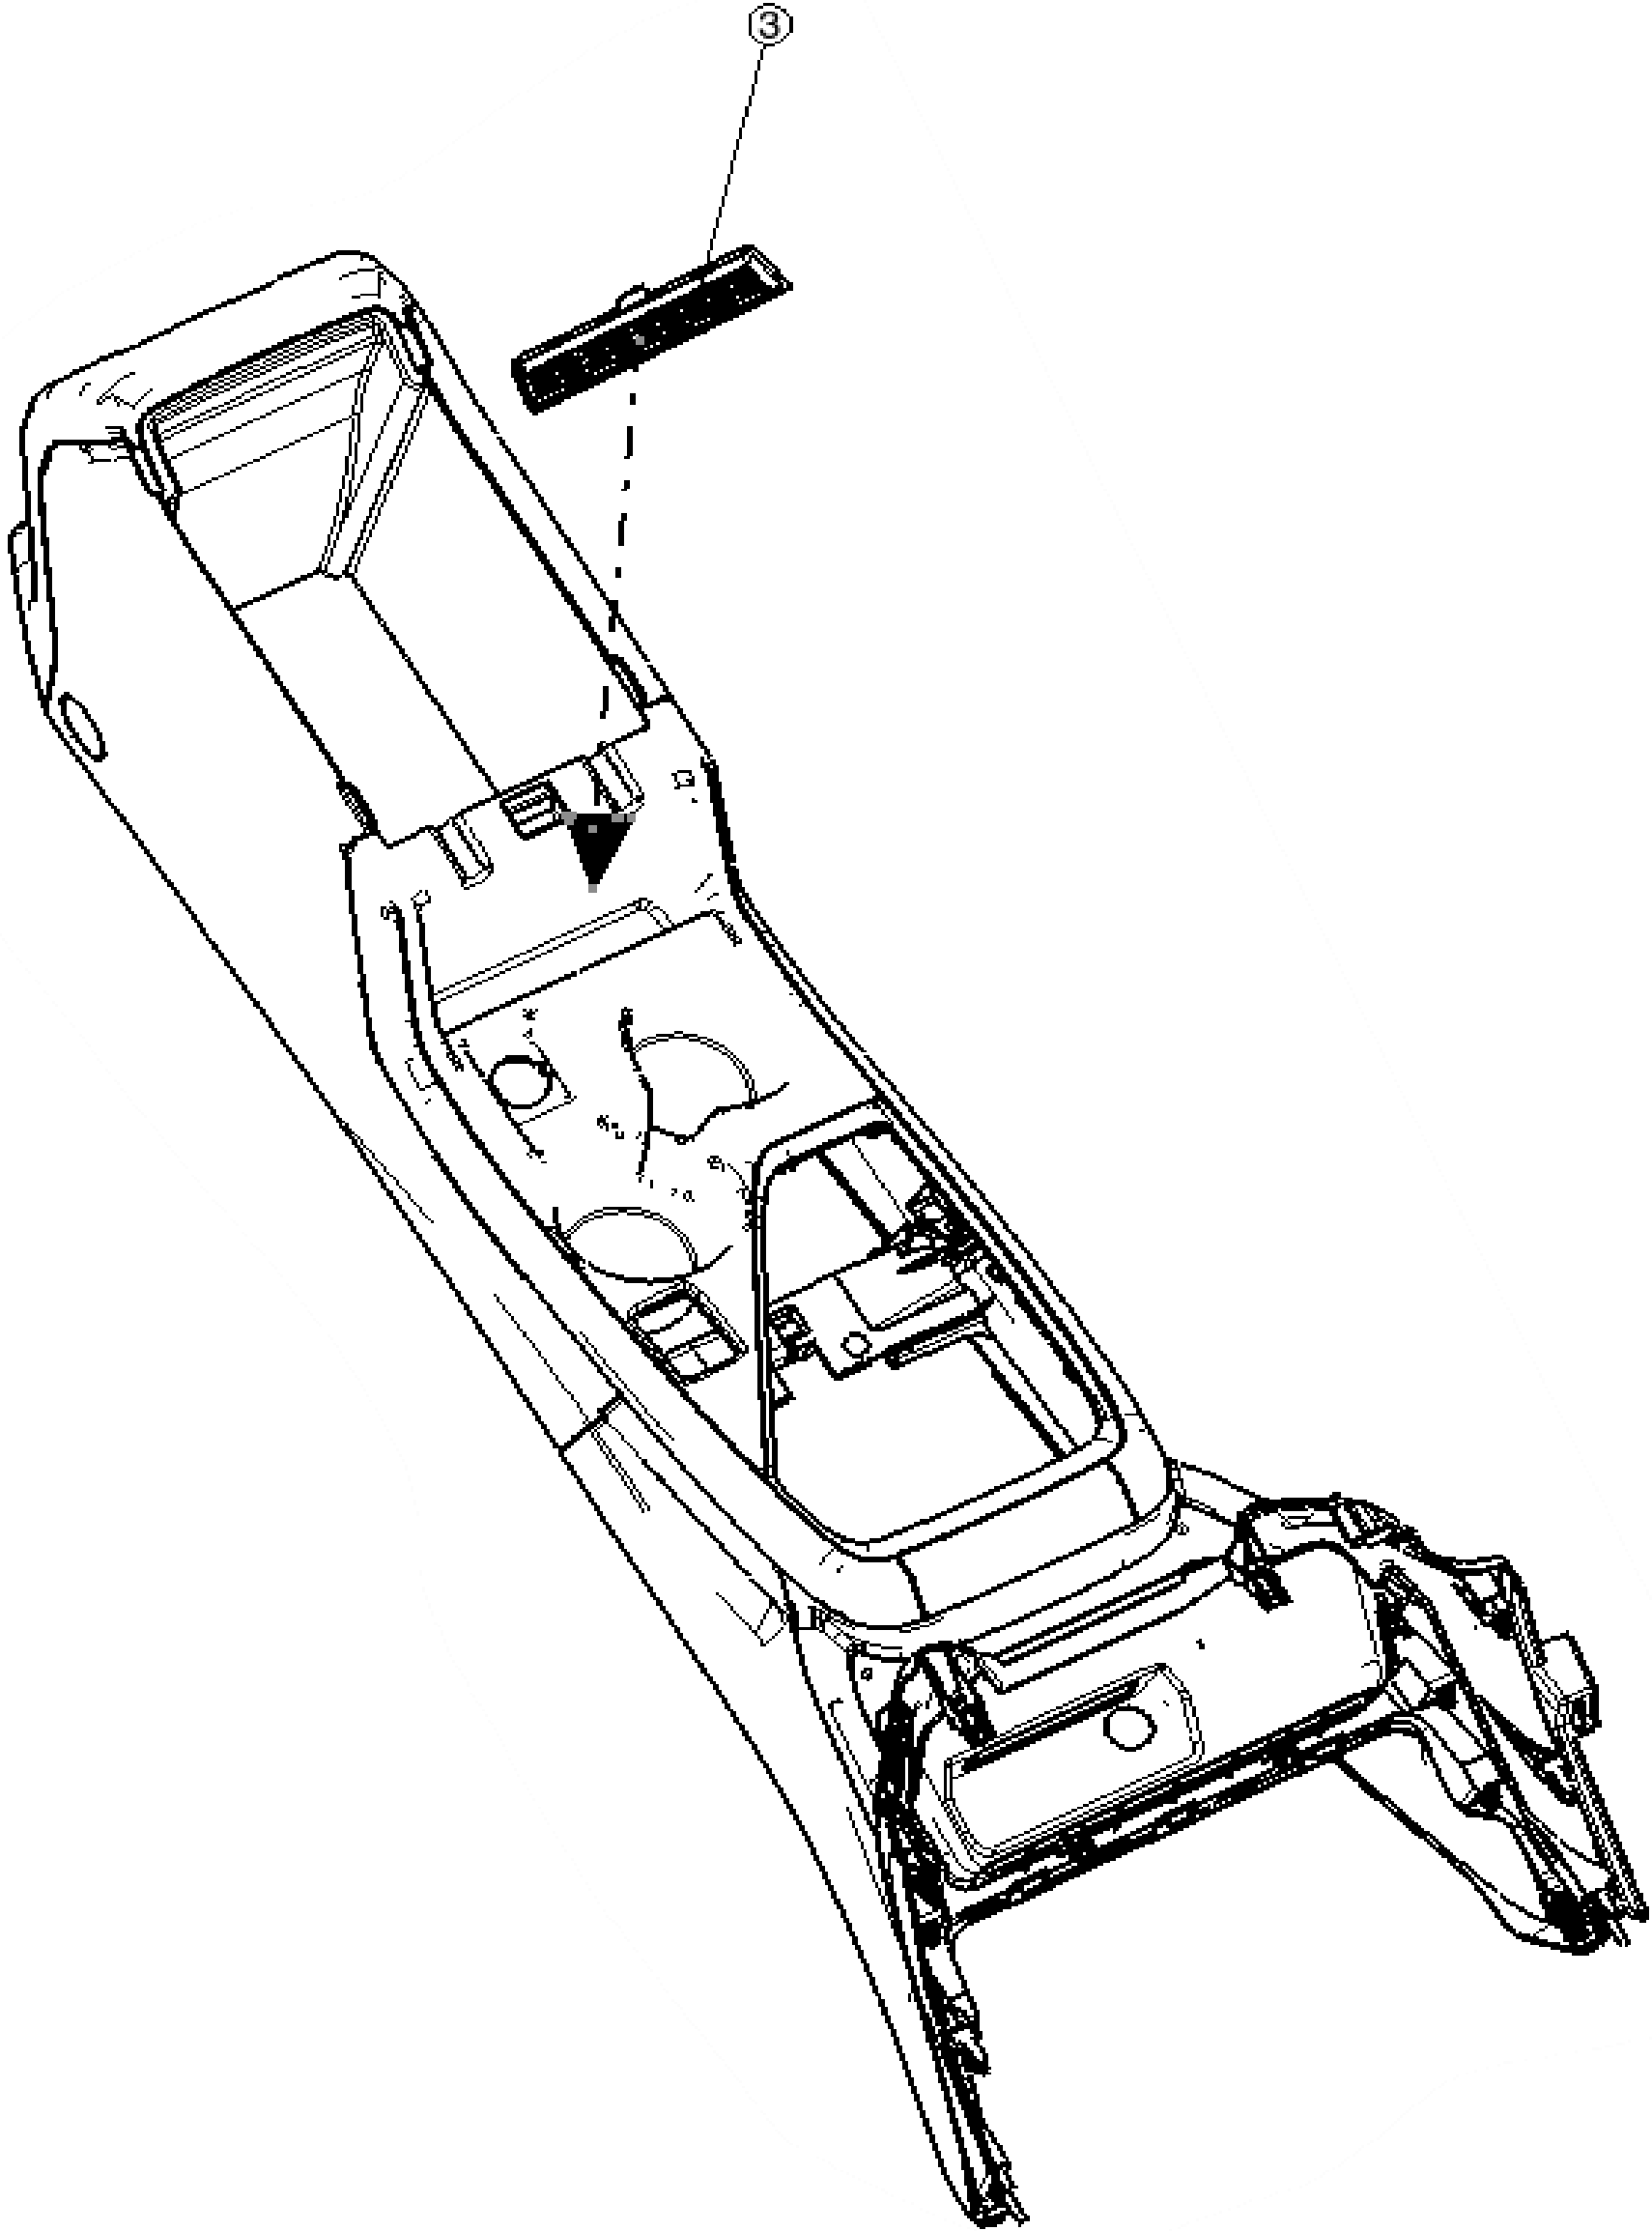

4

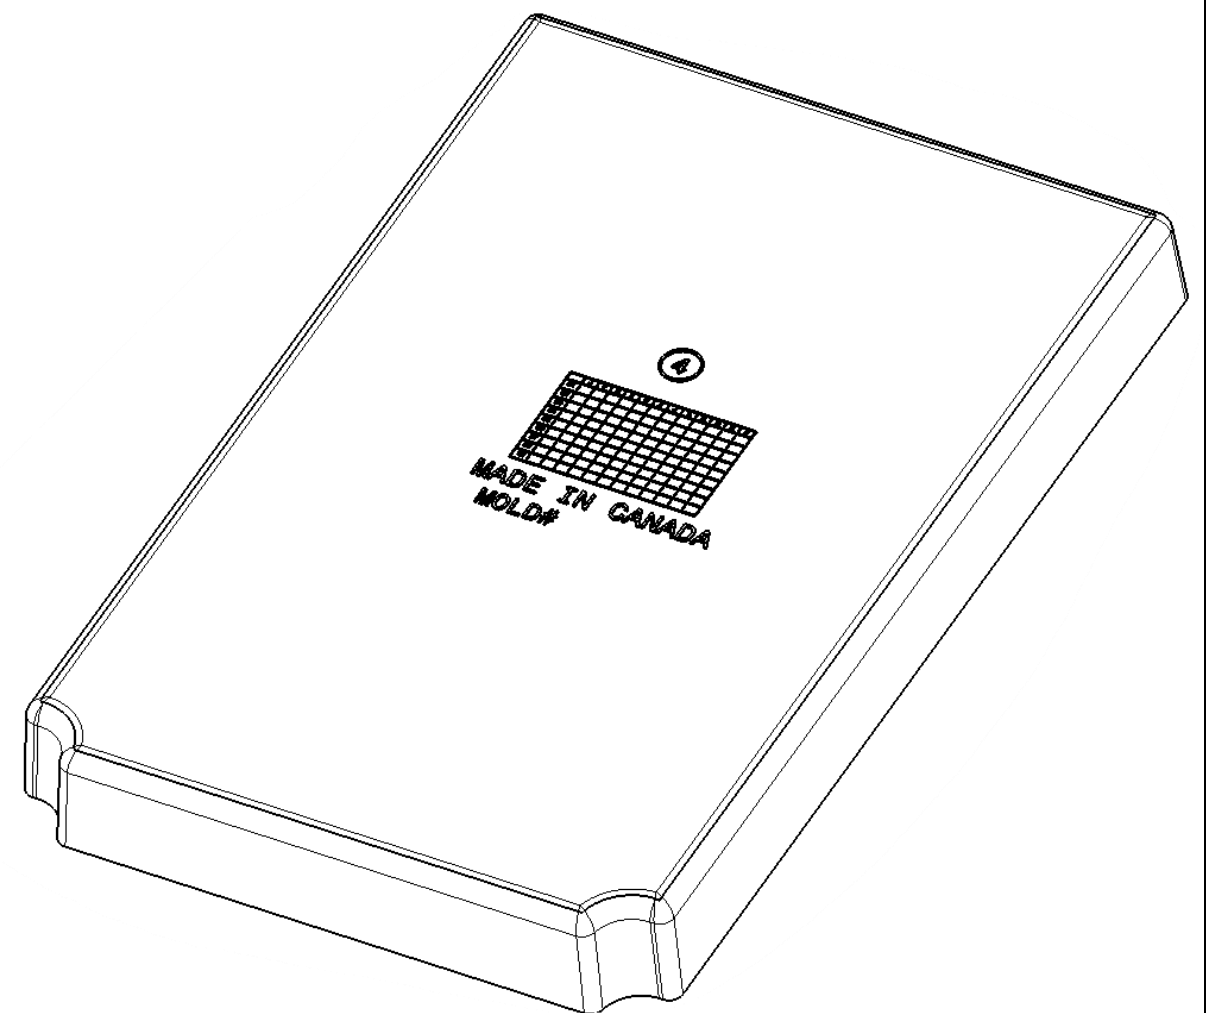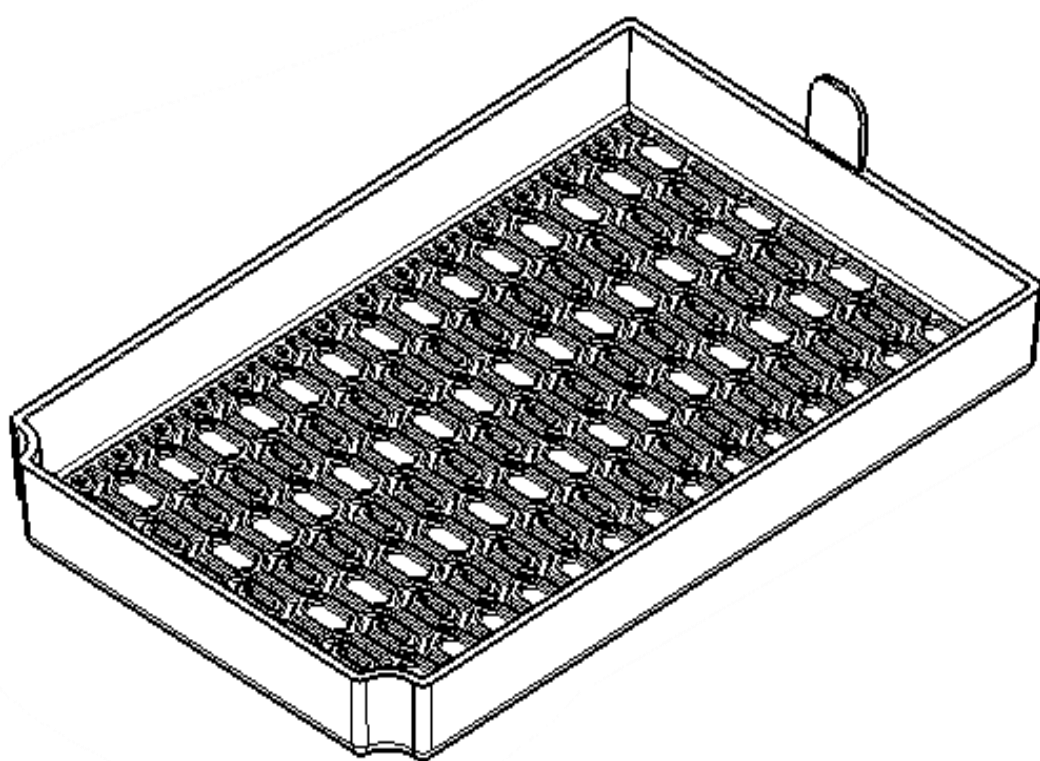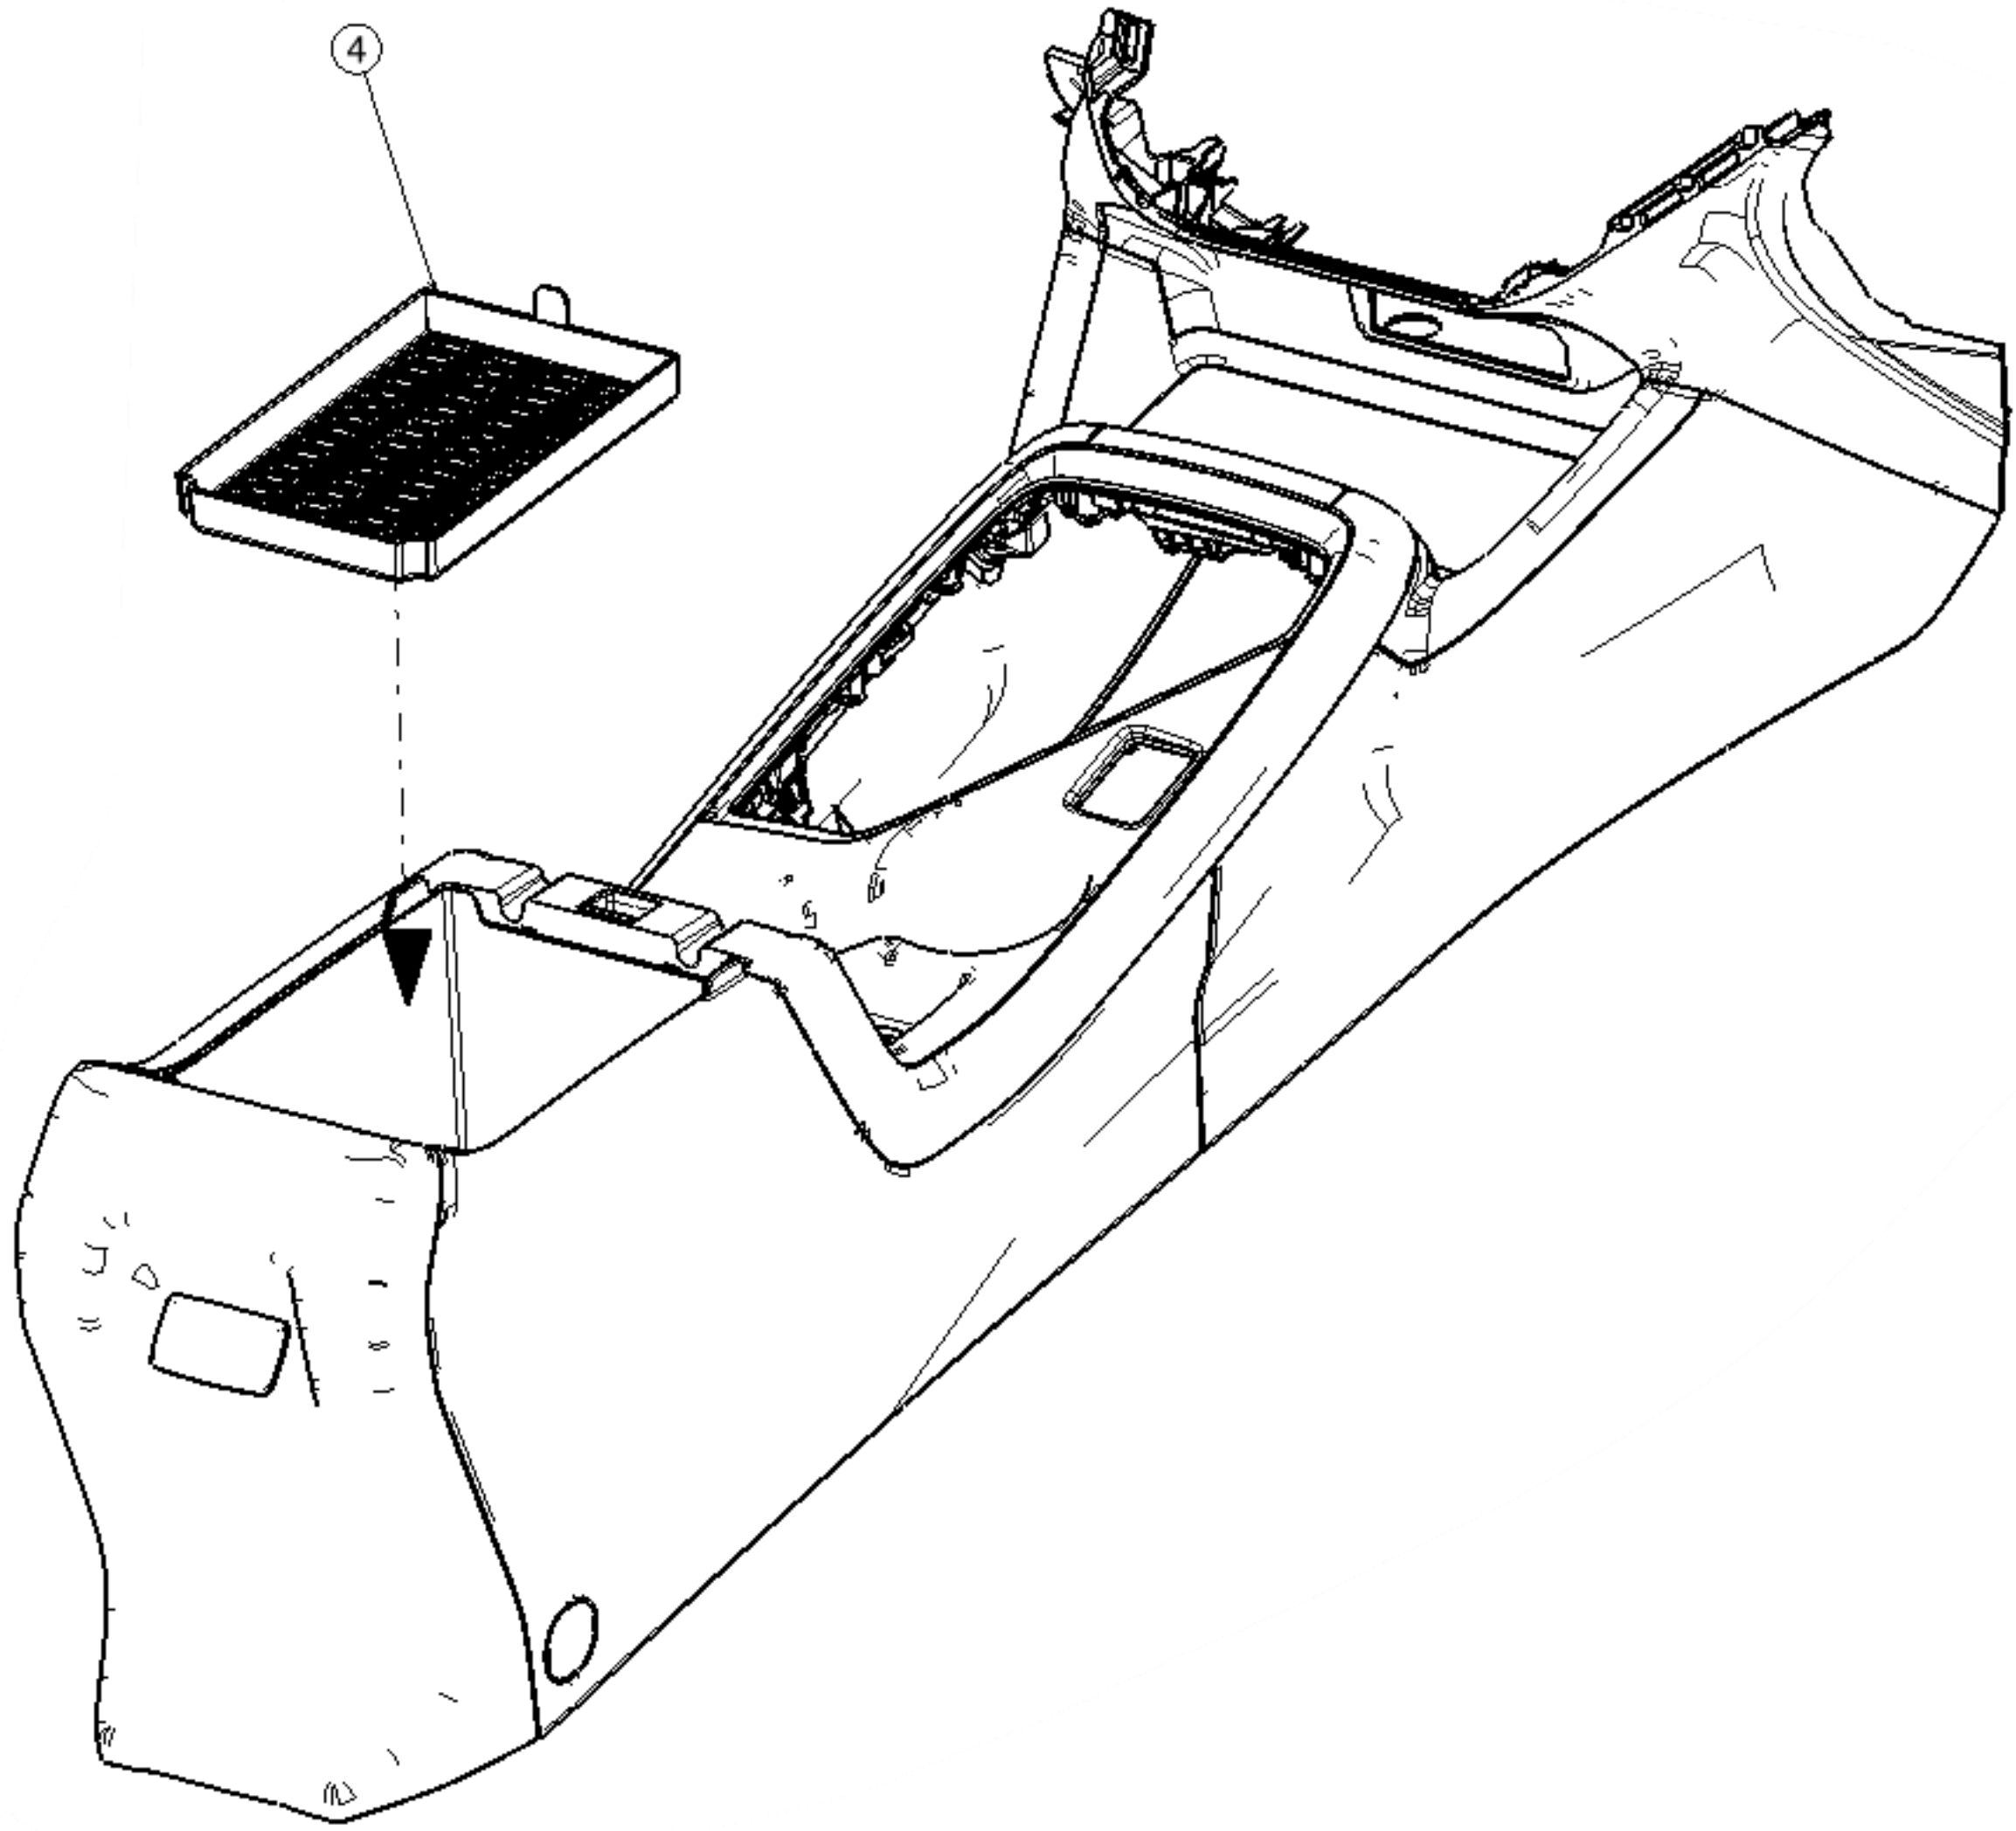


5

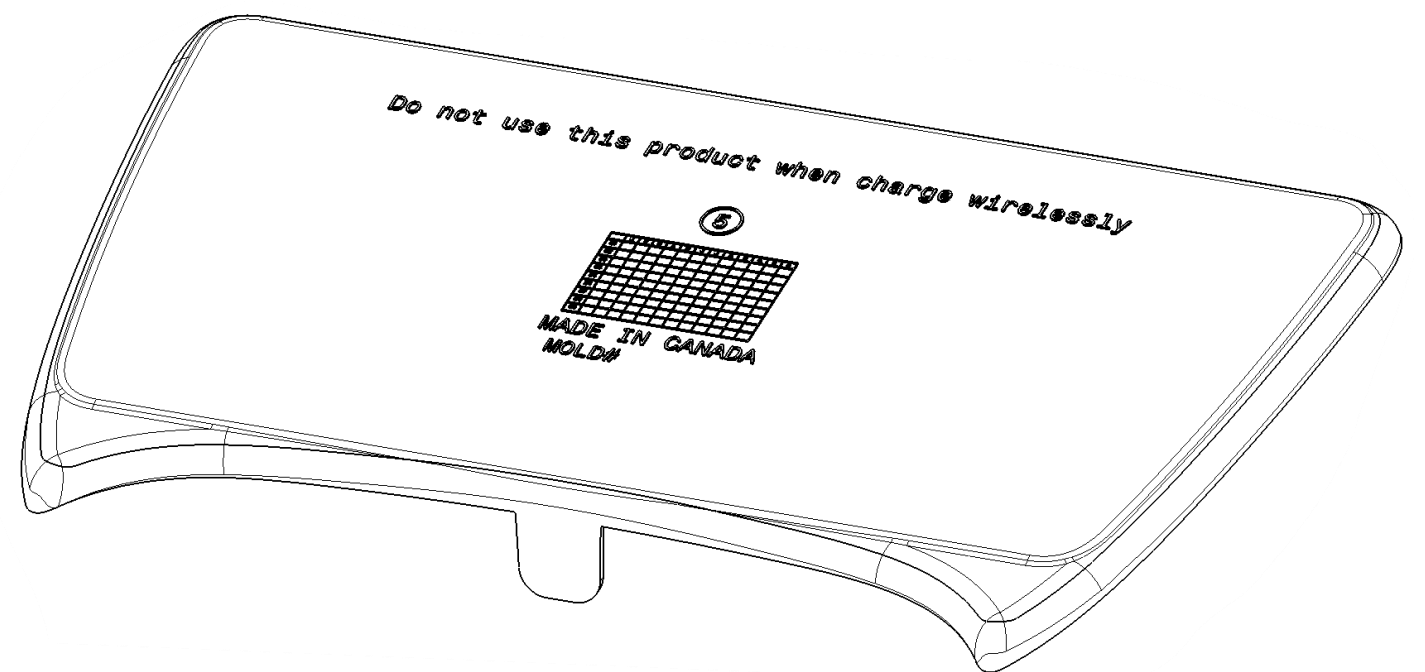
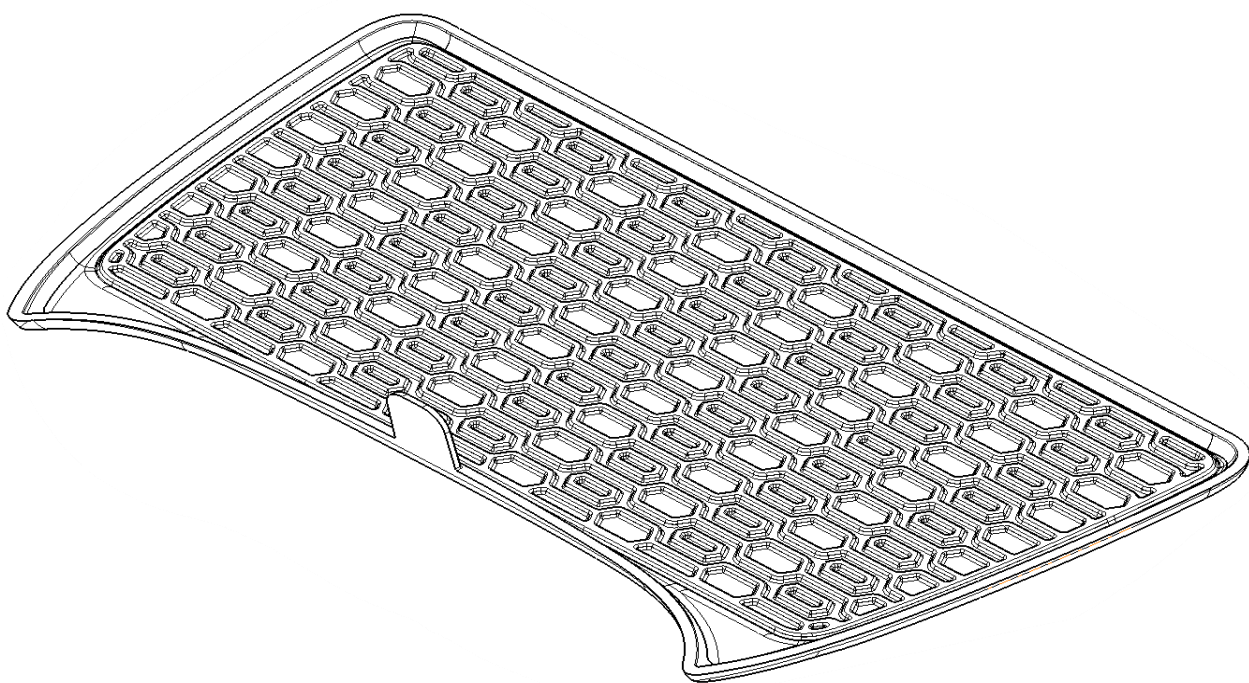
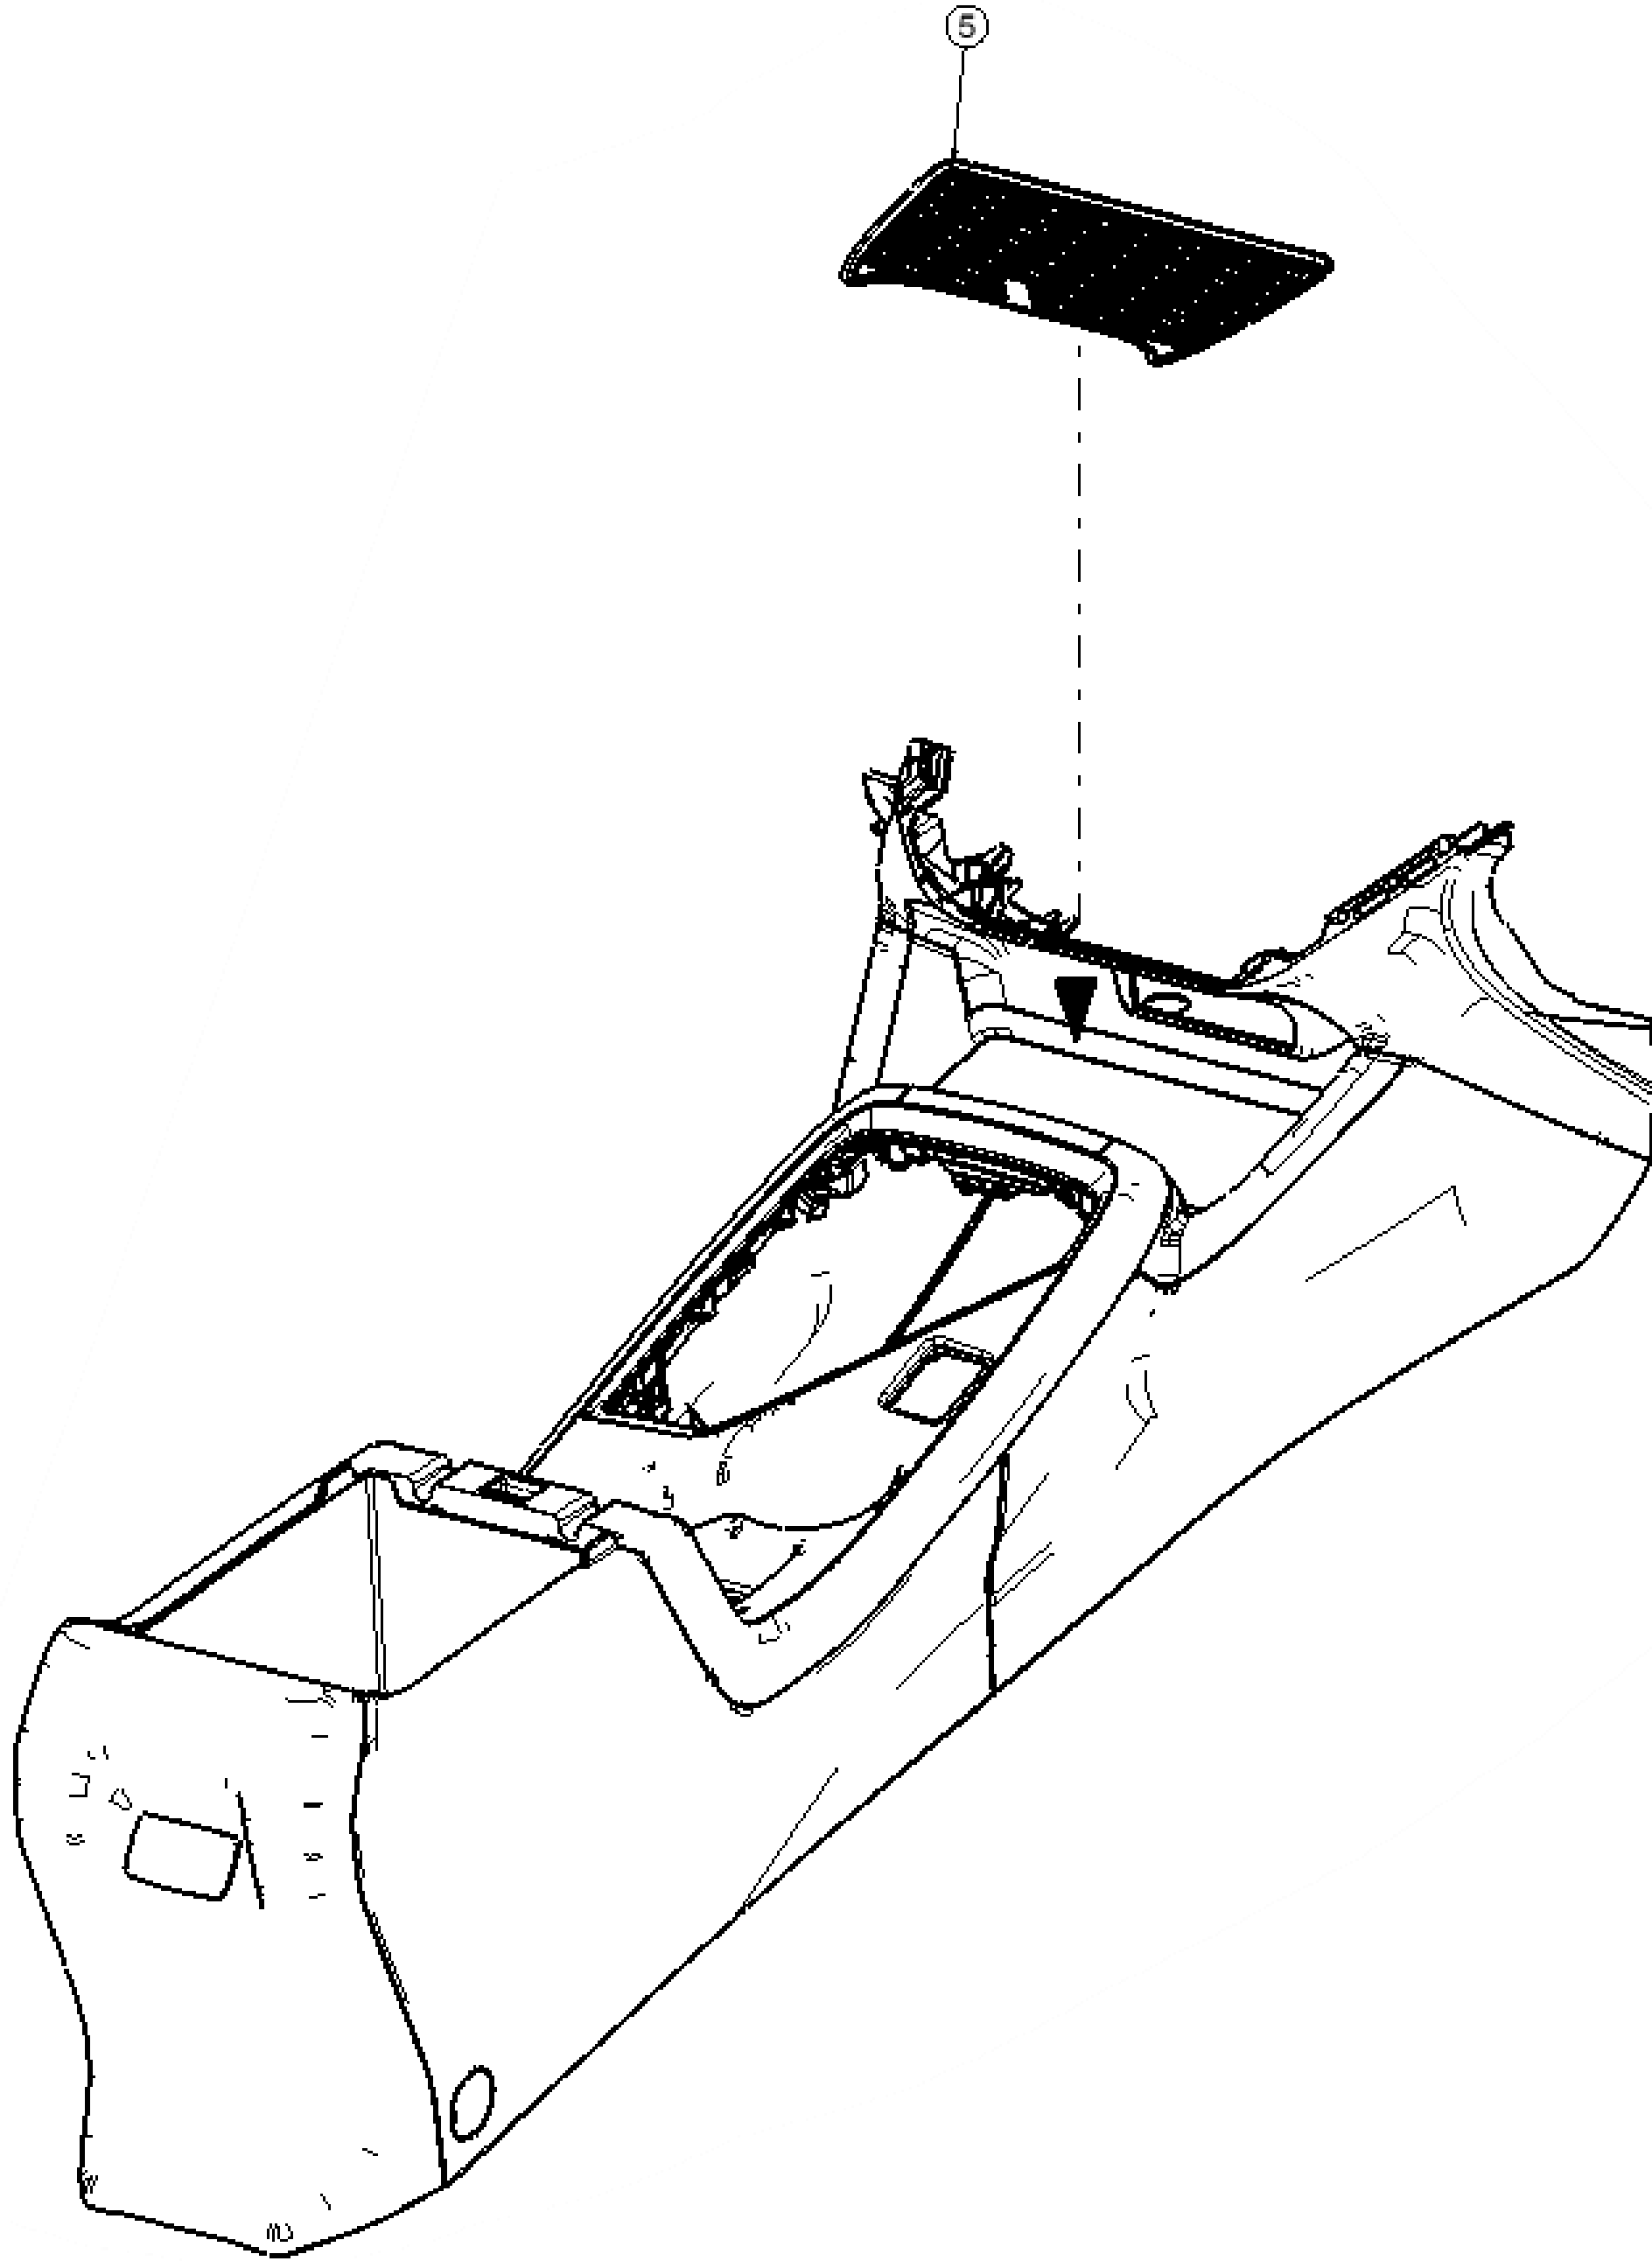


NOTE: DO NOT USE THIS PRODUCT WHEN CHARGE WIRELESSLY


6

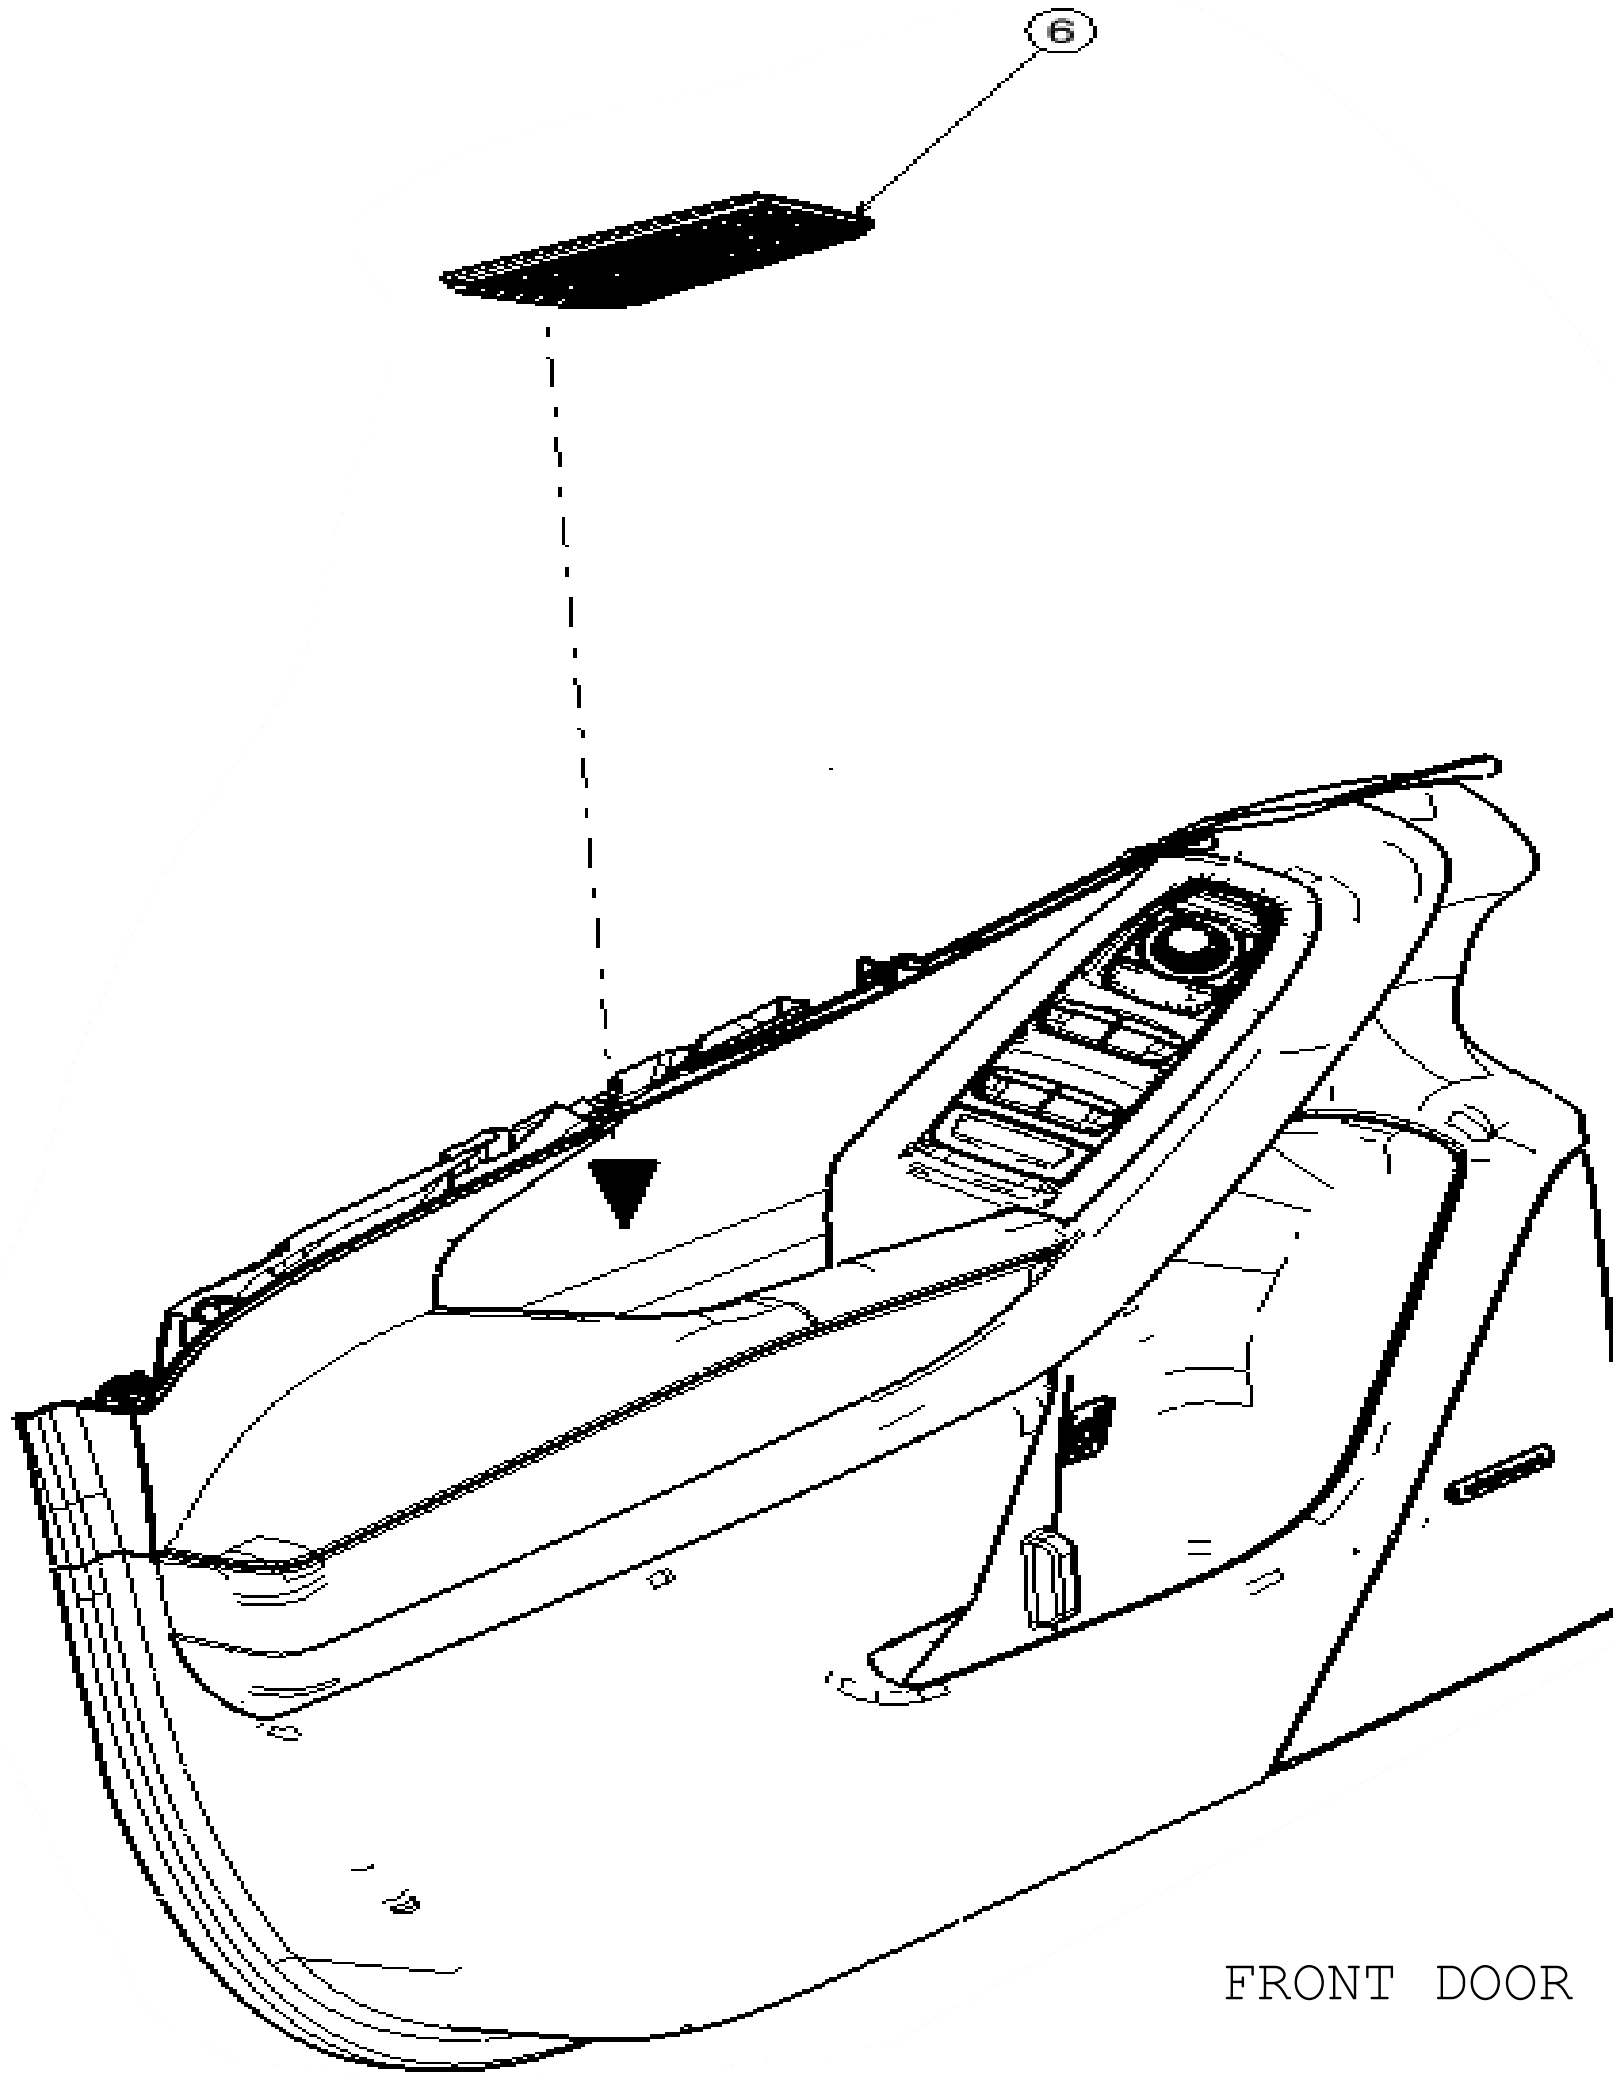



FRONT DOOR PULL INSERT

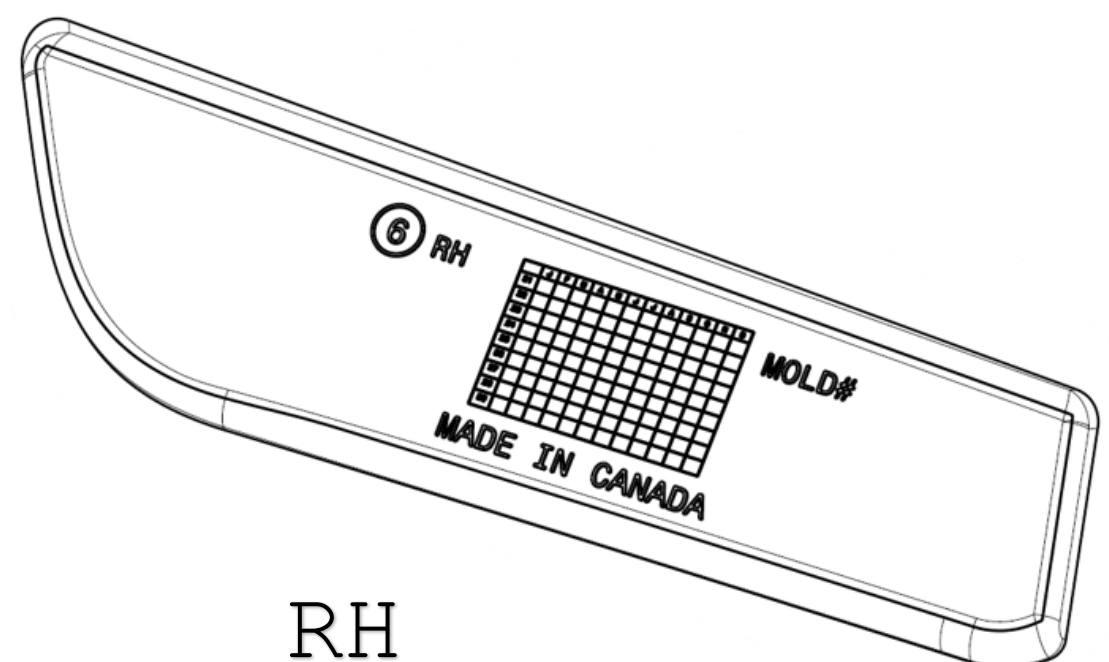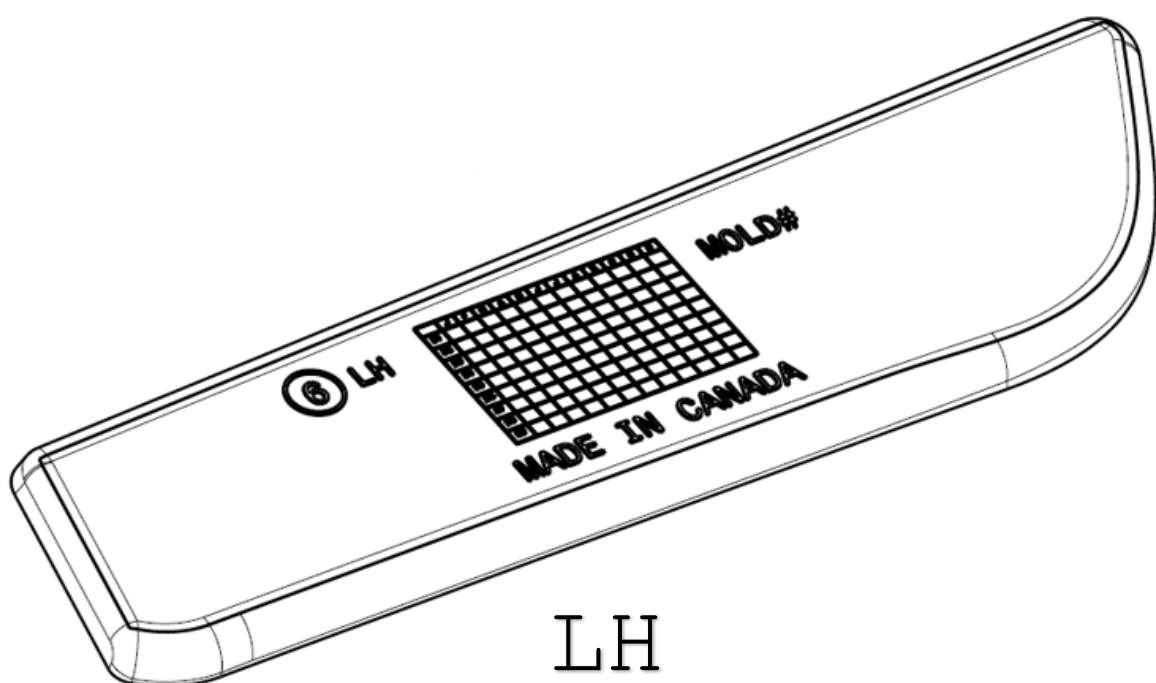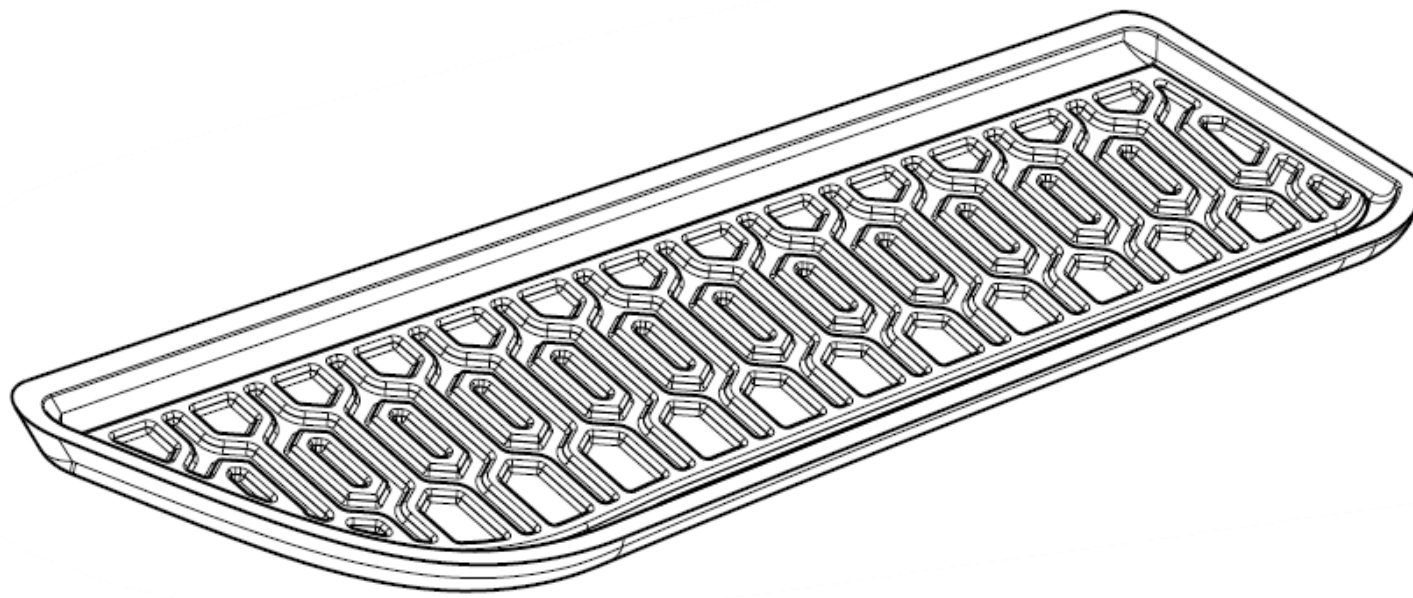


7

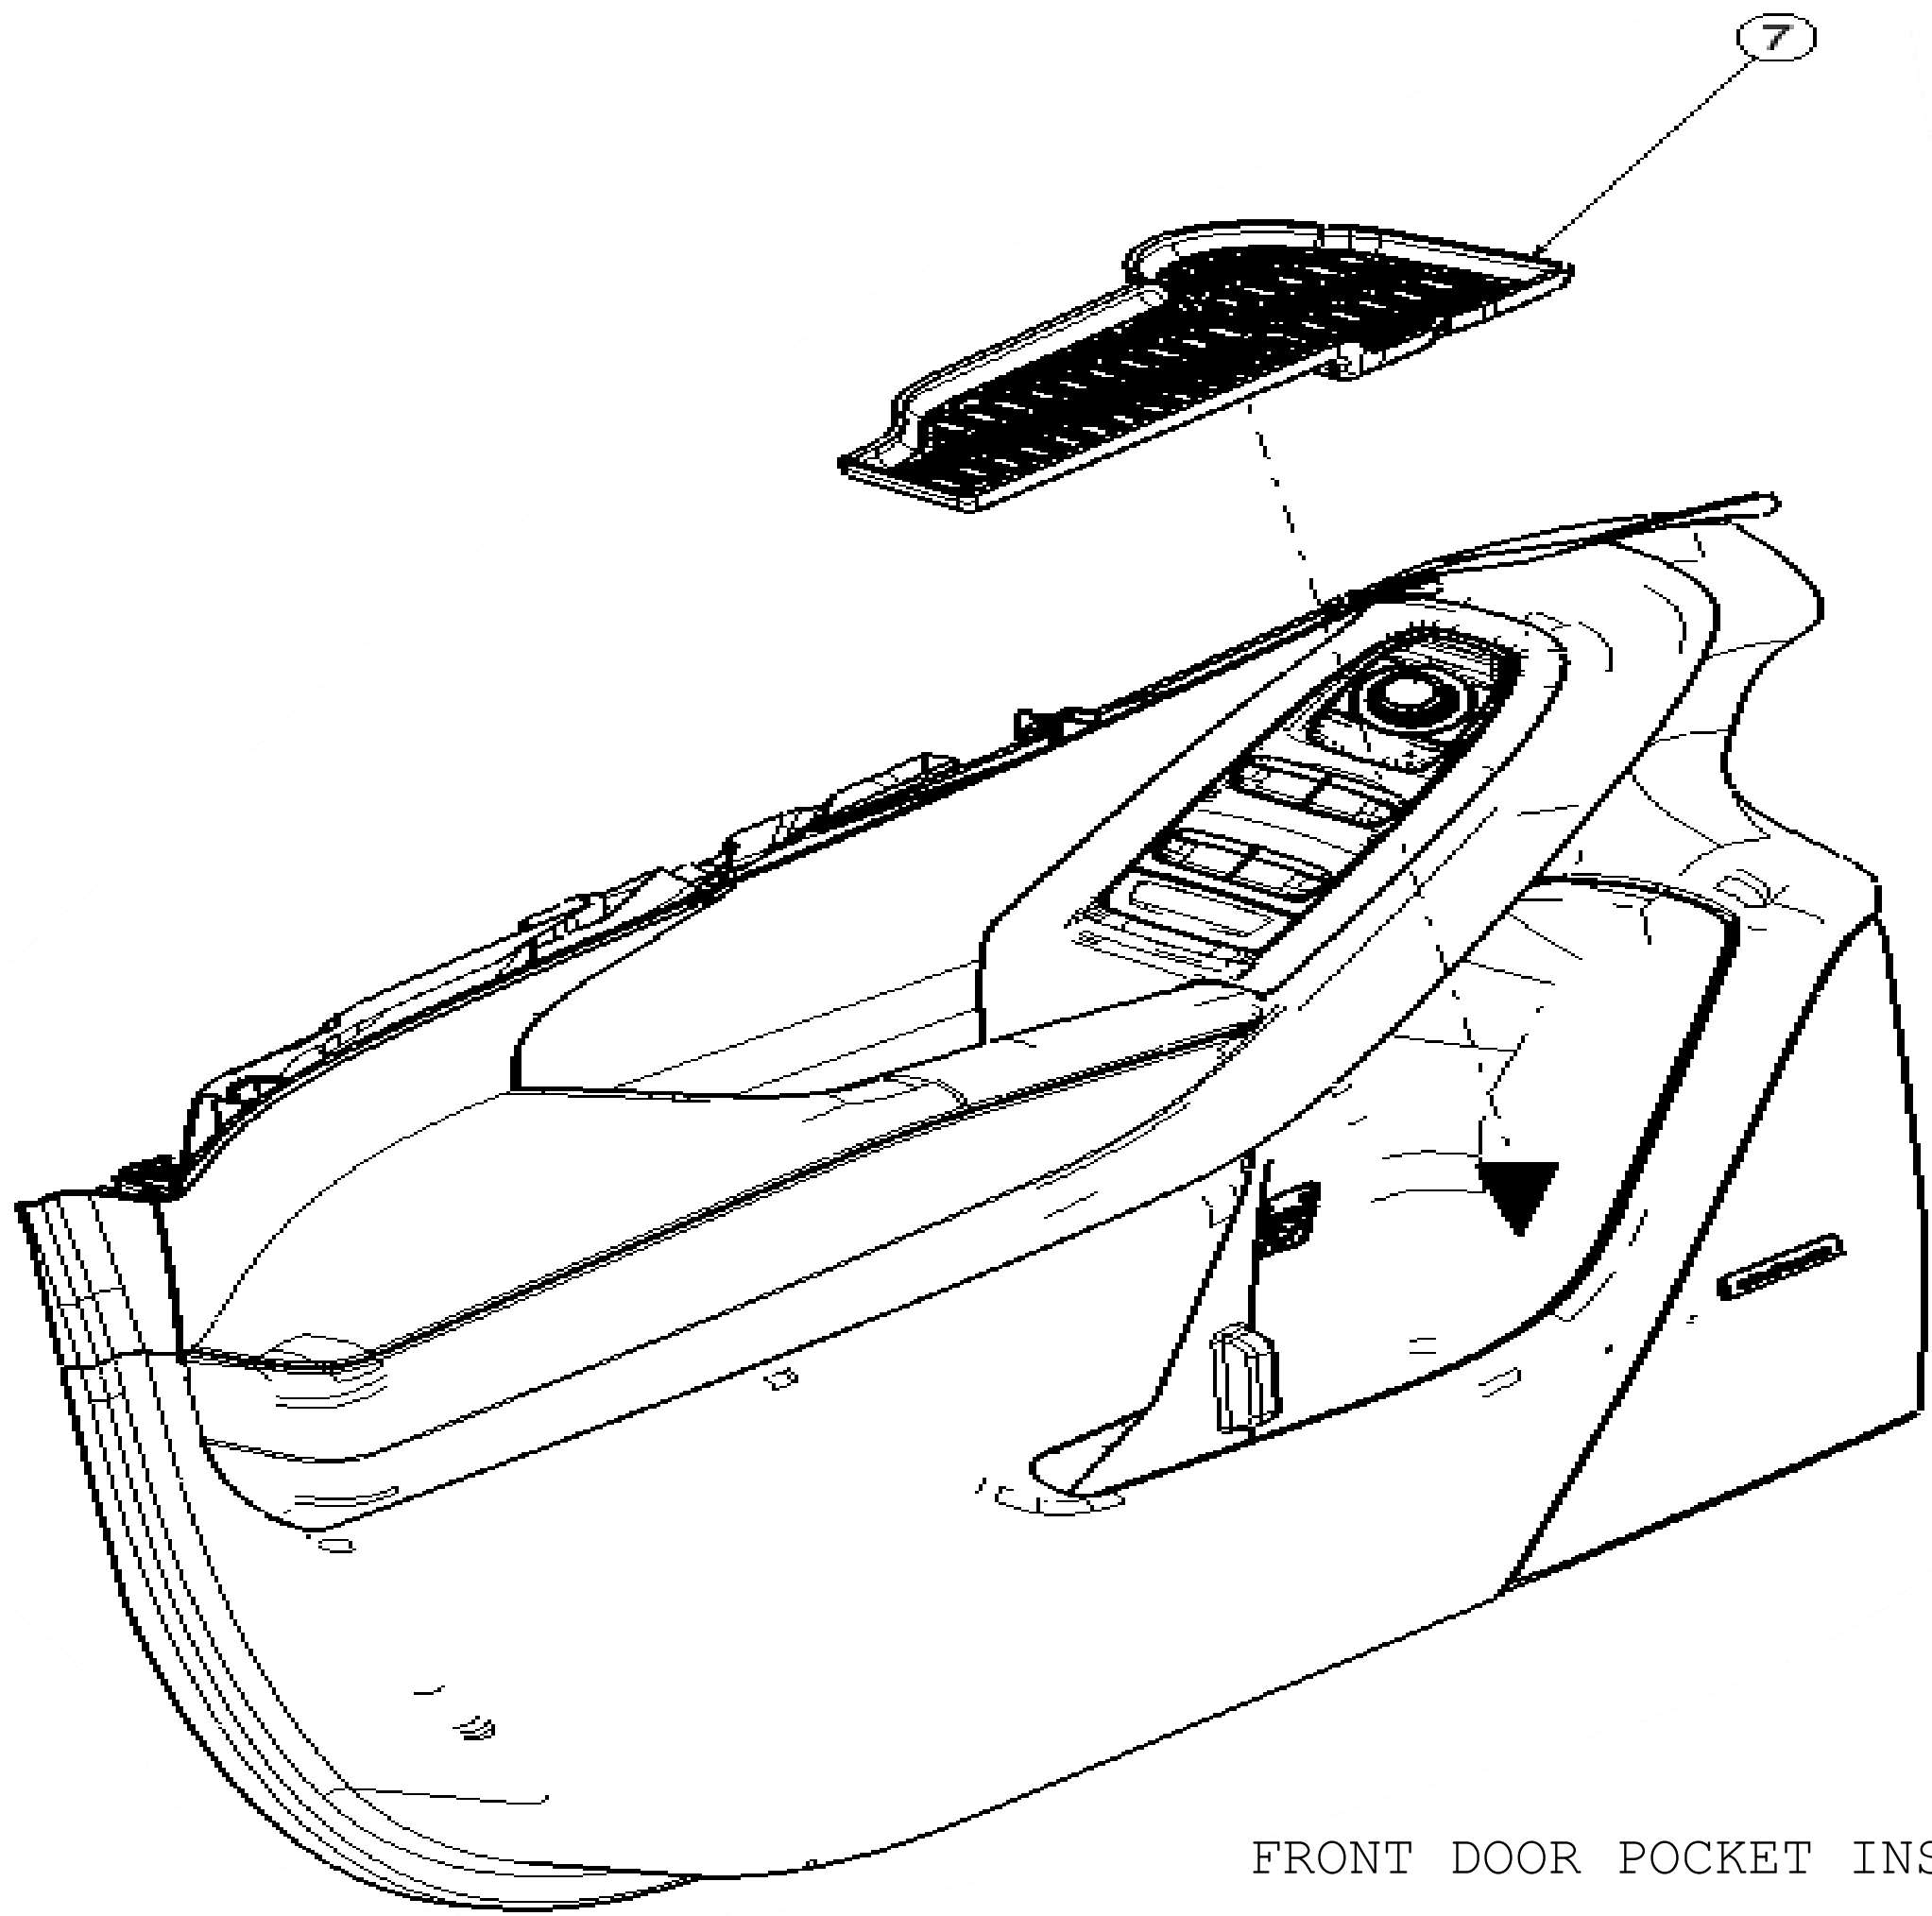

FRONT DOOR POCKET INSERT

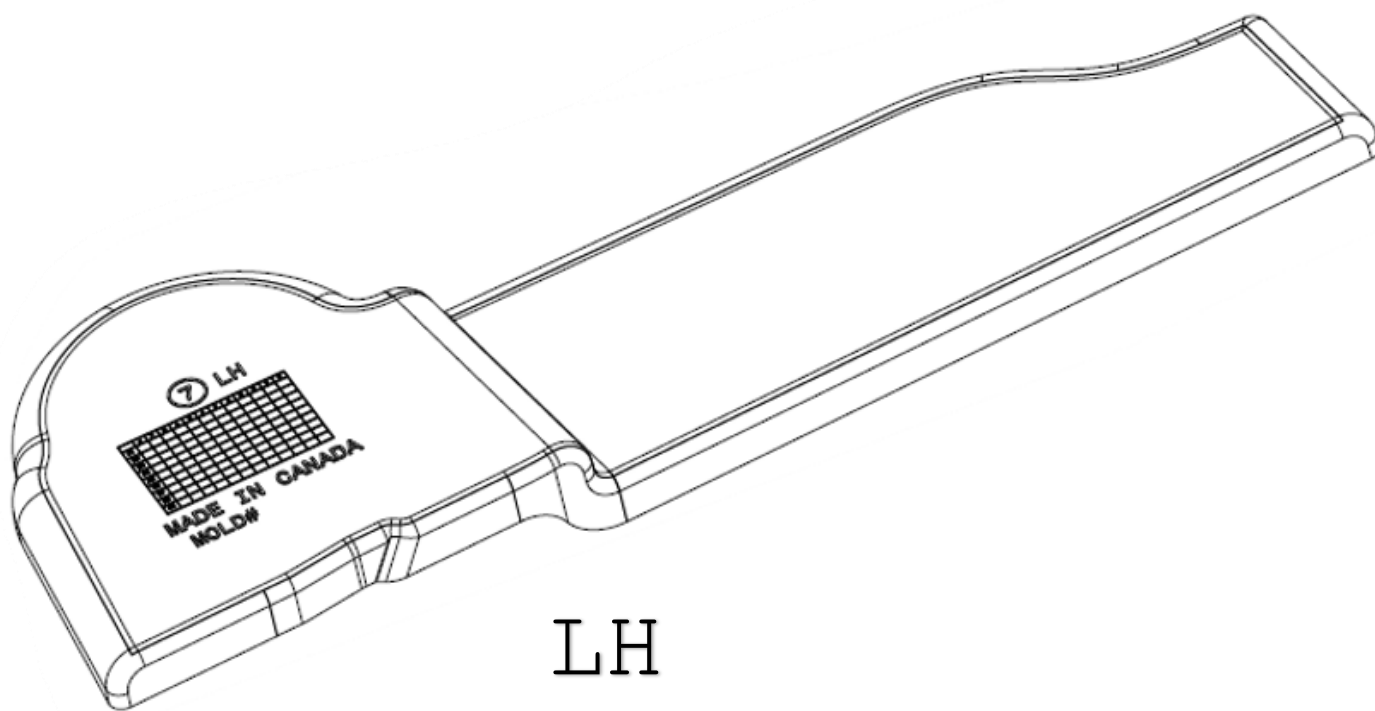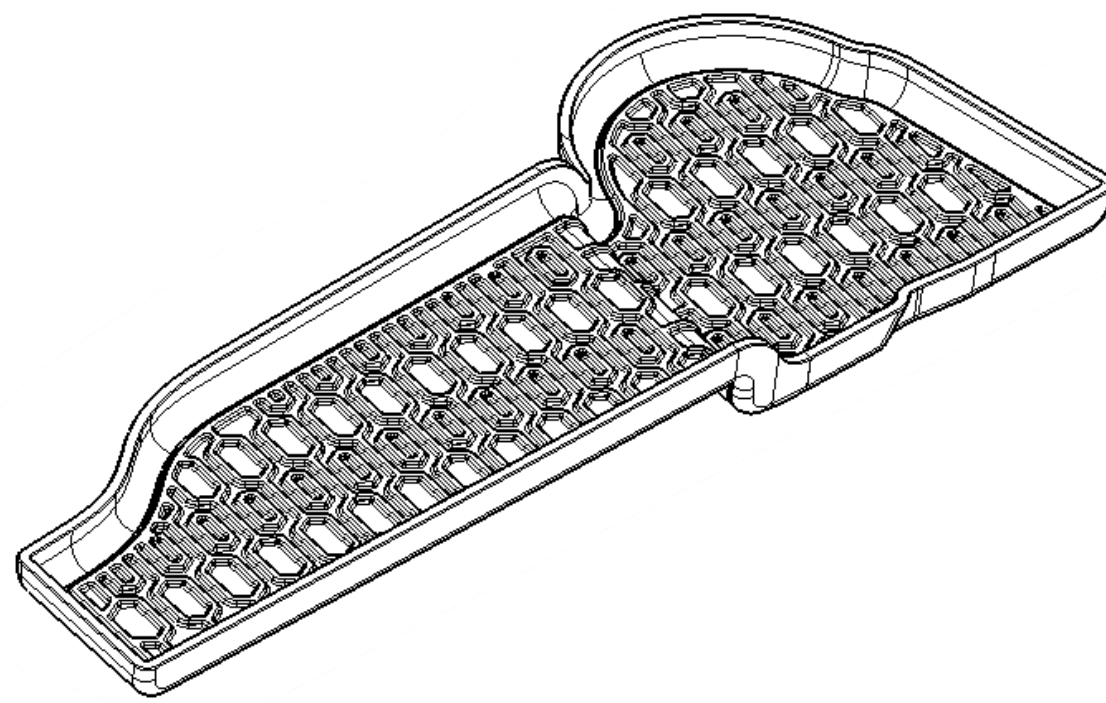


LH


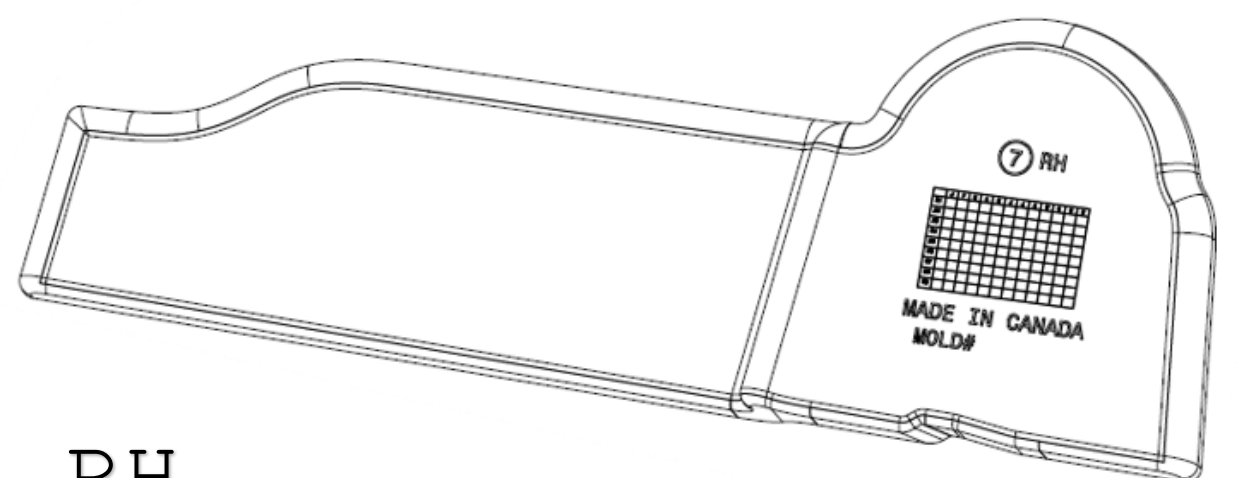


RH


8

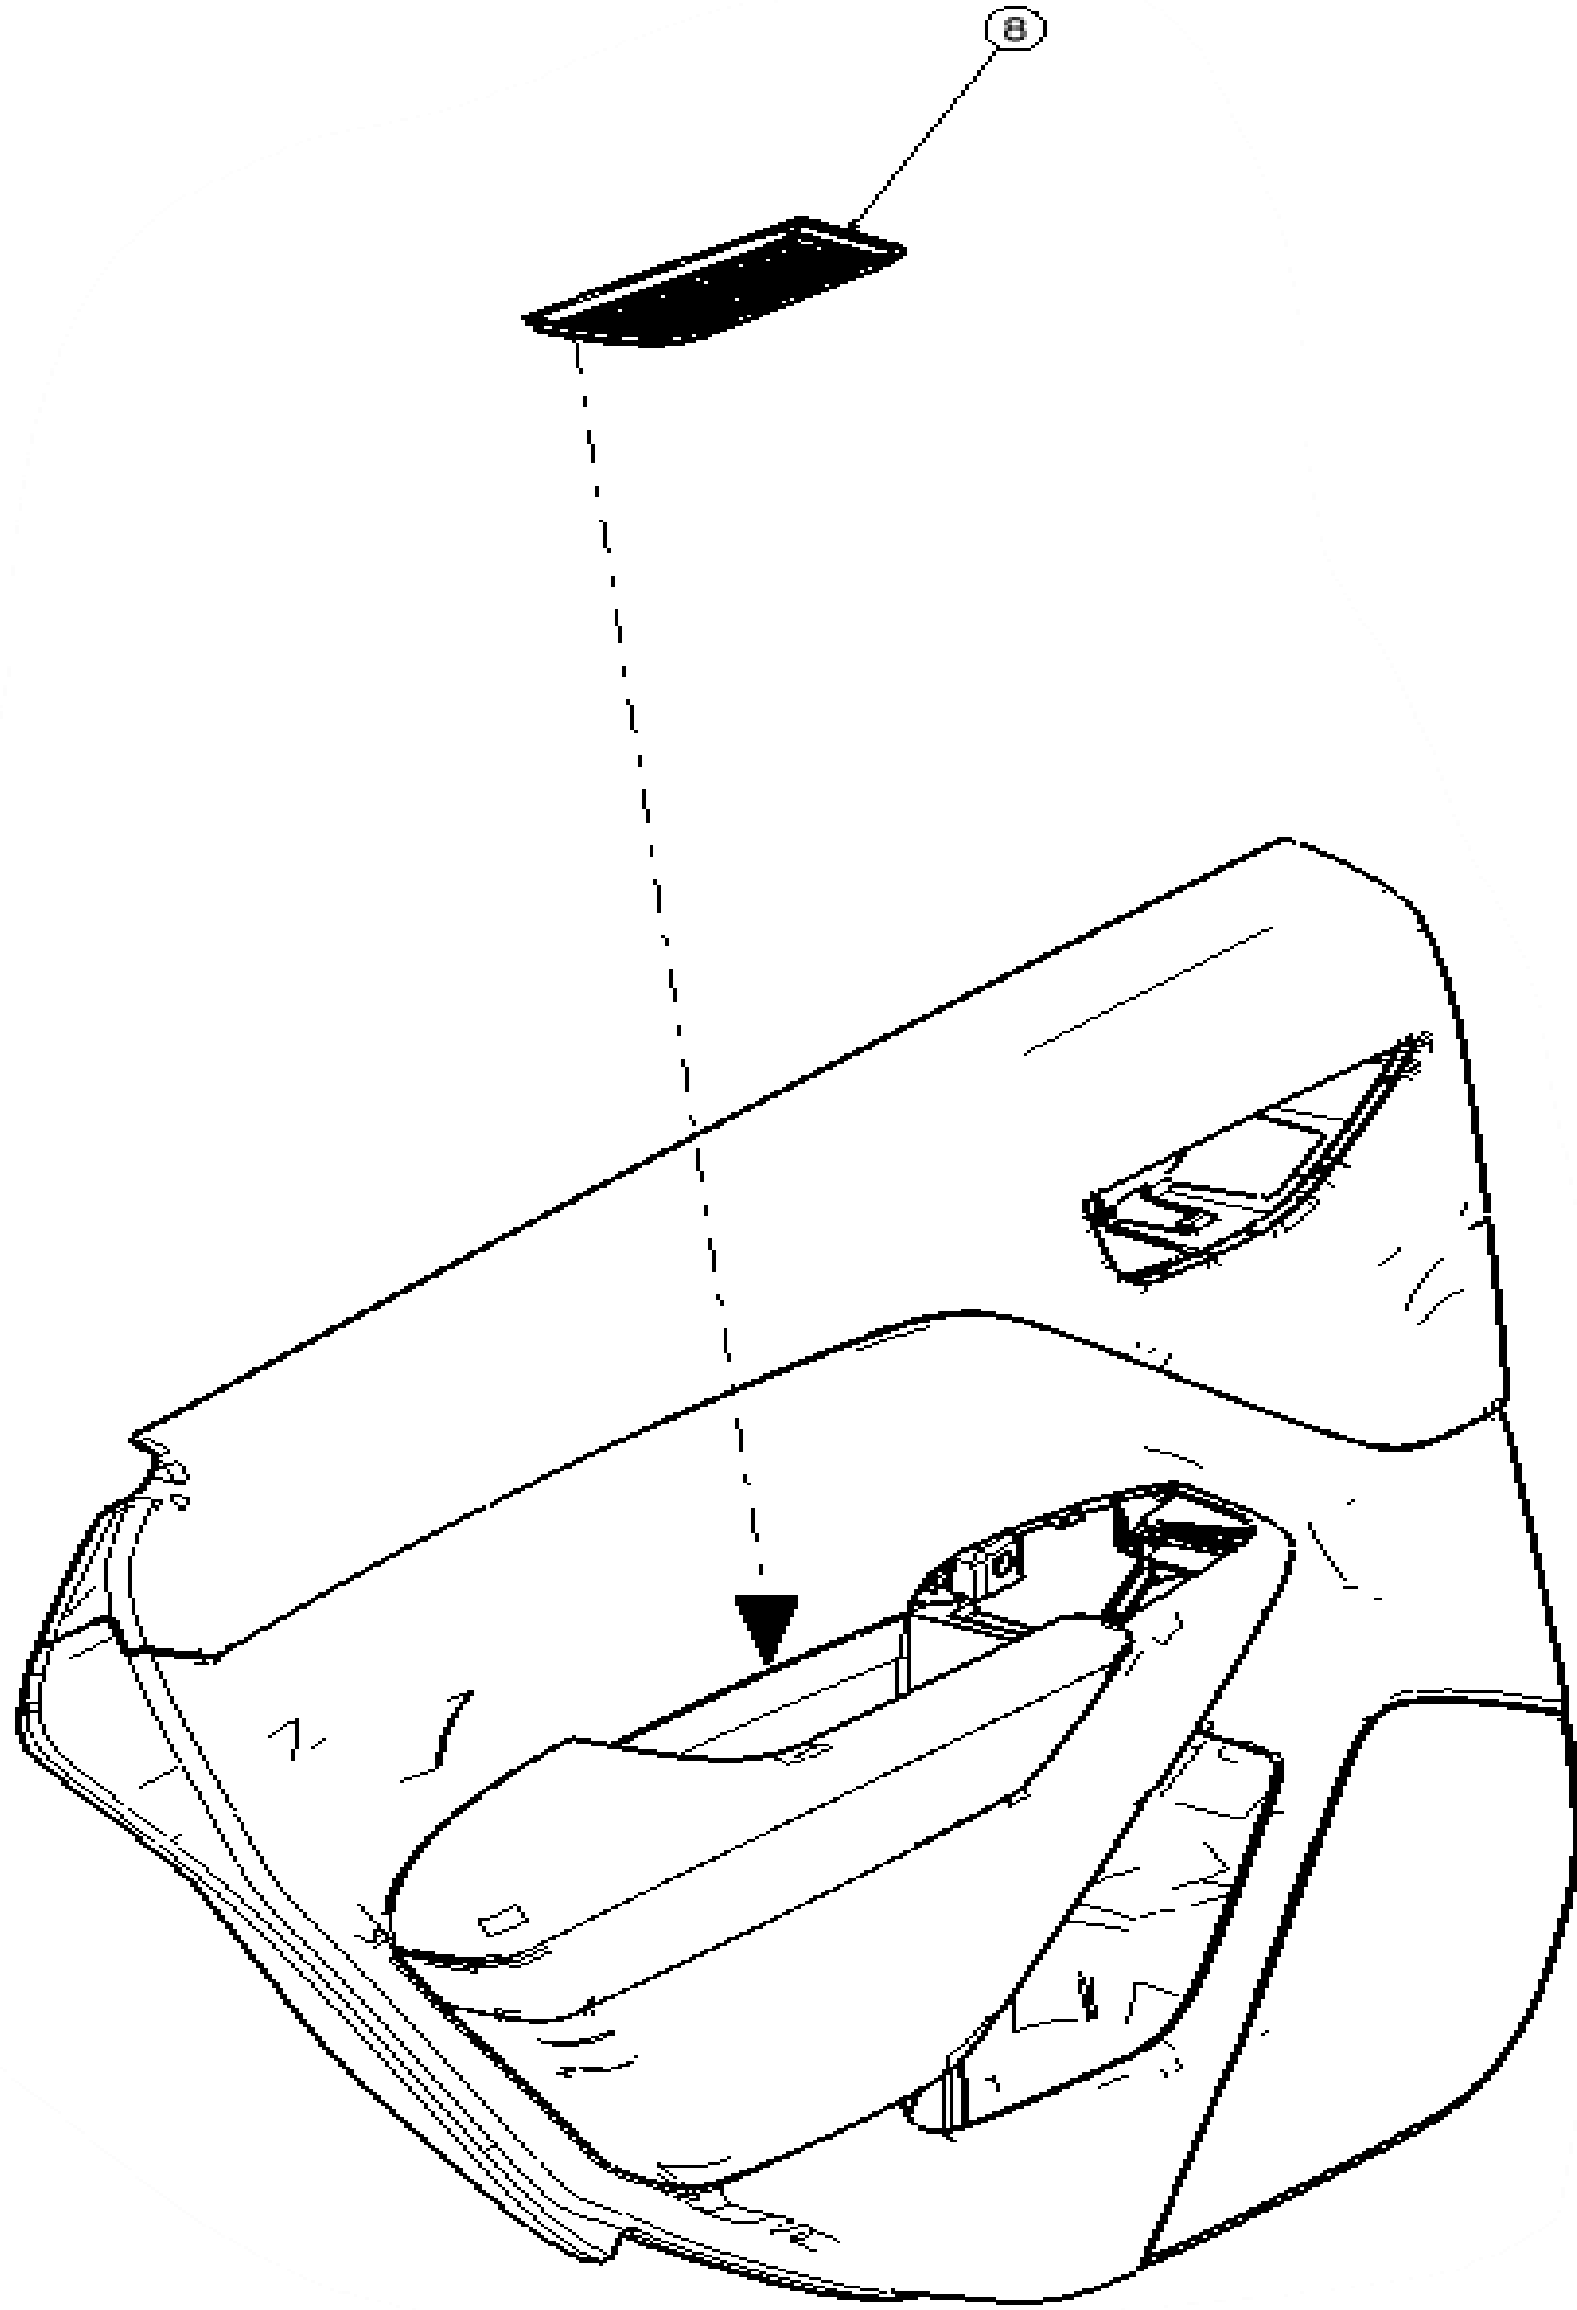

REAR DOOR GRAB INSERT

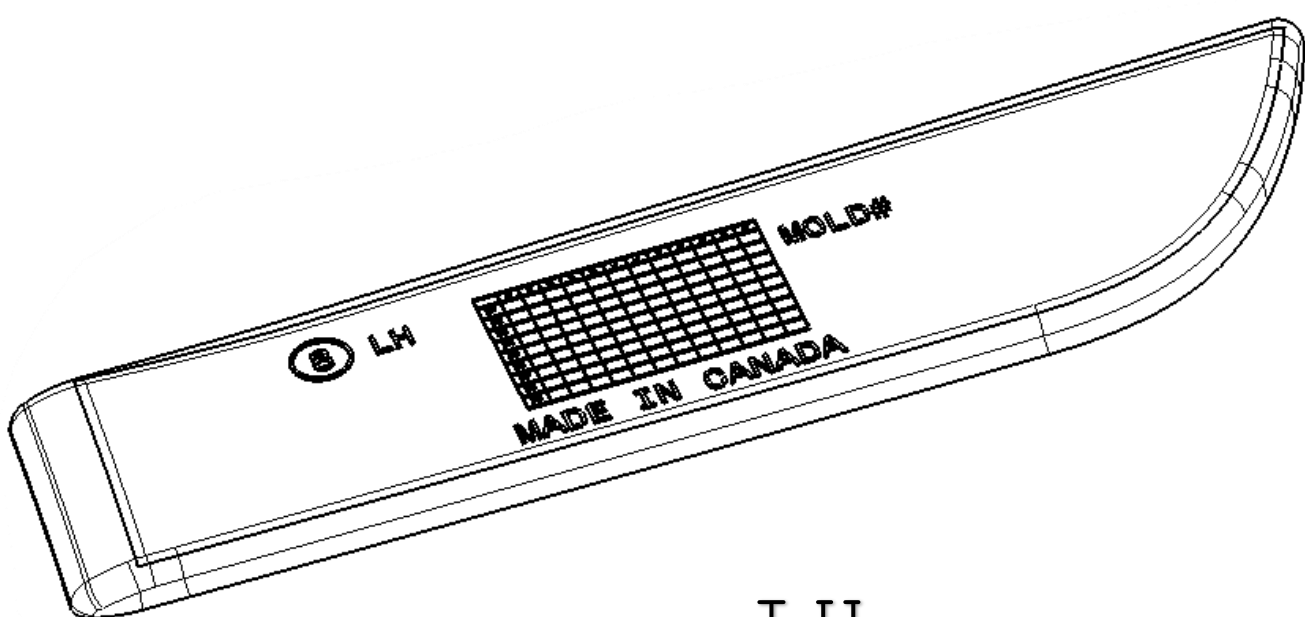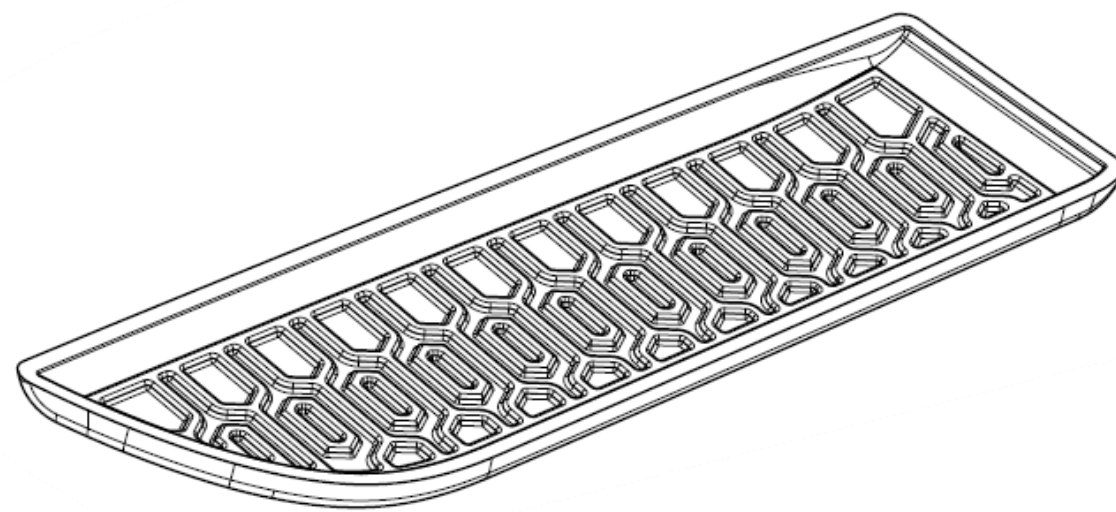


LH

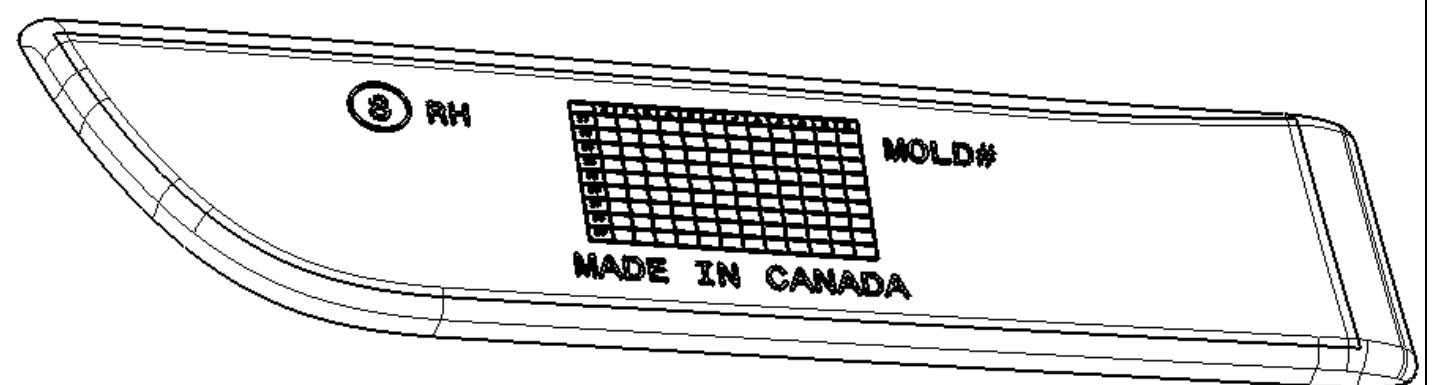

RH

9

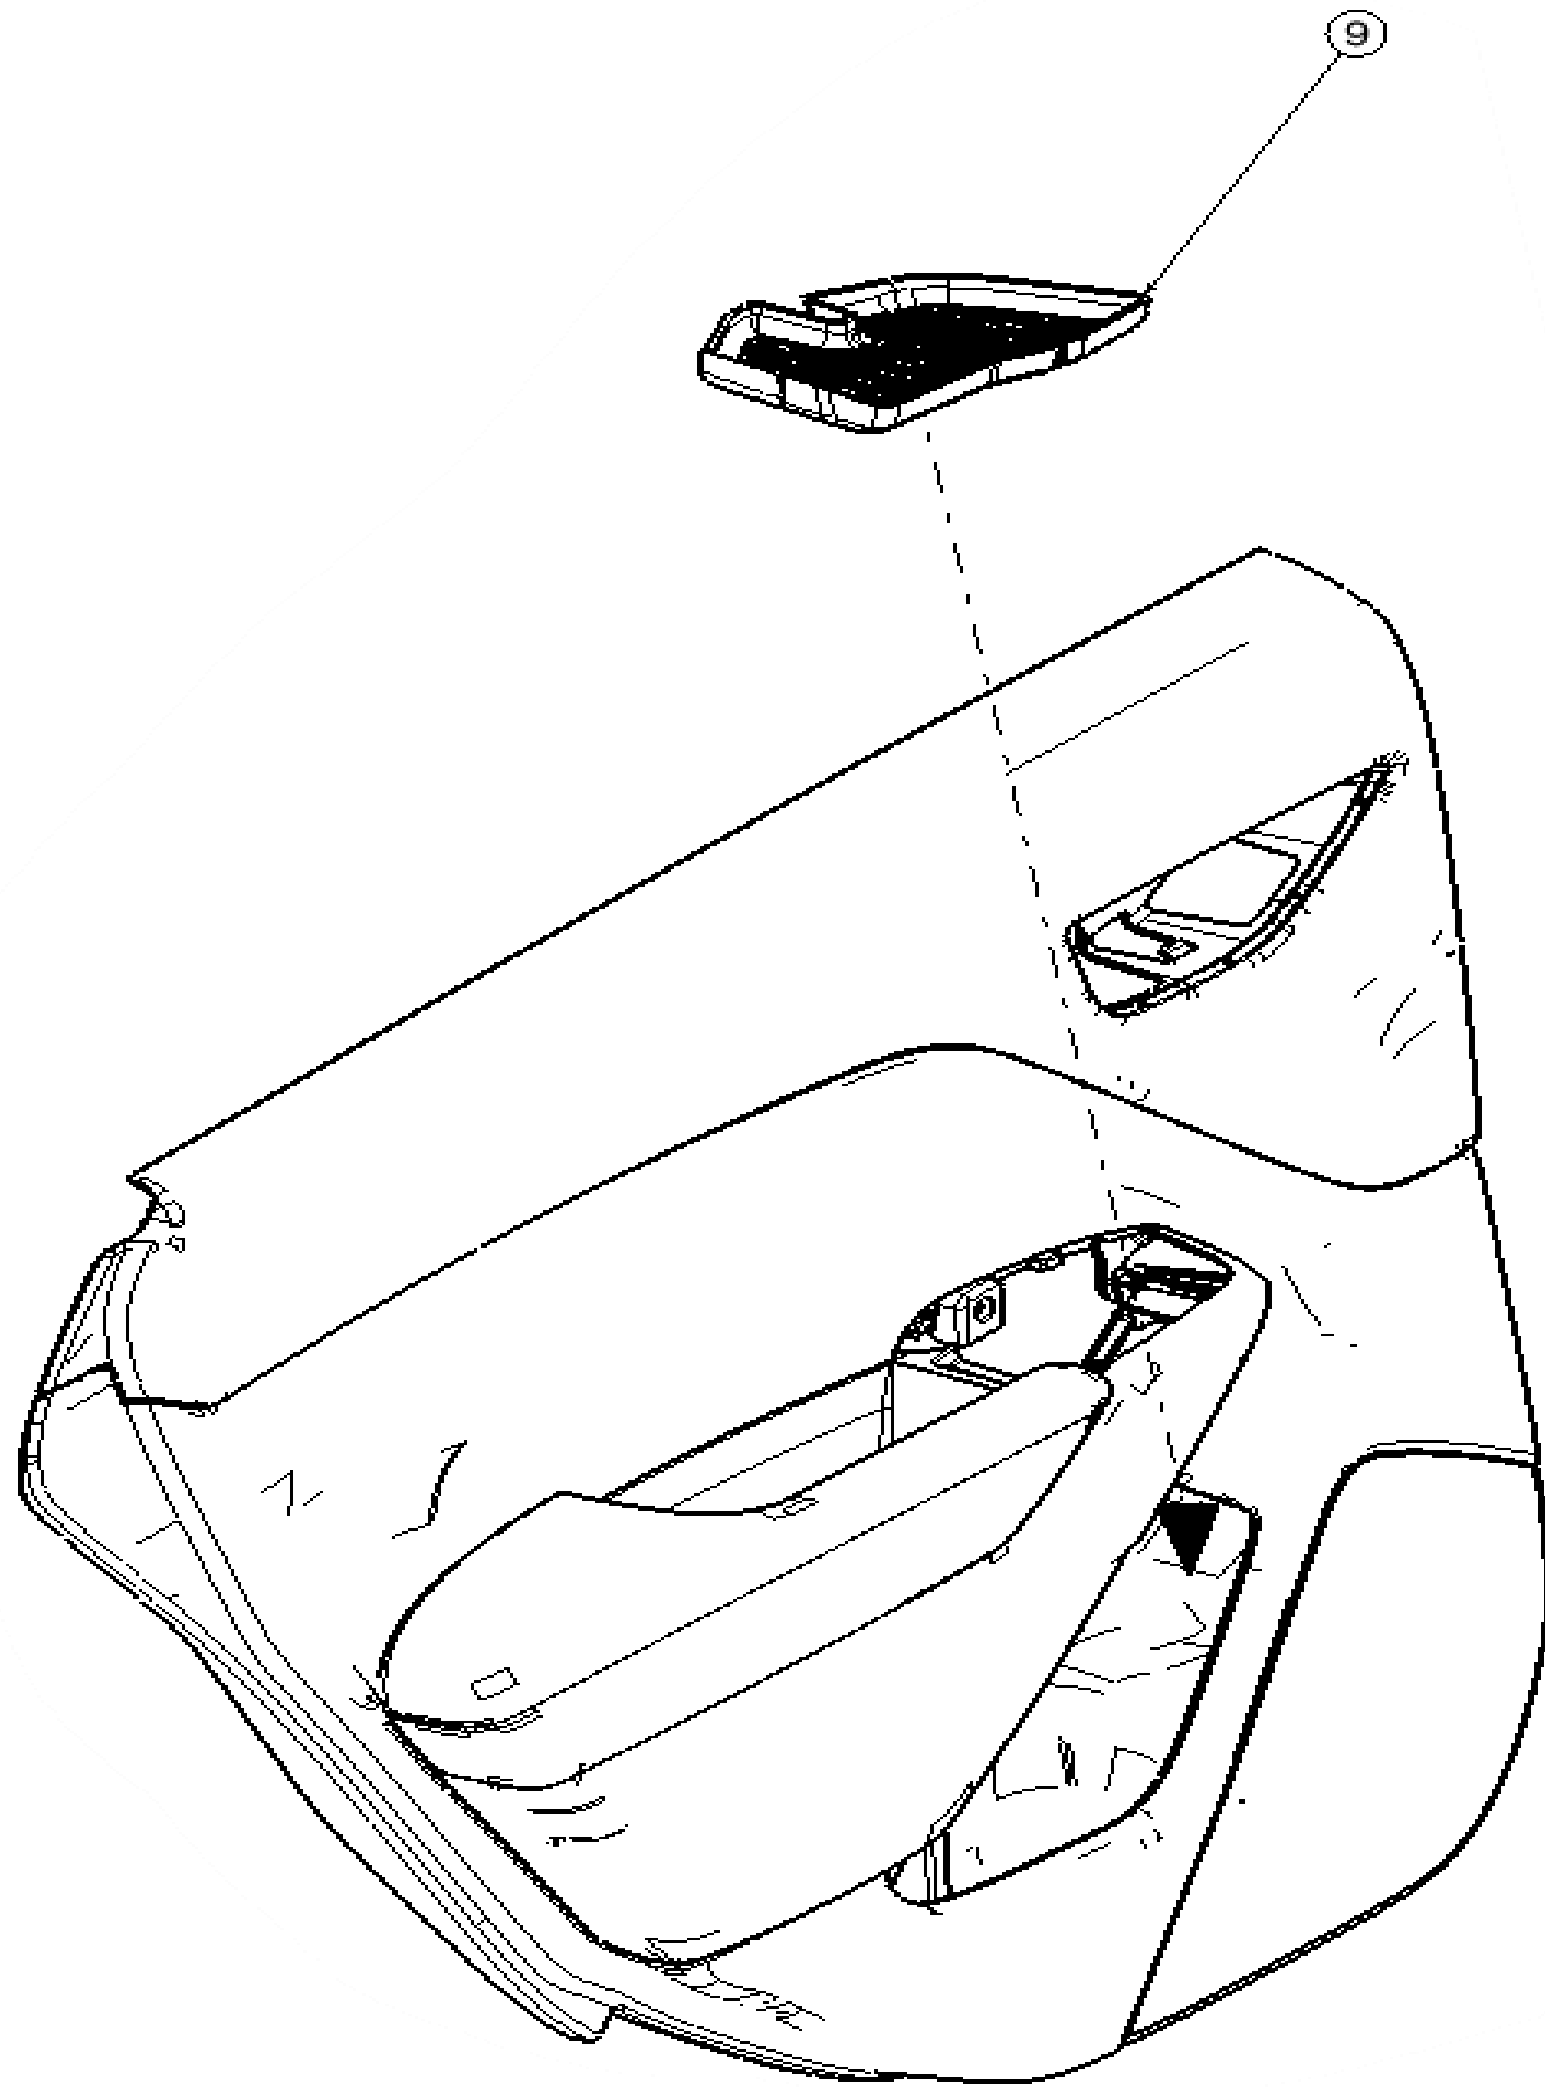

REAR DOOR POCKET INSERT

