

Floor Mat Installation During Pre-Delivery Service (PDS)

Service Category General

Section Pre-Delivery Service

Market USA

Toyota Supports
ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2026	4Runner, 4Runner HV, 86, bZ, bZ Woodland, C-HR BEV, Camry HV, Corolla, Corolla Cross, Corolla Cross HV, Corolla Hatchback, Corolla HV, Crown, Crown Signia, GR Corolla, Grand Highlander, Grand Highlander HV, Highlander, Highlander HV, Land Cruiser, Mirai, Prius, Prius PHV, RAV4 HV, RAV4 PHV, Sequoia HV, Sienna HV, Supra, Tacoma, Tacoma HV, Tundra, Tundra HV	

REVISION NOTICE

June 25, 2026 Rev1:

- Applicability has been updated to include 2026 model year Mirai vehicles.
- Any previous printed versions of this bulletin should be discarded.

SUPERSESION NOTICE

The information contained in this bulletin supersedes Service Bulletin No. T-SB-0007-25.

- Applicability has been updated to include 2026 model year C-HR BEV vehicles.
- Applicability has been updated to remove 2026 model year C-HR vehicles.

Service Bulletin No. T-SB-0007-25 is obsolete and any printed versions should be discarded.

Floor Mat Installation During Pre-Delivery Service (PDS)

Introduction

2026 model year Toyota vehicles are equipped with driver side floor mat retainers to secure the floor mat in the correct position. In addition, some models may also utilize retainers for passenger side and rear seat floor mats. During Pre-Delivery Service (PDS), follow the appropriate Installation Procedure to attach the driver side, and if applicable, the passenger side and rear seat floor mats to the vehicle carpet using the floor mat retainers. If installation instructions are included in the floor mat kit, place the instructions in the vehicle's glove box for customer reference.

CAUTION

- **ALWAYS** verify the floor mat is designed specifically for the model and model year it is being installed in.
- **ONLY** use floor mats that can be secured using the retainers. ALL OEM Toyota floor mats are specifically designed to fit correctly and be secured using the retainers.
- Make sure the floor mat is properly placed on the vehicle carpet and secured with the retainers. If the driver side floor mat is NOT properly placed and secured, it could slip and interfere with the movement of the pedals during driving and may cause an accident.
- Verify the operation of the accelerator, brake, and clutch (if equipped) pedals and clearance to the mat.
- **NEVER** install more than one floor mat at a time in the driver's seating position.
- If applicable, ANY secondary set of floor mats (based upon customer preference, such as the all-weather floor mats or other floor mats) **MUST** be placed in the trunk with ALL the packaging material intact. Do NOT install the secondary mat on top of the primary floor mat already installed in the driver's seating position.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	—	—	—	—

Installation Procedures

Pre-Installed Knob Style	3
Hook and Loop Style	6

Floor Mat Installation During Pre-Delivery Service (PDS)


Installation Procedure: Pre-Installed Knob Style

NOTICE

- If the vehicle is equipped with two sets of floor mats (carpet and all weather):
- Do NOT install both sets of floor mats at the same time.
- Install one set according to the current season and store the other set in the luggage compartment.
- Discard the Floor Mat Safety Check insert for the installed set and keep the other with the spare floor mat set for the customer's reference.

1. Verify that the driver, and if applicable, passenger side, and rear seat floor mats are for the correct model and model year vehicle they are being installed in.
2. Align the floor mat grommets with the retention knobs and place the floor mat grommets onto the retention knobs as shown in Figure 1.

Figure 1.

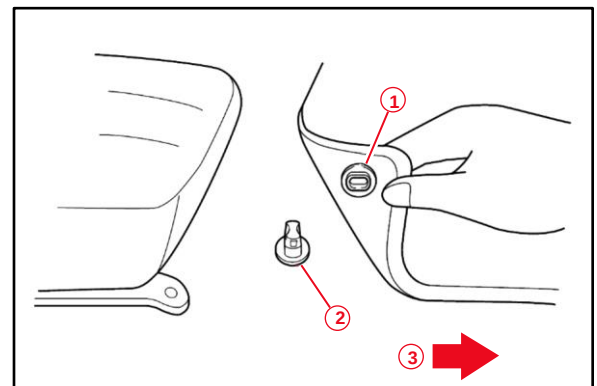

1	Floor Mat Grommet
2	Retention Knob
3	Front of Vehicle


Floor Mat Installation During Pre-Delivery Service (PDS)

Installation Procedure: Pre-Installed Knob Style (continued)

3. Twist the retention knobs a quarter of a turn to lock in place, see Figure 2.

4. Verify the triangle marks on the retention knobs and floor mat are aligned, as shown in Figure 2.

Figure 2.

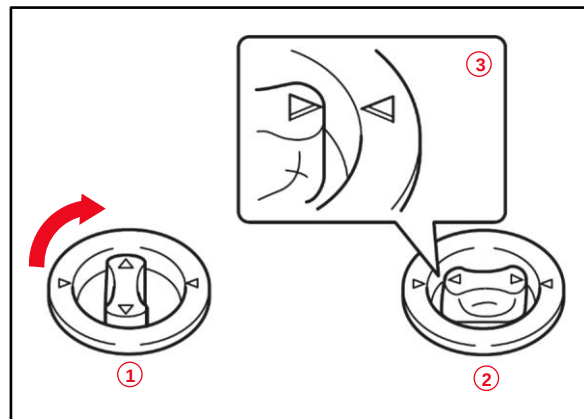

1	Twist Knob
2	Knob in Locked Position
3	Align Triangle Marks

Floor Mat Installation During Pre-Delivery Service (PDS)


Installation Procedure: Pre-Installed Knob Style (continued)

5. Verify proper installation.

NOTE

If applicable, do NOT remove the yellow caution tag from the floor mat. ONLY the customer should remove the caution tag (Figure 3).

Figure 3.

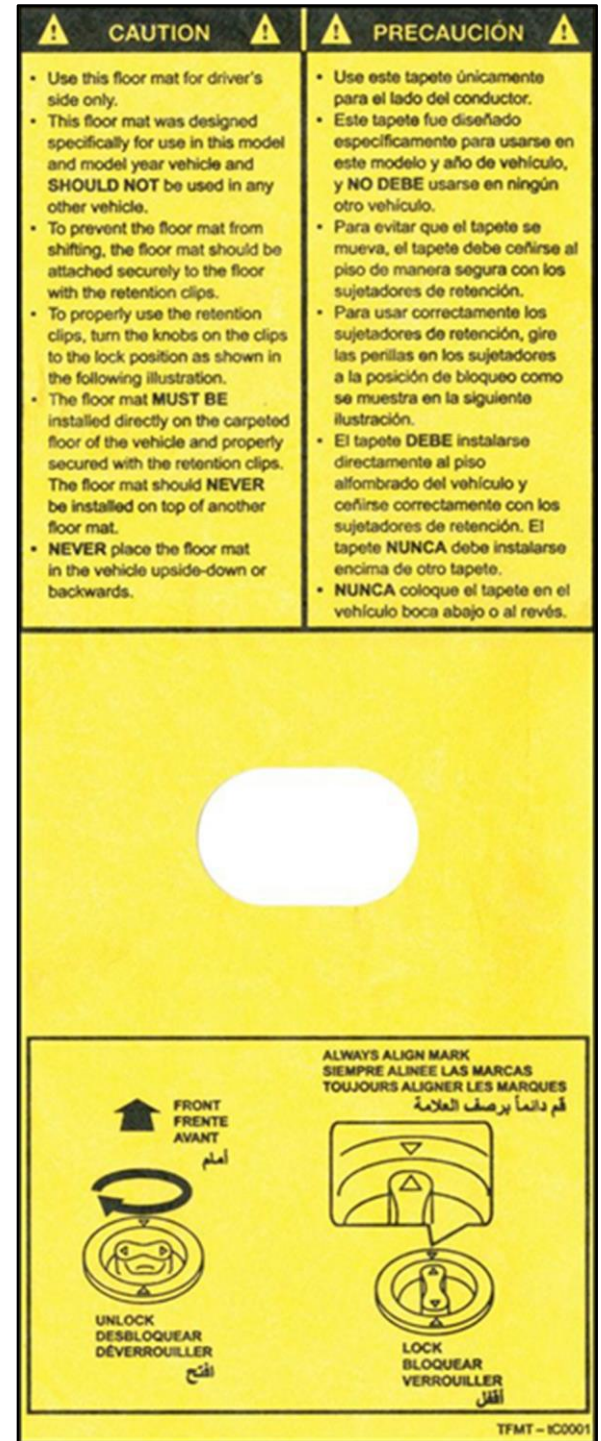


Floor Mat Installation During Pre-Delivery Service (PDS)

Installation Procedure: Hook and Loop Style

1. Verify that the driver side, and if applicable, passenger side floor mats are for the correct model and model year vehicle they are being installed in.
2. Attach the driver and, if applicable, passenger side floor mats to the vehicle carpet using the hook and loop fasteners.

Figure 4.

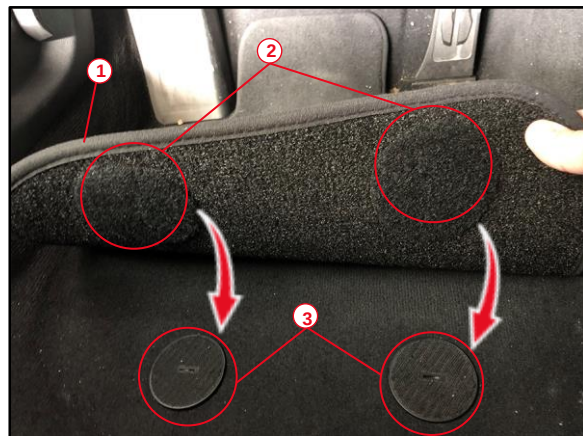

1	Underside of Driver Floor Mat
2	Loop
3	Hook

3. Verify proper installation.