



Pleasure-Way

phone 306.934.6578
fax 306.934.7085
toll free 1.800.364.0189

Pleasure-Way Industries Ltd. | 302 Portage Avenue | Saskatoon, SK | S7J 4C6

Trustate 2.0 Retrofit Instructions.

Start with the Trustate Monitor Replacement

Remove the 4 screws in the DCD panel. Pivot the right side out and slide the assembly to the right while carefully guiding the wiring with it.



Lay the panel down flat, exposing the back side. The Trustate monitor is in the lower rear left hand corner.



On the Trustate Monitor, disconnect the thermistor (white plug with 2 black wires):




Disconnect the communication cable:



Disconnect the ground:



Remove the 2 brass colored bolts using a 9/16 socket. Keep note of the longer bolt as it is required for the connection with the 2 red cables.

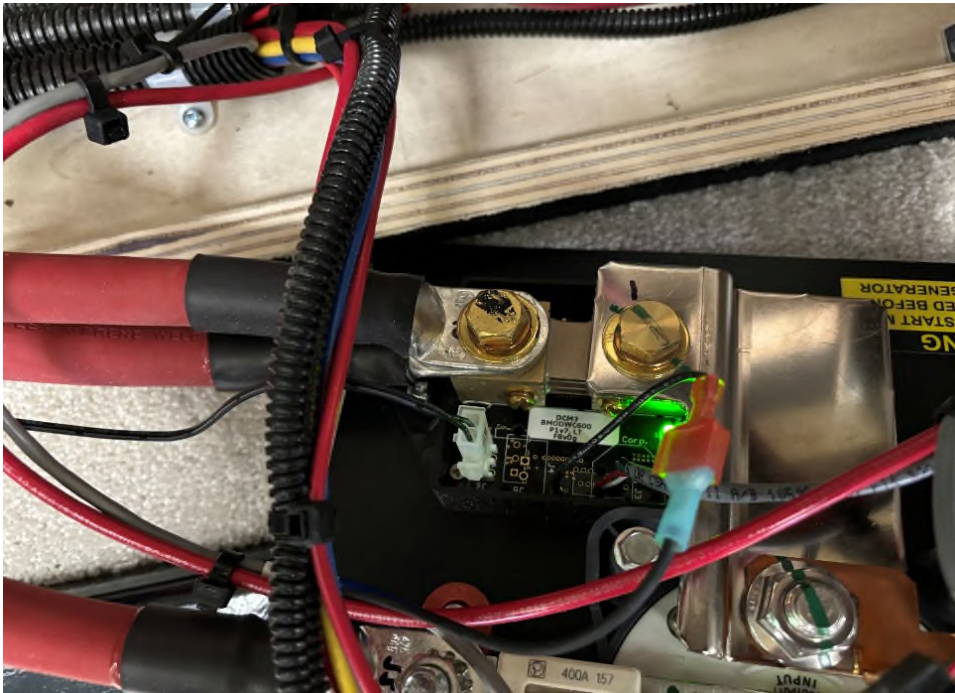

*Tape these 2 red cables as carefully set aside making sure they do not touch anything grounded. These lines are live with 12v + from the batteries. The metal bar that secures the seatbelts at the back of the coach for example is grounded.


There is a Torx screw, size T20, securing the module to the DCD panel. Remove this Torx screw and slide the module out of position.



Slide the new module into position and secure the Torx screw first. Then work your way in reverse order to re-install the replacement module. The brass colored bolts are torqued to 100" lbs.

With the Trustate 2.0 installed, follow the instructions to update the system.


Pry the touchscreen from the wall by gently pulling on the top or bottom corner and insert the provided USB drive into the USB-A port.

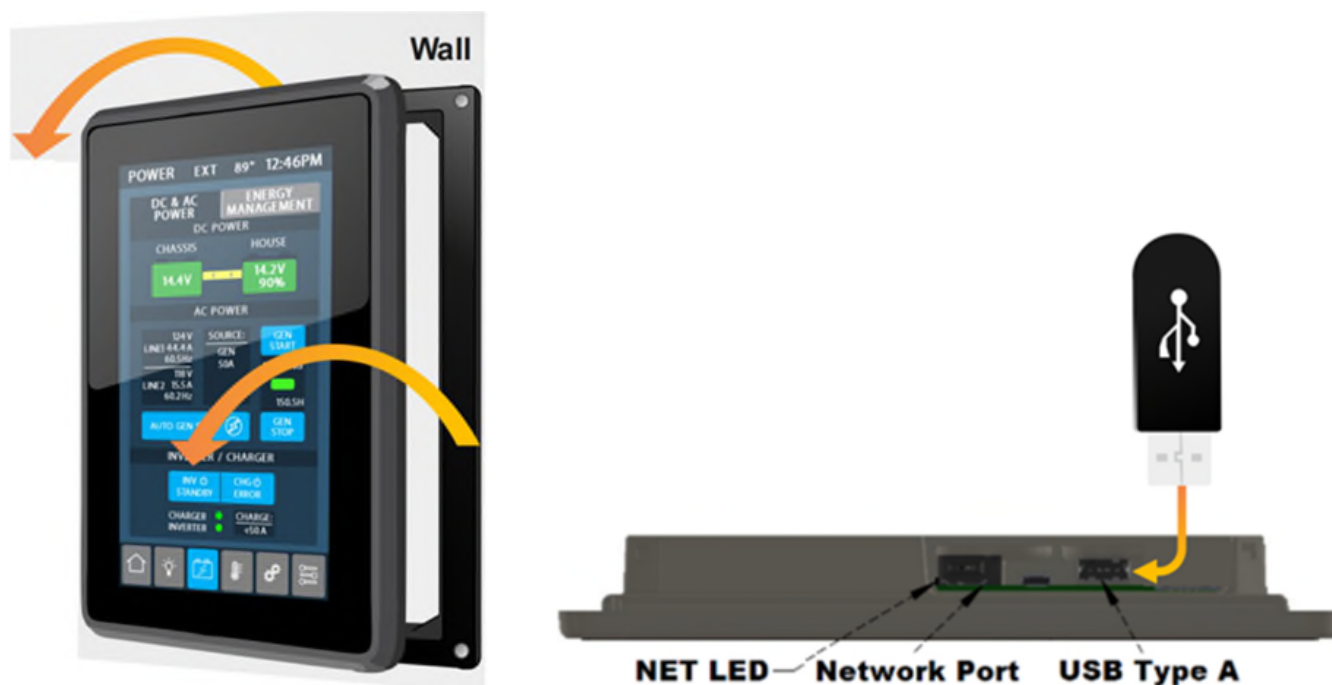

Unplug the communication cable on the back of the touchscreen and plug it back in. The screen will boot up with the upload page. Select Auto Load and Start Autoload to begin. Remove the USB once the screen displays Auto Load Successful. Do this for all LCD screens in the coach.



On the Main LCD screen at the rear of the vehicle, go to the settings page and select System Update. Select Update All and Update Now on the following page. Press Exit once the screen displays the system is up to date.

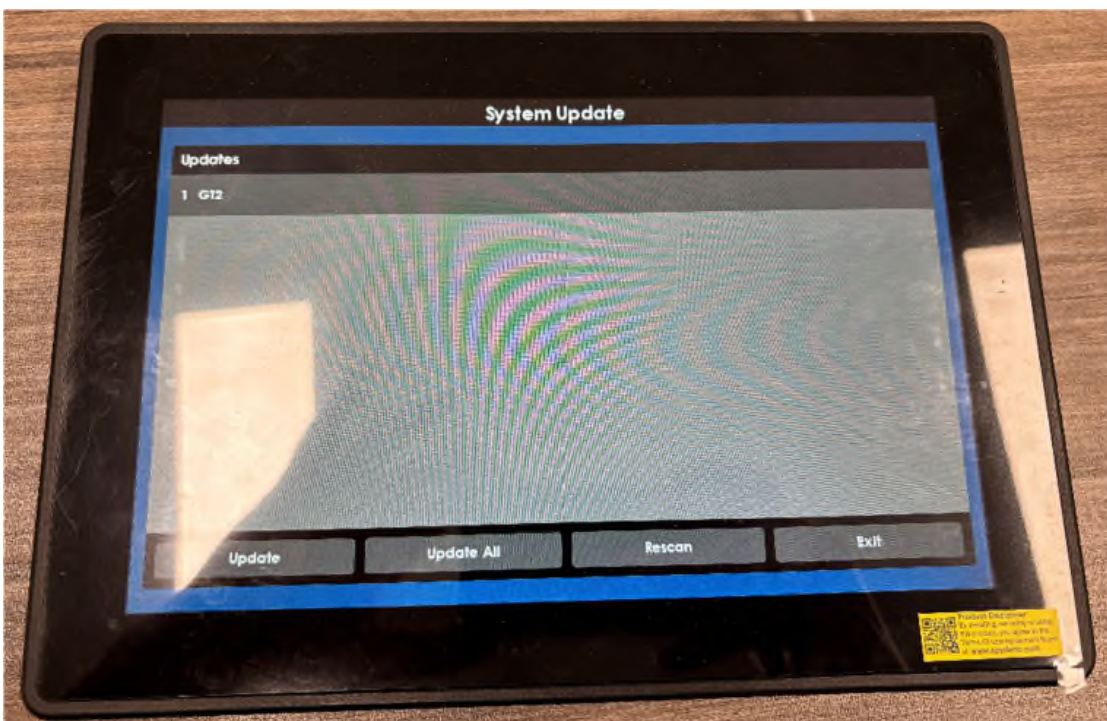

Once the System Update is complete, hold your finger on coach model of the Settings page until prompted for a pin number. Type in 8365 to gain access to the program settings. You

can now change TruState 1.0 to TruState 2.0 and press back to exit the program setting and complete the repair.

