


Spare Tire U-Bolt Replacement

Description

On certain travel trailers manufactured with bumper mount spare tire carriers; the carrier could become detached from the unit during travel due to U-bolt failure.



1. Use a 13/16" socket and wrench to remove the 2 lug nuts and retaining plate holding the spare tire on the carrier.
2. Carefully remove the spare tire from the carrier and set to the side in a safe location.

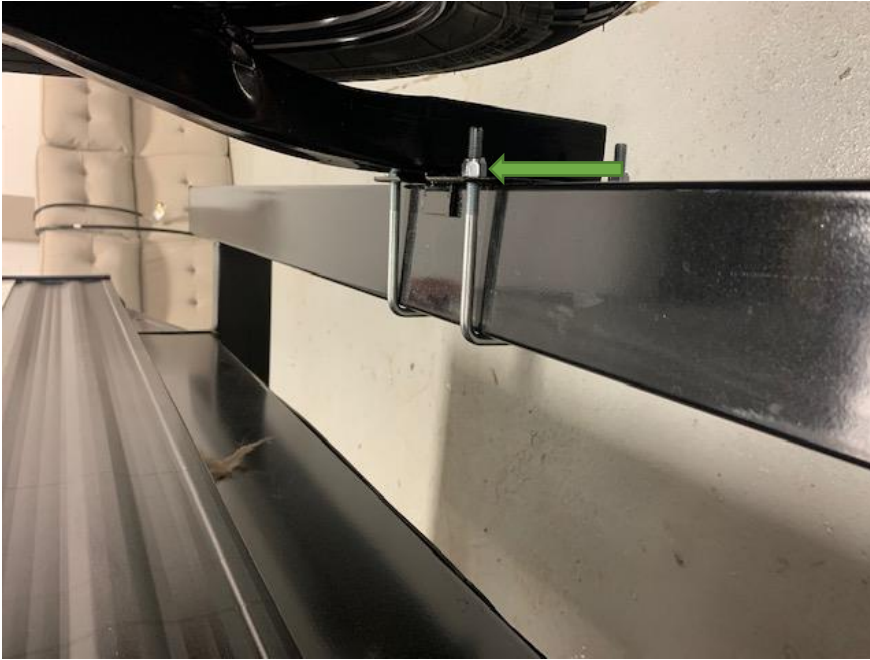

3. Use a 9/16" socket and wrench to remove the 4 nuts holding the spare tire carrier on the bumper.
4. Use the new U-Bolts and nuts provided in the repair kit (BC-UB-N20) to reinstall the spare tire carrier to the bumper.
5. Reinstall the spare tire on the carrier and use a 13/16" socket and wrench to tighten the lug nuts against the retaining plate.

Parts

U- Bolt kit - BC-UB-N20

Warranty

File Recall Repair warranty claim using warranty code:

99.01.51 J - .5/hr. to Remove, replace, and reinstall

No pictures required

No part return required

**Please refer all questions and authorization requests to Heartland Dealer Services
Department 877-262-8032**