

SOP02673


QAAR 9711 Ensure Correct Torque Applied to CCP1 Electrical Connection



Make sure all power is off in the coach:

1. Shore Power Unplugged
2. Battery Disconnect OFF
3. Keys not in ignition

1

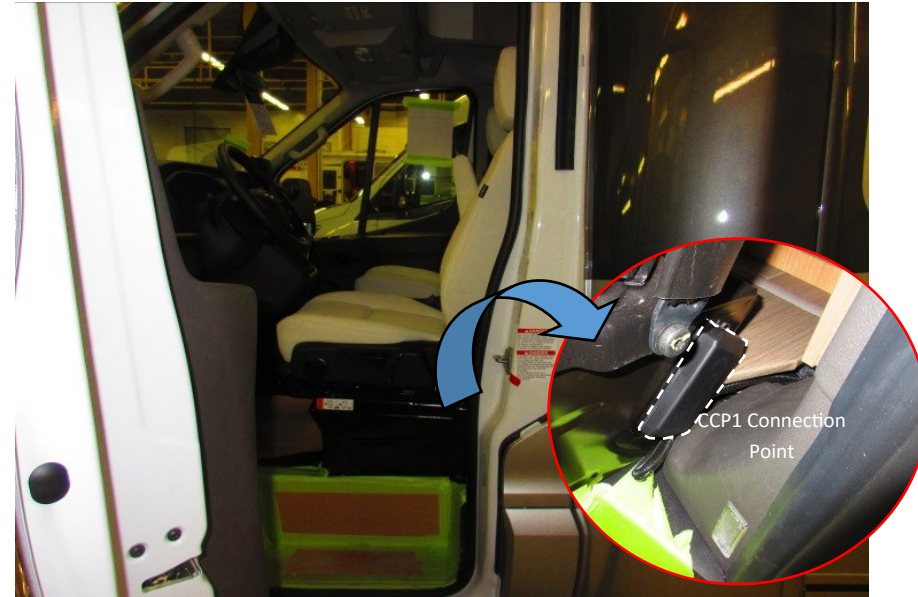


Open the driver's door and look at the base of the chair pedestal behind the rear of the cab door pillar for the CCP1 connection point.

2



Remove the cover by gently pulling on the top tab away from the seat.

3

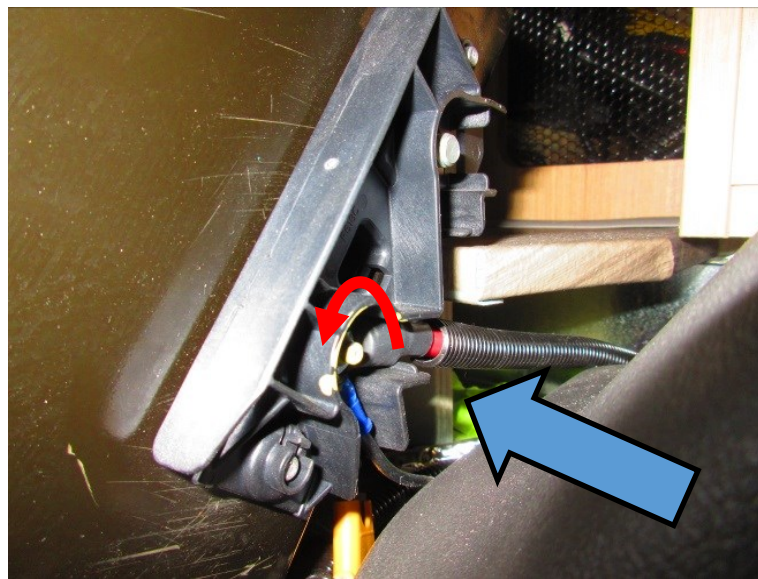

Using a 10mm (13/32") socket, back off the M5 nut until it spins freely.

5



Use a torque wrench to apply **35in/lbs** to the nut.

6



Snap cover back over connection point, make sure it clicks

7