

# RECALL 21V784 REMEDY INSTRUCTIONS



Make(s): Puma  
 Model(s): PUT32BH2B  
 Model Year(s): 2021 & 2022


Concern:  
 A second black wastewater-holding tank ventilation pipe was not installed in the vehicle.

Repair Code: RC-632-03-00-004105  
 Allotted Time: 10.00 HRS.  
 Inspection Code: N/A  
 Allotted Time: N/A  
 Photo(s) Required: YES  
 Prior Authorization Required: YES  
 Part(s) Kit Number: 10-07-2021  
 Part(s) Return: N/A

**Disconnect the vehicles' battery Positive and Negative, disconnect any House battery(s) Positive and Negative, if equipped with a generator ensure it is off and lastly, ensure the vehicle is disconnected from shore power. Block any tires/wheels to prevent the vehicle from rolling. Failure to do so may result in electrocution, fire or other personal injury, property damage and/or death.**

STEP 1: LOCATE THE BATH WALL IN FIGURE 1;

FIGURE 1

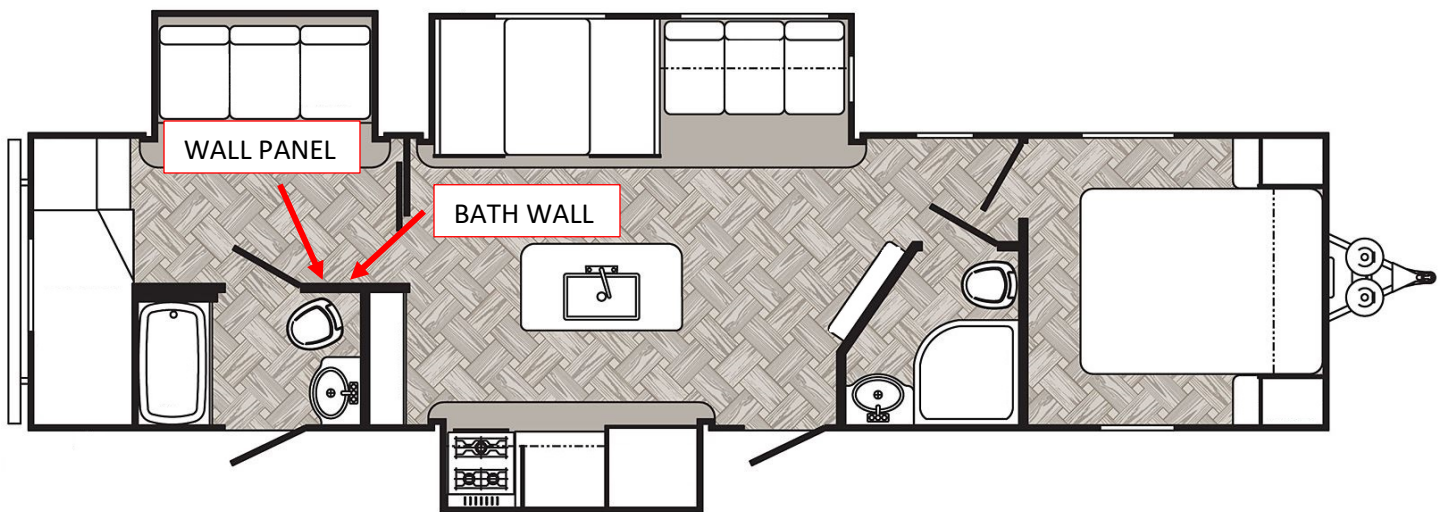

STEP 2: REMOVE THE FOLLOWING:

- BATH DOOR
- BATH DOOR CASING
- BATH DOOR TRIM


STEP 3: REMOVE THE WALL DÉCOR PANEL FACING THE BUNK ROOM, NOTATED IN FIGURE 1;

STEP 4: MEASURE FROM THE INSIDE OF THE PINE FORWARD 3" AND MARK THE BOTTOM PINE BOARD IN THE VERY CENTER (FIGURE 2);

**CAUTION: ENSURE PRIOR TO DRILLING THE HOLE – ENSURE YOU DO NOT DRILL A HOLE THAT WILL BE OUTSIDE OF THE WALL. DO NOT TEAR THE LINO.**

STEP 5: USE A 2 ¼" HOLE SAW AND DRILL A HOLE THROUGH THE BOTTOM PINE BOARD IN THE WALL AND YOU WILL FIND A FLOOR HOLE ALREADY PRESENT. **DO NOT DAMAGE THE HOLDING TANK.**

FIGURE 2

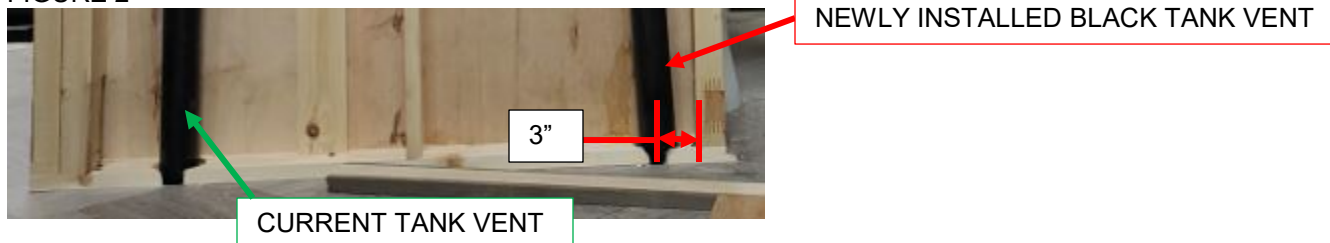

## RECALL 21V784 REMEDY INSTRUCTIONS



Make(s): Puma  
 Model(s): PUT32BH2B  
 Model Year(s): 2021 & 2022

Concern:  
 A second black wastewater-holding tank ventilation pipe was not installed in the vehicle.

Repair Code: RC-632-03-00-004105  
 Allotted Time: 10.00 HRS.  
 Inspection Code: N/A  
 Allotted Time: N/A  
 Photo(s) Required: YES  
 Prior Authorization Required: YES  
 Part(s) Kit Number: 10-07-2021  
 Part(s) Return: N/A

STEP 6: USE THE SAME MEASUREMENTS, MARK THE PINE BOARD THAT IS AGAINST THE CEILING WITH THE SAME DIMENSIONS FROM THE FLOOR AND DRILL THE SAME 2 ¼" HOLE THROUGH THE CEILING PANEL AND ROOF DECK;

STEP 7: SLIDE THE 8 FOOT BLACK PIPE UP THROUGH THE ROOF HOLE THAT WAS JUST DRILLED AND CONNECT/GLUE TO THE FITTING INSTALLED ON THE HOLDING TANK. SECURE THE BLACK PIPE TO THE WALL PINE WITH THE 18" ZIP TIE;

STEP 8: RE-INSTALLATION ORDER:

- BATH WALL DÉCOR PANEL
- BATH DOOR CASING
- BATH DOOR TRIM
- BATH DOOR
- RE-TRIM AS NEEDED USING THE SUPPLIED BATT STRIPS

STEP 9: ON THE ROOF, CUT OFF THE BLACK PIPE, LEAVING 2" – 2 ½" OF BLACK PIPE ABOVE THE ROOF MEMBRANE;

STEP 10: APPLY THE SUPPLIED PUTTY TAPE TO THE CIRCUMFERENCE OF THE VENT CAP SURFACE THAT MATES TO THE ROOF AND SECURE TO THE ROOF WITH SUPPLIED SCREWS, COVERING THE BLACK PIPE;

STEP 11: APPLY THE SUPPLIED SELF-LEVELING SEALANT LIBERALLY TO THE ROOF CAP, COVERING THE SCREW HEADS AND EDGES OF THE VENT CAP, ALLOW TO CURE;

STEP 12: CLEAN ALL WORK AREAS. CLAIM REPAIR CODE.