


- Underneath the vehicle, remove (x4) grommets underneath the footwell base plate.

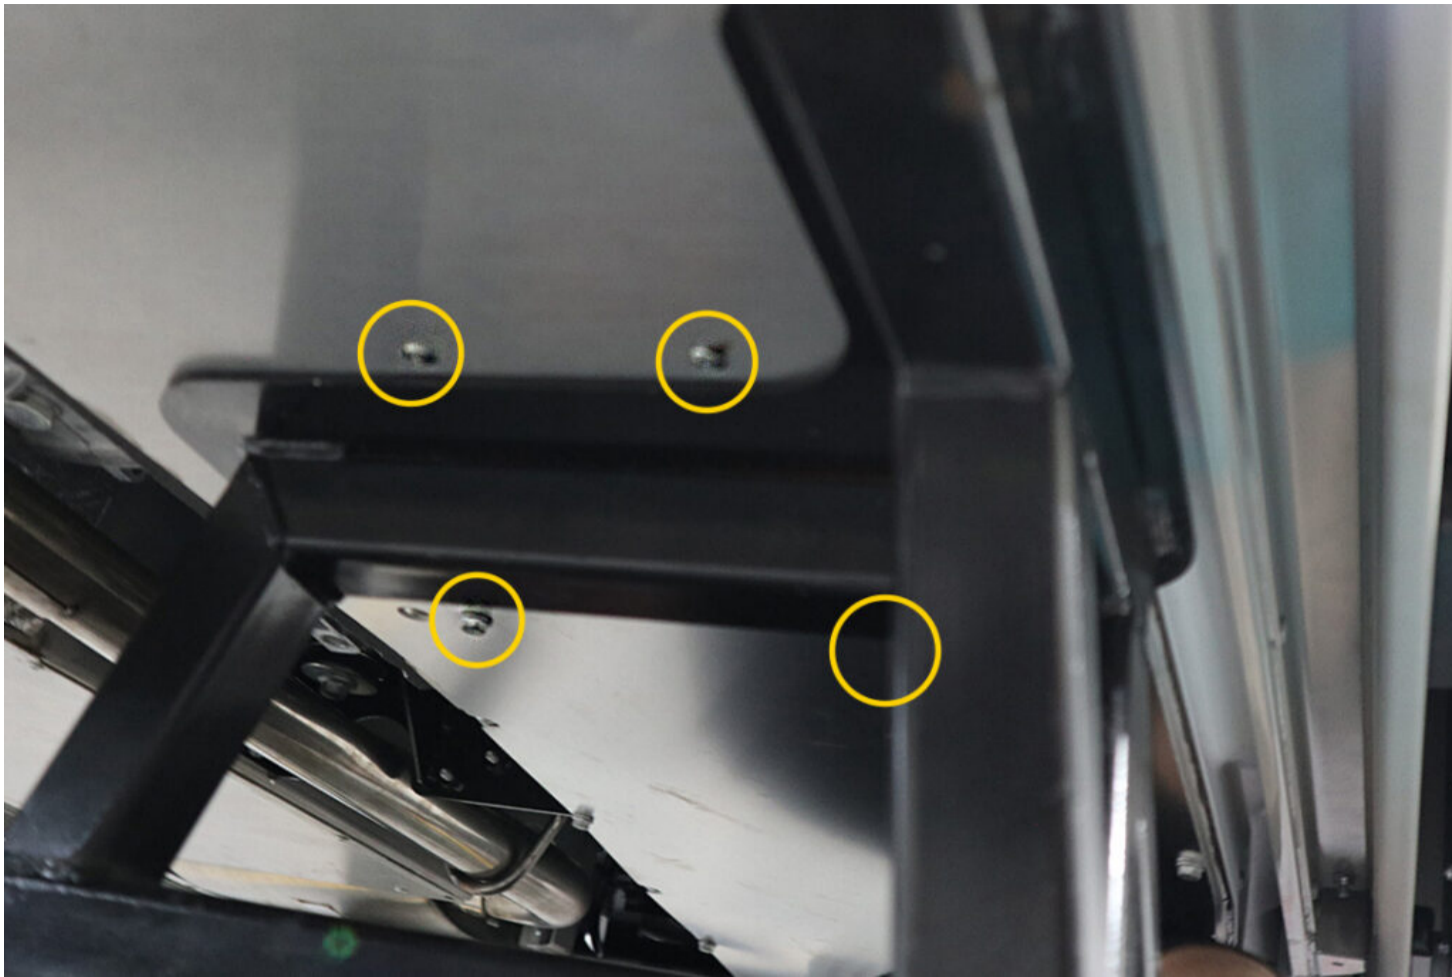




- Underneath the vehicle, remove the inner front footwell base plate retaining nut, washer and rubber washer. Store the washers for re-fitment later – discard the nut, replacements are supplied as part of the kit.



- Underneath the vehicle, remove the remaining (x3) footwell base plate retaining nuts. – discard the nuts, replacements are supplied as part of the kit.



- Remove the footwell base plate. (It may be necessary to adjust the position of the pedal box to access to the base plate).

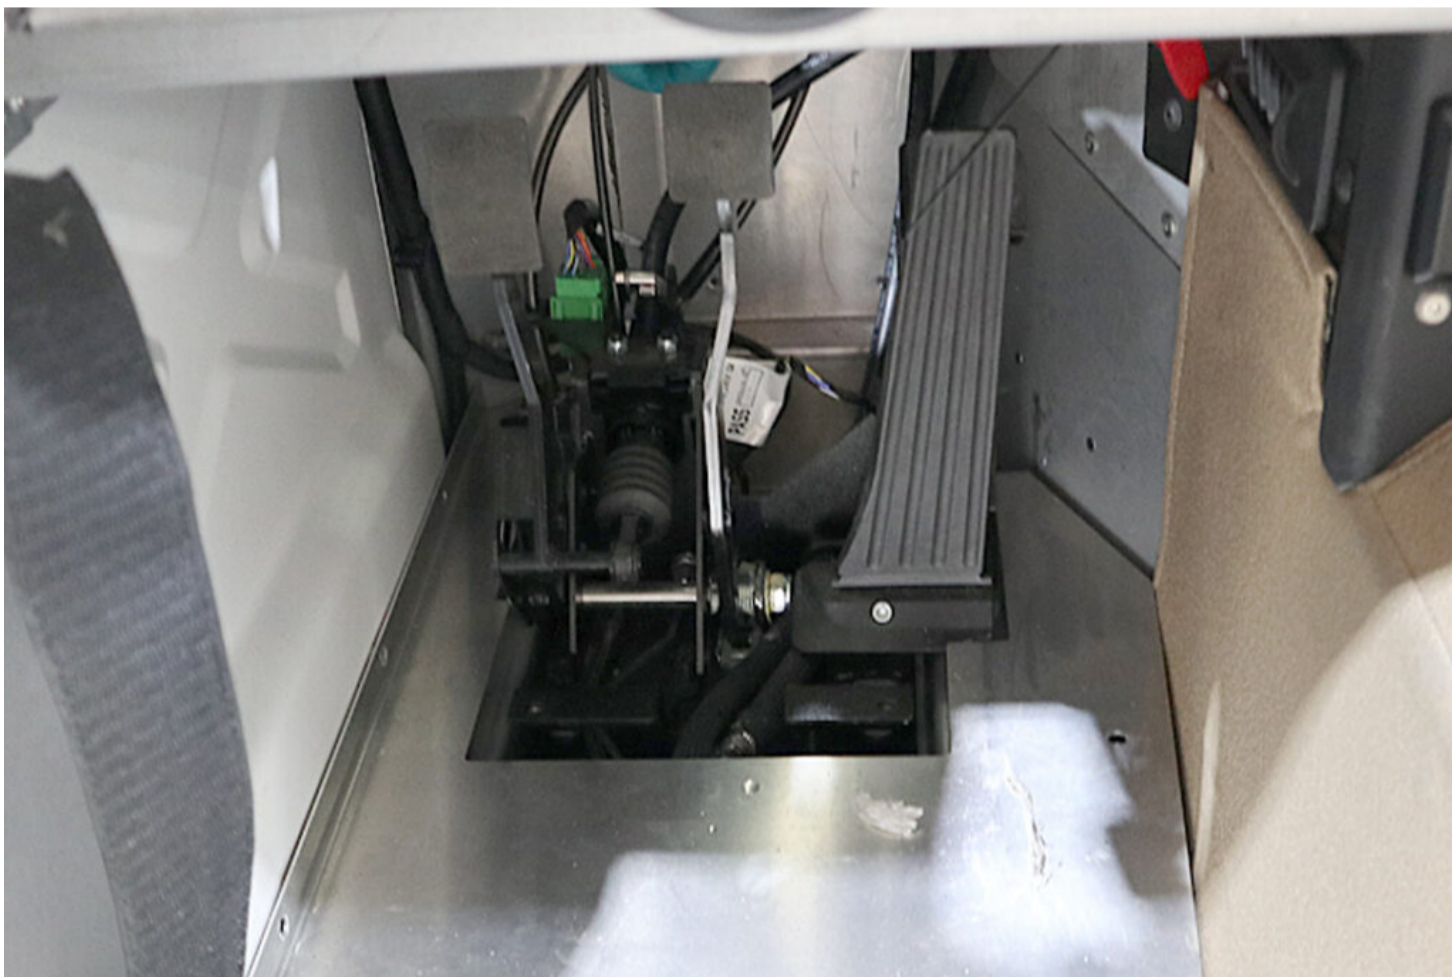



- Disconnect the electrical connectors on the pedal box which connects it to the main vehicle harness.





- Remove the brake union using 14mm and 13mm spanners. Store these parts for re-fitment later.
- Clean up any residual brake fluid which comes out of the brake line.



- Use suitable hose clamps or place bolts in the ends of the brake fluid reservoir feed lines to prevent fluid leaks.