



To All Lamborghini Dealers and Licensed Service Point  
From Customer Service Department  
Subject New third tail light Murciélago  
Group 147.08.17  
Attachments -  
Date 29.11.05  
Pages 9

Automobili  
Lamborghini  
S.p.A.

### **Subject**

New third tail light Murciélago.

### **Model / VIN-Range**

All Murciélago coupè (L147) MY 02-03-04-05-06 until VIN 1900 .

### **Information to the field**

Only in case you have to replace a damaged third tail light, replace it with the new one following this procedure, in order to avoid water infiltrations.

The new tail light (p.n. 410945249A) supersedes the old one (p.n. 410945249), no more supplied, is compatible with all the above mentioned MY cars.

### **Field solution**

Replace the third tail light with the new solution.

### **Spare Parts**

- Kit p.n. 0R1470010 (third tail light + rubber protection cap) available at Lamborghini Spare Parts



## Warranty Claim data

In case of replacement of the third tail light in warranty, with the new procedure hereby described, you must refer to the Flat Rate.

Your Area Manager is at your full disposal for further information.

Best regards

Customer Service



### **Necessary material**

- Kit p.n. 0R1470010 (third tail light + rubber protection cap) available at Lamborghini Spare Parts
- adhesive tape for automotive wirings
- Tool VAS 1978/29 (included in your Lamborghini tool kit)



Pic. 1



## Description of operations

- 1.1 Adopt all precautions to prevent car damages and to work safe.
- 1.2 Remove the damaged tail light
- 1.3 In order to have a sufficient wiring length extending from the pavilion spoiler, please move the wiring under the spoiler (see pictures).



Pic. 2




Pic. 3




**1.4** Disconnect the pins from the connector using the VAS 1978/29 tool, be careful to avoid damaging the connector. To disconnect the pins you have to lower the pins' tangs.

After disconnecting the pins relift the pins' tangs to allow the following reassembly.

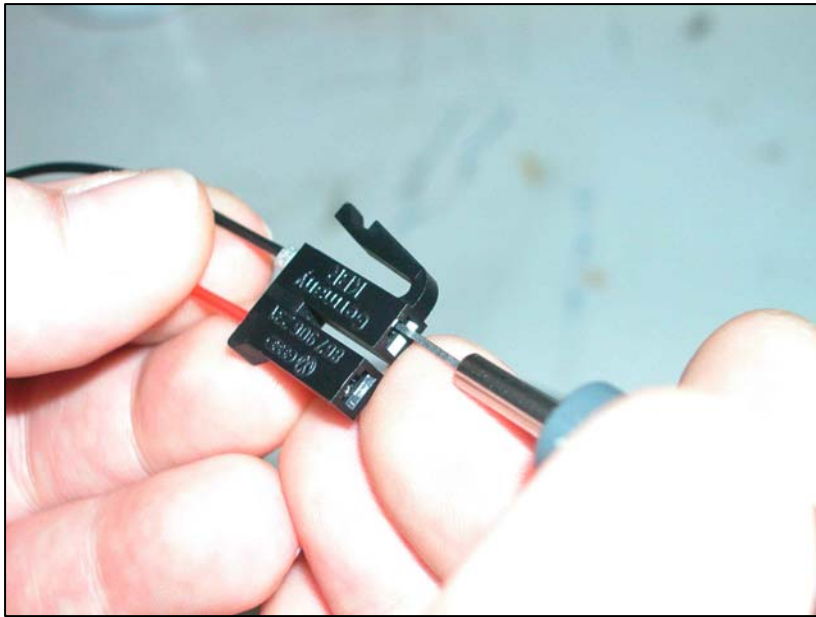


Pic. 4

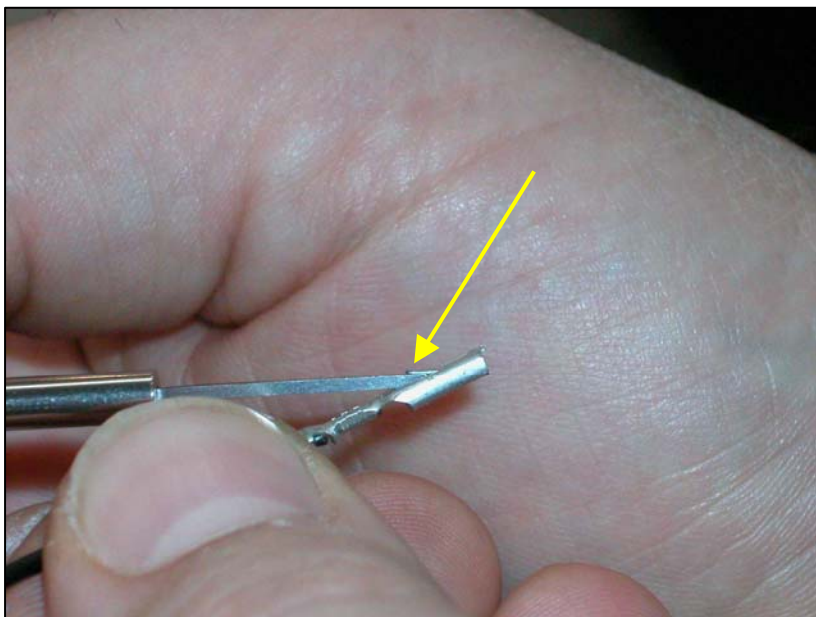


Pic. 5

**1.6** Insert the rubber protection cap on the wirings (pic.6) and reconnect the wirers with the connector (pic.7).

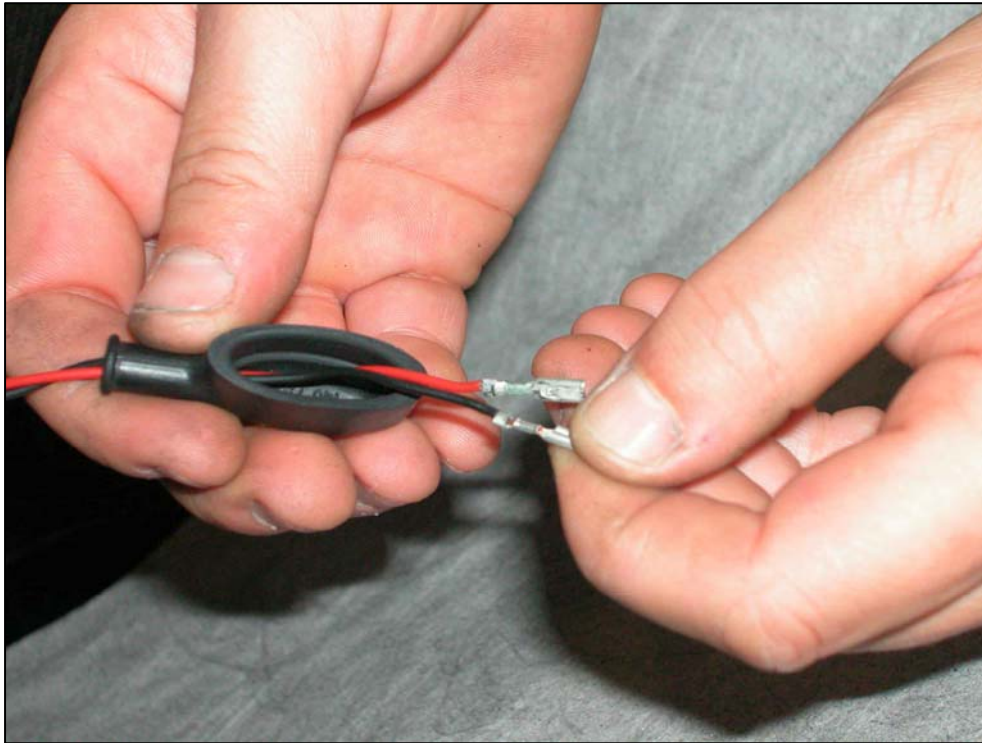


Pic. 6

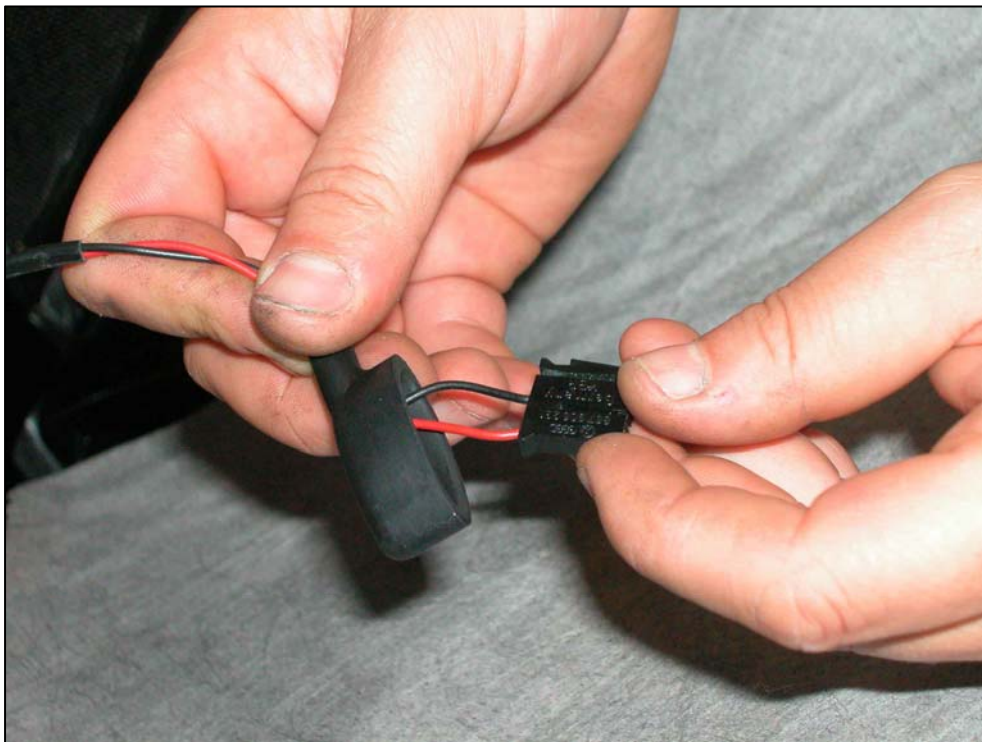

Pic. 7




**1.7** Carefully cover the wiring (from the end of the sheath) and part of the rubber cap with automotive adhesive tape to avoid water infiltrations.

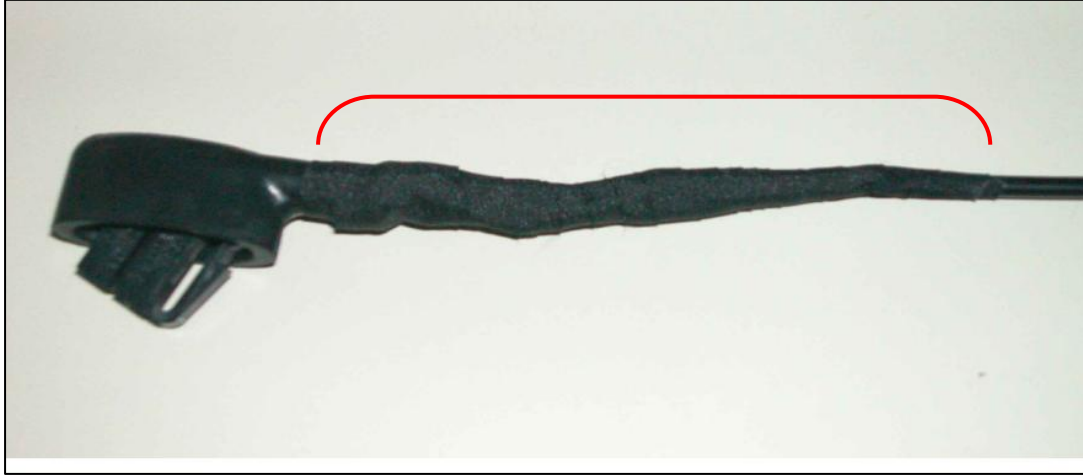

Pic. 8

**1.8** Connect the wiring to the lamp, then use adhesive tape to secure the cap to avoid disconnection (like shown in the picture below).

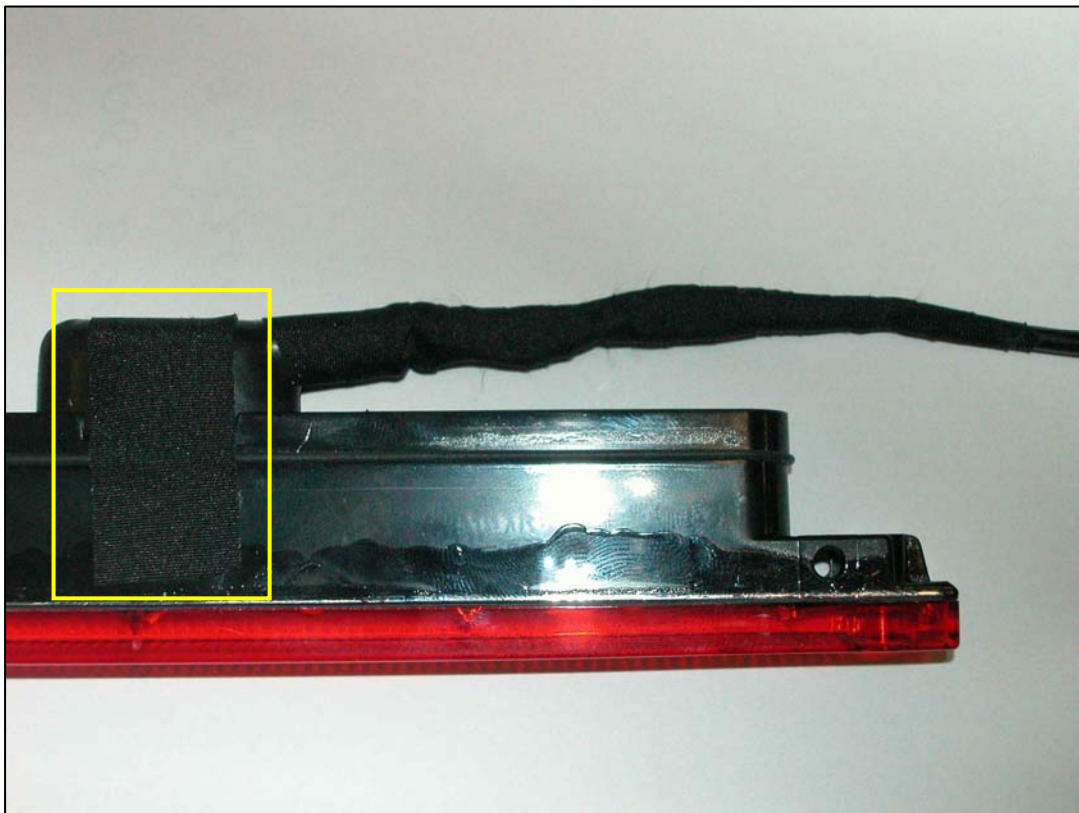


Pic. 9




**1.9** Insert the lamp back in the spoiler taking care to keep the wiring routing shown in the pictures below. Secure the lamp in the spoiler, following the instructions and assemble order (shown in pic.12).

Fix the lamp in the spoiler while pulling the wires (like shown in pic.13) to avoid the excess wiring inside the housing pulls out the lamp.

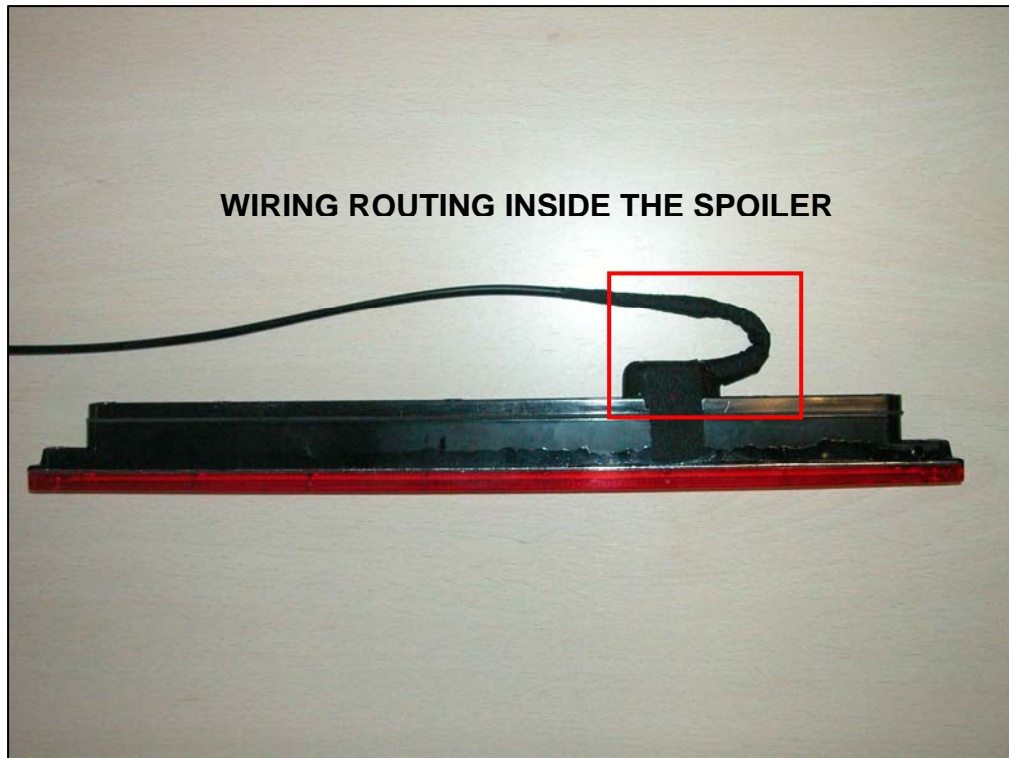


Pic. 10

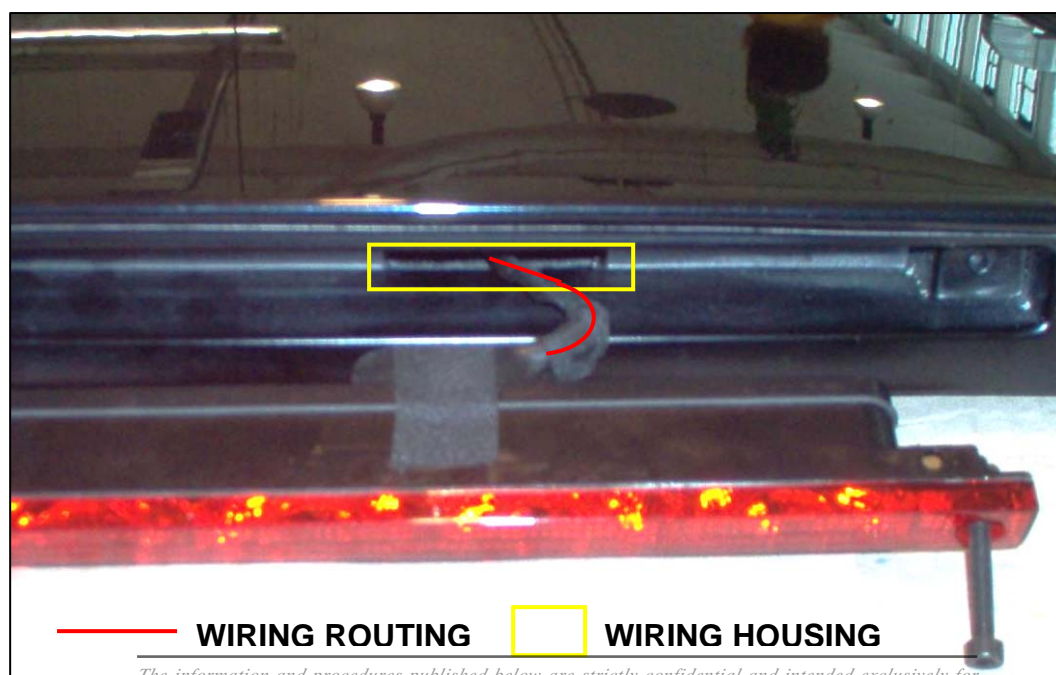


Pic. 11



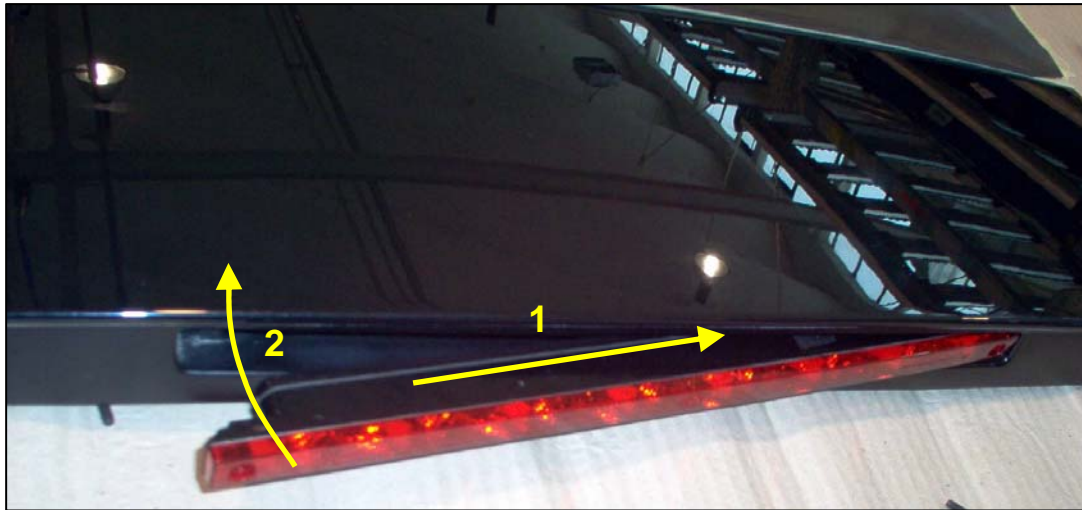

Pic. 12

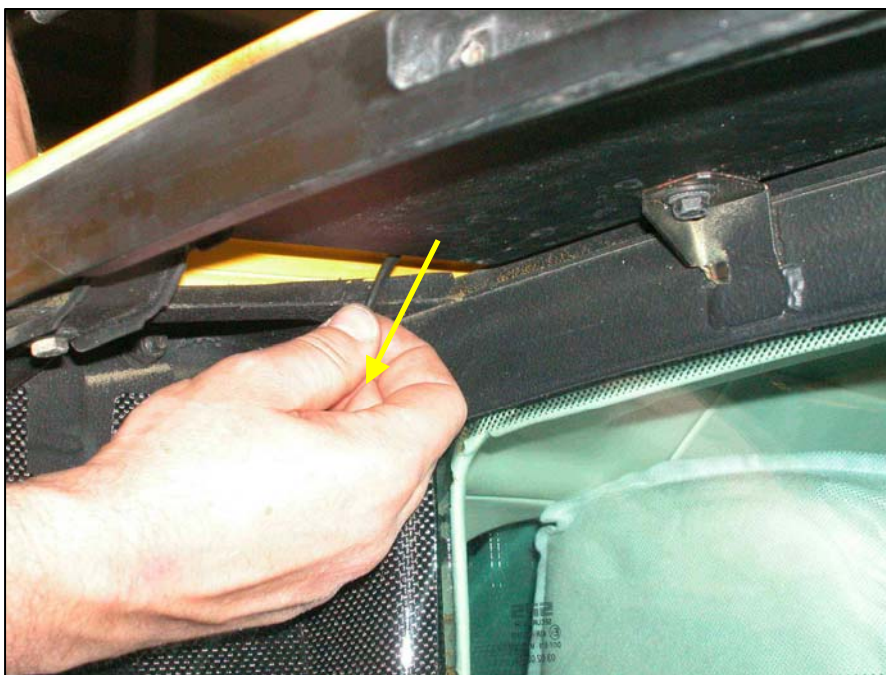

Pic. 13

**1.10** Before tightening the lamp securing screws check if the wiring pulls out the lamp, in this case adjust the wiring length like shown in pic.13 .