



To All Lamborghini Dealers and Licensed Service Point  
From Customer Service Department  
Subject Anticorrosion screws replacement  
Group LB714.8.07  
Date 17.01.2008  
Pages 4

### **Subject**

Anticorrosion screws replacement.

Automobili  
Lamborghini S.p.A.

### **Model**

All Gallardo (Coupè, Spyder and Superleggera) from VIN G75155 to VIN G86483.

### **Information to the field / Customer notification**

A few screws could not have been properly treated and could show superficial oxidation.

In case you have an involved vehicle in the workshop Lamborghini recommends to replace the screws.

This rework action must be also performed on all cars in your stock immediately.

### **Field solution**

Follow the workshop instruction in this document to replace of the screws.

### **Spare Parts**

One complete screws kit per car is necessary, code 0R1400212 available on spare parts catalogue.






## Workshop instructions


- 1.1 Adopt all precautions to work safe and prevent car damages.
- 1.2 Remove the 17 screws on the front bumper and put the new ones screws (tightening torque 9Nm), as shown in picture 1.

Pict.1

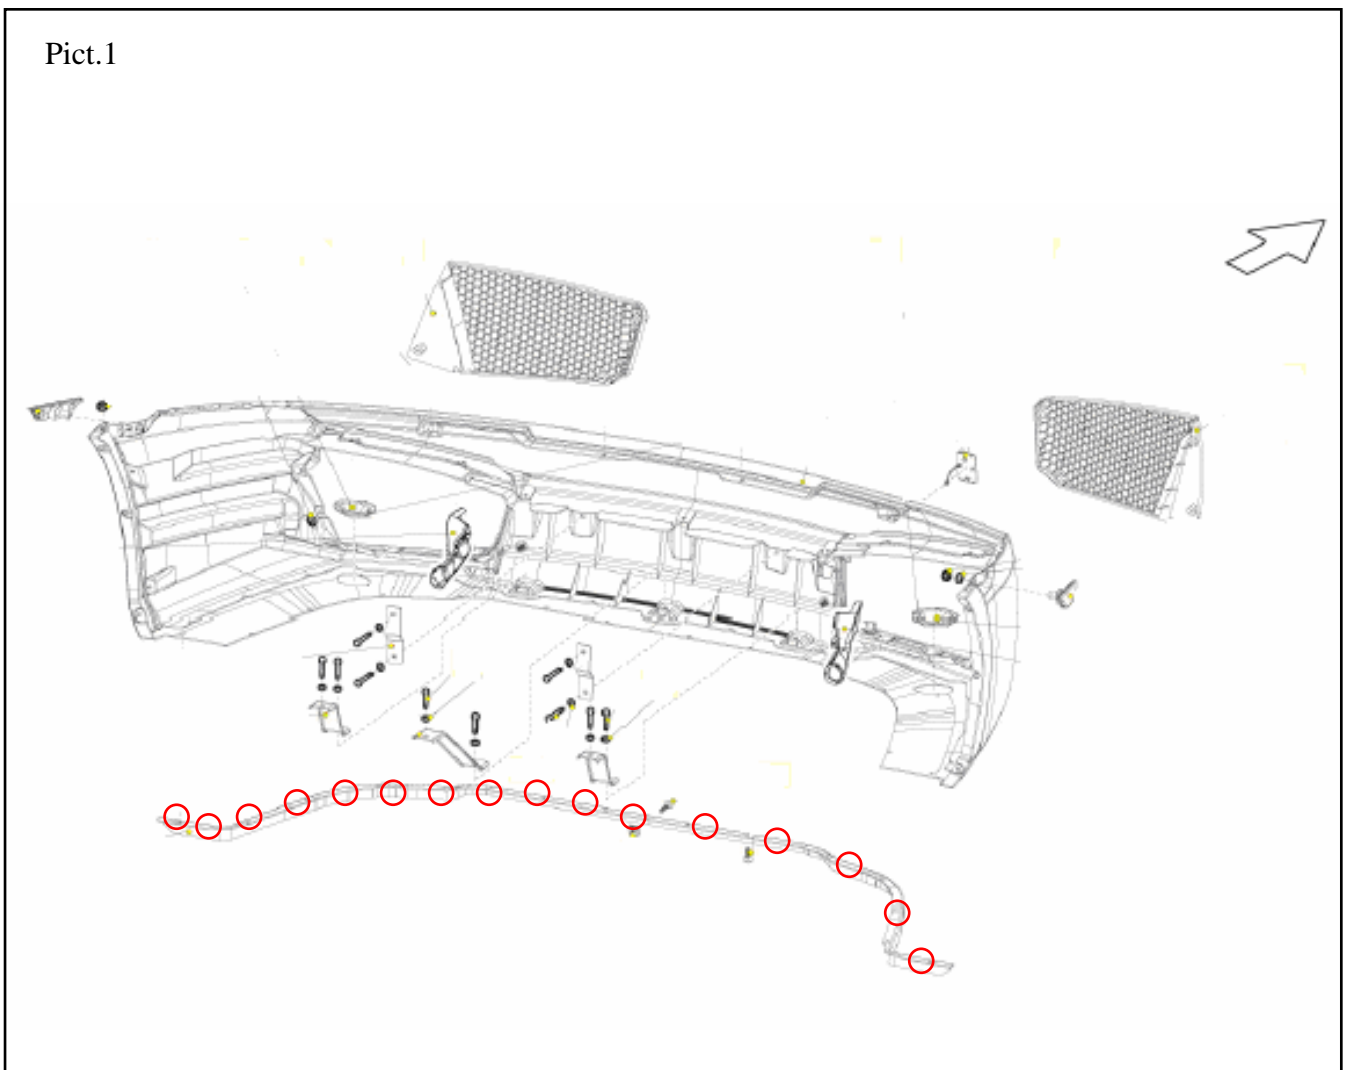



**1.3** Remove the 13 screws in the frame floor panel and put new ones screws (tightening torque 9Nm), as shown in picture 2.

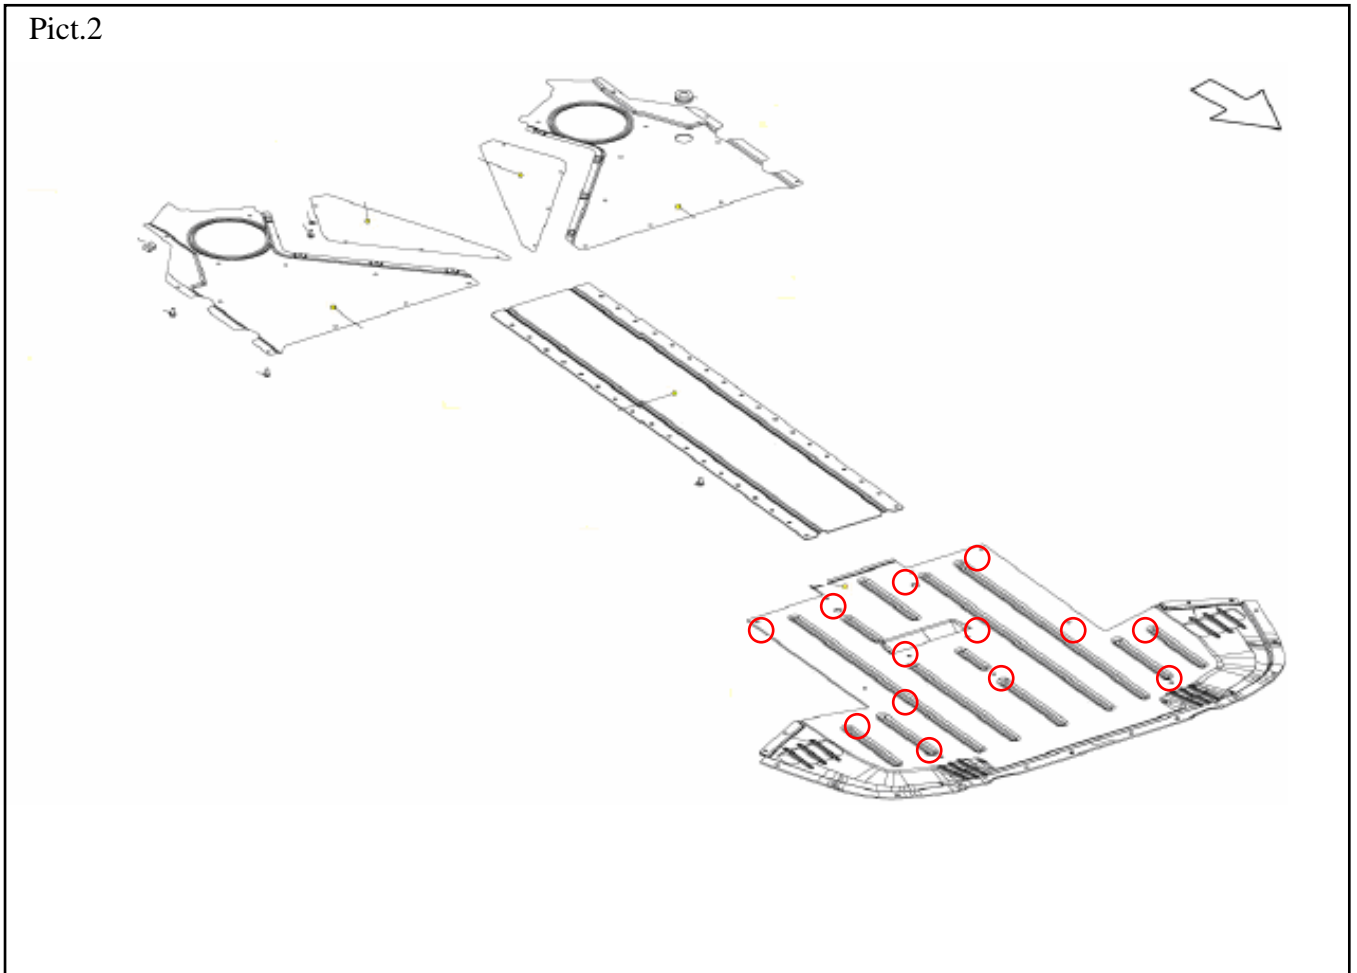

Your Area Manager is at full disposal for further information.

Best regards

Customer Service