



To All Lamborghini Dealers and Licensed Service Point
From Customer Service Department
Subject Engine bonnet release cable routing
Group LB715.8.03
Attachments -
Date 16.10.2006
Pages 5

Automobili
Lamborghini
S.p.A.

Subject

Engine bonnet release cable routing

Model / VIN-Range

All MY06 Gallardo Spyder from VIN G64126 to VIN G74360.

Attention: Please carefully check on the Lamborghini Web-portal to verify the VIN-Info and if the car is affected by this bulletin before the start of any activity.

Information to the field

In case you have a vehicle in the workshop Lamborghini recommends checking the opening cable of the engine bonnet.

Lamborghini recommends to check the involved Spyder; aiming to avoid the rear bonnet opening cable from heat fusion and restrict movement.

Field solution

The heat from the exhaust box could fuse the opening cable so it is necessary to check the routing of the cable.

Spare Parts

Not needed.



Warranty Claim data

The warranty reimbursement request for this check will be managed by the following standard Warranty Claim procedure.

Campaign Code:	L715-B.13.06
Campaign Description:	Engine bonnet release cable routing
Cost Code:	55
Component Code:	CCB1306
Trouble Code:	220
Labour code:	CCB1306100
Labour Time:	0,5 h.

Automobili Lamborghini will accept a maximum Labour Time of **0,5 h for car.**

Your Area Manager is at your full disposal for further information.

Best regards

Customer Service

Description of operations


- 1.1 Adopt all precautions to work safe and prevent car damages.
- 1.2 Open the engine bonnet in service position and check the opening cable routing near the frame of the car .

Pict. 1



- 1.3 The cable should not be in contact with the exhaust box, the wrong routing is shown in picture 2 and the correct routing in picture 3.

Pict. 2

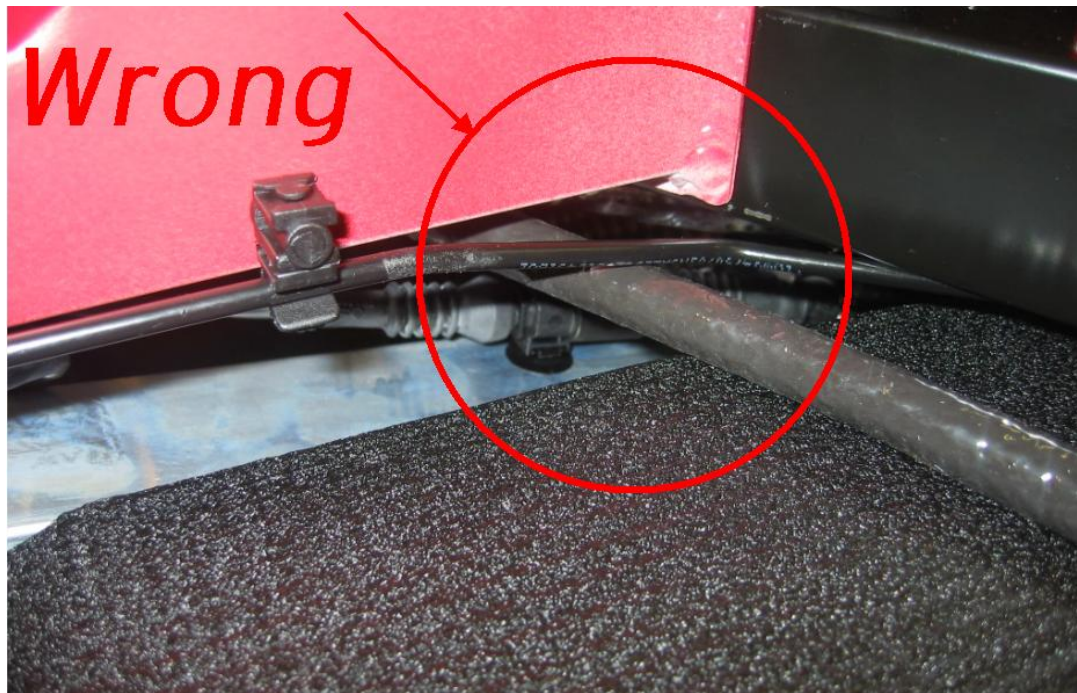

Pict. 3



1.4 If the routing of the cable is not correct as shown in picture 2, please change the routing.

4-5

This information and procedures published below are strictly confidential and intended exclusively for authorized operators and individuals. All copyrights are the property of Automobili Lamborghini S.p.A based on copyright law. The company reserves the right to make updates and modifications. The reprinting, reproduction, forwarding to unauthorized people and/or to third parties and partial or entire translation thereof are prohibited without written authorization from Automobili Lamborghini S.p.A.

- 1.5 Disassemble the cable from the bonnet lock using a screwdriver to disconnect the hook, as in Pict. 4. Then change the routing of the cable.
- 1.6 In order to change the routing it is not necessary to disassemble any parts, you have only to push carefully the cable under the mudguard and put it upon the black pipe as shown in picture 3.
- 1.7 Then connect the cable to the lock.

Pict. 4

