

WORK DESCRIPTION FOR FIELD MEASURE

Code: 20P8891003

Version: 2.0

Check bumper impact absorber, retrofit if necessary

Model 190

Check/test procedure

1. Check whether the impact absorber (A, Figure 1) is installed.
i Perform a visual inspection through the radiator grille.

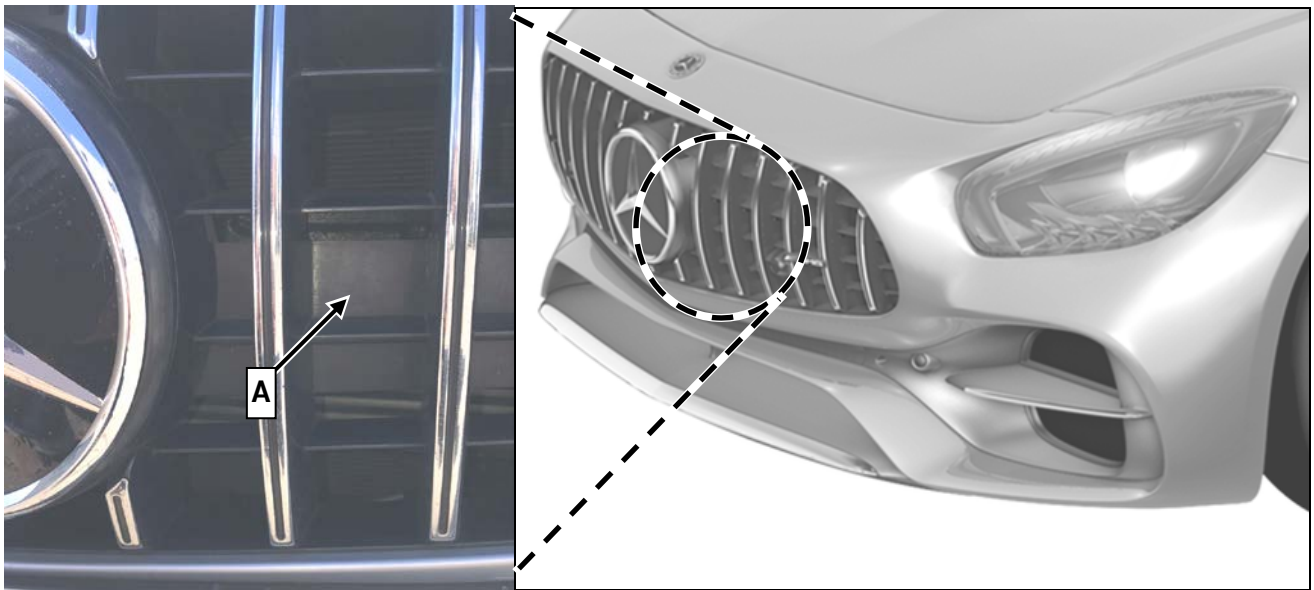


Figure 1

- a. Impact absorber (A, Figure 1) installed: **End measure.**
- b. Impact absorber (A, Figure 1) **not** installed: **Carry out work procedure.**

Work procedure

1. Remove bumper.
i For basic data, see AR88.20-P-2000RG.
2. Install impact absorber and bumper support.
3. Assemble in reverse order.

Parts

Quantity	Designation	Part no.
1	Impact absorber	A 190 885 00 37
1	Support	A 190 885 00 36

Operation text and flat rate

Operation no.	Operation text	Flat rate	Accounting no.
02-1695	Check bumper impact absorber	0.1 hours	88 910 03
02-1696	Retrofit bumper impact absorber	1.1 hours	88 910 03

Mercedes-Benz
Global Service & Parts