

April 22, 2026

Ascent Valet Speed Adjustment

Applies To: All Current Ascent Vehicles

Date: 04/22/2026

Overview: All Ascent vehicles come with (2) two FOBs. The one with the red lens is the valet FOB; the user may lower the vehicle's speed when using this FOB via the vehicle's display.

Issue Description: The owner's manual is vague on this process.

Required Action: The valet settings are easily changed from the vehicle's display with the 4-digit code.

***NOTE: Do NOT share the code with unauthorized users.**

Parts Needed: None.

Setting the Valet Key FOB Speed Limit:

The Ascent comes with 2 key FOBs. The standard key FOB has a clear lens and allows the vehicle to always drive the top speed of the vehicle (19 mph Standard or 25 mph LSV). The valet key FOB has a red lens and allows the top speed to be set to any speed below the vehicle's top speed (19/25 mph). This is for regulating the speed for certain drivers. When both FOBs are in range of the vehicle, the valet FOB (red lens) will always take precedence. When the valet FOB is present, the turtle icon on the top of the display will be illuminated and will control the top speed.



Turtle Icon



STEP 1



Make sure the valet key fob (red lens) is within approximately 3 feet of the vehicle. Press the Start/Stop button on the dash and power the vehicle up. Make sure the directional switch is in “P” Park. Allow the screen to go through its start up menu.




STEP 2

Once you get to the home screen as shown, verify the turtle icon is illuminated on the top of the screen.

Press the “**Home**” icon on the left of the screen, this will bring you to a menu screen.

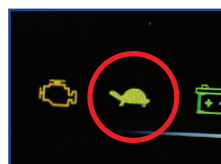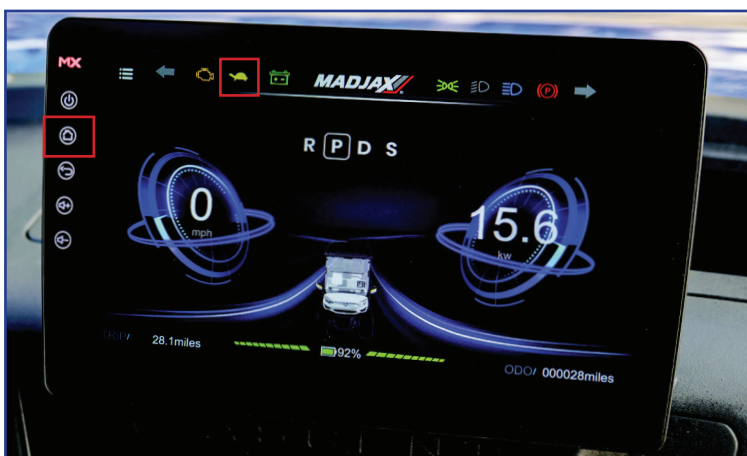

Turtle Icon

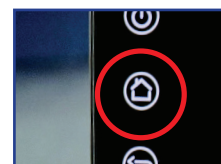

Home Icon

STEP 3

Once on the Menu screen, select the “**Settings**” icon.

This will take you to the Settings screen.



STEP 4

Once in the Settings menu, there are three options: **Basic / Car Info / About**.

Select “**Car Info**”.



STEP 5

On the “Car Info” screen, locate the “**Speed Limit**” setting. This is the valet top speed setting. To change this, you’ll need to select the current speed limit.



STEP 6

Once the key pad screen comes up, enter the 4-digit code “**9534**”, then press “**OK**”.

Note: DO NOT share this code with anyone you do not want to be able to change the Valet speed. This code cannot be changed.




STEP 7

Change the desired valet speed using the “- / +” to decrease or increase the speed. Press “**Yes**” to confirm and set the valet speed.

Note: This setting cannot exceed the vehicle’s top speed.

Ex. If the car’s top speed is 19 mph, you can only set the speed limit to 19 mph or lower.

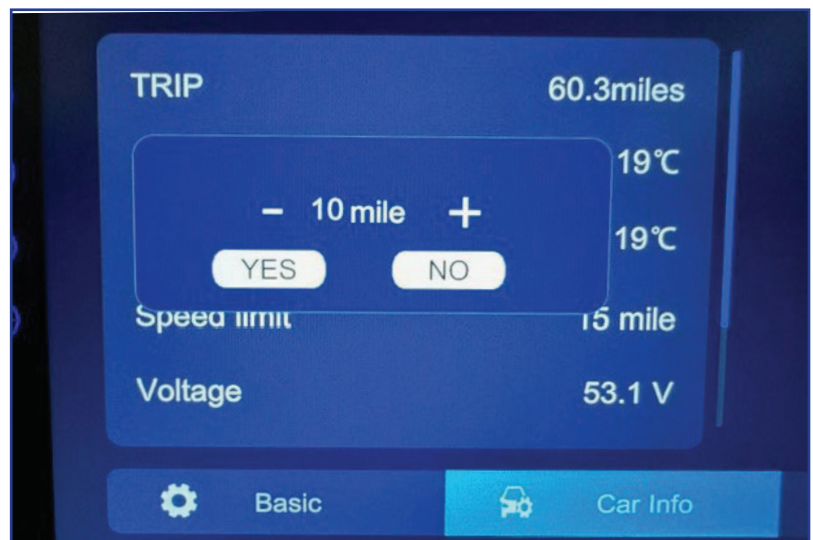

STEP 8

After selecting “**Yes**”, you will return to the “Car Info” screen. Verify that the speed limit you selected is shown on the screen.

To return to the home screen, press the return button on the left of the screen twice.