

RECALL 23V503 / 2023-402 REMEDY INSTRUCTIONS



Make(s): IMPRESSION
 Model(s): MPF235RW, MPF290VB & MPF330BH
 Model Year(s): 2023

Concern:
 The exterior griddle may be stowed while still connected to LP Gas.

Repair Code: RC-030-03-00-004377
 Allotted Time: .50 HRS.
 Inspection Code: N/A
 Allotted Time: N/A
 Photo(s) Required: NO
 Prior Authorization Required: NO
 Part(s) Kit Number: F100436605
 Part(s) Return: N/A

Turn off LP Gas at LPG Tank(s). Disconnect the vehicles' battery Positive and Negative, disconnect any House battery(s) Positive and Negative, if equipped with a generator ensure it is off and lastly, ensure the vehicle is disconnected from shore power. Block any tires/wheels to prevent the vehicle from rolling. Failure to do so may result in electrocution, fire or other personal injury, property damage and/or death.

- STEP 1: REMOVE EXTERIOR GRIDDLE FROM VEHICLES EXTERIOR KITCHEN;
- STEP 2: REMOVE BRASS FITTING DEPICTED IN FIGURE 1:
- STEP 3: REMOVE ANY RESIDUAL SEALANT (PASTE OR TAPE) FROM GRIDDLE PIPE FITTING;
- STEP 4: APPLY NEW SEALANT RATED FOR LP GAS TO THE GRIDDLES PIPE FITTING;
- STEP 5: THREAD ON THE 90° BRASS FITTING ASSEMBLY AT AN ANGLE AS DEPICTED IN FIGURE 2;
- STEP 6: PLACE GRIDDLE BACK ONTO THE VEHICLES EXTERIOR GRIDDLE TRAY;
- STEP 7: CONNECT THE LP GAS HOSE TO THE NEWLY INSTALLED GRIDDLE, THEN CONNECT TO THE QUICK DISCONNECT;
- STEP 7: PUSH THE GRIDDLE TRAY "IN" TO ENSURE THE CONNECTED LP GAS LINE **DOES NOT** ALLOW THE GRIDDLE TO BE STOWED;
- STEP 8: TURN ON LP GAS AT THE LP TANKS;
- STEP 9: PERFORM 3 MINUTE LP GAS DROP TEST WITH MONOMETER TO ENSURE THERE ARE NOT ANY LEAKS;
 - A. TESTING FOR A LEAK IN THE SCOPE OF THESE REMEDY INSTRUCTIONS ARE LIMITED TO THE NEW CONNECTION MADE WITH THE PARTS FROM FOREST RIVER;
 - B. ANY LEAK FOUND OUTSIDE OF THE SCOPE OF THIS RECALL SHALL BE CLAIMED SEPERATELY USING THE APPROPRIATE REPAIR CODE;
- STEP 10: CLAIM REPAIR CODE.

FIGURE 1 - BAD



FIGURE 2 - GOOD

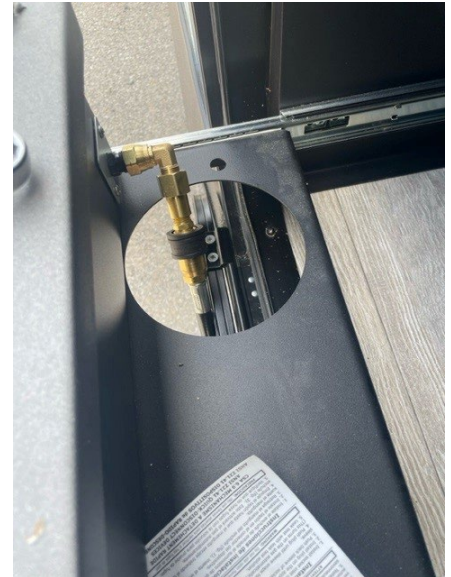


PHOTO LOOKING DOWN ONTO GRIDDLE (GRIDDLE TOP IS UPSIDE DOWN)
 THIS SHOWS THE LP GAS HOSE CONNECTED BUT ALLOWS THE GRIDDLE TO STOW AWAY WHICH IS BAD.

PHOTO LOOKING DOWN ONTO GRIDDLE (GRIDDLE TOP IS UPSIDE DOWN)
 THIS SHOWS THE LP GAS HOSE CONNECTED BUT DOES NOT ALLOW THE GRIDDLE TO STOW AWAY.