



Safety Recall # 22V-883

Repair, Claim Preparation and Filing Instructions

Please submit a warranty claim pre-authorization using the following codes and labor times:

REPAIR

INSTRUCTIONS: Replace the cast aluminum square edged handles on the cabinet doors and drawers with a handle with a rounded profile.

LABOR:	<u>Operation code</u>	<u>Labor allowance</u>
Inspection Only:	44011700	.20
Remove and Replace:	44011801	1.5 Hours

PARTS: Part number **274917** is single quantity, please order the needed quantity for unit. Screws can be reused from original handles.


Please follow attached repair instructions:

Submit all pre-authorizations and claims through the Dealer Portal. If there are any questions, please call our Warranty Team at 574-825-5250.

Repair Instructions

Recall 22V-883

Tools Needed: Tape measure, Philips's screwdriver, drill with 1/16" drill bit, screw gun (optional)

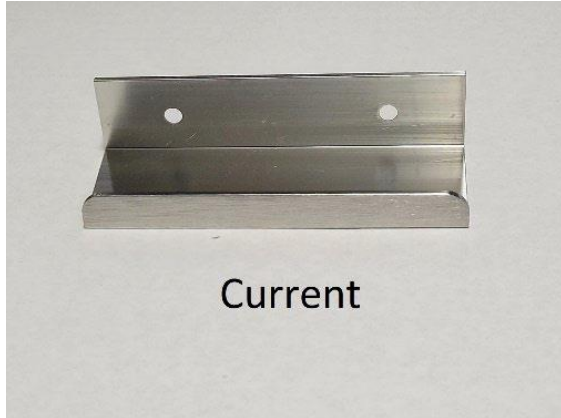

Step 1:

Measure to the center of the existing handle from the closest edge of the door or drawer. Mark the position with a pencil mark or small piece of tape.

Step 2:

Using a screwdriver or screw gun, remove the standard equipped handles. Save the screws to reuse on replacement handles.

Step 3:

If using a screw gun, skip to step 5. Position the replacement handle in the desired position and mark the screw holes with a light pencil mark. Be sure the underside of the replacement handle is tight against the lip of the door or drawer.

Step 4:

Measure 3/8" from the tip of the drill bit and place a piece of tape to mark the depth. Do not drill any deeper or you may risk breaching the face of the door or drawer.

Step 5:

Using a screw gun or Phillip's screwdriver, attach the replacement handle with the screws removed from the original handle.

Step 6:

Puddy old screw holes on doors as desired. Complete.